


**SCHLAGE**

# L-Series

Service manual

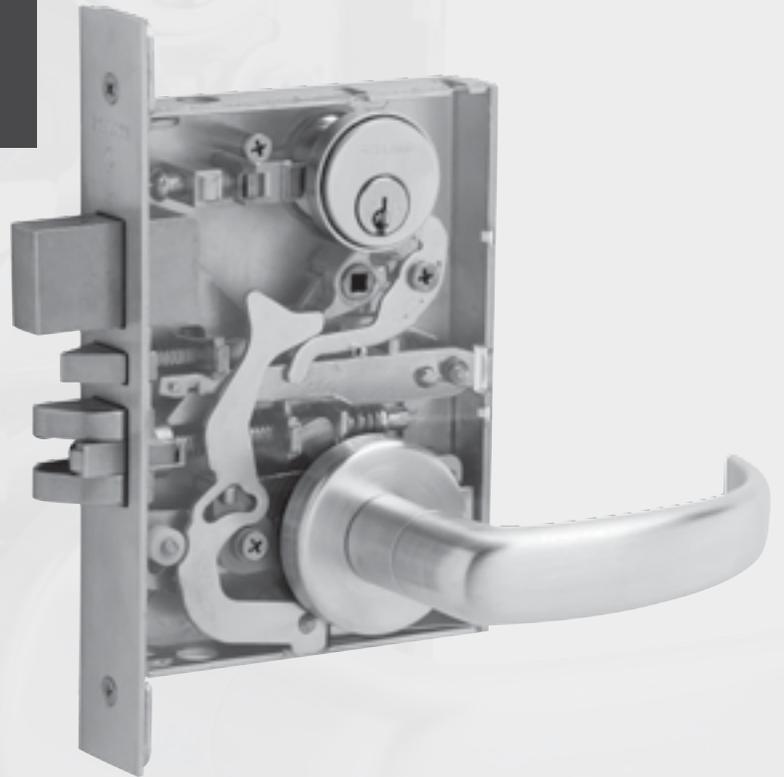

# Contents

5	Introduction	99	L9026
6	Dot charts	100	LM9310, LM9325
		101	L9040, L9040 x XL11-446, L9044
6	Changes and additions	102	LV9040, LV9040 x XL11-446, LV9044
6	Additions	103	L9050, L9060, L9066 x XL11-897, L9070, L9071
		104	LV9050, LV9060, LV9070, LV9071
7	Lock assembly drawing index	105	LM9350, LM9370, LM9371
		106	LMV9350, LMV9370, LMV9371
25	Trim assemblies	107	L9056
26	L400-Series deadbolt trim	108	LV9056
28	L9000-Series single dummy trim	109	L9076, L9077
29	L9000-Series double dummy trim	110	LV9076, LV9077
30	Passage latch trim	111	L9080
32	Exit trim	112	LV9080
34	Exit trim with cylinder	113	LM9380
36	Exit trim with three point latch	114	LMV9380
38	Emergency button x turn trim	115	L9080EL, L9080EL-RX
40	Privacy x turns both sides trim	116	LV9080EL
42	Coin turn outside x turn trim	117	L9080EU, L9080EU-RX
44	Cylinder x turn trim	118	LV9080EU
46	Double cylinder trim	119	L9082
48	Double cylinder storeroom trim	120	LV9082
50	Cylinder outside trim	121	L9082EL
52	Electrically locked/unlocked both sides trim	122	L9082EU
54	Electrically locked/unlocked outside trim	123	L9090EL/EU, L9092EL/EU, L9094EL/EU
56	Electrically locked/unlocked both sides trim	124	L9091EL/EU, L9093EL/EU, L9095 EL/EU
60	Electrically locked/unlocked both sides trim, single cylinder	125	L9492EL/EU, L9494 EL/EU
62	Electrically locked/unlocked outside trim, double cylinder	126	L9493 EL/EU, L9495 EL/EU
64	Electrically locked/unlocked both sides trim, double cylinder	127	L9110 x XL11-741
66	Active double dummy trim	128	L9175
68	Single dummy with case trim	129	L9176
70	Double dummy with case trim	130	L9440, L9444
72	Deadbolt trim	131	LV9440, LV9444
74	Deadbolt with fixed double dummy trim	132	L9453
76	Fixed outside x turn trim	133	LV9453
78	Institution deadbolt trim	134	L9456, L9457, L9496
80	Prison lock trim	135	LV9456, LV9457, LV9496
82	Hotel with indicator trim	136	L9458
84	Passage and electrically locked/unlocked, two-point latch trim	137	LV9458
86	Outside lever only, two-point latch trim	138	L9460, L9462, L9463, L9464
88	Cylinder x turn, two-point latch trim	139	L9460 x XL11-635
90	Outside cylinder and electrically locked/unlocked outside cylinder, two-point latch trim	140	L9460 x XL11-886, L9462 x XL11-886, L9464 x XL11-886
92	Double cylinder and electrically locked/unlocked outside cylinder, two-point latch trim	141	L9465, L9466, L9473
95	Lock case assemblies	142	L9480, L9485, L9486, L9486 x L583-375, L9412 x XL11-907
96	L460, L462, L463, L464, L480, L496	143	LV9480, LV9485, LV9486, LV9486 x L583-375
97	L9010	144	L9482 x XL11-543
98	L9025	145	LV9482 x XL11-543
		146	L9485 x XL11-557
		147	LM9210, LM9225
		148	LM9256
		149	LM9250, LM9270, LM9271, LM9280

- 150 LM9290 EL/EU, LM9292 EL/EU, LM9294 EL/EU
- 151 LM9291 EL/EU, LM9293 EL/EU, LM9295 EL/EU
- 152 Lock case assembly compatibility
  
- 153 Assembly of lock case parts
  - 153 Turn hub spring and transfer lever
  - 153 Locking catch/retractor catch and locking link
  - 154 L functions only: fire door fuse, fire door catch and hub spring
  - 154 LV functions only: fire door fuse, fire door catch and hub spring
  
- 155 Trim options
  - 155 Cast or forged levers, standard lever designs
  
- 156 Decorative trim
  - 156 Decorative levers
  - 156 Decorative roses
  
- 157 M collection levers
  
- 158 Danmark stainless steel levers
  
- 159 Wrought knob designs
  
- 160 Rose trim A or B
  
- 161 L escutcheon trim
  
- 163 N escutcheon trim
  
- 164 Indicator trim options
  - 164 Indicator kits
  - 164 Indicator parts
  
- 165 Additional trim options
  - 166 Trim assembly parts
  
- 169 Armor fronts
  
- 170 Strikes
  
- 171 Cylinders
  - 171 How to measure cylinder lengths
  - 171 L-Series, LV-Series cylinder and length requirements
  - 172 Full face cylinders
  - 173 Concealed cylinders
  - 174 Full size interchangeable core cylinders
  - 176 Small format interchangeable core cylinders
  
- 178 Indicator cylinders
  
- 179 Blocking and compression rings
  
- 180 Special trim options
  
- 183 Installation tools and kits
  
- 185 Electrified locks
  
- 187 LM9200 Series two point lock
  
- 188 LM9300 Series multipoint lock
  
- 189 Lubrication specifications
  
- 191 Door handing
  - 191 Changing the lock hand
  - 191 Changing cylinder turn hand
  
- 192 Ordering procedures
  
- 193 Finishes
  
- 194 Limited warranty
  
- 195 L9000-Series installation instructions
  
- 211 L400-Series installation instructions
  
- 213 L9000-Series 180 degree indicator installation instructions – escutcheon trim
  
- 223 L9000-Series 180 degree indicator installation instructions – sectional trim
  
- 232 L400-Series 180 degree indicator installation instructions
  
- 240 L9000-Series electrified installation instructions

# Introduction


This manual contains a complete listing of parts and assemblies for L-Series mortise locks manufactured by Schlage Lock Company. This edition lists components of L-Series locks manufactured after June, 2001. All lock case covers are labeled with the date of manufacture. Example: 8/15/13 = August 15, 2013.

Exploded views of each lock function chassis and trim assembly are provided with accompanying charts to identify parts for replacement purposes. Exploded views of trim are shown with parts for standard size doors. In addition, this manual provides lock trim ordering procedures, cylinder length charts by door range, and all auxiliary components of the L9000/LV9000, LM9200, LM9300/LMV9300 and L400-Series mortise locks.

Standard features			
<b>Certifications</b>	L/LV9000: ANSI A156.13, 2012, Series 1000, Grade 1 Operational, Grade 1 Security, UL Listed for 3-hour fire door (except L9076 and L9077). With FSIC Interchangeable Core Cylinders: Grade 2 Security. With SFIC Interchangeable Core Cylinders: Grade 3 Security. LM9200: ANSI A156.37, 2014 UL listed for 90-minute fire door (metal), 45-minute fire door (wood, two-point latch), 20-minute fire door (wood, one-point latch). LM/LMV9300: FEMA361, FEMA320, ICC500, Florida Building Code Enhanced Hurricane Protection Area (EHPA) L400: ANSI A156.36, 2010, Grade 1, UL Listed for 3-hour fire door.		
<b>Case size</b>	L/LV9000 and LM9300/LMV9300: 4 <sup>7</sup> / <sub>16</sub> " x 6 <sup>1</sup> / <sub>16</sub> " x 1"	L400: 4 <sup>7</sup> / <sub>16</sub> " x 3 <sup>5</sup> / <sub>8</sub> " x 1"	LM9200: 4 <sup>29</sup> / <sub>64</sub> " x 12 <sup>19</sup> / <sub>32</sub> " x 1"
<b>Armor front</b>	L/LV9000 and LM9300/LMV9300: 1 <sup>1</sup> / <sub>4</sub> " x 8"	L400: 1 <sup>1</sup> / <sub>4</sub> " x 5 <sup>5</sup> / <sub>16</sub> "	LM9200: 1 <sup>1</sup> / <sub>4</sub> " x 15 <sup>5</sup> / <sub>64</sub> "
<b>Deadbolt</b>	1" Throw stainless steel		
<b>Latchbolt</b>	L/LV9000, LM/LMV9300: 3/4" Throw stainless steel with anti-friction tongue		
<b>Strike</b>	L/LV9000, LM/LMV9300: 1 <sup>1</sup> / <sub>4</sub> " x 4 <sup>7</sup> / <sub>8</sub> ", Square corner, 1 <sup>3</sup> / <sub>16</sub> " lip, box; L400: 1 <sup>1</sup> / <sub>8</sub> " x 3 <sup>5</sup> / <sub>8</sub> ", Square corner, box		
<b>Backset</b>	2 <sup>3</sup> / <sub>4</sub> "		
<b>Cylinder</b>	6-Pin solid brass, keyed 6-pin, S123 keyway, keyed different (KD)*		
<b>Door range</b>	1 <sup>3</sup> / <sub>4</sub> " and up		
<b>Keys</b>	Two nickel silver cut keys per lock, 6-pin, S123 section*		

\* Items specified in C keyway will be furnished with cylinders keyed 5-pin and with 5-pin keys unless otherwise specified.

NOTE: Locks are furnished with standard features unless otherwise specified.

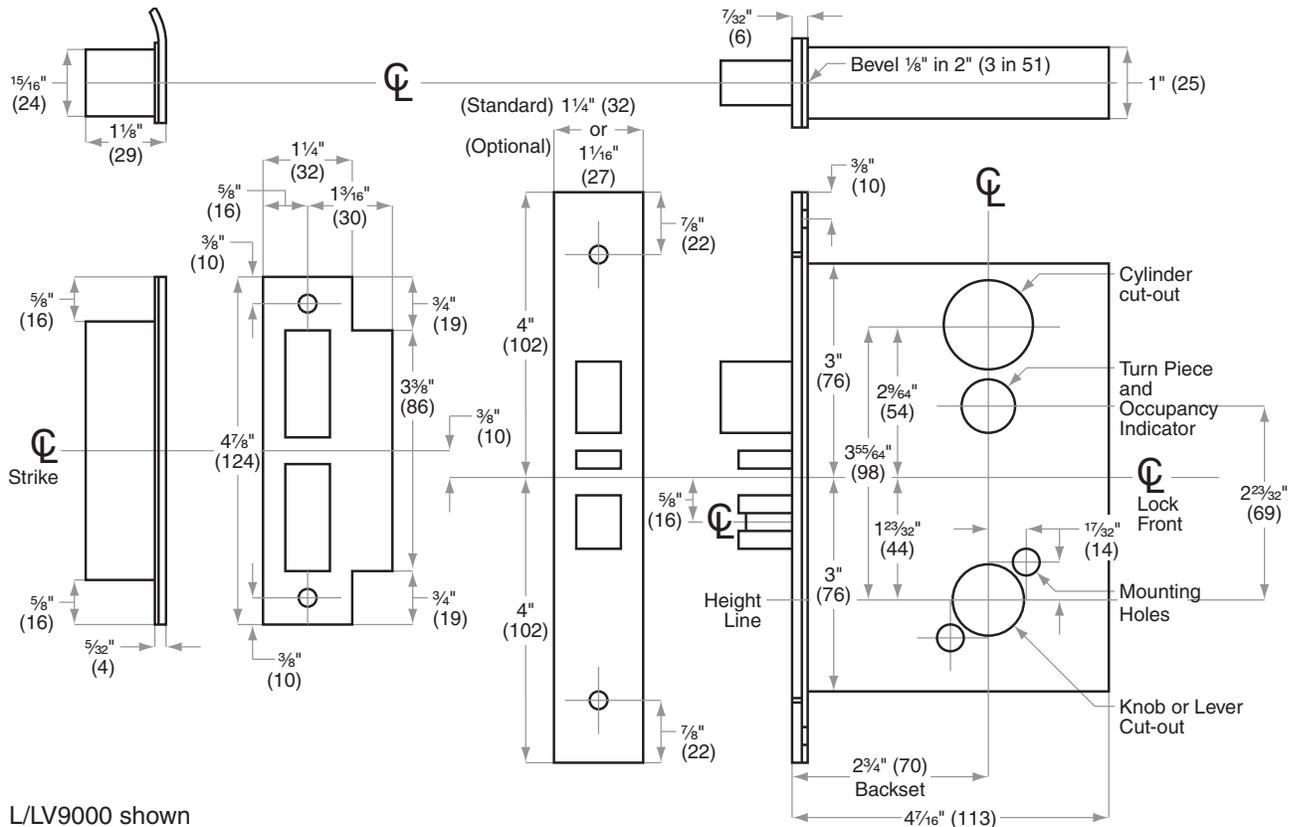

## Changes and additions

### Dot charts

• = (1) Part      2 = (2) Parts

Example:

P/N	Description
	L9110/XL11-741
	L9175
	L9176
	L9177 (disc)
	L9178 (disc)
	• L9410 (disc)
	L9440
	LV9440
	L9444*
	LV9444*
	• L9453
	• LV9453
	• L9456
	• LV9456
	L9457
	LV9457
	L9458
	LV9458
	• L9460
	• L9460/XL11-635
	• L9460/XL11-886
	L9462
	LV9462/XL11-886
	• L9463
	• L9464
	• L9464/XL11-886
	• L9465
	LV9466
	• L9473
	• L9480
	• LV9480
	LV9482/XL11-543
	LV9482/XL11-543
	• L9485
	• LV9485
	L9485/XL11-557**
	LV9485/XL11-557

All parts shown in dot charts are standard. Additional options may be available. See current Schlage Commercial Price Book for available options, pricing and ordering procedures.

## Changes and additions


### Additions

#### L9000 indicator functions cylinder table

Cylinder tables for 180° sectional trim indicator locks are added to the manual at page 178.

# Lock assembly drawing index

The lock assembly drawing index provides representations and descriptions of available functions. Page numbers for full trim and chassis drawings are referenced.

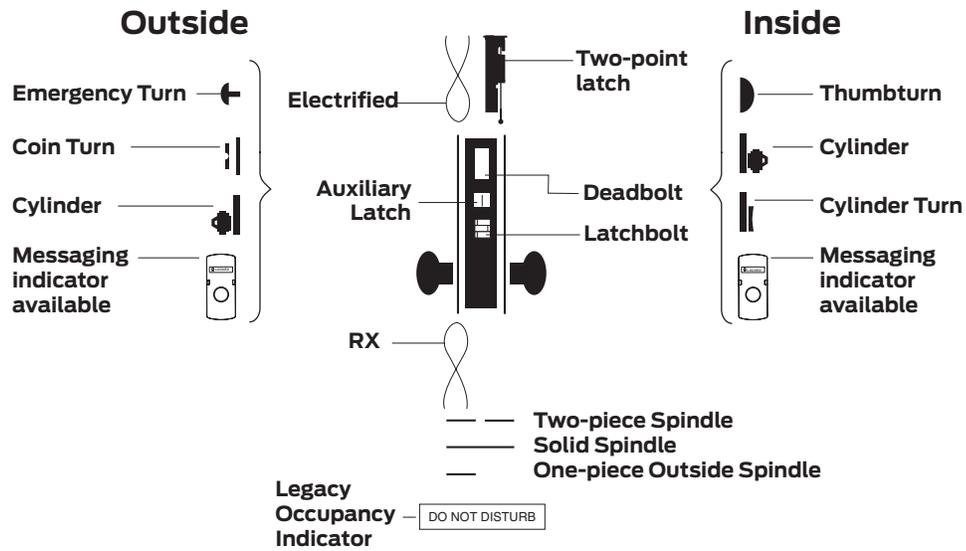


L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Non-keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L0170		<b>Half dummy trim</b> Knob/lever on one side is fixed by mounting bar. N escutcheon only. Not recommended for use on wood doors.	28	—	—
L0172		<b>Full dummy trim</b> Knob/lever on both sides is fixed by mounting bar.	29	—	—
L9010	F01	<b>Passage latch</b> Latchbolt is always retracted by knob/lever from either side.	31	97	L283-131
L9025		<b>Exit lock</b> No outside trim. Aux latch. Inside knob/lever only always free for immediate egress.	32	98	L283-725
L9040	F22	<b>Bath/bedroom privacy lock</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by inside thumbturn. Turning inside knob/lever or closing door unlocks outside knob/lever. To unlock from outside, remove emergency button, insert emergency turn in access hole and rotate.	38	101	L283-132

## Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Non-keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
LV9040	F22	<b>Bath/bedroom privacy lock with Vandlgard®</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by inside thumbturn. Turning inside knob/lever or closing door unlocks outside knob/lever. To unlock from outside, remove emergency button, insert emergency turn in access hole and rotate. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	38	104	L283-171
L9040 x XL11-446		<b>Privacy with turns both sides</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by inside or outside thumbturn. Turning inside knob/lever or closing door unlocks outside knob/lever. Specify per XL11-446.	40	101	L283-132
LV9040 x XL11-446		<b>Privacy with turns both sides with Vandlgard</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by inside or outside thumbturn. Turning inside knob/lever or closing door unlocks outside knob/lever. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per XL11-446.	40	102	L283-171
L9044		<b>Privacy with coin turn outside</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by inside thumbturn or outside coin turn. Operating inside knob/lever, closing door, rotating inside thumbturn or outside coin turn unlocks outside knob/lever. Available in rose trim only. Specify per L283-056 for Torx® screws. (Previously XL11-868).	42	101	L283-132
LV9044		<b>Privacy with coin turn outside with Vandlgard</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by inside thumbturn. Operating inside knob/lever, closing door, rotating inside thumbturn or outside coin turn unlocks outside knob/lever. Available with rose trim only. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per L283-056 for Torx® screws.	42	102	L283-171
L9110 x XL11-741		<b>Double dummy with active trim</b> Knob/lever is always active on both sides. Includes lock case and armor front. Specify XL11-741 for use on active door, or specify XL11-743 for use on inactive door (furnished with armor front with cutout to receive deadbolt).	66	127	–
L9175		<b>Single dummy with lock case</b> Inoperable knob/lever on one side. Includes lock case and armor front.	68	128	L283-144
L9176		<b>Double dummy with lock case</b> Inoperable knob/lever on both sides. Includes lock case and armor front.	70	129	L283-145
L9440	F19	<b>Privacy with deadbolt</b> Latchbolt is retracted by knob/lever from either side. Deadbolt is thrown or retracted by inside thumbturn. Throwing deadbolt locks outside knob/lever. Rotating inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. To unlock from outside, remove emergency button, insert thumbturn in access hole and rotate. (Previously XL11-761).	38	130	L283-062







## Lock assembly drawing index

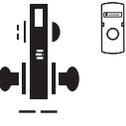L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Non-keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
LV9440	F19	<b>Privacy with deadbolt with Vandlgard®</b>  Latchbolt retracted by knob/lever from either side. Deadbolt is thrown or retracted by inside thumbturn. Throwing deadbolt locks outside knob/lever. Rotating inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. To unlock from outside, remove emergency button, insert thumbturn in access hole and rotate. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	38	131	L283-181
L9444		<b>Privacy with deadbolt and coin turn outside</b>  Latchbolt is retracted by knob/lever from either side. Deadbolt is thrown or retracted by inside thumbturn or outside coin turn. Throwing deadbolt locks outside knob/lever. Rotating inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Rotating outside coin turn retracts deadbolt and unlocks outside knob/lever. Available with rose trim only. Specify per L283-056 for Torx® screws. (Previously XL11-868).	42	130	L283-062
LV9444		<b>Privacy with deadbolt and coin turn outside with Vandlgard</b>  Latchbolt is retracted by knob/lever from either side. Deadbolt is thrown or retracted by inside thumbturn or outside coin turn. Throwing deadbolt locks outside knob/lever. Rotating inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Rotating outside coin turn retracts deadbolt and unlocks outside knob/lever. Available with rose trim only. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per L283-056 for Torx® screws.	42	131	L283-181

L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9026		<b>Exit lock with cylinder</b>  No outside trim. Inside knob/lever always free for immediate egress. Outside cylinder retracts latchbolt. Auxiliary latch deadlocks latchbolt when door is locked.	34	99	L283-134
L9050	F04	<b>Entrance/office and inner entry lock</b>  Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. When outside is locked, latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever remains locked until thumbturn is returned to vertical position or unlocked by key. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress.	44	103	L283-133
LV9050	F04	<b>Entrance/office and inner entry lock with Vandlgard</b>  Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. When outside is locked, latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever remains locked until thumbturn is returned to vertical position or unlocked by key. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	44	104	L283-170
L9056		<b>L9050 with automatic unlocking</b>  Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or by rotating inside thumbturn. Outside knob/lever is unlocked by key outside or thumbturn inside. Closing door unlocks outside lever. Rotating inside knob/lever simultaneously retracts latchbolt and unlocks outside knob/lever. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress. (Previously XL11-776).	44	107	L283-126

- ◇ Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.
- \* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.
- + Not sold separately as a part.

## Lock assembly drawing index

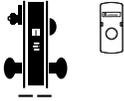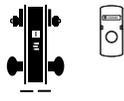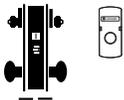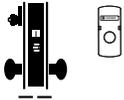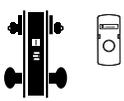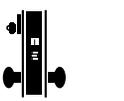      L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
LV9056		<b>LV9050 with automatic unlocking with Vandlgard®</b> Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or by rotating inside thumbturn. Outside knob/lever is unlocked by key outside or thumbturn inside. Closing door unlocks outside lever. Rotating inside knob/lever simultaneously retracts latchbolt and unlocks outside knob/lever. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	44	108	L283-180
L9060		<b>F09 Apartment entrance lock</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by key from inside. When locked, latchbolt is retracted by key outside or knob/lever inside. Auxiliary latch deadlocks when door is locked. Inside knob/lever is always free for immediate egress.	46	103	L283-133
LV9060		<b>F09 Apartment entrance lock with Vandlgard</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by key from inside. When locked, latchbolt is retracted by key outside or knob/lever inside. Auxiliary latch deadlocks when door is locked. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	46	104	L283-170
L9066 x XL11-897		<b>Storeroom lock with double cylinders*</b> Key in either cylinder locks or unlocks both knobs/levers. When locked, latchbolt is retracted by key from either side. Specify per XL11-897.	48	103	L283-133
L9070		<b>F05 Classroom lock</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by key. Outside is unlocked by key. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is locked.	50	103	L283-133
LV9070		<b>F05 Classroom lock with Vandlgard</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by key. Outside is unlocked by key. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is locked. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	50	104	L283-170
L9071		<b>F32 Classroom security lock</b> Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When locked, latchbolt is retracted by key outside or knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is locked.	46	103	L283-133
LV9071		<b>F32 Classroom security lock with Vandlgard</b> Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When locked, latchbolt is retracted by key outside or knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is locked. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	46	104	L283-170
L9076		<b>F06 Classroom holdback lock †</b> Latchbolt is retracted by knob/lever from either side unless locked by key outside. When locked, latchbolt is retracted by key outside or knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is locked. Turn/depress inside knob/lever and turn key 360° for holdback feature.	50	109	L283-039

† Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

† Not sold separately as a part.

## Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
LV9076	F06	<b>Classroom holdback lock with Vandlgard<sup>®</sup> ◊</b>  Latchbolt is retracted by knob/lever from either side unless locked by key outside. When locked, latchbolt is retracted by key outside or knob/lever inside. Inside lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is locked. Turn/depress inside knob/lever and turn key 360° for holdback feature. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	50	110	L283-172
					
L9077		<b>Classroom security holdback lock ◊</b>  Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When locked, latchbolt is retracted by key outside or knob/lever inside. Auxiliary latch deadlocks latchbolt when door is locked. Turn/depress inside knob/lever and turn key 360° for holdback feature.	46	109	L283-039
					
LV9077		<b>Classroom security holdback lock with Vandlgard ◊</b>  Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When locked, latchbolt is retracted by key outside or knob/lever inside. Auxiliary latch deadlocks latchbolt when door is locked. Turn/depress inside knob/lever and turn key 360° for holdback feature. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	46	110	L283-172
					
L9080	F07	<b>Storeroom lock</b>  Latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress.	50	111	L283-134
					
LV9080	F07	<b>Storeroom Lock with Vandlgard</b>  Latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	50	112	L283-173
					
L9080EL		<b>Electrically locked (fail safe)</b>  Outside knob/lever is continuously locked. Latchbolt is retracted by key outside or by knob/lever inside. Switch or power failure allows outside knob/lever to retract latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress.  Discontinued December 2014. See page 69 for electrified options.	50	115	L283-142
					
LV9080EL		<b>Electrically locked (fail safe) with Vandlgard</b>  Outside knob/lever is continuously locked. Latchbolt is retracted by key outside or by knob/lever inside. Switch or power failure allows outside knob/lever to retract latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.  Discontinued December 2014. See page 69 for electrified options.	50	116	L283-174
					
L9080EU		<b>Electrically unlocked (fail secure)</b>  Outside knob/lever is continuously unlocked. Latchbolt is retracted by key outside or by knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed.  Discontinued December 2014. See page 69 for electrified options.	50	117	L283-143
					

◊ Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

## Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
<b>LV9080EU</b> 		<b>Electrically unlocked (fail secure) with Vandlgard®</b> Outside knob/lever is continuously unlocked. Latchbolt is retracted by key outside or by knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down, while remaining securely locked. Discontinued December 2014. See page 69 for electrified options.	50	118	L283-175
<b>L9080EL-RX</b> 		<b>Request to exit electrically locked (fail safe)</b> Same as L9080EL function. In addition, a microswitch positioned inside the lock case is activated when either inside or outside knob/lever is rotated. The switch signals the use of that opening to security systems, allowing a non-disruptive means of immediate egress. Specify L283-263. (Previously XL11-807) Discontinued December 2014. See page 69 for electrified options.	50	115	L283-142 per L283-263
<b>L9080EU-RX</b> 		<b>Request to exit electrically unlocked (fail secure)</b> Same as L9080EU function. In addition, a microswitch positioned inside the lock case is activated when either inside or outside knob/lever is rotated. The switch signals the use of that opening to security systems, allowing a non-disruptive means of immediate egress. Specify L283-263. (Previously XL11-807). Discontinued December 2014. See page 69 for electrified options.	50	117	L283-143 per L283-263
<b>L9082</b> 	<b>F30</b>	<b>Institution lock*</b> Latchbolt is retracted by key on either side. Knob/lever on both sides is always inoperative. Auxiliary latch deadlocks latchbolt when door is locked.	46	119	L283-146
<b>LV9082</b> 	<b>F30</b>	<b>Institution lock with Vandlgard *</b> Latchbolt is retracted by key on either side. Inside and outside knob/lever are always inoperative. Auxiliary latch deadlocks latchbolt when door is locked. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	46	120	L283-182
<b>L9082EL</b> 		<b>Electrically locked (fail safe) both sides *</b> Outside and inside knob/lever are continuously locked. Latchbolt is retracted by key on either side. Switch or power failure allows inside and outside knob/lever to retract latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. (Previously XL11-452). Discontinued December 2014.	52	121	L283-085
<b>L9082EU</b> 		<b>Electrically unlocked (fail secure) both sides *</b> Outside and inside knob/lever are continuously unlocked. Latchbolt is retracted by key on either side. Switch or power failure prevents retraction of latchbolt by inside and outside knob/lever. (Previously XL11-452). Discontinued December 2014.	52	122	L283-086
<b>L9412 x XL11-907</b> 		<b>Exit lock with deadbolt</b> Latchbolt is retracted by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is operated by inside thumbturn. Turning inside knob/lever retracts both the deadbolt and the latchbolt simultaneously. Auxiliary latch deadlocks latchbolt when door is locked. Specify per XL11-907.	76	142	L283-141

◇ Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

## Lock assembly drawing index

 
 
 
L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9453 	F20	<b>Entrance/office lock with deadbolt</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by 20° rotation of thumbturn. Deadbolt is thrown or retracted by 90° rotation of thumbturn. When locked, key outside or knob/lever inside retracts deadbolt and latchbolt simultaneously. Outside knob/lever remains locked until thumbturn is returned to vertical position. Throwing deadbolt automatically locks outside knob/lever. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress.	44	132	L283-137
LV9453 	F20	<b>Entrance lock with deadbolt and Vandlgard®</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by key outside or 20° rotation of thumbturn. Deadbolt is thrown or retracted by 90° rotation of thumbturn. When locked, key outside or knob/lever inside retracts deadbolt and latchbolt simultaneously. Outside knob/lever remains locked until thumbturn is returned to vertical position. Throwing deadbolt automatically locks outside knob/lever. Auxiliary latch deadlocks latchbolt when door is locked. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	44	133	L283-176
L9456 	F13	<b>Corridor lock with deadbolt</b> Latchbolt is retracted by knob/lever from either side. Deadbolt is operated by key outside or inside thumbturn. Throwing deadbolt locks outside knob/lever. Turning inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Inside knob/lever is always free for immediate egress.	44	134	L283-138
LV9456 	F13	<b>Corridor lock with deadbolt and Vandlgard</b> Latchbolt is retracted by knob/lever from either side. Deadbolt is operated by key outside or inside thumbturn. Throwing deadbolt locks outside knob/lever. Turning inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	44	135	L283-177
L9457 	F33	<b>Classroom security lock with deadbolt</b> Latchbolt is retracted by knob/lever from either side. Deadbolt is operated by key from either side. Throwing deadbolt locks outside knob/lever. Turning inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Inside knob/lever is always free for immediate egress.	46	134	L283-138
LV9457 	F33	<b>Classroom security lock with deadbolt and Vandlgard</b> Latchbolt is retracted by knob/lever from either side. Deadbolt is operated by key from either side. Throwing deadbolt locks outside knob/lever. Turning inside knob/lever simultaneously retracts deadbolt and latchbolt and unlocks outside knob/lever. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	46	135	L283-177
L9458 	F34	<b>Classroom security lock with auxiliary latch</b> Latchbolt is operated by knob/lever from either side except when outside is locked by key from inside or outside. Deadbolt is retracted by key from inside or outside. Operating inside knob/lever retracts both bolts and unlocks the outside. Auxiliary latch deadlocks the latchbolt when deadbolt is thrown. Inside lever is always free for immediate egress.	46	136	L283-310
LV9458 	F34	<b>Classroom security lock with auxiliary latch and Vandlgard</b> Latchbolt is operated by knob/lever from either side except when outside is locked by key from inside or outside. Deadbolt is retracted by key from inside or outside. Operating inside knob/lever retracts both bolts and unlocks the outside. Auxiliary latch deadlocks the latchbolt when deadbolt is thrown. Inside lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	46	137	L283-311

◇ Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

## Lock assembly drawing index

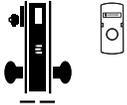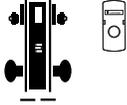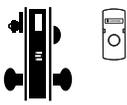L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9465		<b>Closet/storeroom lock</b> Latchbolt is operated by knob/lever from either side. Deadbolt is operated by key outside.	50	141	L283-140
					
L9466	F14	<b>Storeroom/utility room lock*</b> Latchbolt is operated by knob/lever from either side. Deadbolt is operated by key from either side.	46	141	L283-140
					
L9473	F21	<b>Dormitory/bedroom lock</b> Latchbolt is operated by knob/lever from either side. Deadbolt is operated by key outside or thumbturn inside.	44	141	L283-140
					
L9480		<b>Storeroom lock with deadbolt</b> Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is operated by key outside or thumbturn inside. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress. (Previously XL11-591).	76	142	L283-141
					
LV9480		<b>Storeroom lock with deadbolt and Vandlgard®</b> Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Deadbolt is operated by key outside or thumbturn inside. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is locked. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. (Previously XL11-591).	76	143	L283-178
					
L9482 x XL11-543		<b>Institution lock with deadbolt*</b> Latchbolt is operated by key from either side. Knob/lever on both sides is always fixed. Deadbolt is operated by key on either side. Auxiliary latch deadlocks latchbolt when door is closed. Specify per XL11-543.	78	144	–
					
LV9482 x XL11-543		<b>Institution lock with deadbolt* and Vandlgard</b> Latchbolt is operated by key from either side. Inside and outside knob/lever are always inoperative. Deadbolt is thrown or retracted by key on either side. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per XL11-543.	78	145	–
					
L9485		<b>Faculty restroom lock with deadbolt</b> Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, all keys become inoperative except emergency keys. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is locked.	76	142	L283-141
					

◇ Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

+ Not sold separately as a part.

## Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
<b>LV9485</b>		<b>Faculty restroom lock with deadbolt and Vandlgard®</b> Latchbolt is retracted by key outside or by knob/lever inside. Outside knob/lever is always inoperative. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, all keys become inoperative except emergency or display keys. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is locked. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	76	143	L283-178
<b>L9485 x XL11-557</b>		<b>Prison lock</b> Latchbolt is operated by key outside or by knob inside. Outside knob is always free spinning. Inside knob is fixed when deadbolt is thrown. Deadbolt is thrown or retracted only by guard's key. Prisoner's key retracts latchbolt. Auxiliary latch deadlocks latchbolt when door is locked. Furnished with tamper-resistant Torx® screws. Specify per XL11-557. Available with knob trim only.	80	146	–
<b>L9486</b>	<b>F15</b>	<b>Hotel lock with 09-611 "Do not disturb" indicator</b> Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, "DO NOT DISTURB" plate is displayed. Deadbolt thrown by inside thumbturn shuts out all keys except emergency keys. Inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed.	82	142	L283-141
<b>LV9486</b>		<b>Hotel lock with 09-611 "Do not disturb" indicator with Vandlgard</b> Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, "DO NOT DISTURB" plate is displayed. Deadbolt thrown by inside thumbturn shuts out all keys except emergency keys. Inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	82	143	L283-178
<b>L9486 x L583-375</b>		<b>Hotel lock with 09-611 "Occupied" indicator</b> Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, "OCCUPIED" plate is displayed. Deadbolt thrown by inside thumbturn shuts out all keys except emergency keys. Inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Specify per L583-375. (Previously XL11-580.)	82	142	–
<b>LV9486 x L583-375</b>		<b>Hotel lock with 09-611 "Occupied" indicator with Vandlgard</b> Latchbolt is operated by key outside or by knob/lever inside. Outside knob/lever is always fixed. Deadbolt is thrown or retracted by inside thumbturn. When deadbolt is thrown, "OCCUPIED" plate is displayed. Deadbolt thrown by inside thumbturn shuts out all keys except emergency keys. Inside knob/lever simultaneously retracts both deadbolt and latchbolt. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked. Specify per L583-375.	82	143	L283-178
<b>L9496</b>		<b>Privacy lock with "Occupied" indicator</b> Latchbolt is operated by knob/lever on either side. Deadbolt is thrown or retracted by key outside (retraction by key required in the event of an emergency) or inside thumbturn. Throwing deadbolt locks outside knob/lever and displays "OCCUPIED" plate. Rotating inside knob/lever simultaneously retracts both deadbolt and latchbolt and unlocks outside knob/lever. (Previously XL11-885.)	82	134	L283-138

- ◇ Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.
- \* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.
- + Not sold separately as a part.

 
## Lock assembly drawing index

L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed locks			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
LV9496		<b>Privacy lock with "Occupied" indicator with Vandgard®</b> Latchbolt is operated by knob/lever on either side. Deadbolt is thrown or retracted by key outside (retraction by key required in the event of an emergency) or inside thumbturn. Throwing deadbolt locks outside knob/lever and displays "OCCUPIED" plate. Rotating inside knob/lever simultaneously retracts both deadbolt and latchbolt and unlocks outside knob/lever. Vandgard function allows exterior lever to rotate freely down while remaining securely locked.	82	135	L283-177



- ◇ Locks with holdback feature are not UL listed. Installation should be in accordance with existing codes only.
- \* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.
- + Not sold separately as a part.

## Lock assembly drawing index

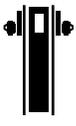L9000 FUNCTIONS ANSI/BHMA A156.13, 2012, Series 1000, Grade 1 Keyed L9000-Series deadbolts			Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	ANSI	Description			
L9460	F17	<b>Cylinder by thumbturn lock</b> Deadbolt is operated by key outside or thumbturn inside.	72	138	L283-139
					
L9462	F16	<b>Double cylinder lock*</b> Deadbolt is operated by key on either side.	72	138	L283-139
					
L9463	F29	<b>Classroom lock</b> Deadbolt is operated by key on outside. Inside cylinder turn retracts deadbolt but cannot extend it.	72	138	L283-139
					
L9464	F18	<b>Cylinder lock</b> Deadbolt is operated by key on one side. No trim on opposite side. Available with rose trim only.	72	138	L283-139
					
L9460 x XL11-635		<b>L9460 with fixed dummy trim</b> Knob/lever is always fixed on both sides. Deadbolt is operated by key outside or thumbturn inside. Specify per XL11-635.	74	139	–
					
L9460 x XL11-886		<b>Deadbolt with retraction by inside knob/lever</b> Deadbolt is operated by key outside or thumbturn inside. Inside knob/lever is active when deadbolt is extended. Rotating inside knob/lever retracts deadbolt. Outside knob/lever is always fixed. Specify per XL11-886.	76	140	–
					
L9462 x XL11-886		<b>Double cylinder deadbolt* with retraction by inside knob/lever</b> Deadbolt is operated by key from either side. Inside knob/lever turns to no effect when deadbolt is retracted. Inside knob/lever is active when deadbolt is extended. Rotating inside knob/lever retracts deadbolt. Outside knob/lever is always fixed. Specify per XL11-886.	46	140	–
					
L9464 x XL11-886		<b>Single cylinder deadbolt with retraction by inside knob/lever</b> Deadbolt is operated by key one side. Inside knob/lever is active when deadbolt is extended. Rotating inside knob/lever retracts deadbolt. Outside knob/lever is always fixed. Specify per XL11-886.	50	140	–
					

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

## Lock assembly drawing index

<b>L909X Electrified functions ANSI/BHMA A 156.25, 2014 Non-keyed locks</b>		<b>Trim assembly page no.</b>	<b>Lock assembly page no.</b>	<b>Lock case part no.</b>
<b>SCHLAGE</b>	<b>Description</b>			
<b>L9090 EL/EU</b> 	<b>Electrically locking and unlocking outside lever (no cylinder)</b> Outside knob/lever continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt is retracted by knob/lever from outside unless outside is electrically locked, or by knob/lever inside. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress.	54	123	L283-347
<b>L9091 EL/EU</b> 	<b>Electrically locking and unlocking both levers (no cylinder)</b> Both knobs/levers continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt is retracted by knob/lever from either side unless electrically locked. Note that locking both levers will prevent normal egress from the inside. Auxiliary latch deadlocks latchbolt when door is closed.	56	124	L283-395

<b>L909X Electrified functions ANSI/BHMA A 156.25, 2014 Keyed Locks</b>		<b>Trim assembly page no.</b>	<b>Lock assembly page no.</b>	<b>Lock case part no.</b>
<b>SCHLAGE</b>	<b>Description</b>			
<b>L9092 EL/EU</b> 	<b>Electrically locking and unlocking outside lever (outside cylinder)</b> Outside lever continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt is retracted by key from outside or by knob/lever inside. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress.	58	123	L283-347
<b>L9093 EL/EU</b> 	<b>Electrically locking and unlocking both levers (outside cylinder)</b> Inside and outside knobs/levers continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt is retracted by key outside or either knob/lever unless electrically locked. Note that locking both levers will prevent normal egress from the inside. Auxiliary latch deadlocks latchbolt when door is closed.	60	124	L283-395
<b>L9094 EL/EU</b> 	<b>Electrically locking and unlocking outside lever (inside and outside cylinders)</b> Outside lever continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt retracted by key on either side unless outside is electrically locked, or knob/lever on either side when electrically unlocked. Inside lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed.	62	123	L283-347
<b>L9095 EL/EU</b> 	<b>Electrically locking and unlocking both levers (inside and outside cylinders)*</b> Both levers continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt retracted by key on either side unless electrically locked, or knob/lever on either side when electrically unlocked. Note that locking both levers will prevent normal egress from the inside. Auxiliary latch deadlocks latchbolt when door is closed.	64	124	L283-395

Notes: Request to exit (RX) and latchbolt monitor (LX) features are available on all L909X and L949X functions.

Door position switch (DPS) available on L9090 EL/EU, L9091 EL/EU, L9092 EL/EU, L9093 EL/EU, L9094 EL/EU and L9095 EL/EU.

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

## Lock assembly drawing index

L949X Electrified functions ANSI/BHMA A 156.25, 2014 Keyed locks with deadbolt		Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	Description			
<b>L9492 EL/EU</b> 	<b>Electrically locking and unlocking outside lever (outside cylinder, inside thumbturn with deadbolt)</b> <p>Outside knob/lever continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt is retracted by key from outside unless outside is electrically locked, or by knob/lever inside. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Deadbolt is thrown or retracted by key outside or by thumbturn inside. When unlocked, rotating outside lever retracts deadbolt and opens door. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. Available with deadbolt monitor (DM) feature.</p>	58	125	L283-467
<b>L9493 EL/EU</b> 	<b>Electrically locking and unlocking both levers (outside cylinder, inside thumbturn with deadbolt)*</b> <p>Both knobs/levers continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt is retracted by key outside or either knob/lever unless electrically locked. Note that locking both levers will prevent normal egress from the inside. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. Deadbolt is thrown or retracted by key outside or by thumbturn inside. When unlocked, rotating outside lever retracts deadbolt and opens door. Auxiliary latch deadlocks latchbolt when door is closed. Available with deadbolt monitor (DM) feature.</p>	60	126	L283-468
<b>L9494 EL/EU</b> 	<b>Electrically locking and unlocking outside lever (inside and outside cylinder with deadbolt)</b> <p>Outside lever continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt is retracted by key from either side unless electrically locked, or by knob/lever inside. Deadbolt is thrown or retracted by key on either side. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. When unlocked, rotating outside lever retracts deadbolt and opens door. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. Available with deadbolt monitor (DM) feature.</p>	62	125	L283-467
<b>L9495 EL/EU</b> 	<b>Electrically locking and unlocking both levers (inside and outside cylinder with deadbolt)*</b> <p>Both knobs/levers continuously locked (EL) or unlocked (EU) by 12 or 24V DC. EL is fail safe (power failure allows outside knob/lever to retract latchbolt). EU is fail secure (power failure locks outside knob/lever). Latchbolt is retracted by key outside or either knob/lever unless electrically locked. Note that locking both levers will prevent normal egress from the inside. Deadbolt is thrown or retracted by key on either side. Turning inside knob/lever simultaneously retracts both deadbolt and latchbolt. When unlocked, rotating outside lever retracts deadbolt and opens door. Auxiliary latch deadlocks latchbolt when door is closed. Available with deadbolt monitor (DM) feature.</p>	50	126	L283-468

Note: Request to exit (RX) and latchbolt monitor (LX) features are available on all L909X and L949X functions.

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

## Lock assembly drawing index

LM9200 Two-point functions ANSI/BHMA A 156.37, 2014 Non-keyed locks		Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	Description			
<b>LM9210</b> 	<b>Passage lock two-point latch</b> Latchbolt(s) always retracted by levers from either side. Inside and outside levers are always free for immediate egress. Requires doors specifically designed for two-point latch system.	84	147	24759599
<b>LM9225</b> 	<b>Exit lock two-point latch</b> Inside lever only, no outside trim. Latchbolt(s) always retracted by inside lever. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	86	147	24759599

LM9200 Multipoint functions ANSI/BHMA A 156.37, 2014 Keyed Locks		Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	Description			
<b>LM9250</b> 	<b>Office, entry lock two-point latch</b> Latchbolt(s) retracted by lever from either side unless outside is made inoperative by key outside or by turning inside thumbturn. When outside is locked, latchbolt(s) retracted by key and lever outside or by lever inside. Outside lever remains locked until thumbturn is returned to vertical position or unlocked by key. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	88	149	24759623
<b>LM9256</b> 	<b>LM9250 Office, entry with automatic unlocking two-point latch</b> Latchbolt(s) retracted by lever from either side unless outside is made inoperative by key outside or by turning inside thumbturn. Outside lever is unlocked by key outside or thumbturn inside. When outside is locked, latchbolt(s) retracted by key and lever outside or by lever inside. Rotating inside lever simultaneously retracts latchbolt(s) and unlocks outside lever. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	88	148	24616914
<b>LM9270</b> 	<b>Classroom lock two-point latch</b> Latchbolt(s) retracted by lever from either side unless outside is locked by key outside. When outside is locked, latchbolt(s) retracted by key and lever outside or by lever inside. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	90	149	24759623
<b>LM9271</b> 	<b>Classroom security lock* two-point latch</b> Latchbolt(s) retracted by lever from either side unless locked by key from either side. When outside is locked, latchbolt(s) retracted by key and lever outside or lever inside. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	92	149	24759623

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

 
 
 
 
 
## Lock assembly drawing index

LM9200 Multipoint functions ANSI/BHMA A 156.37, 2014 Keyed Locks		Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	Description			
<b>LM9280</b> 	<b>Storeroom lock two-point latch</b> Latchbolt(s) retracted by outside lever after key is inserted and rotated 280°, or anytime by inside lever. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	90	149	24759623
<b>LM9290 EL/EU</b> 	<b>Electrified outside lever lock, two-point latch</b> Electrically locking/unlocking outside lever only. Latchbolt(s) retracted by outside lever when unlocked, or anytime by inside lever. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	84	150	24759656
<b>LM9291 EL/EU</b> 	<b>Electrified both levers lock, two-point latch *</b> Electrically locking/unlocking both levers. Latchbolt(s) retracted by outside or inside lever when unlocked. Requires doors specifically designed for two-point latch system.	84	151	24759664
<b>LM9292 EL/EU</b> 	<b>Electrified outside lever lock, two-point latch (outside cylinder)</b> Electrically locking/unlocking outside lever only. Latchbolt(s) retracted by outside key and lever, by electrically unlocking door, and outside lever when electrically unlocked, or anytime by inside lever. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	90	150	24759656
<b>LM9293 EL/EU</b> 	<b>Electrified both levers lock two-point latch (outside cylinder) *</b> Electrically locking/unlocking both levers. Latchbolt(s) retracted by outside key and lever, by electrically unlocking door, and by either lever when electrically unlocked. Requires doors specifically designed for two-point latch system.	90	151	24759664
<b>LM9294 EL/EU</b> 	<b>Electrified outside levers lock two-point latch (inside and outside cylinder)</b> Electrically locking/unlocking outside lever only. Latchbolt(s) retracted by outside key and lever, by electrically unlocking door, and by outside lever when electrically unlocked or anytime by inside lever. Inside lever is always free for immediate egress. Requires doors specifically designed for two-point latch system.	92	150	24759656
<b>LM9295 EL/EU</b> 	<b>Electrified both levers lock two-point latch (inside and outside cylinder) *</b> Electrically locking/unlocking both levers. Latchbolt(s) retracted by outside key and lever, by inside key and lever, or by electrically unlocking door, and by either lever when electrically unlocked. Requires doors specifically designed for two-point latch system.	92	151	24759664

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.

## Lock assembly drawing index

LM9300 Multipoint functions** ANSI/ICC 500 for tornadoes, ANSI/BHMA A 156.37, 2014 FEMA 320 and FEMA 361 certified for tornadoes Non-keyed locks		Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	Description			
LM9310 	<b>Passage latch with three-point latch</b> Latchbolt retracted by knob/lever from either side at all times. Auxiliary latch deadlocks latchbolt when door is closed. Inside and outside knob/lever are always free for immediate egress.	31	100	L283-314
LM9325 	<b>Exit lock function with three-point latch</b> Latchbolt retracted by inside knob/lever at all times. No outside trim. Auxiliary latch deadlocks latchbolt when door is closed.	36	100	L283-314

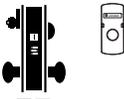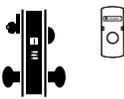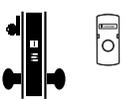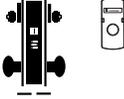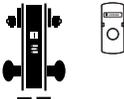LM9300 Multipoint functions** ANSI/ICC 500 for tornadoes, ANSI/BHMA A 156.37, 2014 FEMA 320 and FEMA 361 certified for tornadoes Keyed Locks		Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	Description			
LM9350 	<b>Office and inner entry lock with three-point latch</b> Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. When outside is locked, latchbolt is retracted by key and knob/lever outside or by knob/lever inside. Outside knob/lever remains locked until thumbturn is returned to vertical position or unlocked by key. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress.	44	105	L283-316
LMV9350 	<b>Office and inner entry lock with three-point latch and Vandlgard®</b> Latchbolt is retracted by knob/lever from either side unless outside is made inoperative by key outside or inside thumbturn. When outside is locked, latchbolt is retracted by key and knob/lever outside or by knob/lever inside. Outside knob/lever remains locked until thumbturn is returned to vertical position or unlocked by key. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	44	106	L283-317
LM9370 	<b>Classroom lock with three-point latch</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by key. When outside is locked, latchbolt is retracted by key and knob/lever outside or by knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed.	50	105	L283-316
LMV9370 	<b>Classroom lock with three-point latch and Vandlgard</b> Latchbolt is retracted by knob/lever from either side unless outside is locked by key. When outside is locked, latchbolt is retracted by key and knob/lever outside or by knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	50	106	L283-317
LM9371 	<b>Classroom security lock with three-point latch</b> Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When outside is locked, latchbolt is retracted by key and knob/lever outside or knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed.	46	105	L283-316
LMV9371 	<b>Classroom security lock with three-point latch and Vandlgard®</b> Latchbolt is retracted by knob/lever from either side unless locked by key from either side. When outside is locked, latchbolt is retracted by key and knob/lever outside or knob/lever inside. Inside knob/lever is always free for immediate egress. Auxiliary latch deadlocks latchbolt when door is closed. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	46	106	L283-317

\*\* LM9300 locks require door and rod set sold through Steelcraft. Specify handing. Handing is not field reversible.

Lock assembly drawing index

LM9300 Multipoint functions** ANSI/ICC 500 for tornadoes, ANSI/BHMA A 156.37, 2014 FEMA 320 and FEMA 361 certified for tornadoes Keyed Locks		Trim assembly page no.	Lock assembly page no.	Lock case part no.
SCHLAGE	Description			
<b>LM9380</b> 	<b>Storeroom lock with three-point latch</b> Latchbolt is retracted by outside knob/lever after key is inserted and rotated 280°, or anytime by inside knob/lever. Outside knob/lever is always inoperative. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress.	50	113	L283-316
<b>LMV9380</b> 	<b>Storeroom lock with three-point latch and Vandlgard</b> Latchbolt is retracted by outside knob/lever after key is inserted and rotated 280°, or anytime by inside knob/lever. Outside knob/lever is always inoperative. Auxiliary latch deadlocks latchbolt when door is closed. Inside knob/lever is always free for immediate egress. Vandlgard function allows exterior lever to rotate freely down while remaining securely locked.	50	114	L283-317

\*\* LM9300 locks require door and rod set sold through Steelcraft. Specify handing. Handing is not field reversible.

## Lock assembly drawing index

L400 FUNCTIONS ANSI/BHMA A156.13, 2010, Series 1000, Grade 1 Keyed L400-Series			Trim assembly page no.	Lock assembly page no.	Lock case page no.
SCHLAGE	ANSI	Description			
L460	E06071	<b>Cylinder by thumbturn lock</b> Deadbolt is operated by key outside or thumbturn inside.	26	96	L283-099
					
L462	E06061	<b>Double cylinder lock*</b> Deadbolt is operated by key on either side.	26	96	L283-099
					
L463	E06091	<b>Classroom lock</b> Deadbolt is operated by key on outside. Inside cylinder turn retracts deadbolt but cannot extend it.	26	96	L283-099
					
L464	E06081	<b>Cylinder lock</b> Deadbolt is operated by key on one side. No trim on opposite side. Available with rose trim only.	26	96	L283-099
					
L496		<b>Deadbolt lock with "occupied" indicator</b> Deadbolt is operated by key outside or thumbturn inside. Furnished with 09-611 per L583-375 indicator. When deadbolt is thrown, "occupied" plate is displayed. Available with rose trim only. (Previously XL11-911)	26	96	L283-099
					

L400 FUNCTIONS ANSI/BHMA A156.13, 1994, Series 1000, Grade 1 Non-keyed L400-Series			Trim assembly page no.	Lock assembly page no.	Lock case page no.
SCHLAGE	ANSI	Description			
L480	F14	<b>Door bolt</b> Deadbolt is operated by thumbturn on one side. No trim on opposite side.	26	96	L283-099
					

\* Caution: Double cylinder locks on residences—or on any door in any structure which are used for egress—are a life safety hazard in times of emergency, and their use is not recommended. Installation should be in accordance with existing codes only.







# Trim assemblies

- 26 L400-Series deadbolt trim
- 28 L9000-Series single dummy trim
- 29 L9000-Series double dummy trim
- 30 Passage latch trim
- 32 Exit trim
- 34 Exit trim with cylinder
- 36 Exit trim with three point latch
- 38 Emergency button x turn trim
- 40 Privacy x turns both sides trim
- 42 Coin turn outside x turn trim
- 44 Cylinder x turn trim
- 46 Double cylinder trim
- 48 Double cylinder storeroom trim
- 50 Cylinder outside trim
- 52 Electrically locked/unlocked both sides trim
- 54 Electrically locked/unlocked outside trim
- 56 Electrically locked/unlocked both sides trim
- 60 Electrically locked/unlocked both sides trim, single cylinder
- 62 Electrically locked/unlocked outside trim, double cylinder
- 64 Electrically locked/unlocked both sides trim, double cylinder
- 66 Active double dummy trim
- 68 Single dummy with case trim
- 70 Double dummy with case trim
- 72 Deadbolt trim
- 74 Deadbolt with fixed double dummy trim
- 76 Fixed outside x turn trim
- 78 Institution deadbolt trim
- 80 Prison lock trim
- 82 Hotel with indicator trim
- 84 Passage and electrically locked/unlocked, two-point latch trim
- 86 Outside lever only, two-point latch trim
- 88 Cylinder x turn, two-point latch trim
- 90 Outside cylinder and electrically locked/unlocked outside cylinder, two-point latch trim
- 92 Double cylinder and electrically locked/unlocked outside cylinder, two-point latch trim

Trim assemblies

L400-Series deadbolt trim

L460, L462, L463, L464, L480, L496

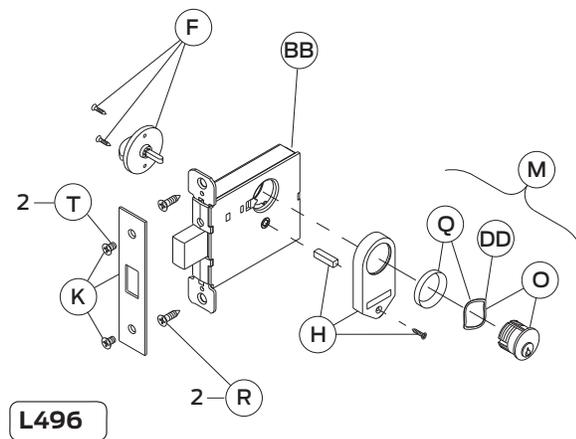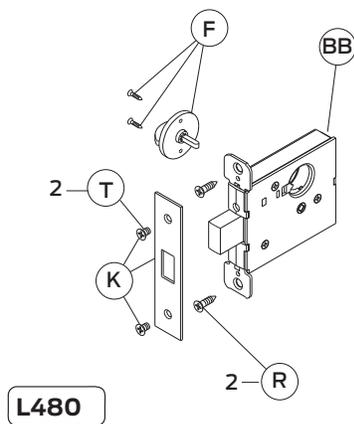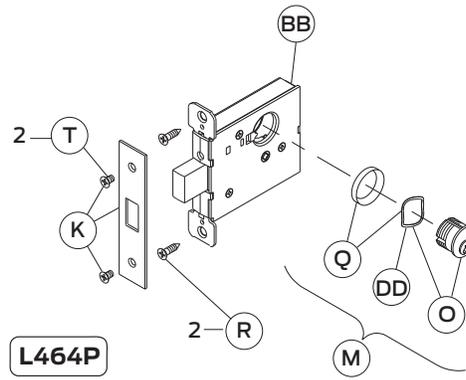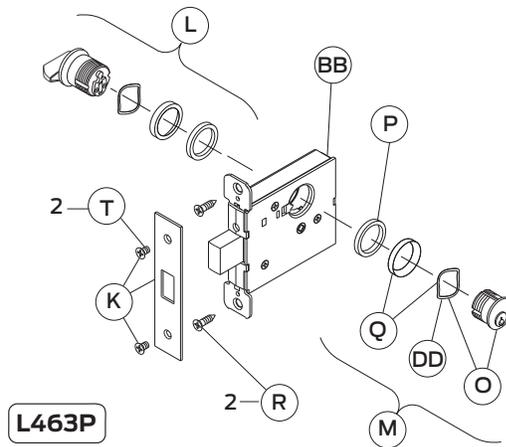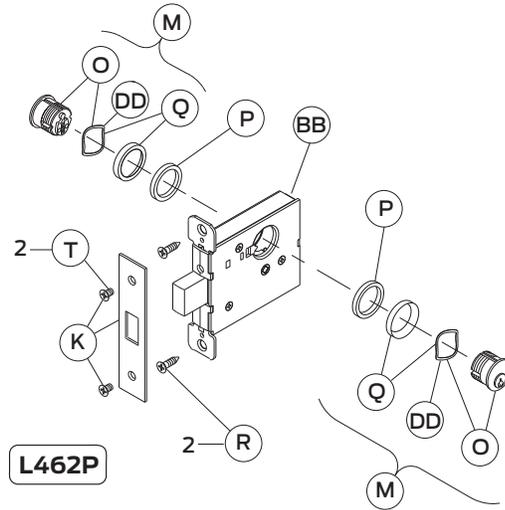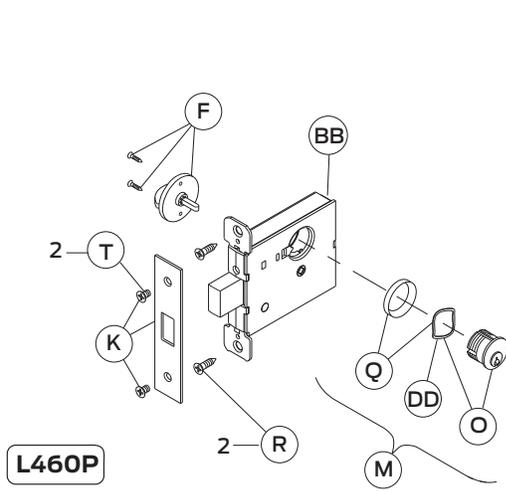

Notes: Standard full face mortise cylinder shown.  
Available with 180° messaging indicator trim.


## Trim assemblies

	P/N	Description	L460	L462	L463	L464	L480	L496
F	09-509	Inside thumbturn	•				•	•
H	09-611	Occupancy Indicator						•
K	09-717	L400 Series 1¼" armor front x Schlage logo, deadbolt	•	•	•	•	•	•
L	09-905	Classroom turn and 1½" blocking ring			•			
M	30-001	Full face cylinder with compression ring and spring, clover leaf cam	•	2	•	•		•
O	30-021	Full face cylinder with compression spring, clover leaf cam	•	2	•	•		•
P	36-082	Blocking ring		2	•			
Q	36-083	Compression ring and spring	•	2	•	•		•
R	C203-736	Case mounting screw pack	•	•	•	•	•	•
T	K110-020	Armor screw pack	•	•	•	•	•	•
BB	L283-099	Assembled lock case, L400 deadbolt	•	•	•	•	•	•
DD	L583-195	Compression spring	•	2	•	•		

Trim assemblies

L9000-Series single dummy trim

L0170

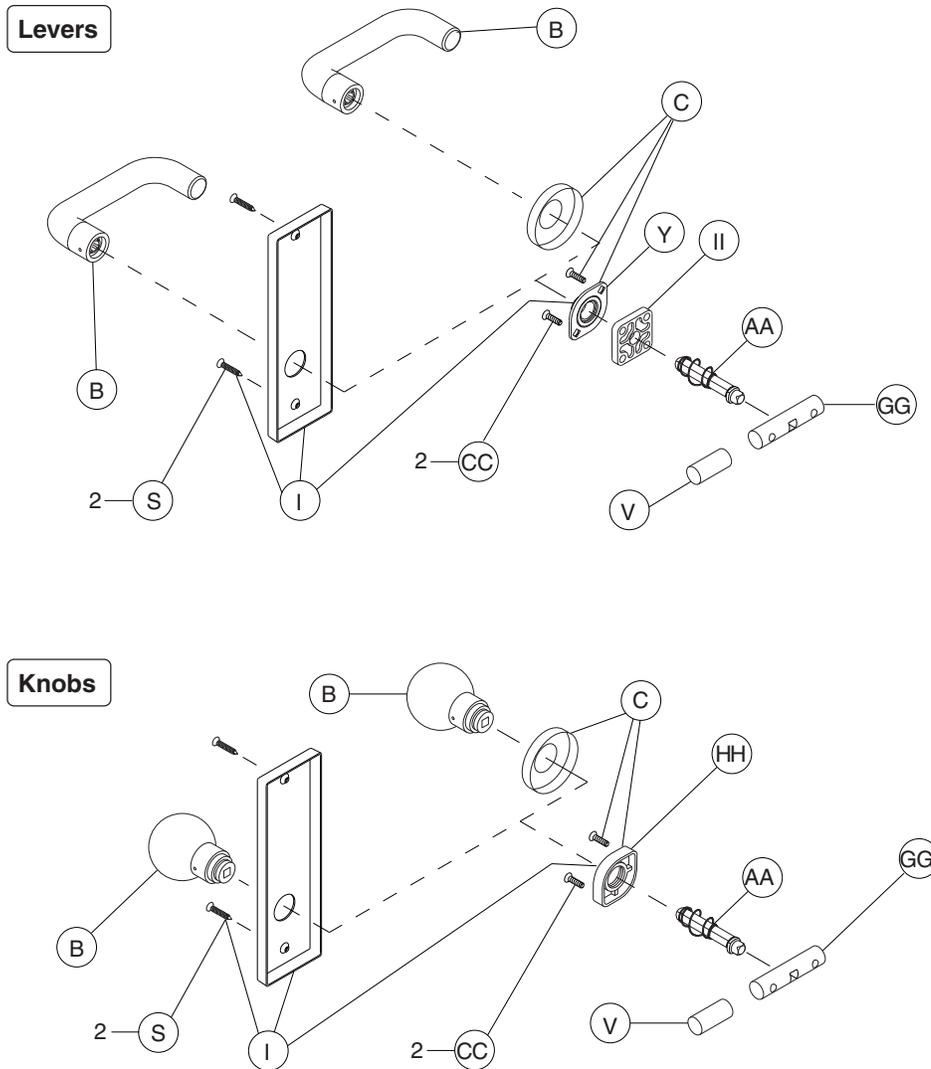


	P/N	Description
B	09-402	Inside knob and lever
C	09-403	Inside rose
I	09-632	Inside escutcheon for knob/lever, N x blank
S	L583-133	N escutcheon thru-bolts/screws (quantity – 2)
V	K510-320	Dummy mounting plug
Y	L283-031	Inside lever mounting plate
AA	L283-065	Spindle and spring, single dummy
CC	Mounting plate screws (quantity – 2)	
	L583-290	Wood/metal door x rose/escutcheon x lever
	L583-291	Wood/metal door x rose/escutcheon x knob
GG	L583-286	Dummy mounting bar
HH	L583-321	Inside knob mounting plate
II	L583-322	Outside lever spacer

Notes: Reinforcement required for metal door applications. See template at [www.allegion.com/us](http://www.allegion.com/us).  
L0170 not available with L escutcheon.

Trim assemblies

L9000-Series double dummy trim

L0172

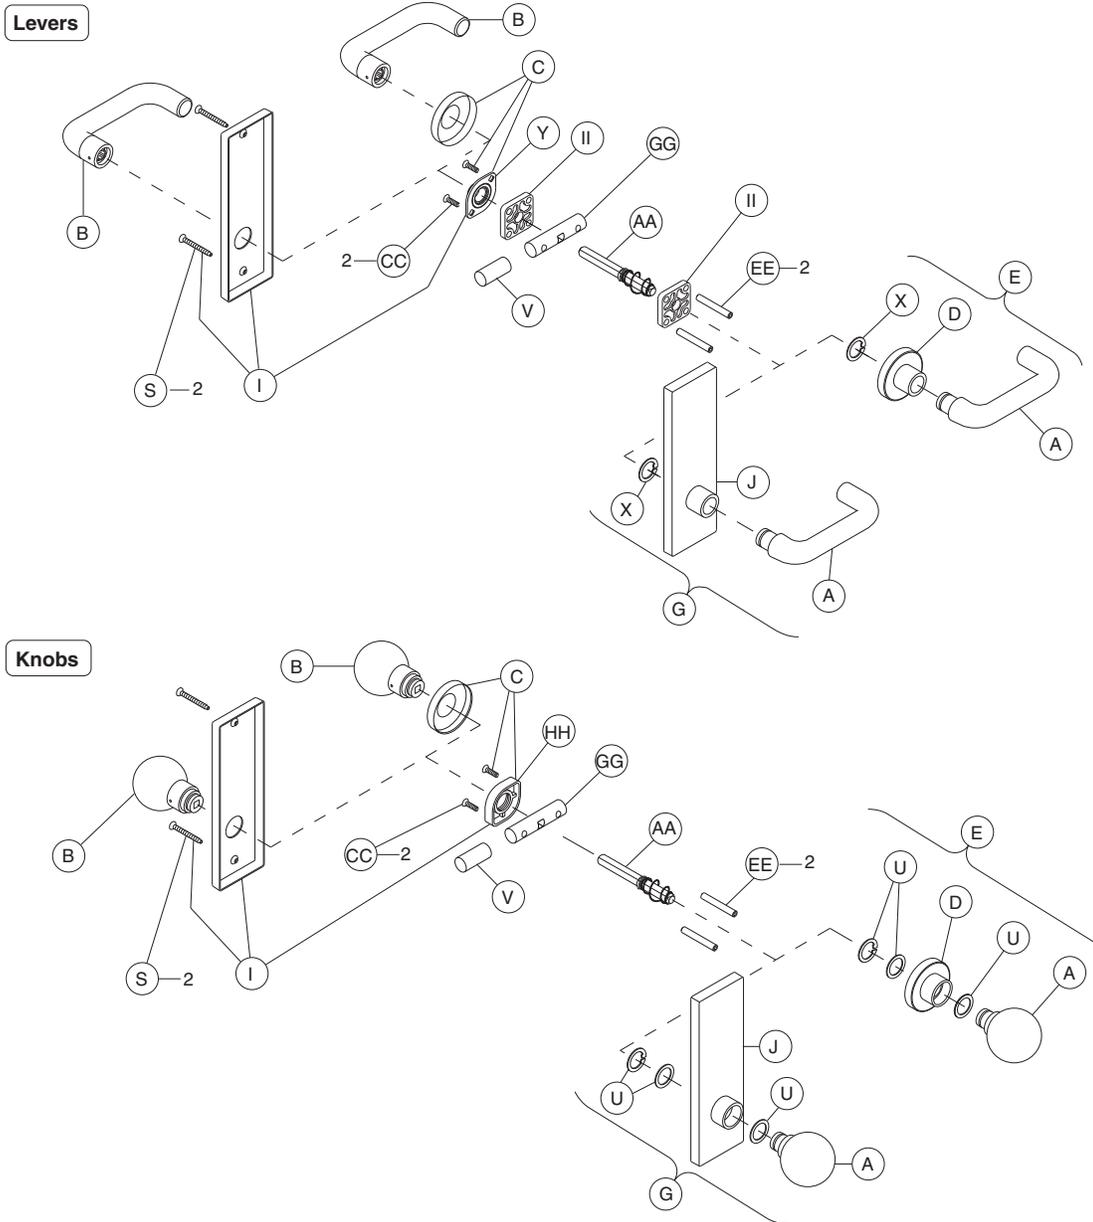

	P/N	Description
	A	09-401 Outside knob and lever
	B	09-402 Inside knob and lever
	C	09-403 Inside rose
	D	09-404 Outside rose and bushing
	E	09-506 O/S rose & knob/lever, all designs except AST, AVA, MER
		09-655 Outside rose and knob/lever, AST, AVA, MER designs
	G	09-550 Outside escutcheon x knob/lever (except 93 lever), L and N x blank
	I	09-632 Inside escutcheon for knob/lever, L and N x blank
J	09-636	O/S escutcheon & bushing x knob/lever (except 93 lever), L and N x blank
	09-650	Outside N escutcheon and bushing x 93 lever, blank

	P/N	Description
S	L583-133	Escutcheon thru-bolts/screws (qty - 2), N escutcheon
	L583-287	Escutcheon thru-bolts/screws (qty - 2), L escutcheon
U	K110-550	Knob truarc rings and spacer pack
V	K510-320	Dummy mounting plug
X	L283-030	Lever truarc rings
Y	L283-031	Inside lever mounting plate
AA	L283-064	Spindle and spring, double dummy
CC	L583-066	Mounting plate screws (qty - 2), wood/metal door x rose/escutcheon x knob/lever, except single dummy
EE	L583-212	Mounting posts, L (qty - 2)
GG	L583-286	Dummy mounting bar
HH	L583-321	Inside knob mounting plate
II	L583-322	Outside lever spacers (qty - 2)

Note: Reinforcement required for metal door applications. See template at [www.allegion.com/us](http://www.allegion.com/us).





## Trim assemblies

	P/N	Description	L9010	LM9310
A	09-401	Outside knob and lever	.	.
B	09-402	Inside knob and lever	.	.
C	09-403	Inside rose	.	.
D	09-404	Outside rose and bushing	.	.
E	Outside rose and knob/lever:			
	09-506	All designs except AST, AVA, MER	.	.
	09-655	AST, AVA, MER	.	.
G	09-550	Outside escutcheon x knob/lever (except 93 lever) L and N x blank	.	.
I	09-632	Inside escutcheon for knob/lever, L and N x blank	.	.
J	09-636	Outside escutcheon and bushing by knob/lever except 93 lever, L and N x blank	.	.
	09-650	Outside N escutcheon and bushing x 93 lever x blank	.	.
K	09-662	1¼" armor front x Schlage logo, latch	.	.
R	C203-736	Case mounting screw pack	.	.
S	Escutcheon thru-bolts/screws:			
	K510-389	N escutcheon	2	2
	L583-120	L escutcheon	2	2
T	K110-020	Armor screw pack	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.
X	L283-030	Lever truarc rings	.	.
Y	L283-031	Inside lever mounting plate	.	.
Z	L283-040	Lever spring cage	2	2
AA	L283-060	Spindle and spring	2	2
BB	Assembled lock case:			
	L283-131	Passage	.	.
	L283-314	Passage/exit x multipoint	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever except single dummy	2	2
EE	L583-212	Mounting post	2	2
HH	L583-321	Inside knob mounting plate	.	.

Trim assemblies

Exit trim

L9025

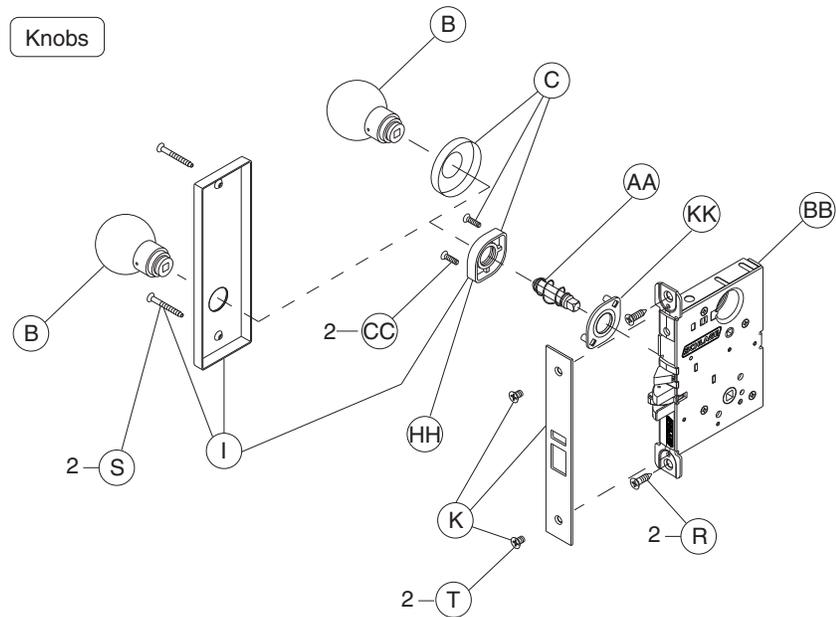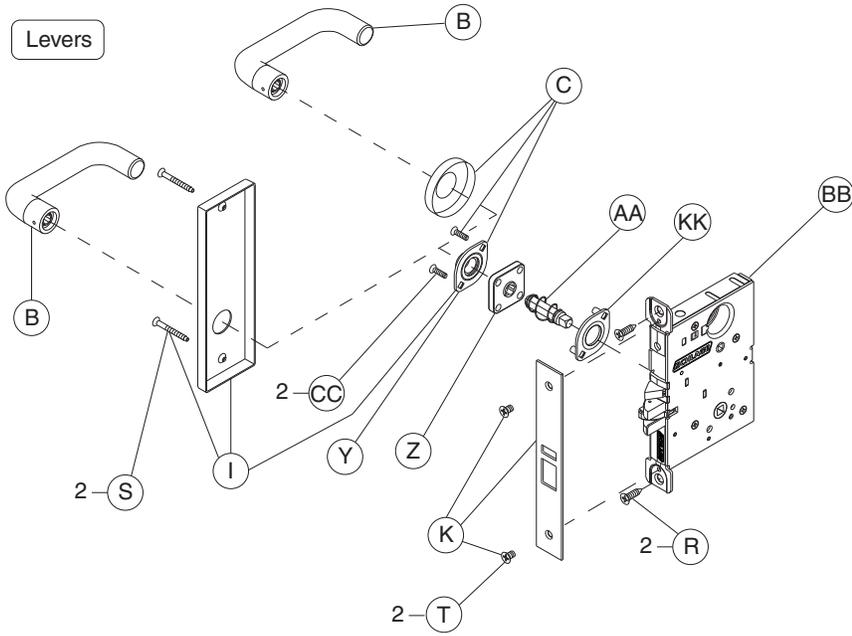


## Trim assemblies

	P/N	Description
B	09-402	Inside knob and lever
C	09-403	Inside rose
I	09-632	Inside escutcheon L and N x blank
K	09-663	1¼" armor front x Schlage logo, latch and auxiliary latch
R	C203-736	Case mounting screw pack
S	L583-120	Escutcheon thru-bolts/screws
T	K110-020	Armor screw pack
Y	L283-031	Inside lever mounting plate
Z	L283-040	Lever spring cage
AA	L283-060	Spindle and spring
BB	L283-725	Assembled lock case, exit
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever except single dummy
HH	L583-321	Inside knob mounting plate
KK	L283-151	Mounting plate

# Exit trim with cylinder

L9026

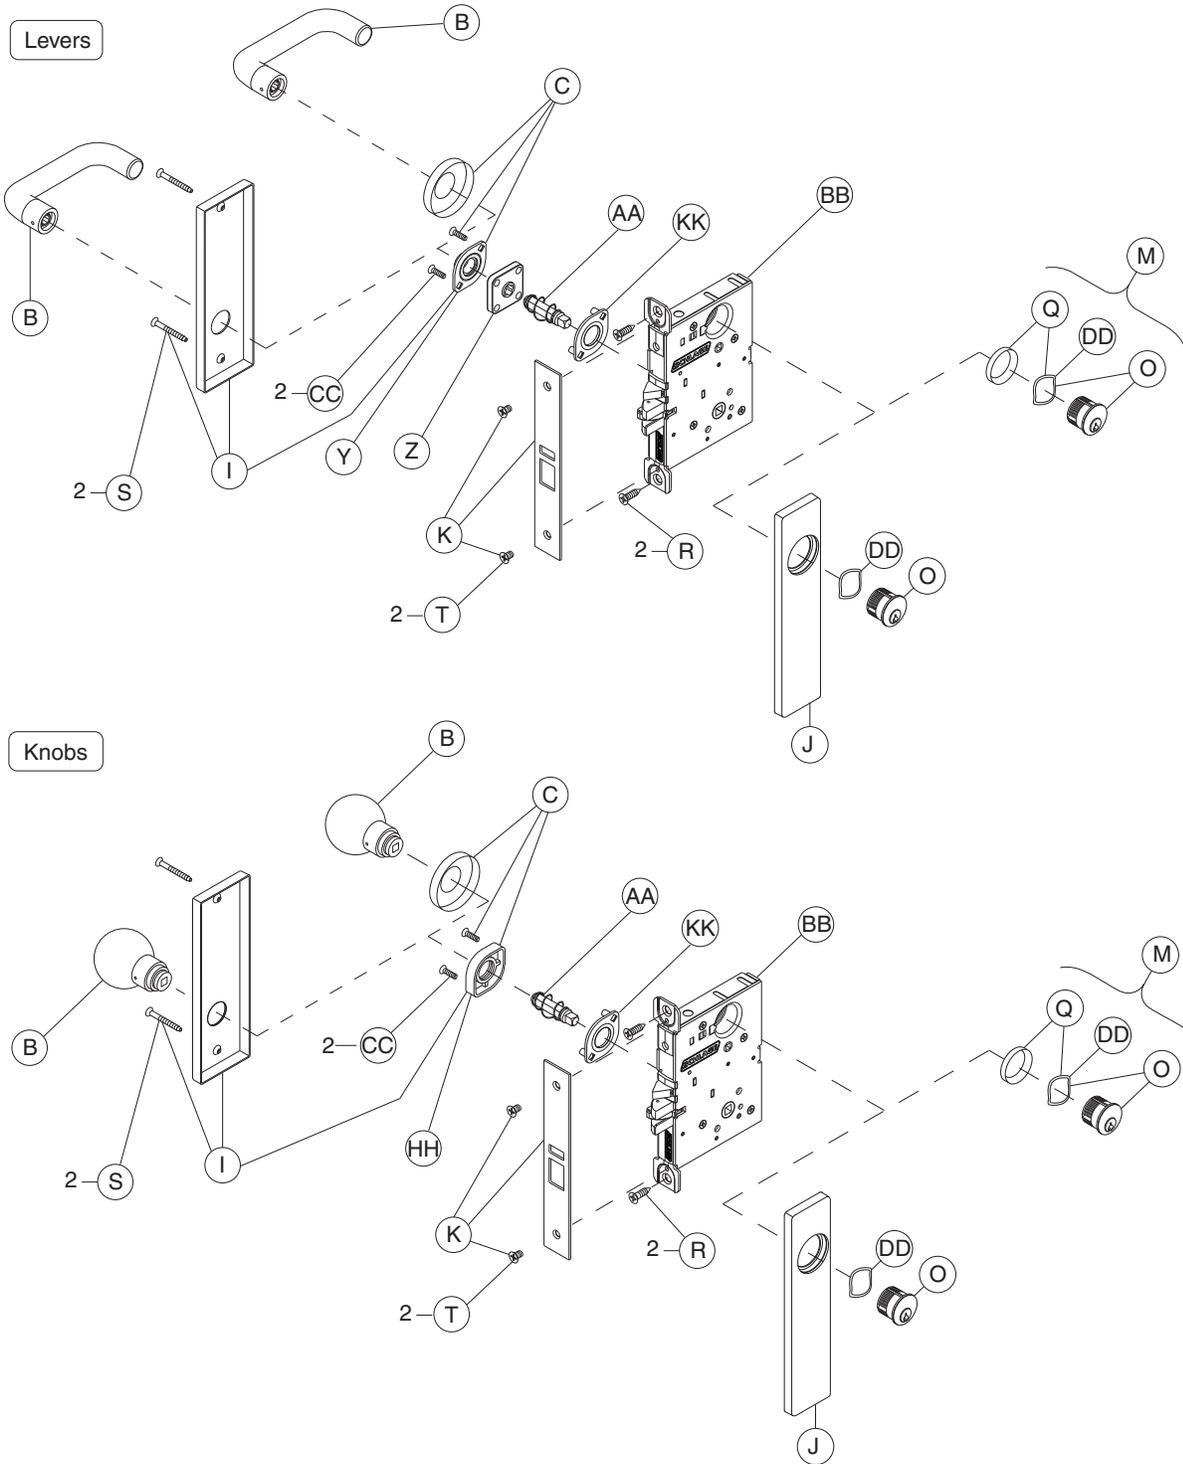

## Trim assemblies


	P/N	Description
B	09-402	Inside knob and lever
C	09-403	Inside rose
I	09-632	Inside escutcheon L and N x blank
J	09-614	Outside escutcheon and bushing L x cylinder
K	09-662	1¼" armor front x Schlage logo, latch and auxiliary latch
M	30-001	Full face cylinder with compression ring and spring – clover leaf cam
O	30-021	Full face cylinder with compression spring – clover leaf cam
Q	36-083	Compression ring and spring
R	C203-736	Case mounting screw pack
S	L583-120	Escutcheon thru-bolts/screws
T	K110-020	Armor screw pack
Y	L283-031	Inside lever mounting plate
Z	L283-040	Lever spring cage
AA	L283-060	Spindle and spring
BB	L283-134	Assembled lock case, exit with cylinder
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever except single dummy
DD	L583-195	Compression spring
HH	L583-321	Inside knob mounting plate
KK	L283-151	Mounting plate

Trim assemblies


Exit trim with three point latch

LM9325

Levers

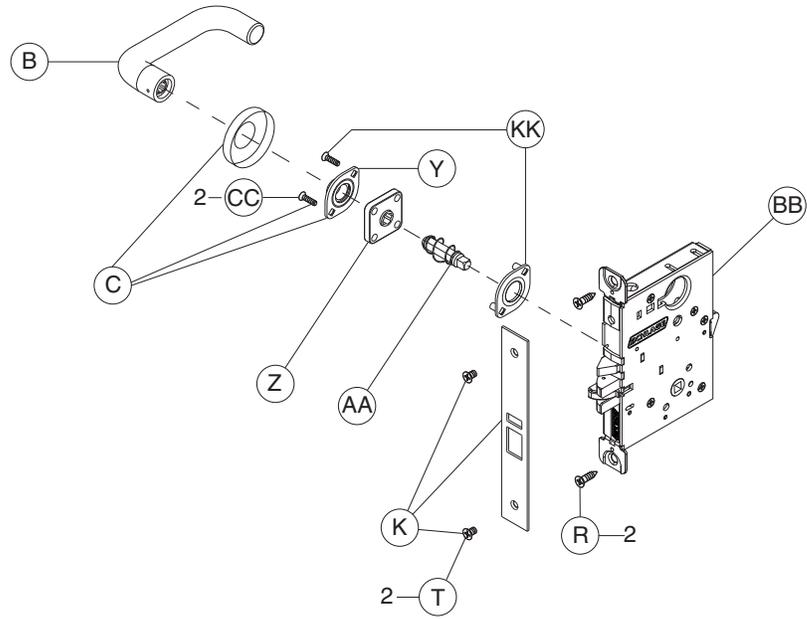

Knobs

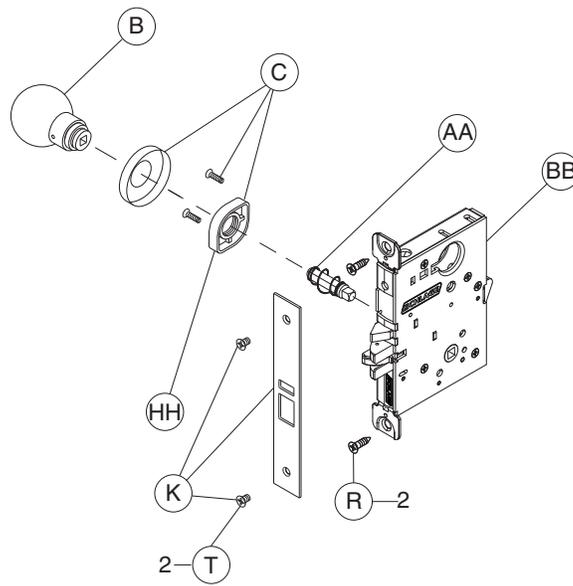

## Trim assemblies


	P/N	Description
B	09-402	Inside knob and lever
C	09-403	Inside rose
K	09-663	1¼" armor front x Schlage logo –latch and auxiliary latch
R	C203-736	Case mounting screw pack
T	K110-020	Armor screw pack
Y	L283-031	Inside lever mounting plate
Z	L283-040	Lever spring cage
AA	L283-060	Spindle and spring
BB	L283-314	Assembled lock case, passage/exit x multipoint
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever (except single dummy) (qty 2)
HH	L583-321	Inside knob mounting plate
KK	L283-151	Mounting plate

Trim assemblies

Emergency button x turn trim

L9040, LV9040, L9440, LV9440

Levers

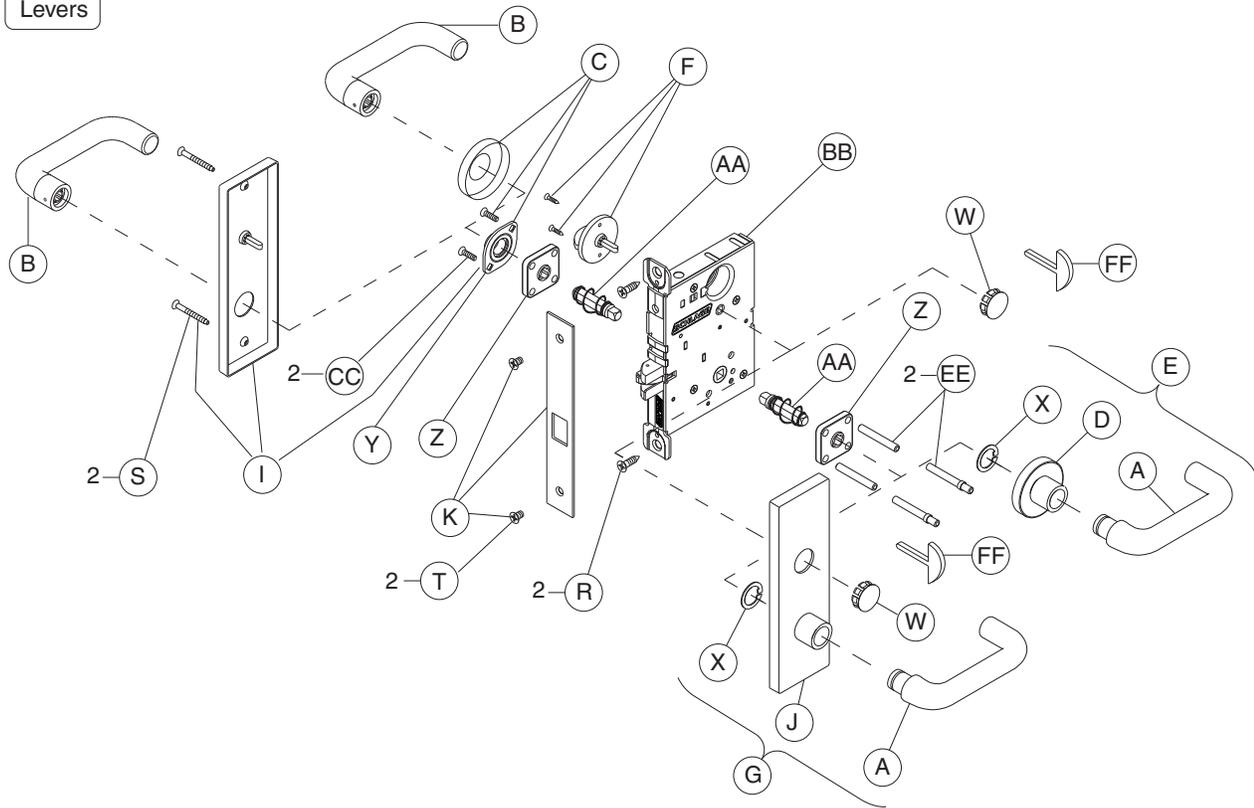

Notes: L9440 and LV9440 lock functions have latch and deadbolt. Lock case and armor front shown with latch only.  
Available with 180° messaging indicator trim.  
Available with lever trim only.


## Trim assemblies

	P/N	Description	L9040	LV9040	L9440	LV9440
A	09-401	Outside lever	•	•	•	•
B	09-402	Inside lever	•	•	•	•
C	09-403	Inside rose	•	•	•	•
D	09-404	Outside rose and bushing	•	•	•	•
E	Outside rose lever:					
	09-506	All designs except AST, AVA, MER	•	•	•	•
	09-655	AST, AVA, MER	•	•	•	•
F	09-509	Thumbturn	•	•	•	•
G	09-551	Outside escutcheon x lever (except 93 lever), L and N x emergency button	•	•	•	•
I	09-633	Inside escutcheon for lever, L and N x thumbturn	•	•	•	•
J	09-637	Outside escutcheon and bushing x lever (except 93 lever), L and N x emergency button	•	•	•	•
	09-651	Outside N escutcheon and bushing x 93 lever x emergency button	•	•	•	•
K	1¼" armor front x Schlage logo					
	09-662	Latch	•	•		
	09-664	Latch and deadbolt			•	•
R	C203-736	Case mounting screw pack	•	•	•	•
S	Escutcheon thru-bolts/screws:					
	K510-389	N escutcheon	2	2	2	2
	L583-120	L escutcheon	2	2	2	2
T	K110-020	Armor screw pack	•	•	•	•
W	K510-330	Emergency button	•	•	•	•
X	L283-030	Lever truarc rings	•	•	•	•
Y	L283-031	Inside lever mounting plate	•	•	•	•
Z	L283-040	Lever spring cage	2	2	2	2
AA	L283-060	Spindle and spring	2	2	2	2
BB	Assembled lock case:					
	L283-132	Privacy, L	•			
	L283-171	Privacy, LV		•		
	L283-062	Privacy with deadbolt, L			•	
	L283-181	Privacy with deadbolt, LV				•
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x lever except single dummy	2	2	2	2
EE	L583-212	Mounting posts, L	2		2	
	L583-497	Mounting posts, LV		2		2
FF	L583-233	Emergency turn	•	•	•	•

Trim assemblies

Privacy x turns both sides trim

L9040 x XL11-446, LV9040 x XL11-446

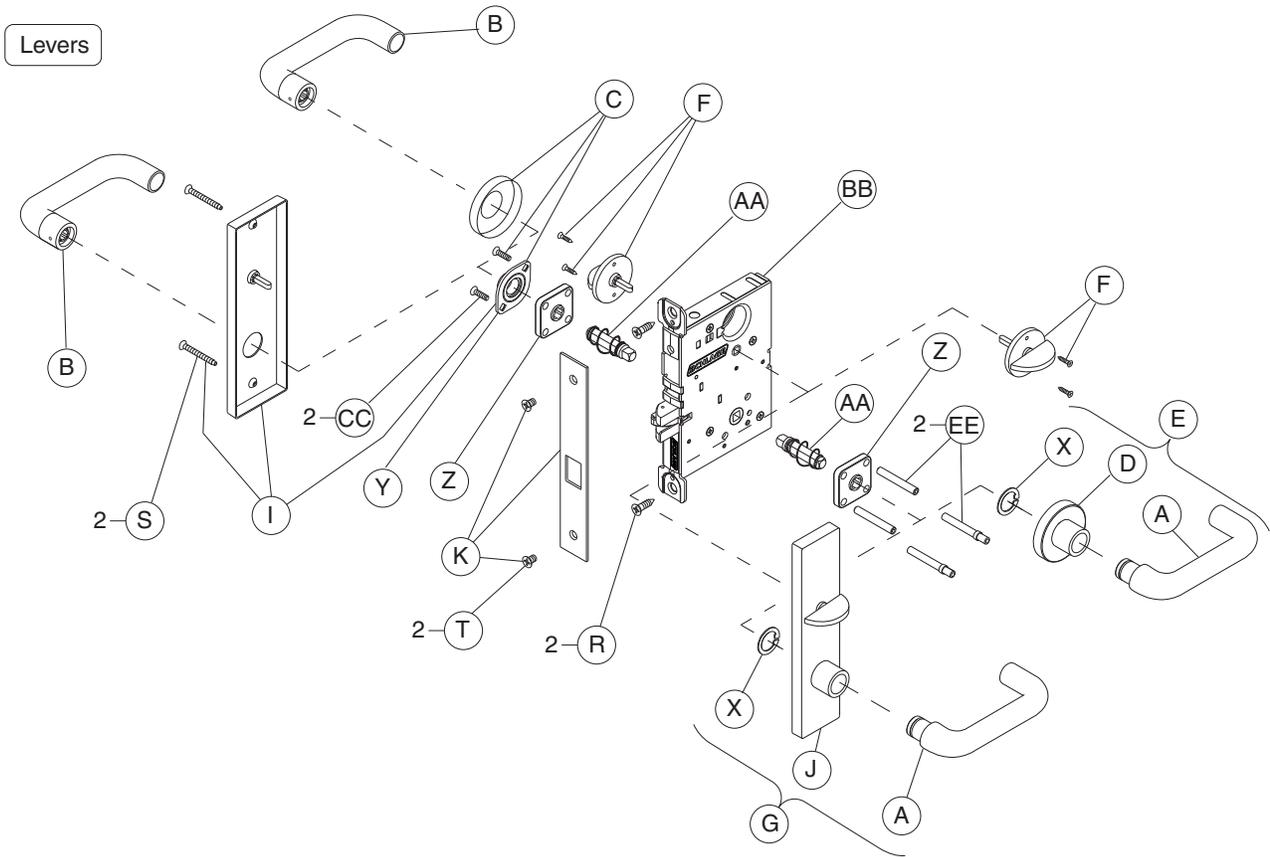

Notes: Available with 180° messaging indicator trim.  
Available with lever trim only.

## Trim assemblies

	P/N	Description	L9040 x XL11-446**	LV9040 x XL11-446**
A	09-401	Outside lever	•	•
B	09-402	Inside lever	•	•
C	09-403	Inside rose	•	•
D	09-404	Outside rose and bushing	•	•
Outside rose and lever:				
E	09-506	All designs except AST, AVA, MER	•	•
	09-655	AST, AVA, MER	•	•
F	09-509	Inside thumbturn (qty 2)	•	•
G	09-550/XL11-446	Outside escutcheon x lever (except 93 lever), L x thumbturn ‡	•	•
I	09-633	Inside escutcheon for lever, L and N x thumbturn	•	•
J	09-636/XL11-446	Outside escutcheon and bushing x lever (except 93 lever), L x thumbturn ‡	•	•
K	09-662	1¼" armor front x Schlage logo, latch	•	•
R	C203-736	Case mounting screw pack	•	•
S	L583-120	Escutcheon thru-bolts/screws, L escutcheon	2	2
T	K110-020	Armor screw pack	•	•
W	K510-330	Emergency button	•	•
X	L283-030	Lever truearc rings	•	•
Y	L283-031	Inside lever mounting plate	•	•
Z	L283-040	Lever spring cage	2	2
AA	L283-060	Spindle and spring	2	2
Assembled lock case:				
BB	L283-132	Privacy, L	•	•
	L283-171	Privacy, LV	•	•
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x lever except single dummy	2	2
EE	L583-212	Mounting posts, L	2	•
	L583-497	Mounting posts, LV	•	2
FF	L583-233	Emergency turn	•	•


‡ Not sold separately as a part.

\*\* Not available with N escutcheon.

Trim assemblies

Coin turn outside x turn trim

L9044, LV9044, L9444, LV9444

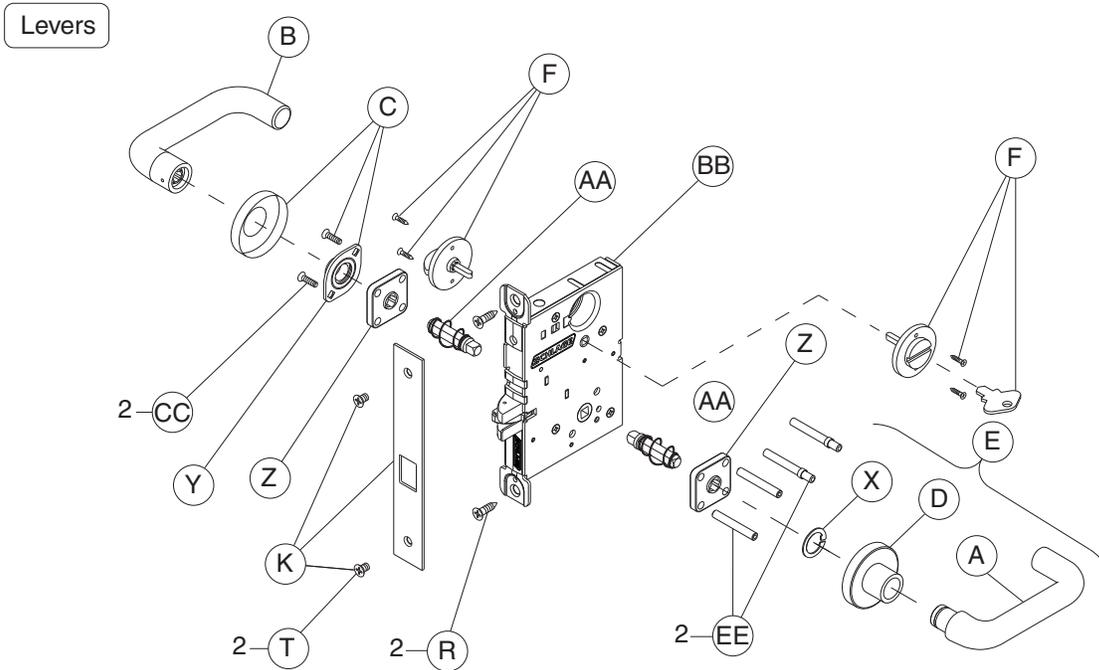

Notes: L9444 and LV9444 lock functions have latch and deadbolt. Lock case and armor front shown with latch only.  
Available with 180° messaging indicator trim.  
Available with lever x rose trim only.


## Trim assemblies

	P/N	Description	L9044*	LV9044*	L9444*	LV9444*
A	09-401	Outside lever	.	.	.	.
B	09-402	Inside lever	.	.	.	.
C	09-403	Inside rose	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.
E	Outside rose and knob/lever:					
	09-506	All designs except AST, AVA, MER	.	.	.	.
	09-655	AST, AVA, MER	.	.	.	.
F	09-509	Inside thumbturn	.	.	.	.
	L283-124	Coin turn outside	.	.	.	.
K	1¼" armor front x Schlage logo					
	09-662	Latch	.	.	.	.
	09-664	Latch and deadbolt	.	.	.	.
R	C203-736	Case mounting screw pack	.	.	.	.
T	K110-020	Armor screw pack	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.
Z	L283-040	Lever spring cage	2	2	2	2
AA	L283-060	Spindle and spring	2	2	2	2
BB	Assembled lock case:					
	L283-132	Privacy, L	.	.	.	.
	L283-171	Privacy, LV	.	.	.	.
	L283-062	Privacy with deadbolt, L	.	.	.	.
	L283-181	Privacy with deadbolt, LV	.	.	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x lever (except single dummy)	2	2	2	2
EE	L583-212	Mounting posts, L	2	2		
	L583-497	Mounting posts, LV		2		2

\* Available with rose trim only.

# Cylinder x turn trim

L9050, LV9050, LM9350, LMV9350, L9056, LV9056, L9453, LV9453, L9456, LV9456, L9473

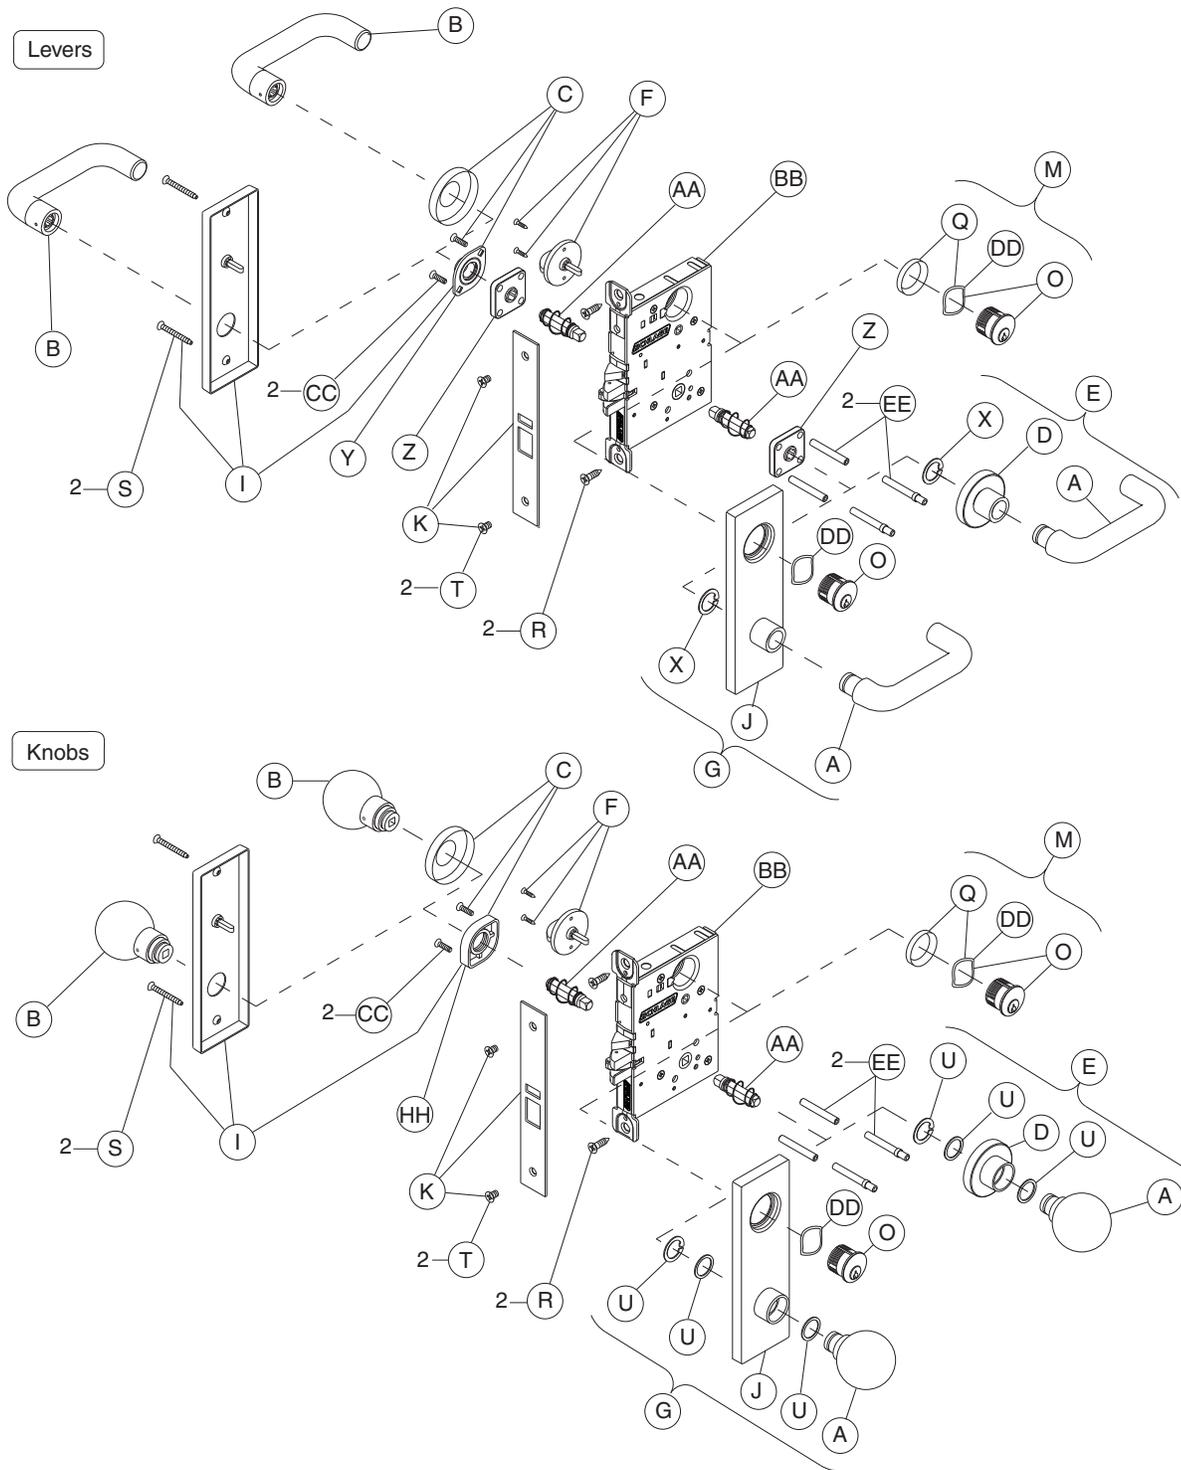


Notes: L9456, LV9456, and L9473 lock functions have a latch and deadbolt. Lock case and armor front shown with latch and auxiliary latch.  
 L/LV9453 lock functions have a latch, auxiliary latch, and deadbolt. Lock case and armor front shown with latch and auxiliary latch only.  
 Standard full face mortise cylinder shown.  
 LM9350 and LMV9350 lock functions are three point lock with latch and auxiliary latch. Lock case and armor front for L/LV functions shown.  
 L/LV9050, LM/LMV9350, L/LV9056, L/LV9456 and L9473 available with 180° indicator trim.

Trim assemblies

	P/N	Description	L9050	LV9050	LM9350	LMV9350	L9056	LV9056	L9453	LV9453	L9456	LV9456	L9473
A	09-401	Outside knob and lever	*	*	*	*	*	*	*	*	*	*	*
B	09-402	Inside knob and lever	*	*	*	*	*	*	*	*	*	*	*
C	09-403	Inside rose	*	*	*	*	*	*	*	*	*	*	*
D	09-404	Outside rose and bushing	*	*	*	*	*	*	*	*	*	*	*
E	Outside rose and knob/lever:												
	09-506	All designs except AST, AVA, MER	*	*	*	*	*	*	*	*	*	*	*
	09-655	AST, AVA, MER	*	*	*	*	*	*	*	*	*	*	*
F	09-509	Thumbturn	*	*	*	*	*	*	*	*	*	*	*
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	*	*	*	*	*	*	*	*	*	*	*
I	09-633	Inside escutcheon for knob/lever, L and N x thumbturn	*	*	*	*	*	*	*	*	*	*	*
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	*	*	*	*	*	*	*	*	*	*	*
	09-652	Outside N escutcheon and bushing x 93 lever, full face cylinder	*	*	*	*	*	*	*	*	*	*	*
K	1¼" armor front x Schlage logo												
	09-663	Latch and auxiliary latch	*	*	*	*	*						
	09-664	Latch and deadbolt									*	*	*
	09-666	Latch, auxiliary latch and deadbolt							*	*			
M	30-001	Full face cylinder with compression ring and spring – clover leaf cam	*	*	*	*	*	*	*	*	*	*	*
O	30-021	Full face cylinder with compression spring – clover leaf cam	*	*	*	*	*	*	*	*	*	*	*
Q	36-083	Compression ring and spring	*	*	*	*	*	*	*	*	*	*	*
R	C203-736	Case mounting screw pack	*	*	*	*	*	*	*	*	*	*	*
S	Escutcheon thru-bolts/screws:												
	K510-389	N escutcheon	2	2	2	2	2	2	2	2	2	2	2
	L583-120	L escutcheon	2	2	2	2	2	2	2	2	2	2	2
T	K110-020	Armor screw pack	*	*	*	*	*	*	*	*	*	*	*
U	K110-550	Knob truarc rings and spacer pack	*	*	*	*	*	*	*	*	*	*	*
X	L283-030	Lever truarc rings	*	*	*	*	*	*	*	*	*	*	*
Y	L283-031	Inside lever mounting plate	*	*	*	*	*	*	*	*	*	*	*
Z	L283-040	Lever spring cage	2	2	2	2	2	2	2	2	2	2	2
AA	L283-060	Spindle and spring	2	2	2	2	2	2	2	2	2	2	2
BB	Assembled lock case:												
	L283-126	Office with simultaneous retraction					*						
	L283-133	Office, classroom, apartment security	*										
	L283-137	Entrance						*					
	L283-138	Corridor, classroom security x deadbolt								*			
	L283-140	Closet, storeroom and dormitory										*	
	L283-170	Office, classroom, apartment security, LV		*									
	L283-176	Entrance, LV							*				
	L283-177	Corridor, classroom security x deadbolt, LV										*	
	L283-180	Office with simultaneous retraction, LV						*					
CC	L283-316	Office, inner entry x multipoint			*								
	L283-317	Office, inner entry x multipoint, LV				*							
DD	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever (except single dummy)	2	2	2	2	2	2	2	2	2	2	2
EE	L583-195	Compression spring	*	*	*	*	*	*	*	*	*	*	*
	L583-212	Mounting posts, L	2		2		2		2		2		2
	L583-497	Mounting posts, LV		2		2		2		2		2	
HH	L583-321	Inside knob mounting plate	*	*	*	*	*	*	*	*	*	*	*

# Double cylinder trim

L9060, LV9060, L9071, LV9071, LM9371, LMV9371, L9077, LV9077, L9082, LV9082, L9457, LV9457, L9458, LV9458, L9462 x XL11-886, L9466

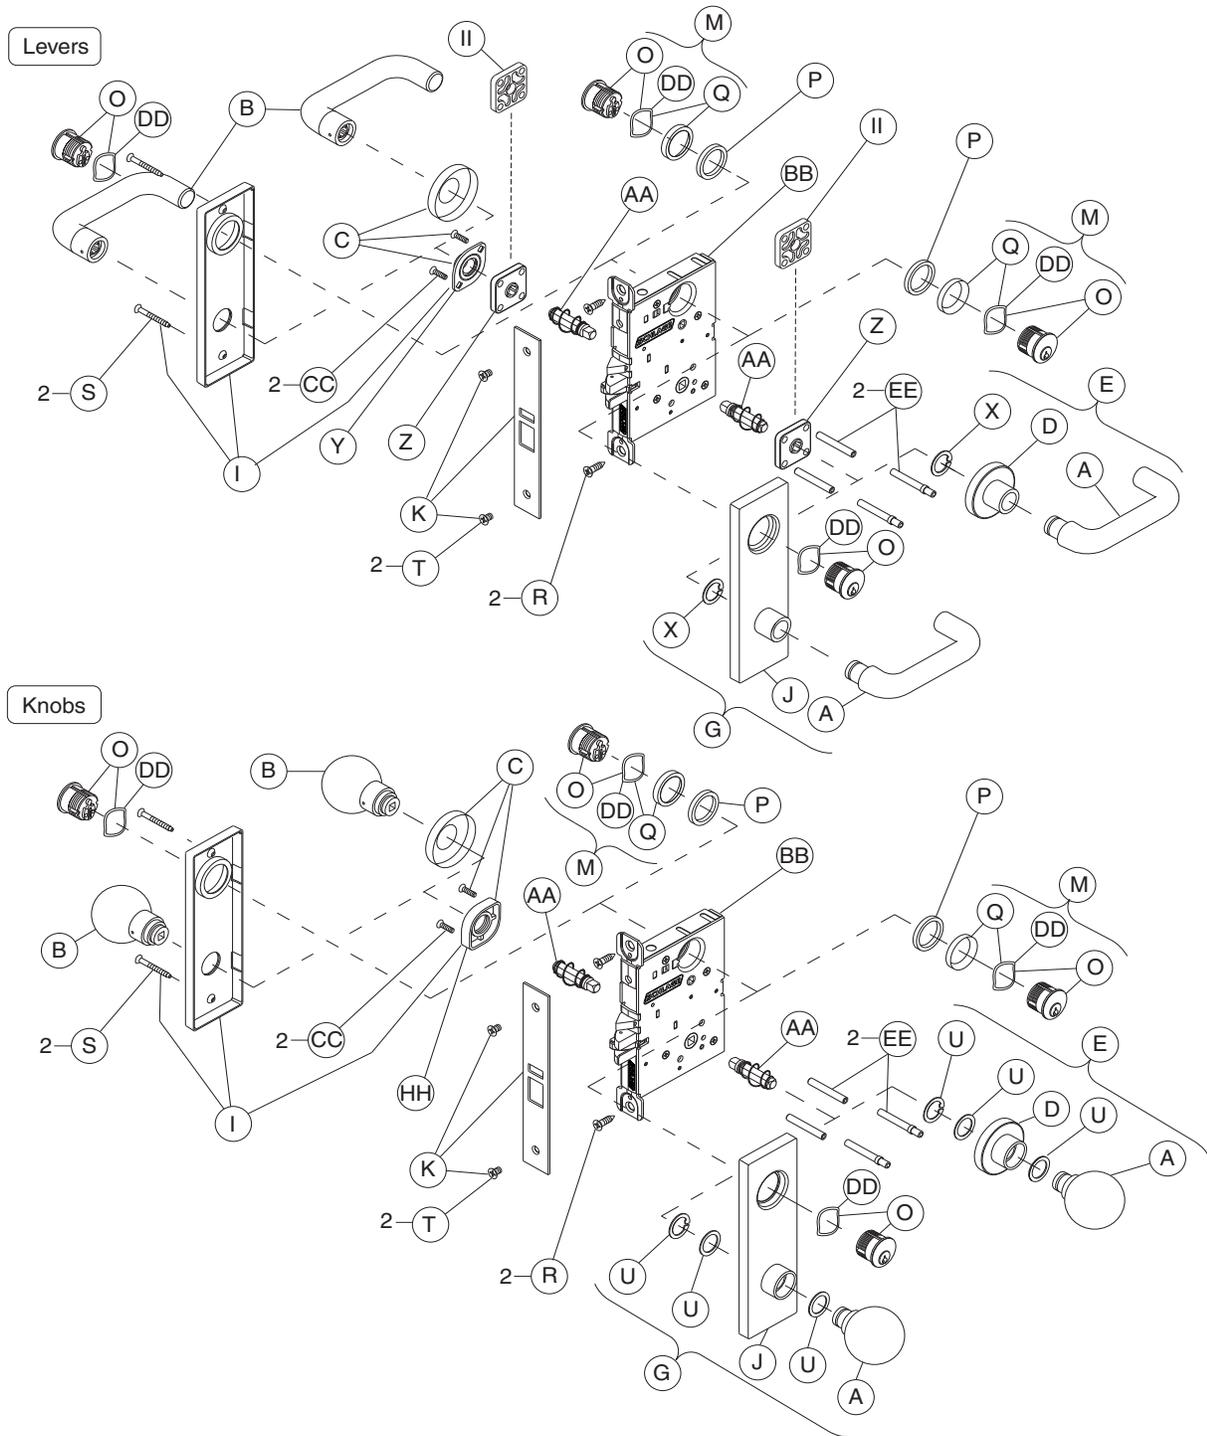


Notes: L9457, LV9457, and L9466 lock functions have a latch and deadbolt. Lock case and armor front shown with latch and auxiliary latch.  
 L9458 and LV9458 lock functions have a latch, auxiliary latch and deadbolt. Lock case and armor front shown with latch and auxiliary latch.  
 L9462 x XL11-886 lock function has deadbolt only. Lock case and armor front shown with latch and auxiliary latch.  
 Standard full face mortise cylinder shown.  
 LM9371 and LMV9371 lock functions are three point lock with latch and auxiliary latch. Lock case and armor front for L/LV functions shown.  
 L/LV9060, L/LV9071, LM/LMV9371, L/LV9457, L/LV9458, L9462 x XL11-886 and L9466 available with 180° messaging indicator trim.

Trim assemblies

	P/N	Description	L9060	LV9060	L9071	LV9071	LM9371	LMV9371	L9077	LV9077	L9082	LV9082	L9457	LV9457	L9458	LV9458	L9462 x L11-886	L9466
A	09-401	Outside knob and lever	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
B	09-402	Inside knob and lever	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
C	09-403	Inside rose	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
E	Outside rose and knob/lever:																	
	09-506	All designs except AST, AVA, MER	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	09-655	AST, AVA, MER																.
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
I	09-635	Inside escutcheon for knob/lever, L and N x full face cylinder	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
K	1/4" armor front x Schlage logo:																	
	09-663	Latch and auxiliary latch	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	09-664	Latch and deadbolt											.	.	.	.	.	.
	09-665	Deadbolt																.
	09-666	Latch, auxiliary latch and deadbolt														.	.	.
	09-713	Latch, auxiliary latch less UL stamp						.	.									
M	Full face cylinder with compression ring and spring:																	
	20-001	Straight cam	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	30-001	Clover leaf cam	.	.	2	2	2	2	2	2	2	2	2	2	2	2	2	2
O	Full face cylinder with compression spring:																	
	26-021	Straight cam	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	30-021	Clover leaf cam	.	.	2	2	2	2	2	2	2	2	2	2	2	2	2	2
P	36-082	Blocking ring	2	2	2	2	2	2	2	2	2	2	2	.	.	.	.	2
Q	36-083	Compression ring and spring	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
R	C203-736	Case mounting screw pack	.	.	.	.	.	.	.	.	.	.	2	2	2	2	.	.
S	Escutcheon thru-bolts/screws:																	
	K510-389	N escutcheon	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
	L583-120	L escutcheon	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
T	K110-020	Armor screw pack	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
Z	L283-040	Lever spring cage	2	2	2	2	2	2	2	2		2	2	2	2	2	.	2
AA	L283-060	Spindle and spring	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
BB	Assembled lock case:																	
	L283-039	Classroom holdback						.										
	L283-133	Office, classroom, apartment security	.	.														
	L283-138	Corridor, classroom security x deadbolt											.					
	L283-139	Deadbolt retract x inside knob/lever																.
	L283-140	Closet, storeroom and dormitory																.
	L283-146	Institution										.						
	L283-170	Office, classroom, apartment security, LV	.	.	.	.												
	L283-172	Classroom holdback, LV								.								
	L283-177	Corridor, classroom security x deadbolt, LV												.				
	L283-182	Institution, LV										.						
	L283-310	Classroom security with auxiliary latch x deadbolt													.			
	L283-311	Classroom security with auxiliary latch x deadbolt, LV															.	
L283-316	Office, inner entry x multipoint					.												
L283-317	Office, inner entry x multipoint, LV					.												
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
DD	L583-195	Compression spring	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
EE	L583-212	Mounting posts, L	2	2		2		2		2		2		2		2		2
	L583-497	Mounting posts, LV		2		2		2		2		2		2		2		
HH	L583-321	Inside knob mounting plate	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
ii	L583-322	Outside lever spacer									2						.	

# Double cylinder storeroom trim

L9066 x XL11-897

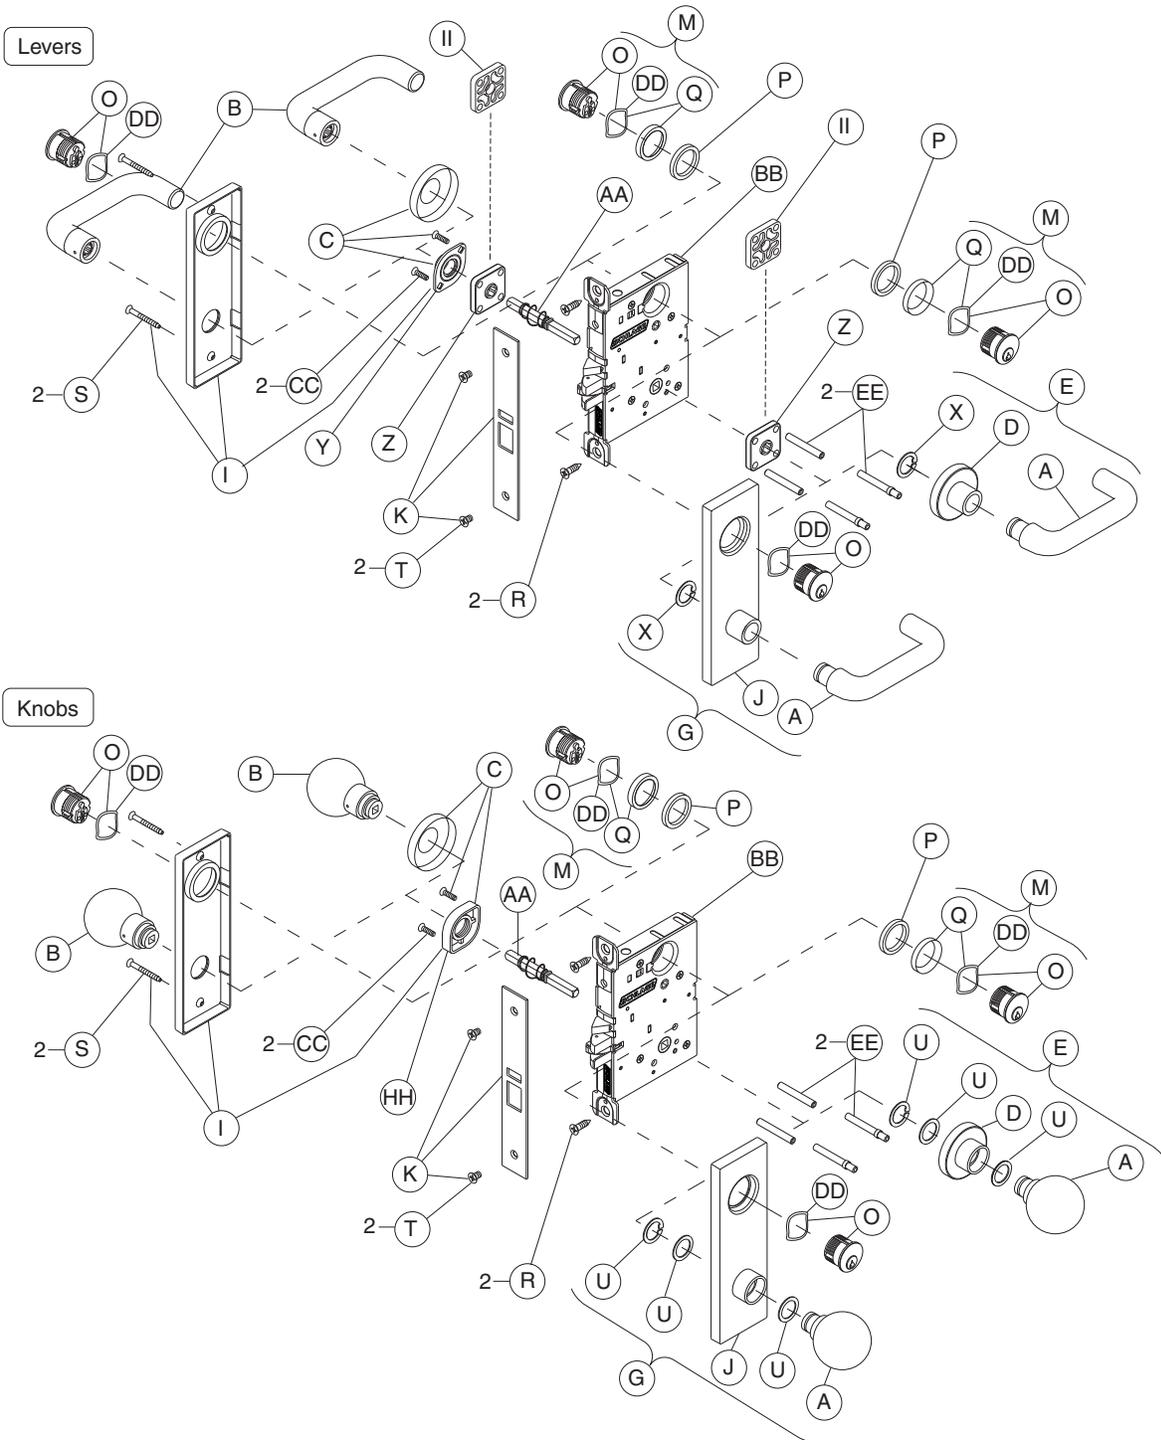

Note: Standard full face mortise cylinders shown.


## Trim assemblies

	P/N	Description
A	09-401	Outside knob and lever
B	09-402	Inside knob and lever
C	09-403	Inside rose
D	09-404	Outside rose and bushing
E	09-506	Outside rose and knob/lever, all designs except AST, AVA, MER
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder
I	09-635	Inside escutcheon for knob/lever, L and N x full face cylinder
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder
	09-652	Outside escutcheon and bushing x 93 lever), full face cylinder
K	09-663	1 ¼" armor front x Schlage logo, latch and auxiliary latch
M	30-001	Full face cylinder with compression ring and spring: clover leaf cam (qty 2)
O	30-021	Full face cylinder with compression spring, clover leaf cam (qty 2)
P	36-082	Blocking ring (qty 2)
Q	36-083	Compression ring and spring (qty 2)
R	C203-736	Case mounting screw pack
S	Escutcheon thru-bolts/screws:	
	K510-389	N escutcheon (qty 2)
	L583-120	L escutcheon (qty 2)
T	K110-020	Armor screw pack
U	K110-550	Knob truarc rings and spacer pack
X	L283-030	Lever truarc rings
Y	L283-031	Inside lever mounting plate
Z	L283-040	Lever spring cage (qty 2)
AA	L283-064	Spindle and spring
BB	L283-133	Assembled lock case: office, classroom, apartment security
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever (qty 2)
DD	L583-195	Compression spring (qty 2)
EE	L583-212	Mounting post (qty 2)
HH	L583-321	Inside knob mounting plate


# Cylinder outside trim

L9070, LV9070, LM9370, LMV9370, L9076, LV9076, L9080, LV9080, LM9380, LMV9380, L9080EL/EU\*, LV9080EL/EU\*, L9080EL/EU-RX\*, L9464 x XL11-886, L9465

**Levers**

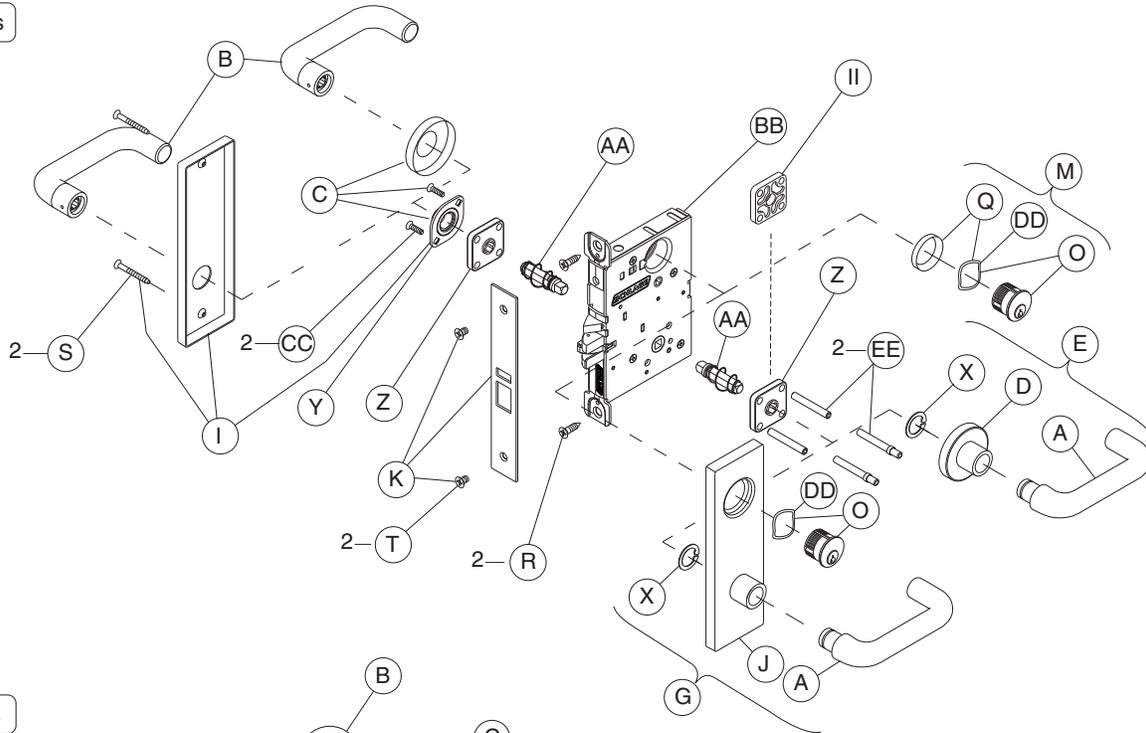

**Knobs**

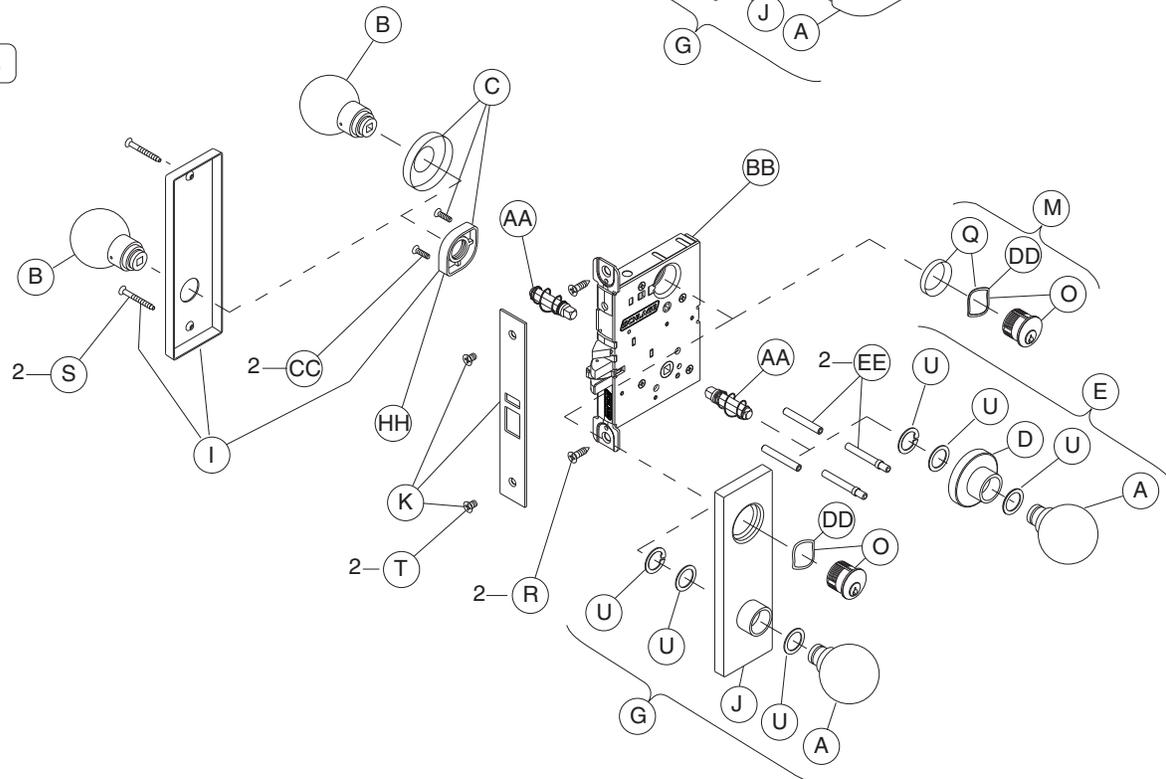

Notes: L9465 lock function has a latch and deadbolt. Lock case and armor front shown with latch and auxiliary latch.  
 L9464 x XL11-886 lock function has deadbolt only. Lock case and armor front shown with latch and auxiliary latch.  
 Standard full face mortise cylinder shown.  
 LM/LMV9370 and LM/LMV9380 lock functions are three point lock with latch and auxiliary latch. Lock case and armor front for L/LV functions shown.  
 L/LV9070, LM/LMV9370, L9464, L9465 available with 180° indicator trim.  
 \* L9080EL/EU, LV9080EL/EU, L9080EL/EU-RX are discontinued. For equivalent current product, see page 54.


Trim assemblies

	P/N	Description	L9070	LV9070	LM9370	LMV9370	L9076	LV9076	L9080	LV9080	LM9380	LMV9380	L9080 EL	LV9080 EL	L9080 EU	LV9080 EU	L9080 EL-RX ***	L9080 EU-RX ***	L9464 x XL11-886	L9465
A	09-401	Outside knob and lever	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
B	09-402	Inside knob and lever	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
C	09-403	Inside rose	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
E	Outside rose and knob/lever:																			
	09-506	All designs except AST, AVA, MER	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	09-655	AST, AVA, MER	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
I	09-632	Inside escutcheon for knob/lever, L and N x blank	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	09-652	Outside N escutcheon and bushing x 93 lever, full face cylinder	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
K	1¼" armor front x Schlage logo:																			
	09-663	Latch and auxiliary latch	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	09-664	Latch and deadbolt	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	09-665	Deadbolt	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
	09-713	Latch, auxiliary latch less UL stamp				.	.													
M	30-000	Full face cylinder with compression ring and spring , clover leaf cam									.	.								
	30-001	Full face cylinder with compression ring and spring , clover leaf cam	.	.	.	.	.	.	.	.			.	.	.	.	.	.	.	.
O	30-019	Full face cylinder with compression spring , clover leaf cam									.	.								
	30-021	Full face cylinder with compression spring , clover leaf cam	.	.	.	.	.	.	.	.			.	.	.	.	.	.	.	.
Q	36-083	Compression ring and spring	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
R	C203-736	Case mounting screw pack	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
S	Escutcheon thru-bolts/screws:																			
	K510-389	N escutcheon	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
	L583-120	L escutcheon	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
T	K110-020	Armor screw pack	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
Z	L283-040	Lever spring cage	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
AA	L283-060	Spindle and spring	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
BB	Assembled lock case:																			
	L283-039	Classroom holdback					.													
	L283-133	Office, classroom, apartment security	.																	
	L283-134	Storeroom						.												
	L283-139	Deadbolt retract x inside knob/lever																	.	
	L283-140	Closet, storeroom and dormitory																		.
	L283-142	Electrically locked											.				.			
	L283-143	Electrically unlocked												.				.		
	L283-170	Office, classroom, apartment security, LV	.																	
	L283-172	Classroom holdback, LV						.												
	L283-173	Storeroom, LV							.											
	L283-174	Electrically locked, LV											.							
L283-175	Electrically unlocked, LV												.							
L283-316	Office, inner entry x multipoint			.						.										
L283-317	Office, inner entry x multipoint, LV			.						.										
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
DD	L583-195	Compression spring	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
EE	L583-212	Mounting posts, L	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
	L583-497	Mounting posts, LV	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
HH	L583-321	Inside knob mounting plate	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
II	L583-322	Outside lever spacer						.											.	

\*\*\* Not available with N escutcheon.

# Electrically locked/unlocked both sides trim

L9082EL/EU\*

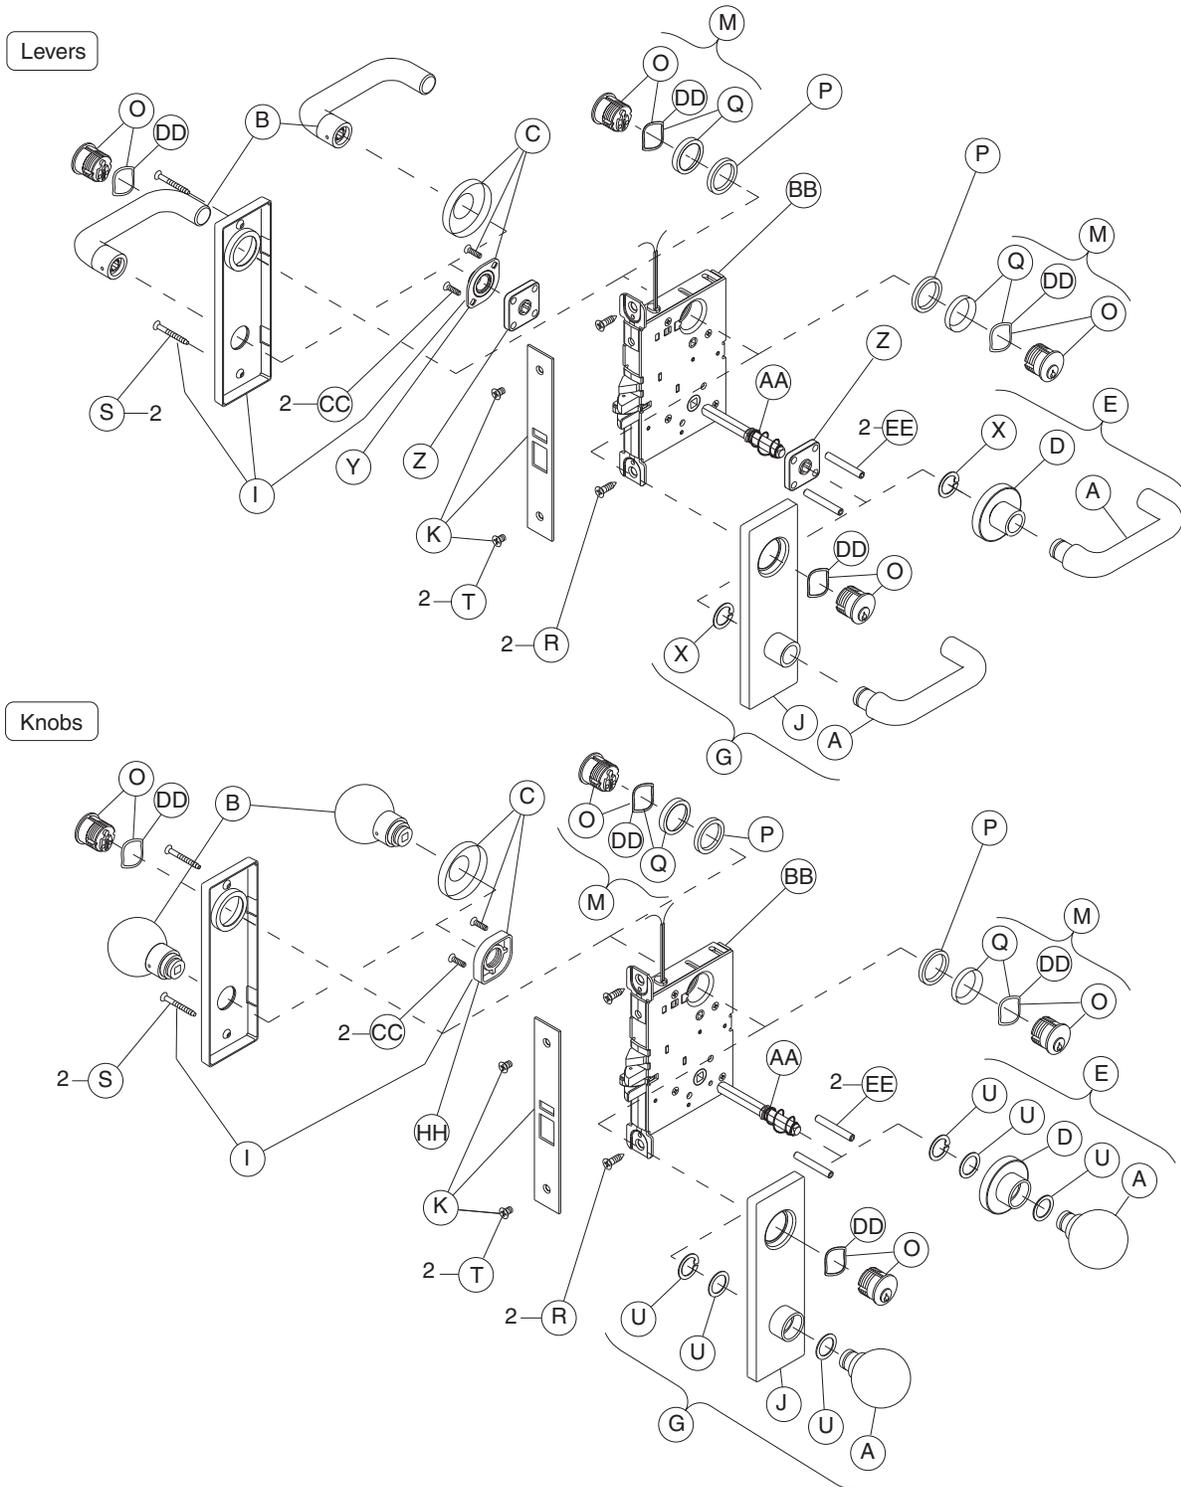

Notes: Standard full face mortise cylinder shown.  
\* L9082EL/EU is discontinued. For equivalent current product, see page 54.

## Trim assemblies


	P/N	Description	L9082 EL	L9082 EU
A	09-401	Outside knob and lever	.	.
B	09-402	Inside knob and lever	.	.
C	09-403	Inside rose	.	.
D	09-404	Outside rose and bushing	.	.
Outside rose and knob/lever:				
E	09-506	All designs except AST, AVA, MER	.	.
	09-655	AST, AVA, MER	.	.
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	.	.
I	09-635	Inside escutcheon for knob/lever, L and N x full face cylinder	.	.
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	.	.
K	09-663	1¼" armor front x Schlage logo, latch and auxiliary latch	.	.
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	.	.
O	30-021	Full face cylinder with compression spring , clover leaf cam	.	.
P	36-082	Blocking ring	2	2
Q	36-083	Compression ring and spring	.	.
R	C203-736	Case mounting screw pack	.	.
Escutcheon thru-bolts/screws:				
S	K510-389	N escutcheon	2	2
	L583-120	L escutcheon	2	2
T	K110-020	Armor screw pack	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.
X	L283-030	Lever truarc rings	.	.
Y	L283-031	Inside lever mounting plate	.	.
Z	L283-040	Lever spring cage	2	2
AA	L283-064	Spindle and spring, double dummy	.	.
Assembled lock case:				
BB	L283-085	L9082 electrically locked both sides	.	.
	L283-086	L9082 electrically unlocked both sides	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2
DD	L583-195	Compression spring	2	2
EE	L583-212	Mounting posts, L	2	2
HH	L583-321	Inside knob mounting plate	.	.

Trim assemblies


Electrically locked/unlocked outside trim

L9090EL/EU

Levers

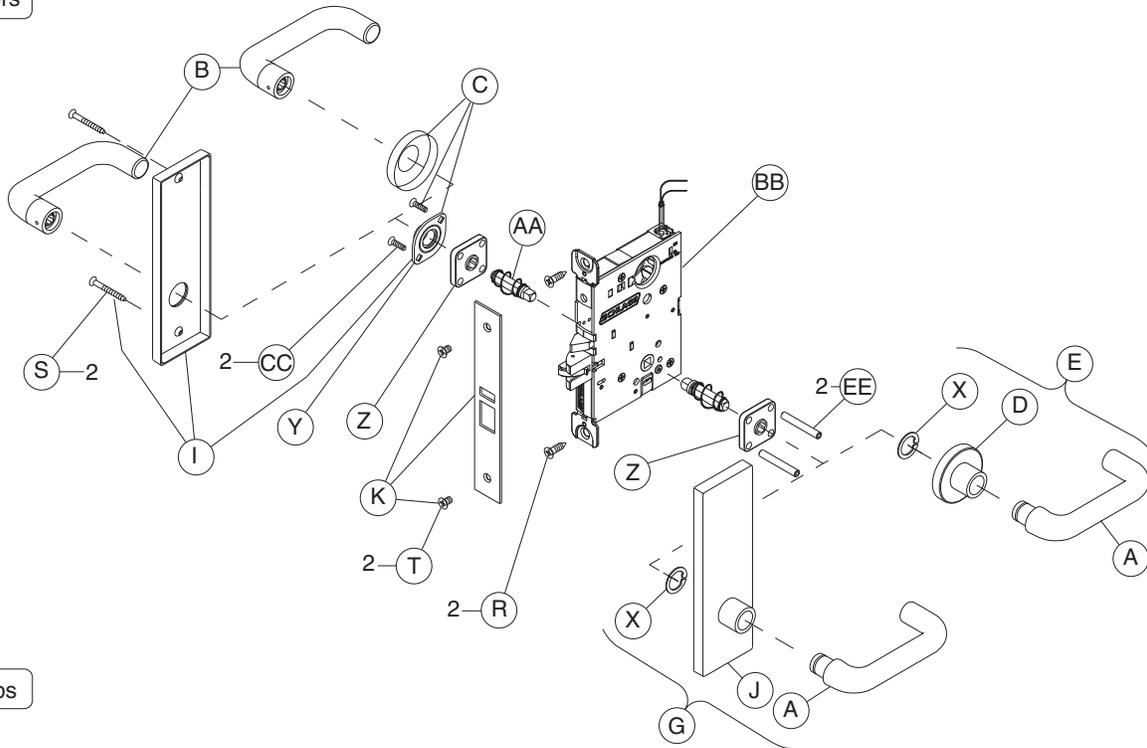

Knobs

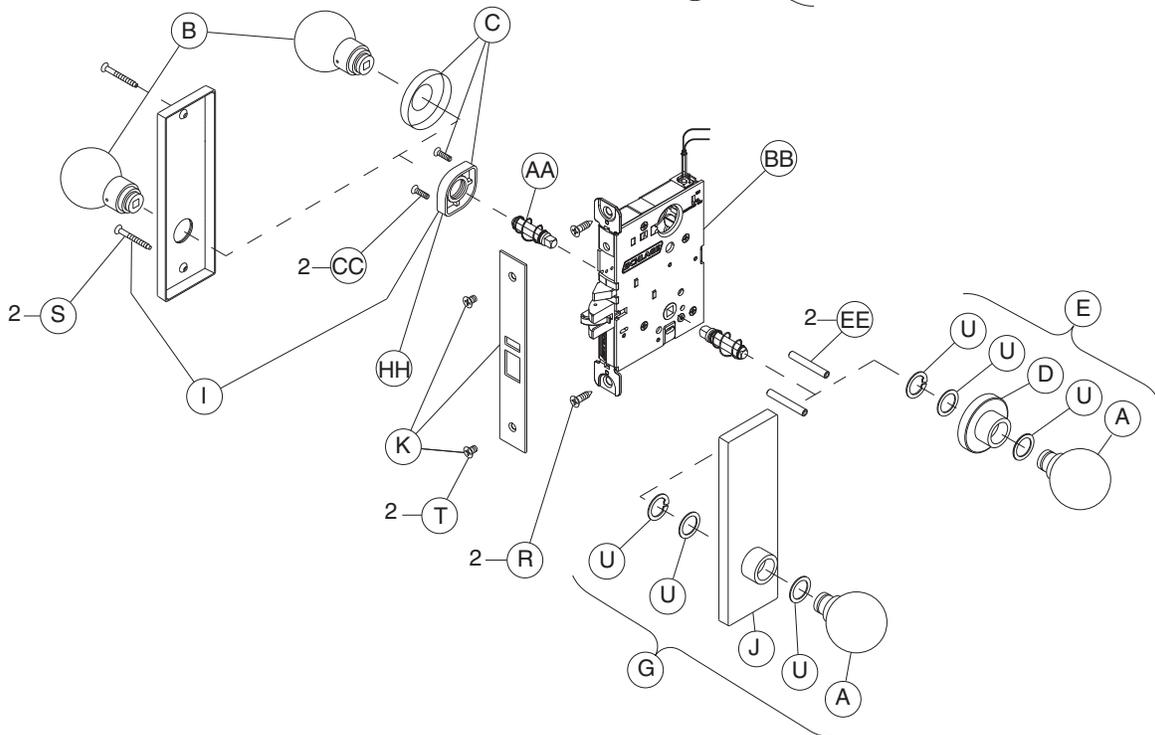

## Trim assemblies


	P/N	Description	L9090 EL	L9090 EU
A	09-401	Outside knob and lever	•	•
B	09-402	Inside knob and lever	•	•
C	09-403	Inside rose	•	•
D	09-404	Outside rose and bushing	•	•
Outside rose and knob/lever:				
E	09-506	All designs except AST, AVA, MER	•	•
	09-655	AST, AVA, MER	•	•
G	09-550	Outside escutcheon x knob/lever (except 93 lever), L and N x blank	•	•
I	09-632	Inside escutcheon for knob/lever, L and N x blank	•	•
J	09-636	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x blank	•	•
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	•	•
K	09-663	1¼" armor front x Schlage logo, latch and auxiliary latch	•	•
R	C203-736	Case mounting screw pack	•	•
Escutcheon thru-bolts/screws:				
S	K510-389	N escutcheon	2	2
	L583-120	L escutcheon	2	2
T	K110-020	Armor screw pack	•	•
U	K110-550	Knob truarc rings and spacer pack	•	•
X	L283-030	Lever truarc rings	•	•
Y	L283-031	Inside lever mounting plate	•	•
Z	L283-040	Lever spring cage	2	2
AA	L283-060	Spindle and spring	2	2
BB	L283-347	Assembled lock case, electrically locked or unlocked one side	•	•
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2
EE	L583-212	Mounting posts	2	2
HH	L583-321	Inside knob mounting plate	•	•

Trim assemblies


Electrically locked/unlocked both sides trim

L9091EL/EU

Levers

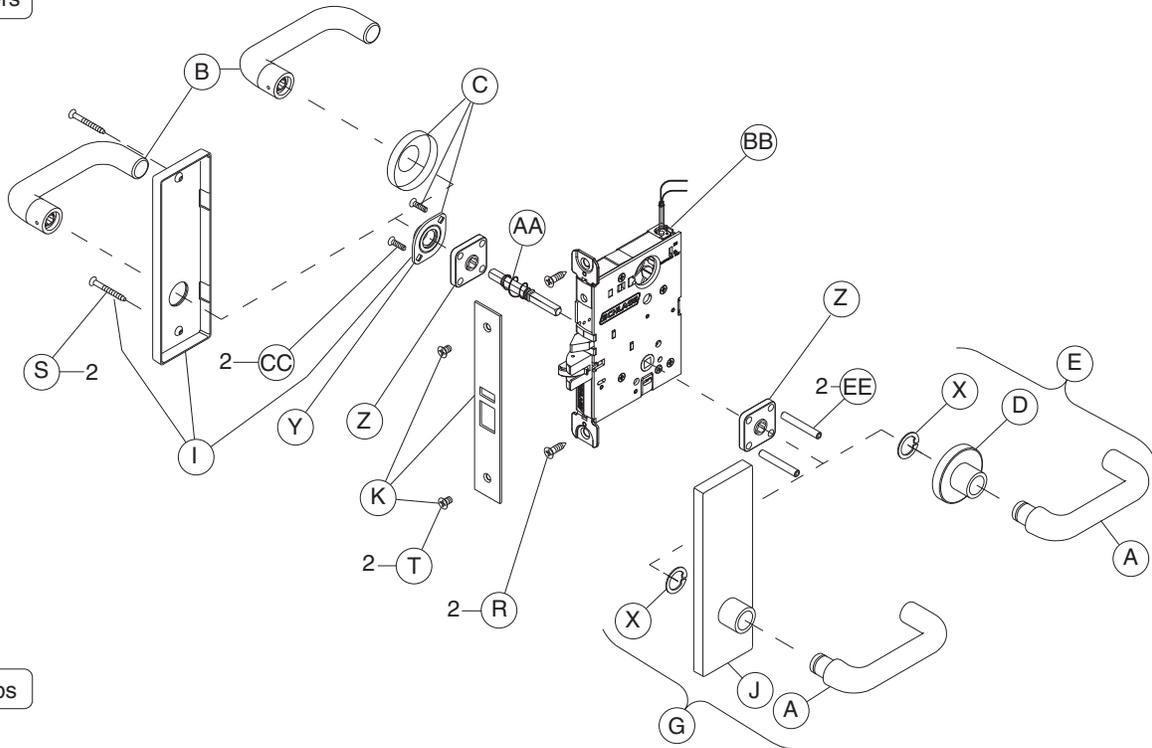

Knobs

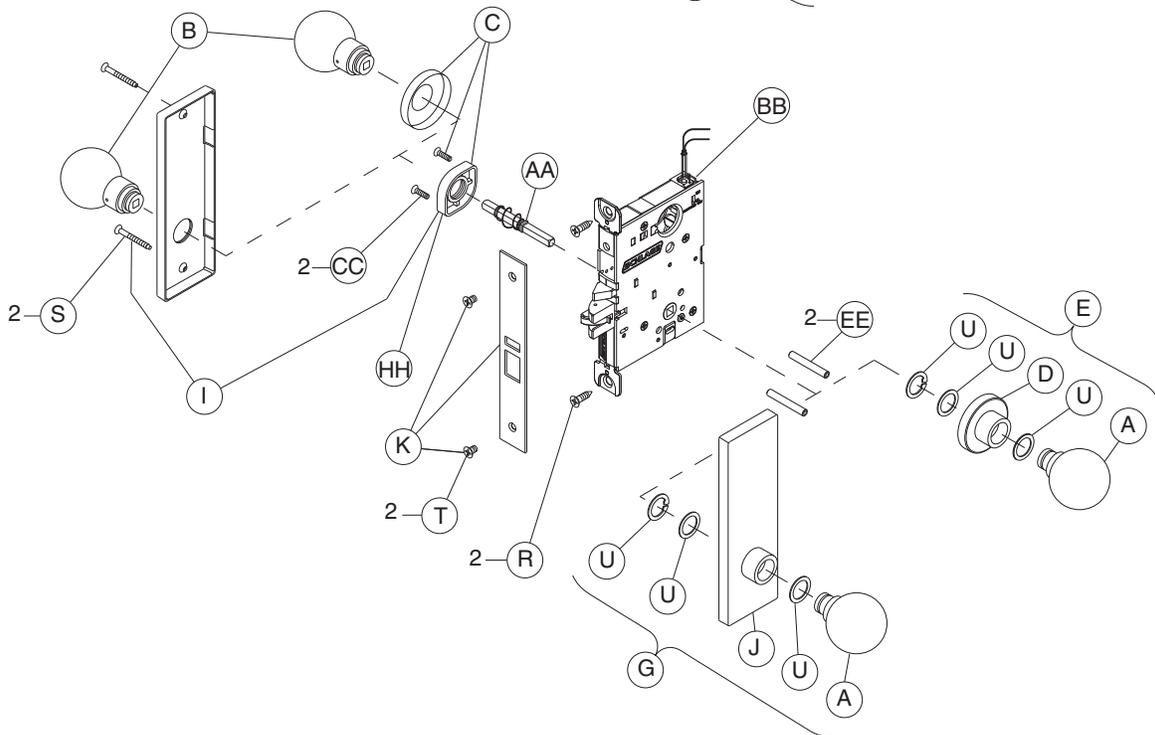


## Trim assemblies

	P/N	Description	L9091 EL	L9091 EU
A	09-401	Outside knob and lever	.	.
B	09-402	Inside knob and lever	.	.
C	09-403	Inside rose	.	.
D	09-404	Outside rose and bushing	.	.
Outside rose and knob/lever:				
E	09-506	All designs except AST, AVA, MER	.	.
	09-655	AST, AVA, MER	.	.
G	09-550	Outside escutcheon x knob/lever (except 93 lever), L and N x blank	.	.
I	09-632	Inside escutcheon for knob/lever, L and N x blank	.	.
J	09-636	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x blank	.	.
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	.	.
K	09-663	1¼" armor front x Schlage logo, latch and auxiliary latch	.	.
R	C203-736	Case mounting screw pack	.	.
Escutcheon thru-bolts/screws:				
S	K510-389	N escutcheon	2	2
	L583-120	L escutcheon	2	2
T	K110-020	Armor screw pack	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.
X	L283-030	Lever truarc rings	.	.
Y	L283-031	Inside lever mounting plate	.	.
Z	L283-040	Lever spring cage	2	2
AA	L283-064	Spindle and spring	.	.
BB	L283-395	Assembled lock case, electrically locked or unlocked both sides	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2
EE	L583-212	Mounting posts, L	2	2
HH	L583-321	Inside knob mounting plate	.	.


# Electrically locked/unlocked outside trim, single cylinder

L9092EL/EU, L9492EL/EU

Levers

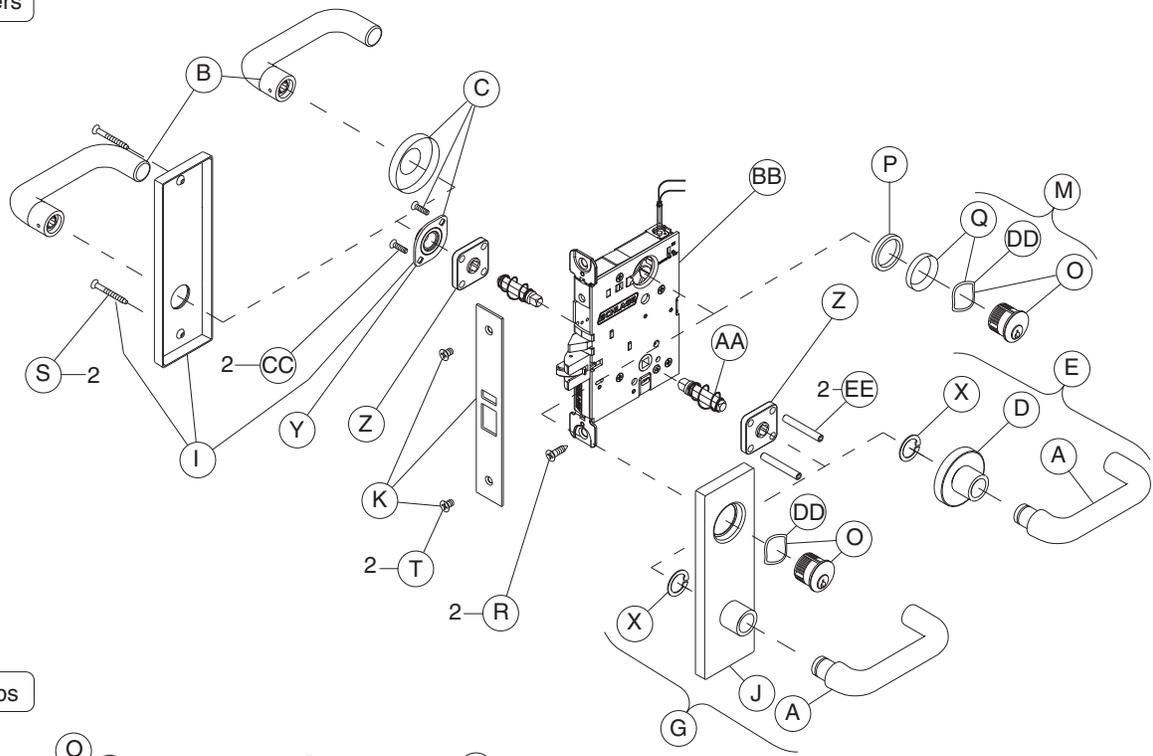

Knobs

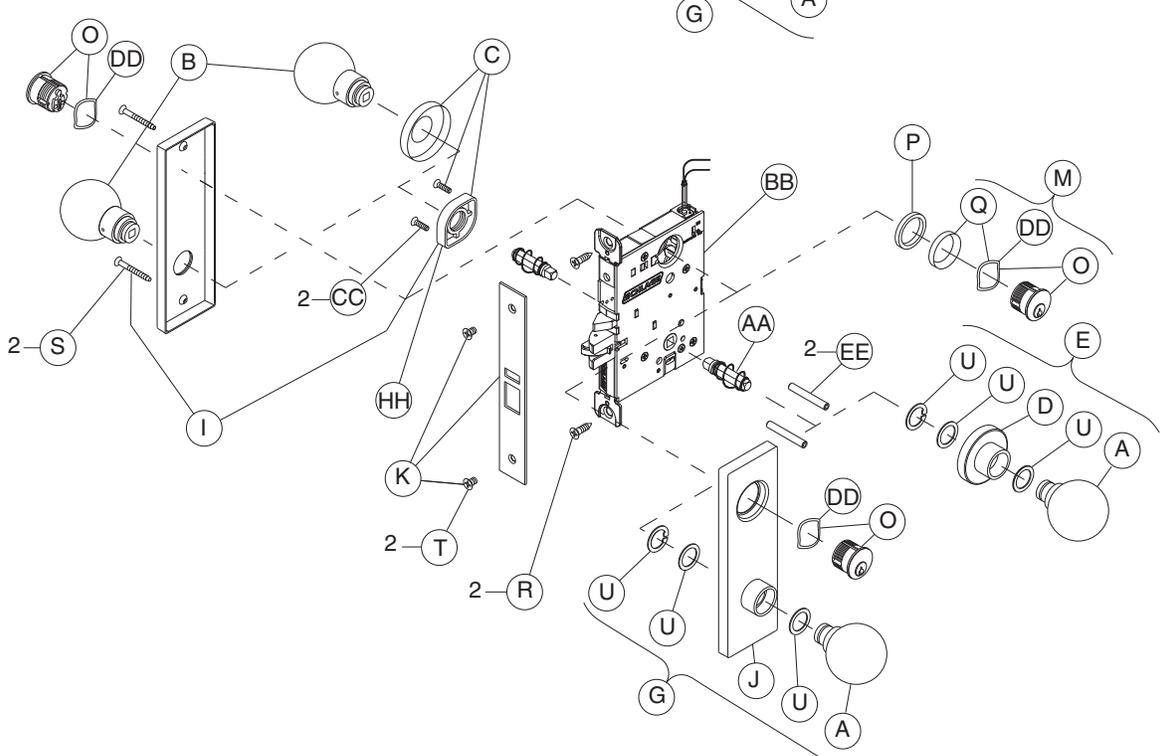

Notes: L9492 lock function has a latch, auxiliary latch, deadbolt and inside thumb turn. Lock case and armor front shown with latch and auxiliary latch.  
Standard full face mortise cylinder shown.

## Trim assemblies

	P/N	Description	L9092 EL	L9092 EU	L9492 EL	L9492 EU
A	09-401	Outside knob and lever	•	•	•	•
B	09-402	Inside knob and lever	•	•	•	•
C	09-403	Inside rose	•	•	•	•
D	09-404	Outside rose and bushing	•	•	•	•
E	Outside rose and knob/lever:					
	09-506	All designs except AST, AVA, MER	•	•	•	•
	09-655	AST, AVA, MER	•	•	•	•
F	09-509	Thumbturn			•	•
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	•	•		
I	Inside escutcheon for knob/lever:					
	09-633	L and N x thumbturn			•	•
	09-632	L and N x blank	•	•		
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	•	•	•	•
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	•	•	•	•
K	1¼" armor front x Schlage logo:					
	09-663	Latch and auxiliary latch	•	•		
	09-666	Latch, auxiliary latch and deadbolt			•	•
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	•	•	•	•
O	30-021	Full face cylinder with compression spring , clover leaf cam	•	•	•	•
P	36-082	Blocking ring	•	•	•	•
Q	36-083	Compression ring and spring	•	•	•	•
R	C203-736	Case mounting screw pack	•	•	•	•
S	Escutcheon thru-bolts/screws:					
	K510-389	N escutcheon	2	2	2	2
	L583-120	L escutcheon	2	2	2	2
T	K110-020	Armor screw pack	•	•	•	•
U	K110-550	Knob truarc rings and spacer pack	•	•	•	•
X	L283-030	Lever truarc rings	•	•	•	•
Y	L283-031	Inside lever mounting plate	•	•	•	•
Z	L283-040	Lever spring cage	2	2	2	2
AA	L283-060	Spindle and spring	2	2	2	2
BB	Assembled lock case,					
	L283-347	Electrically locked or unlocked one side	•	•		
	L283-467	Electrically locked or unlocked one side with deadbolt			•	•
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2
DD	L583-195	Compression springs	•	•	•	•
EE	L583-212	Mounting posts, L	2	2	2	2
HH	L583-321	Inside knob mounting plate	•	•	•	•




Trim assemblies

	P/N	Description	L9093 EL	L9093 EU	L9493 EL	L9493 EU
A	09-401	Outside knob and lever	.	.	.	.
B	09-402	Inside knob and lever	.	.	.	.
C	09-403	Inside rose	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.
E	Outside rose and knob/lever:					
	09-506	All designs except AST, AVA, MER	.	.	.	.
	09-655	AST, AVA, MER	.	.	.	.
F	09-509	Thumbturn	.	.	.	.
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.
I	Inside escutcheon for knob/lever:					
	09-633	L and N x thumbturn	.	.	.	.
	09-632	L and N x blank	.	.	.	.
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	.	.	.	.
K	1/4" armor front x Schlage logo:					
	09-663	Latch and auxiliary latch	.	.	.	.
	09-666	Latch, auxiliary latch and deadbolt	.	.	.	.
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	.	.	.	.
O	30-021	Full face cylinder with compression spring , clover leaf cam	.	.	.	.
P	36-082	Blocking ring	.	.	.	.
Q	36-083	Compression ring and spring	.	.	.	.
R	C203-736	Case mounting screw pack	.	.	.	.
S	Escutcheon thru-bolts/screws:					
	K510-389	N escutcheon	2	2	2	2
	L583-120	L escutcheon	2	2	2	2
T	K110-020	Armor screw pack	.	.	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.
Z	L283-040	Lever spring cage	2	2	2	2
AA	L283-064	Spindle and spring	.	.	.	.
BB	Assembled lock case,					
	L283-395	Electrically locked or unlocked both sides	.	.	.	.
	L283-468	Electrically locked or unlocked both sides with deadbolt	.	.	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2
DD	L583-195	Compression springs	.	.	.	.
EE	L583-212	Mounting posts, L	2	2	2	2
HH	L583-321	Inside knob mounting plate	.	.	.	.


# Electrically locked/unlocked outside trim, double cylinder

L9094EL/EU, L9494EL/EU

Levers

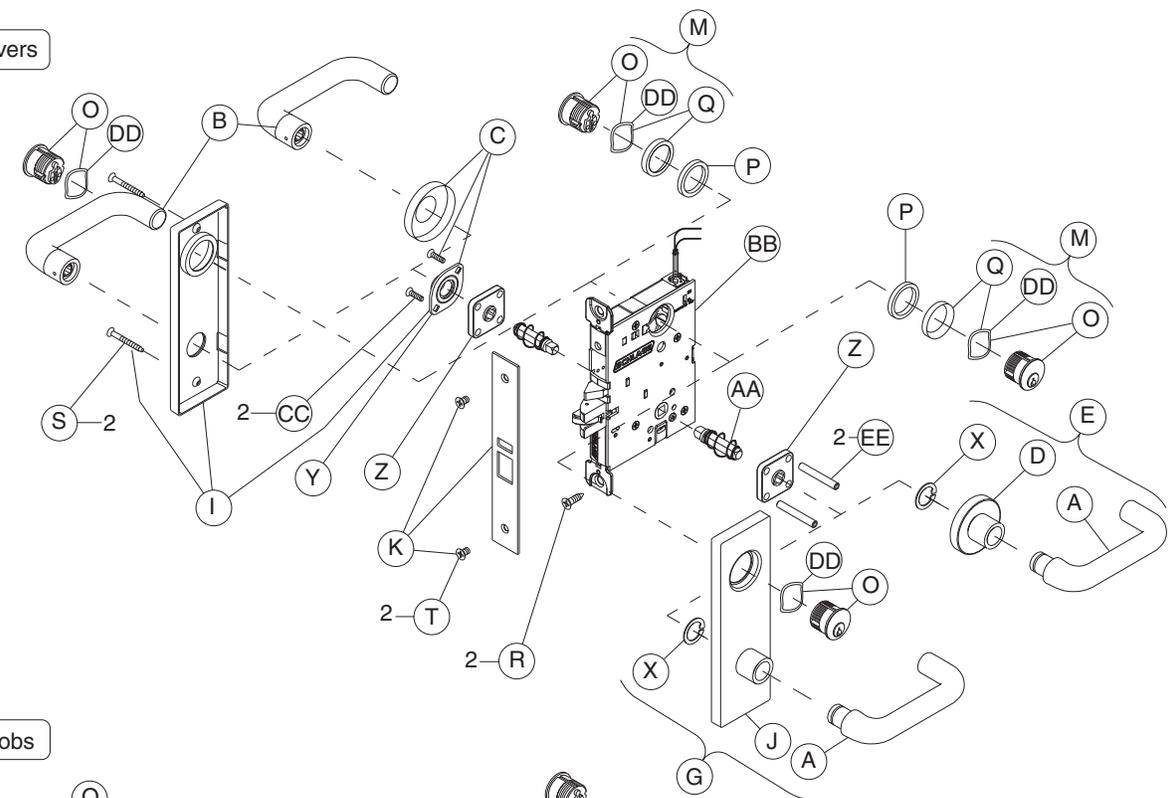

Knobs

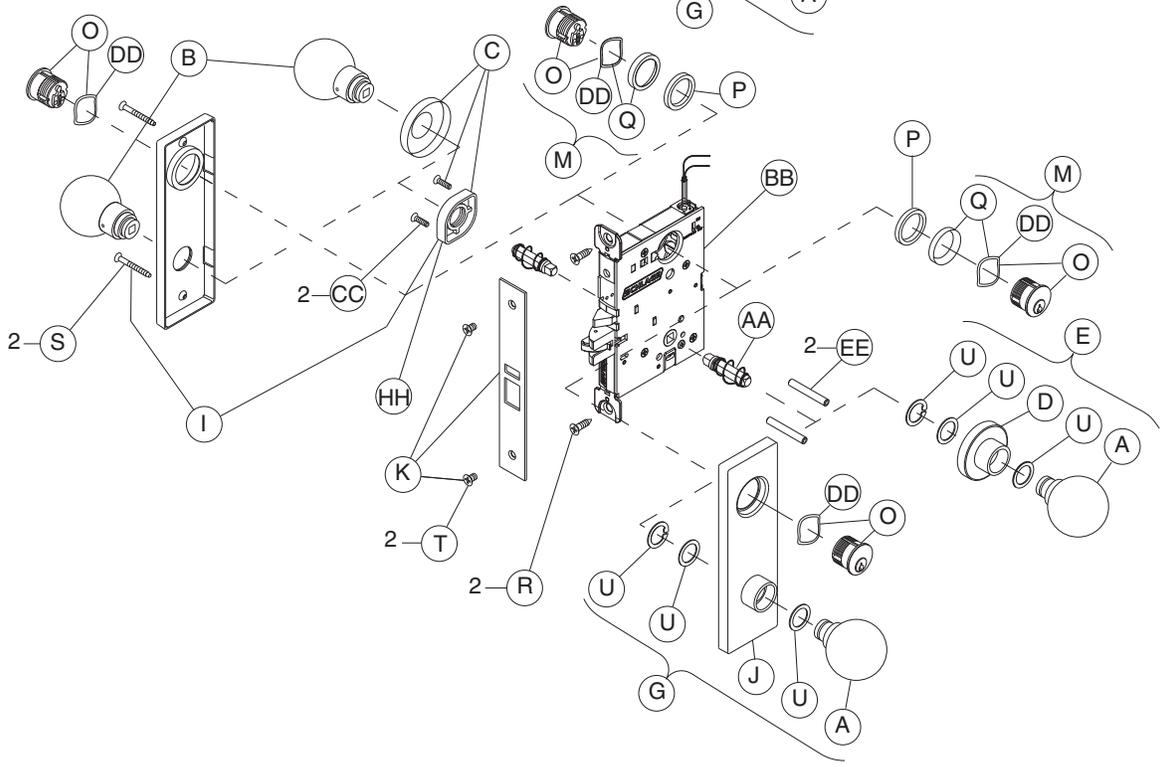


Notes: L9494 lock function has a latch, auxiliary latch, deadbolt and inside thumb turn. Lock case and armor front shown with latch and auxiliary latch.  
Standard full face mortise cylinder shown.

## Trim assemblies

	P/N	Description	L9094 EL	L9094 EU	L9494 EL	L9494 EU
A	09-401	Outside knob and lever	.	.	.	.
B	09-402	Inside knob and lever	.	.	.	.
C	09-403	Inside rose	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.
E	Outside rose and knob/lever:					
	09-506	All designs except AST, AVA, MER	.	.	.	.
	09-655	AST, AVA, MER	.	.	.	.
F	09-509	Thumbturn	.	.	.	.
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.
I	Inside escutcheon for knob/lever:					
	09-633	L and N x thumbturn	.	.	.	.
	09-635	L and N x full face cylinder	.	.	.	.
J	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder		.	.	.	.
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	.	.	.	.
K	1¼" armor front x Schlage logo:					
	09-663	Latch and auxiliary latch	.	.	.	.
	09-666	Latch, auxiliary latch and deadbolt	.	.	.	.
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	.	.	.	.
O	30-021	Full face cylinder with compression spring , clover leaf cam	.	.	.	.
P	36-082	Blocking ring	.	.	.	.
Q	36-083	Compression ring and spring	.	.	.	.
R	C203-736	Case mounting screw pack	.	.	.	.
S	Escutcheon thru-bolts/screws:					
	K510-389	N escutcheon	2	2	2	2
	L583-120	L escutcheon	2	2	2	2
T	K110-020	Armor screw pack	.	.	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.
Z	L283-040	Lever spring cage	2	2	2	2
AA	L283-060	Spindle and spring	2	2	2	2
BB	Assembled lock case:					
	L283-347	Electrically locked or unlocked one side	.	.	.	.
	L283-467	Electrically locked or unlocked one side with deadbolt	.	.	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2
DD	L583-195	Compression springs	.	.	.	.
EE	L583-212	Mounting posts, L	2	2	2	2
HH	L583-321	Inside knob mounting plate	.	.	.	.

# Electrically locked/unlocked both sides trim, double cylinder

L9095EL/EU, L9495EL/EU

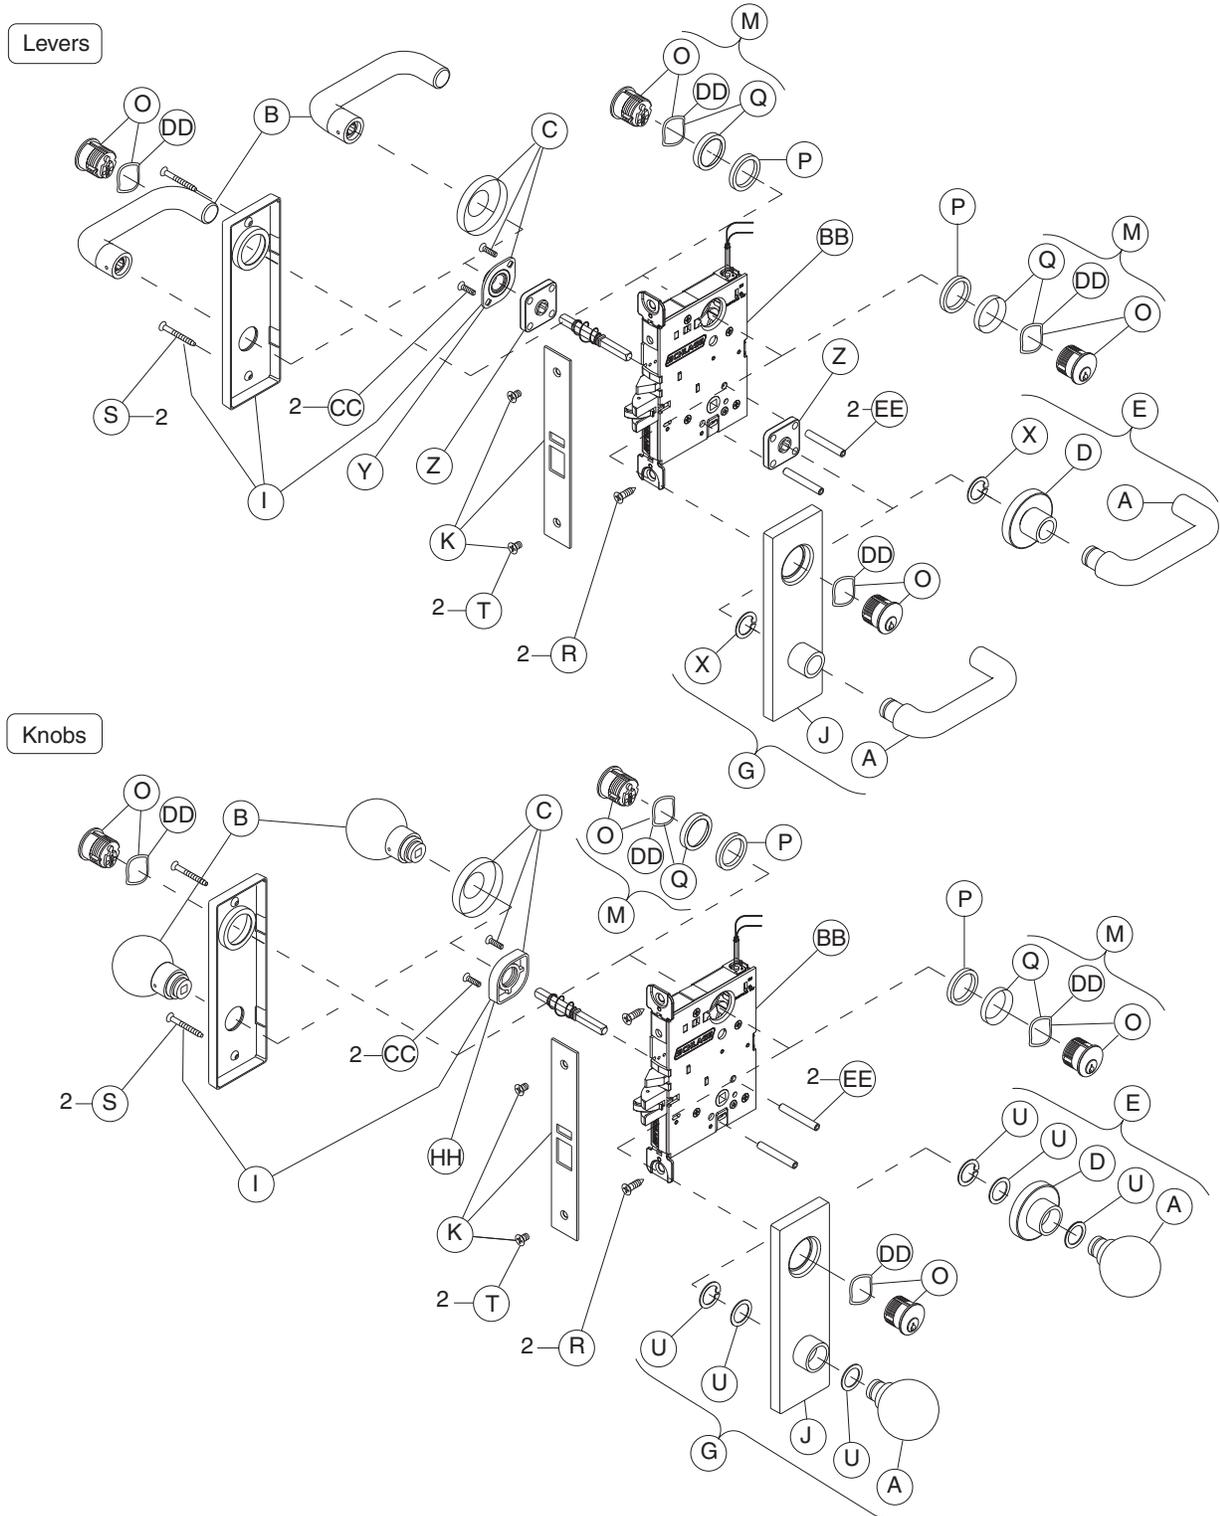


Notes: L9495 lock function has a latch, auxiliary latch, deadbolt and inside thumb turn. Lock case and armor front shown with latch and auxiliary latch.  
Standard full face mortise cylinder shown.

## Trim assemblies

	P/N	Description	L9095 EL	L9095 EU	L9495 EL	L9495 EU
A	09-401	Outside knob and lever	.	.	.	.
B	09-402	Inside knob and lever	.	.	.	.
C	09-403	Inside rose	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.
E	Outside rose and knob/lever:					
	09-506	All designs except AST, AVA, MER	.	.	.	.
	09-655	AST, AVA, MER	.	.	.	.
F	09-509	Thumbturn	.	.	.	.
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.
I	Inside escutcheon for knob/lever:					
	09-633	L and N x thumbturn	.	.	.	.
	09-635	L and N x full face cylinder	.	.	.	.
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	.	.	.	.
K	1¼" armor front x Schlage logo:					
	09-663	Latch and auxiliary latch	.	.	.	.
	09-666	Latch, auxiliary latch and deadbolt	.	.	.	.
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	.	.	.	.
O	30-021	Full face cylinder with compression spring , clover leaf cam	.	.	.	.
P	36-082	Blocking ring	.	.	.	.
Q	36-083	Compression ring and spring	.	.	.	.
R	C203-736	Case mounting screw pack	.	.	.	.
S	Escutcheon thru-bolts/screws:					
	K510-389	N escutcheon	2	2	2	2
	L583-120	L escutcheon	2	2	2	2
T	K110-020	Armor screw pack	.	.	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.
Z	L283-040	Lever spring cage	2	2	2	2
AA	L283-064	Spindle and spring	.	.	.	.
BB	Assembled lock case,					
	L283-395	Electrically locked or unlocked both sides	.	.	.	.
	L283-468	Electrically locked or unlocked both sides with deadbolt	.	.	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2
DD	L583-195	Compression springs	.	.	.	.
EE	L583-212	Mounting posts, L	2	2	2	2
HH	L583-321	Inside knob mounting plate	.	.	.	.

# Active double dummy trim

L9110 x XL11-741

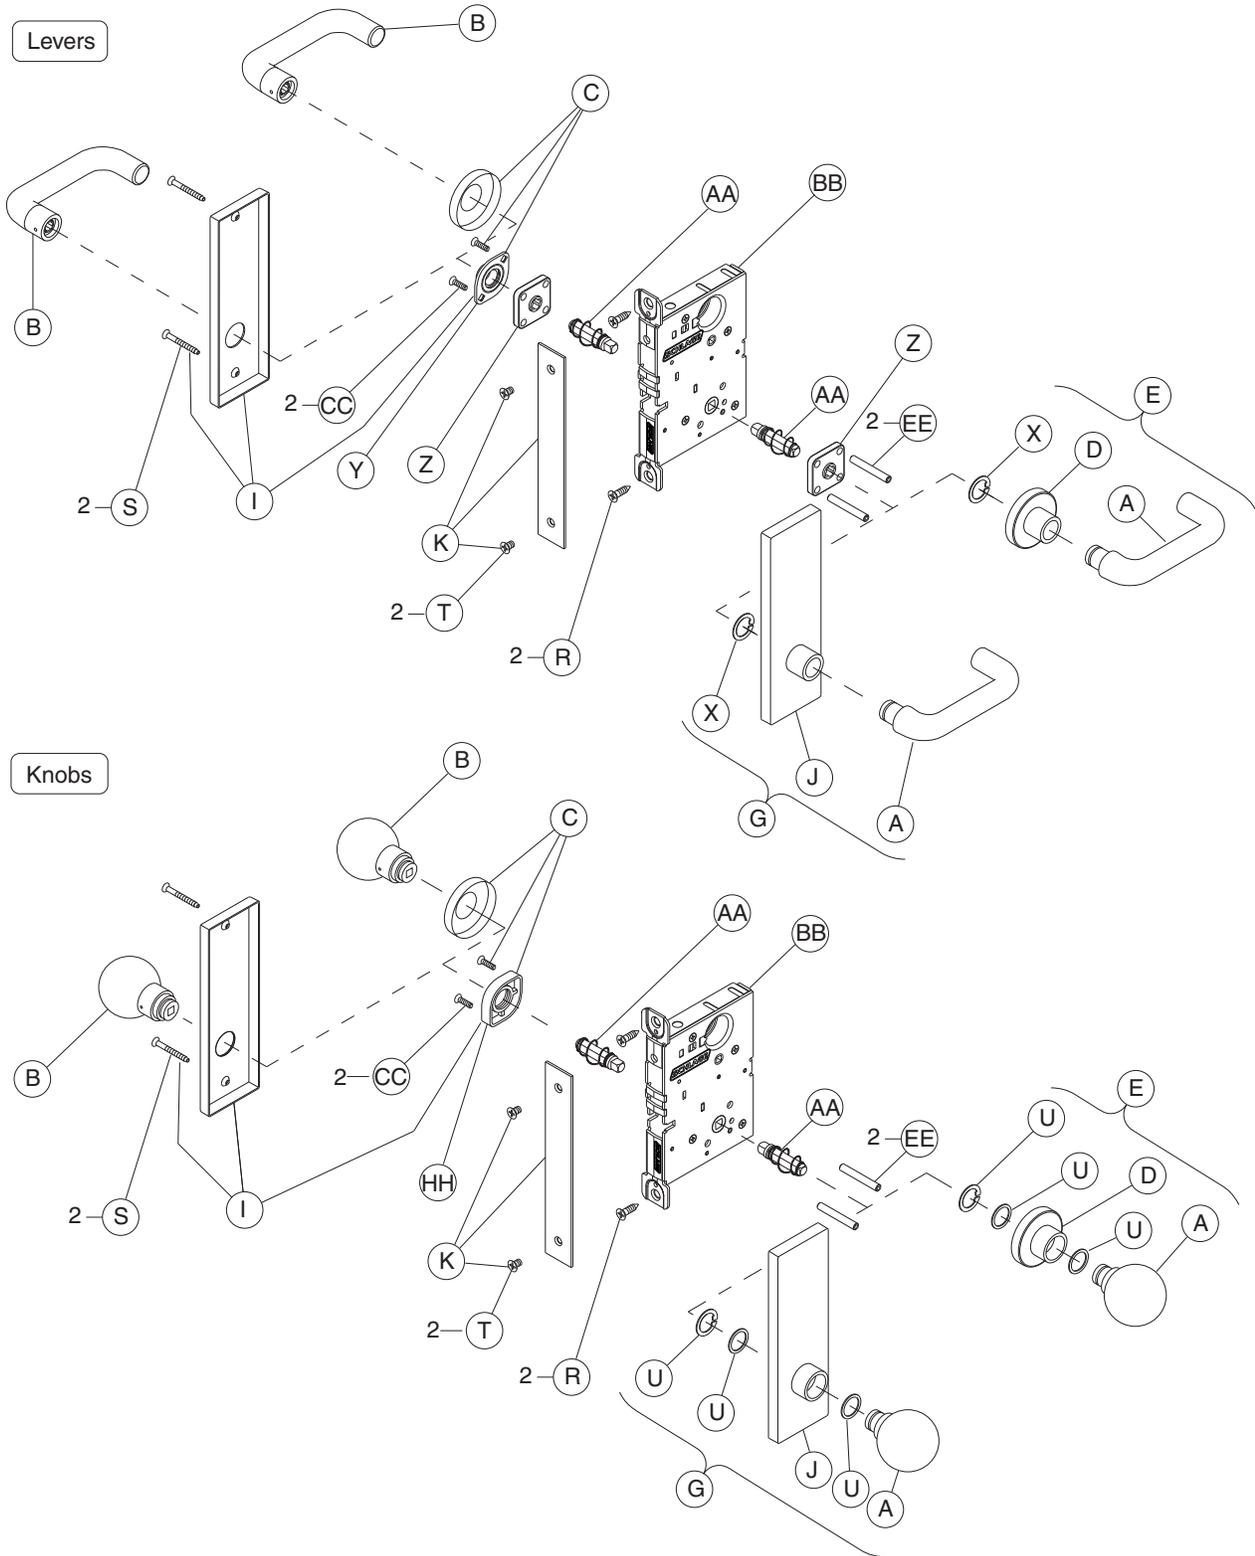

## Trim assemblies

	P/N	Description
A	09-401	Outside knob and lever
B	09-402	Inside knob and lever
C	09-403	Inside rose
D	09-404	Outside rose and bushing
E	Outside rose and knob/lever:	
	09-506	All designs except AST, AVA, MER
	09-655	AST, AVA, MER
G	09-550	Outside escutcheon x knob/lever (except 93 lever) L and N x blank
I	09-632	Inside escutcheon for knob/lever, L and N x blank
J	09-636	Outside escutcheon and bushing by knob/lever except 93 lever, L and N x blank
K	09-661	1¼" armor front x Schlage logo, blank
R	C203-736	Case mounting screw pack
S	Escutcheon thru-bolts/screws (qty 2 each):	
	K510-389	N escutcheon
	L583-120	L escutcheon
T	K110-020	Armor screw pack
U	K110-550	Knob truarc rings and spacer pack
X	L283-030	Lever truarc rings
Y	L283-031	Inside lever mounting plate
Z	L283-040	Lever spring cage (qty 2)
AA	L283-060	Spindle and spring (qty 2)
BB	XL11-741	Assembled lock case, double dummy with active knob/lever ‡
CC	L583-066	Mounting plate screws (qty 2), wood/metal door x rose/escutcheon x knob/lever except single dummy
EE	L583-212	Mounting posts (qty 2)
HH	L583-321	Inside knob mounting plate


‡ Not sold separately as a part.

## Trim assemblies

### Single dummy with case trim


L9175, L9177 (discontinued)

#### Levers

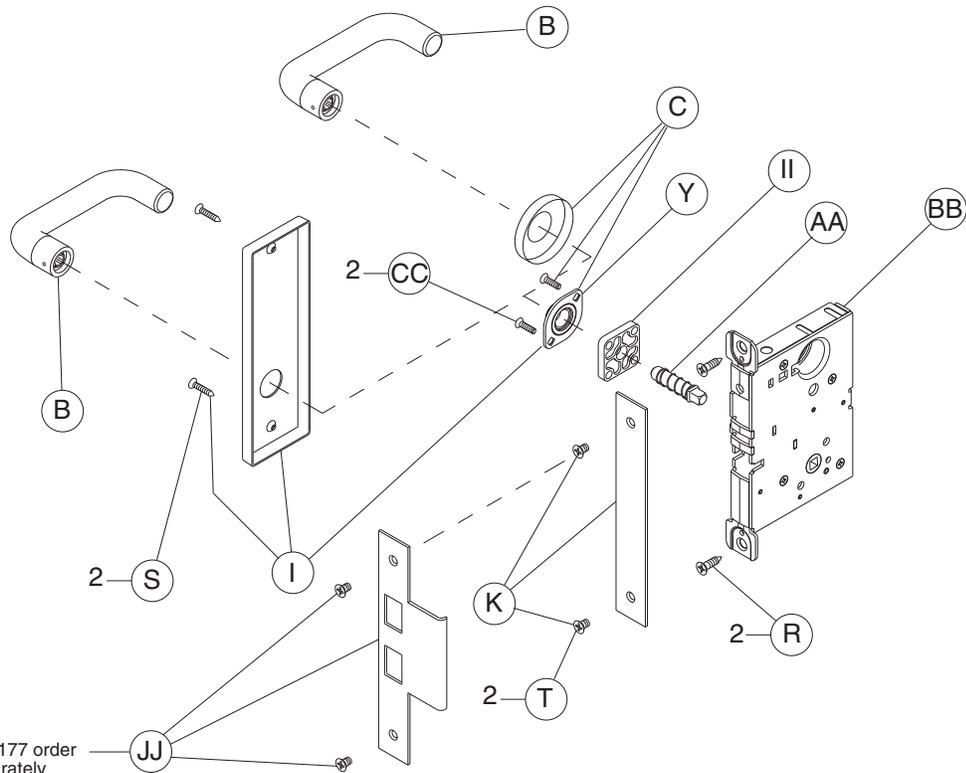

For discontinued function L9177 order L9175 and armor strike separately and specify hand of inactive door. Mount in place of blank armor.

#### Knobs

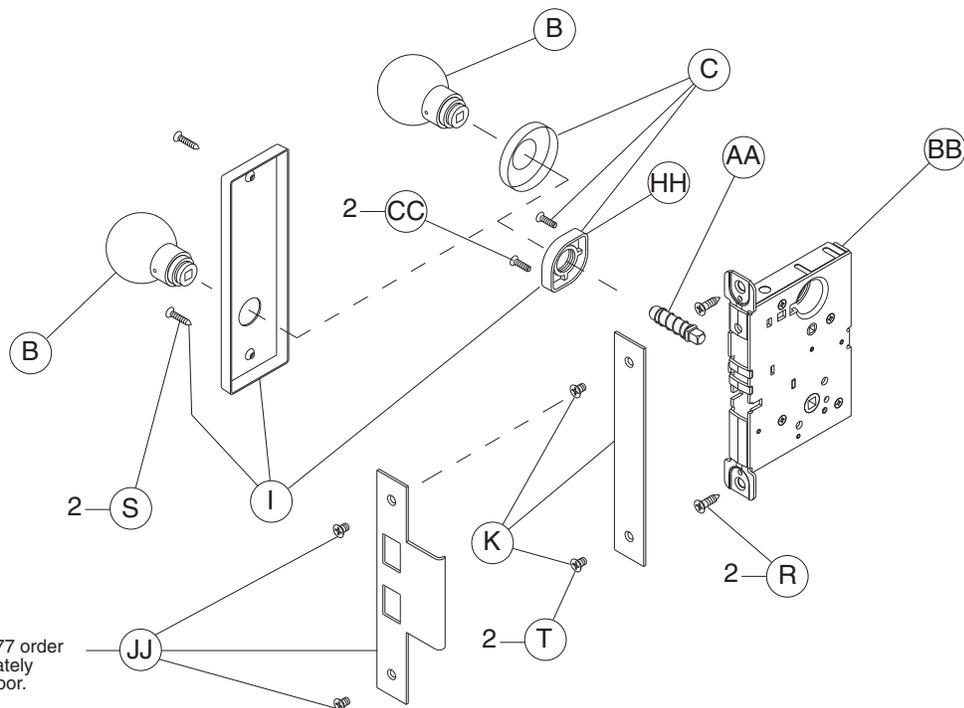

For discontinued function L9177 order L9175 and armor strike separately and specify hand of inactive door. Mount in place of blank armor.


## Trim assemblies

	P/N	Description	L9175	L9177
B	09-402	Inside knob and lever	•	•
C	09-403	Inside rose	•	•
I	09-632	Inside escutcheon for knob/lever, L and N x blank	•	•
K	09-661	1¼" armor front x Schlage logo, blank	•	•
R	C203-736	Case mounting screw pack	•	•
S	Escutcheon thru-bolts/screws:			
	L583-133	N escutcheon	2	2
	L583-287	L escutcheon	2	2
T	K110-020	Armor screw pack	•	•
Y	L283-031	Inside lever mounting plate	•	•
AA	L283-060	Spindle and spring	•	•
BB	L283-144	Assembled lock case, single dummy with case	•	•
CC	Mounting plate screws:			
	L583-290	Wood/metal door x rose/escutcheon x lever	2	2
	L583-291	Wood/metal door x rose/escutcheon x knob	2	2
HH	L583-321	Inside knob mounting plate	•	•
II	L583-322	Outside lever spacer	•	•
JJ	10-091	Armor strike	•	•

# Double dummy with case trim


L9176, L9178 (discontinued)

Levers

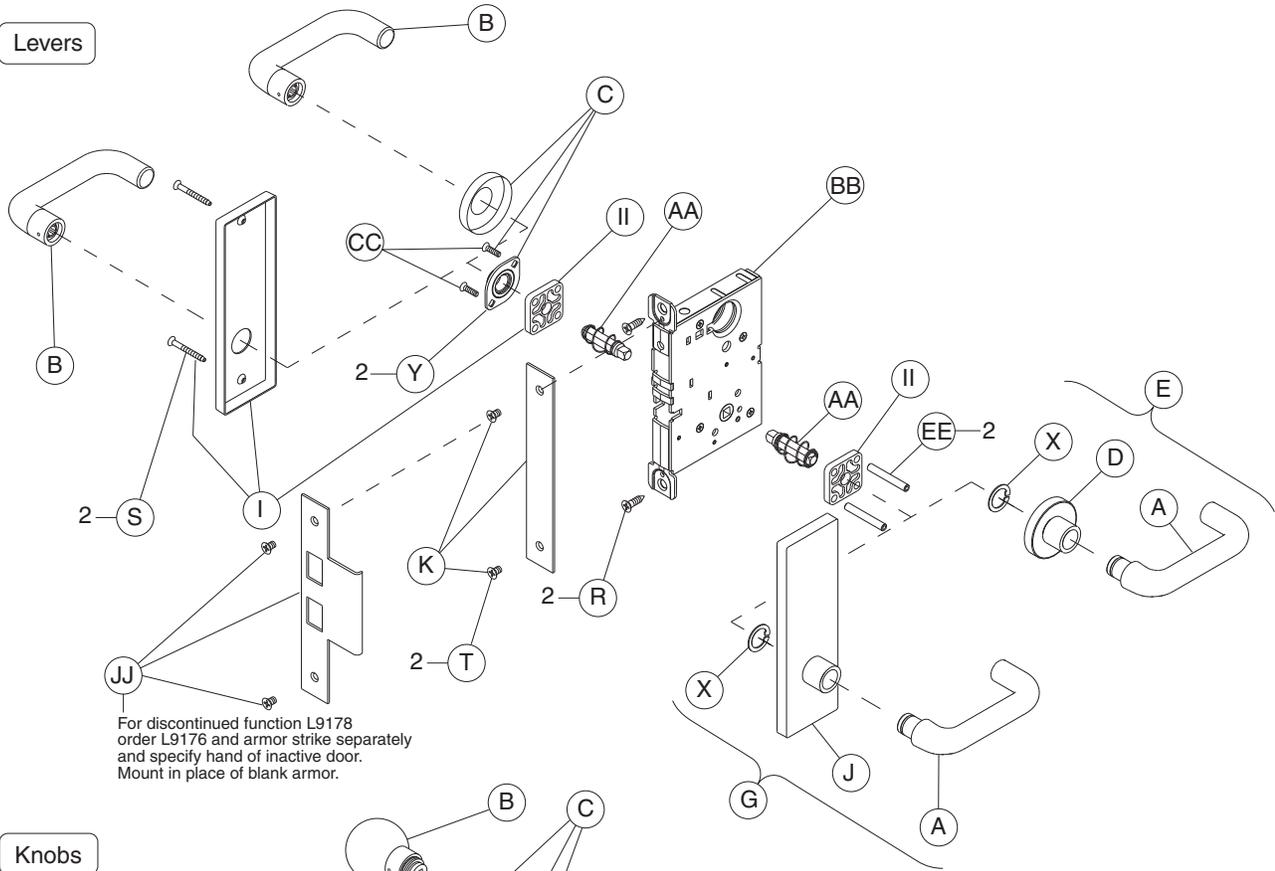

For discontinued function L9178  
order L9176 and armor strike separately  
and specify hand of inactive door.  
Mount in place of blank armor.

Knobs

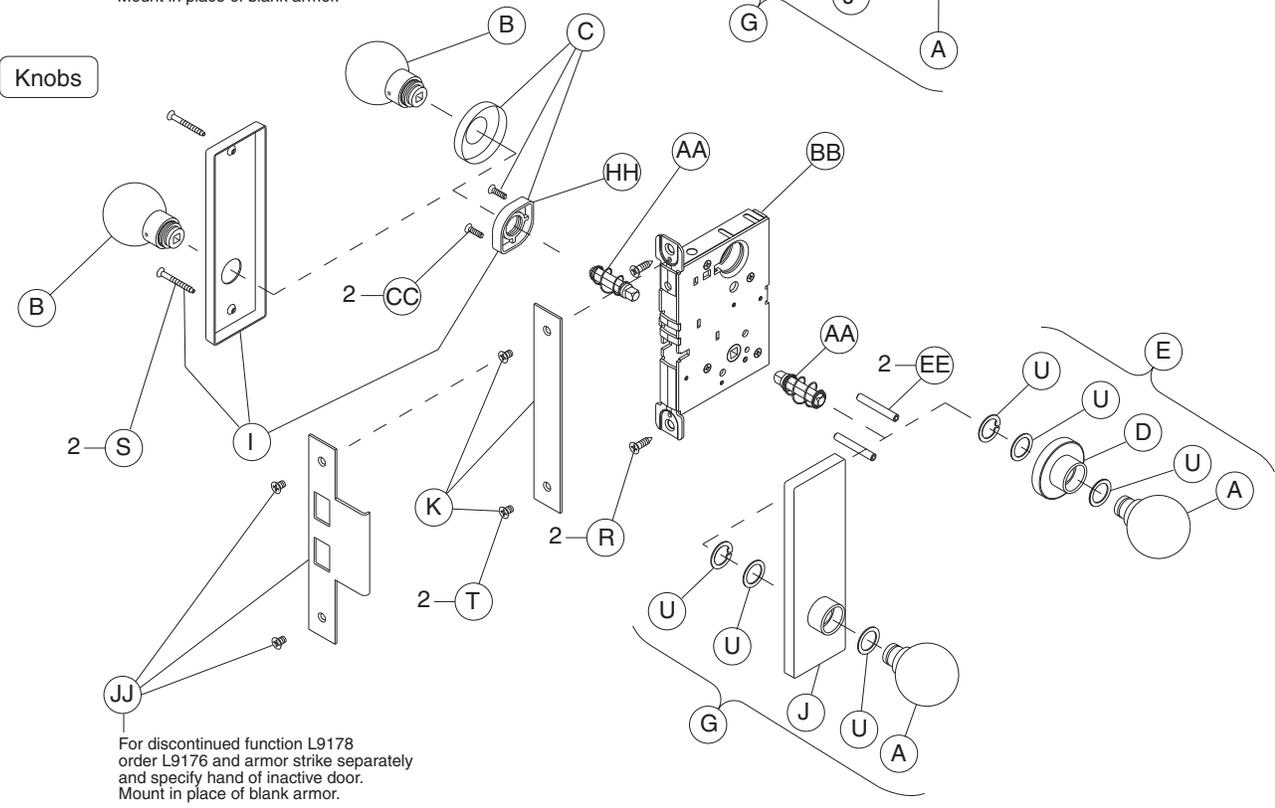

For discontinued function L9178  
order L9176 and armor strike separately  
and specify hand of inactive door.  
Mount in place of blank armor.

## Trim assemblies


	P/N	Description	L9176	L9178
A	09-401	Outside knob and lever	•	•
B	09-402	Inside knob and lever	•	•
C	09-403	Inside rose	•	•
D	09-404	Outside rose and bushing	•	•
E	09-506	Outside rose and knob/lever: All designs except AST, AVA, MER	•	•
G	09-550	Outside escutcheon x knob/lever except 93 lever, L and N x blank	•	•
I	09-632	Inside escutcheon for knob/lever, L and N x blank	•	•
J	09-636	Outside escutcheon and bushing x knob/lever except 93 lever, L and N x blank	•	•
	09-650	Outside escutcheon and bushing x 93 lever, blank	•	•
K	09-661	1¼" armor front x Schlage logo, blank	•	•
R	C203-736	Case mounting screw pack	•	•
S	Escutcheon thru-bolts/screws:			
	L583-133	N escutcheon	2	2
	L583-287	L escutcheon	2	2
T	K110-020	Armor screw pack	•	•
U	K110-550	Knob truarc rings and spacer pack	•	•
X	L283-030	Lever truarc rings	•	•
Y	L283-031	Inside lever mounting plate	•	•
AA	L283-060	Spindle and spring	2	2
BB	L283-145	Assembled lock case, double dummy with case	•	•
CC	L583-066	Mounting plate screws: Wood/metal door x rose/escutcheon x knob/lever except single dummy	2	2
EE	L583-212	Mounting posts	2	2
HH	L583-321	Inside knob mounting plate	2	2
II	L583-322	Outside lever spacer	2	2
JJ	10-091	Armor strike		•

Trim assemblies


Deadbolt trim

L9460, L9462, L9463, L9464


L9460P

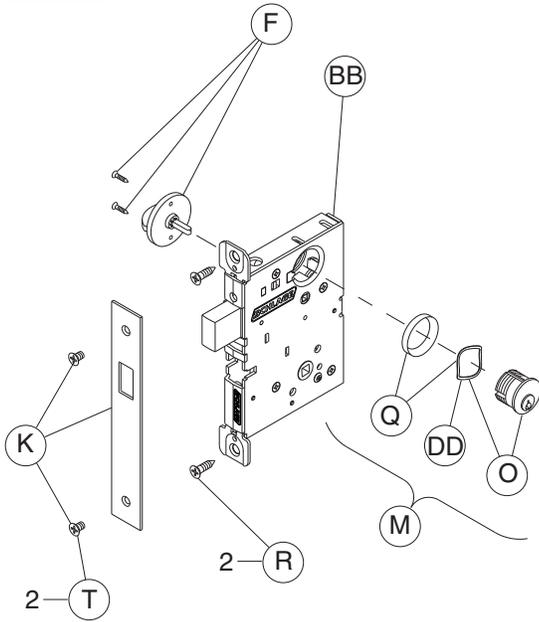


L9462P

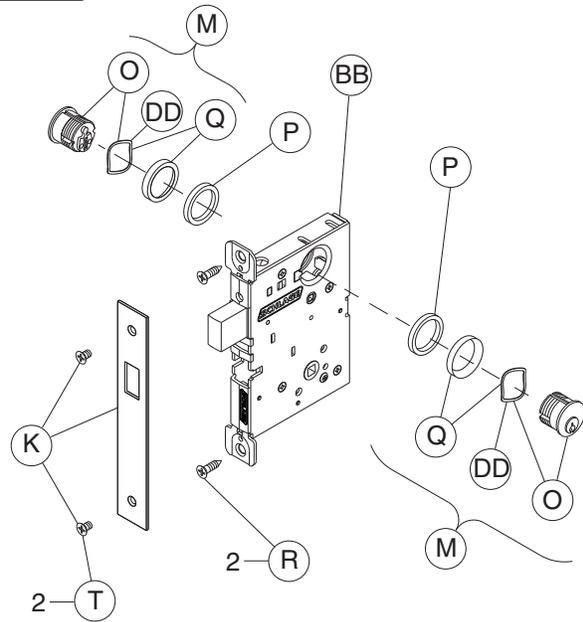

L9463P

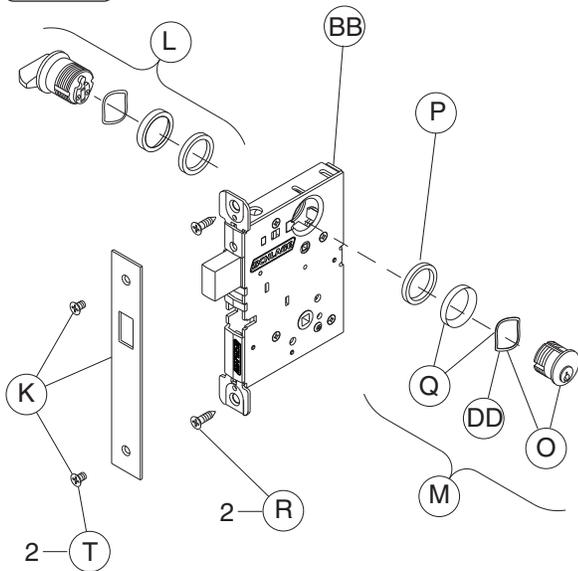

L9464P

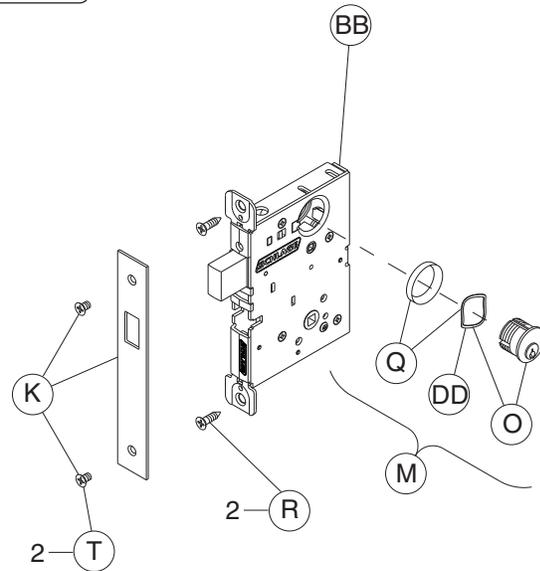


Notes: Standard full face mortise cylinder shown.  
Available with 180° indicator trim.

## Trim assemblies

	P/N	Description	L9460	L9462	L9463	L9464
F	09-509	Thumbturn	•			
K	09-665	1¼" armor front x Schlage logo, deadbolt	•	•	•	•
L	09-905	Classroom turn and 1½" blocking ring			•	
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	•	2	•	•
O	30-021	Full face cylinder with compression spring , clover leaf cam	•	2	•	•
P	36-082	Blocking ring		2	•	
Q	36-083	Compression ring and spring	•	2	•	•
R	C203-736	Case mounting screw pack	•	•	•	•
T	K110-020	Armor screw pack	•	•	•	•
BB	L283-139	Assembled lock case, L946X deadbolt	•	•	•	•
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2
DD	L583-195	Compression springs	•	2	•	•

# Deadbolt with fixed double dummy trim

L9460 x XL11-635

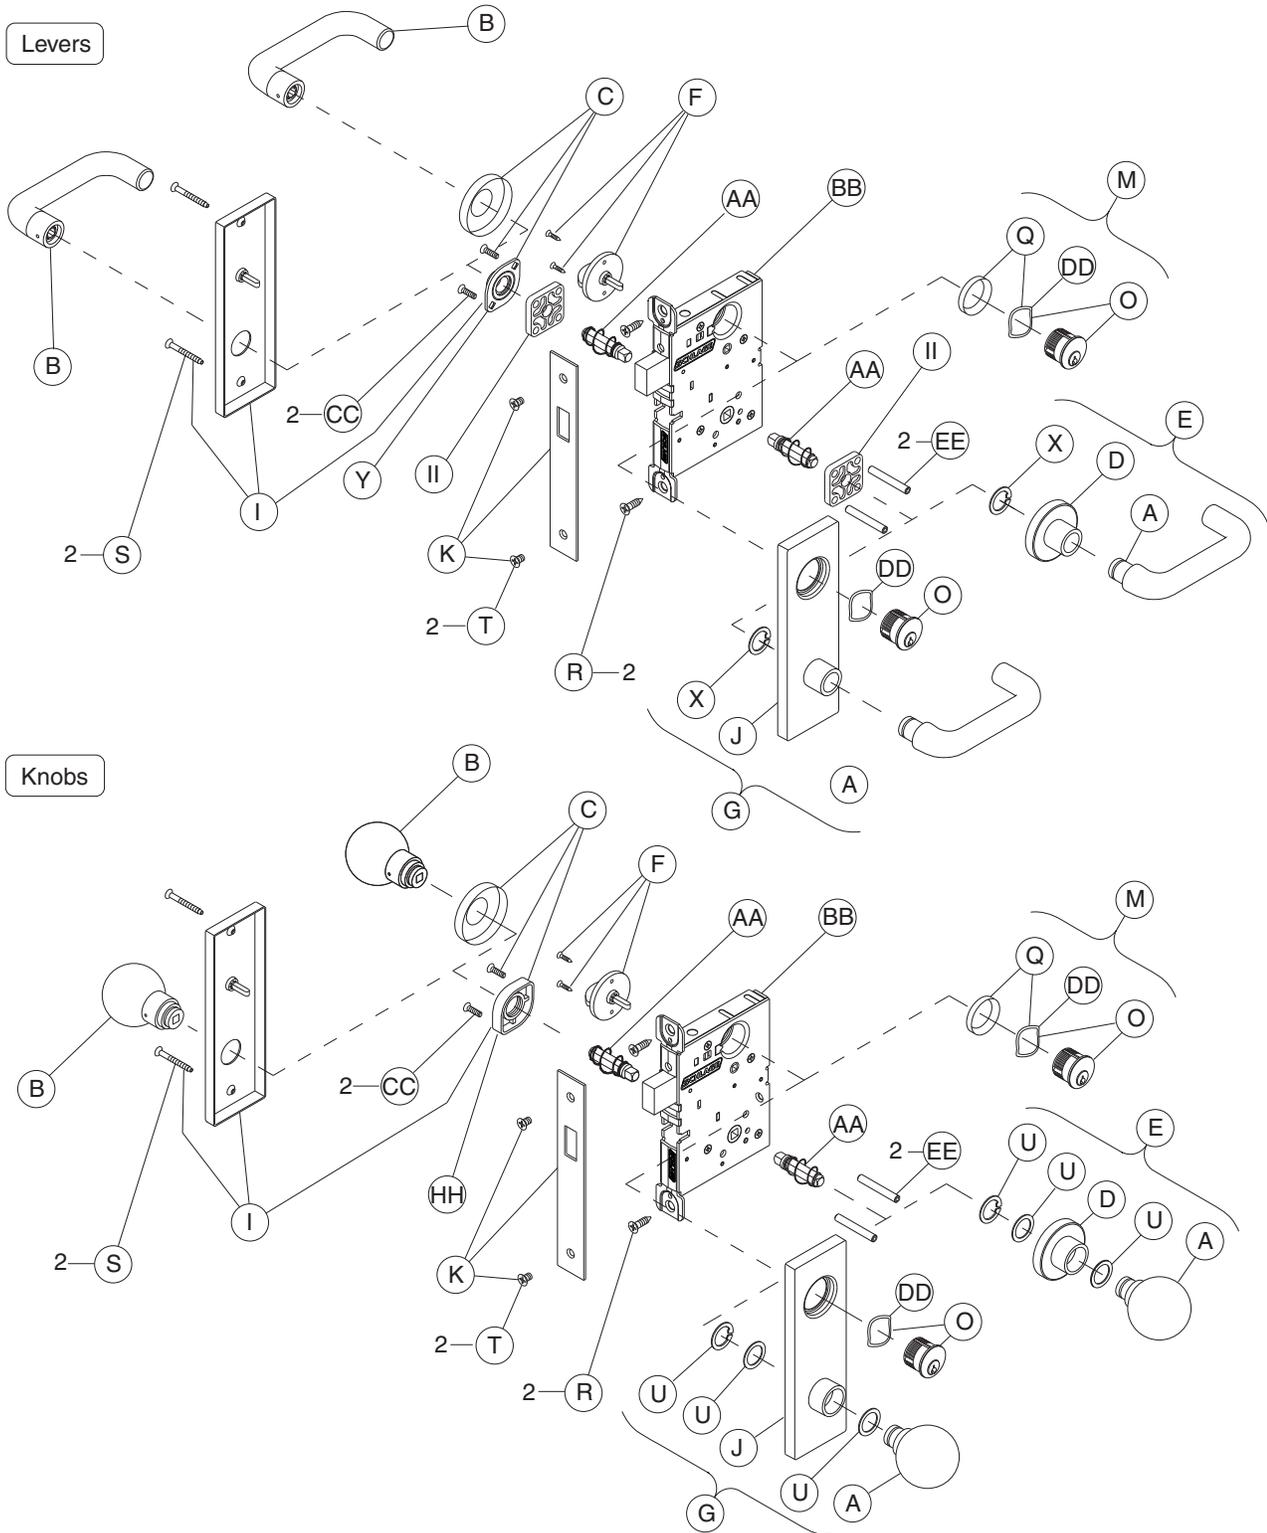

Notes: Standard full face mortise cylinder shown.  
Available with 180° indicator trim.

## Trim assemblies


	P/N	Description
A	09-401	Outside knob and lever
B	09-402	Inside knob and lever
C	09-403	Inside rose
D	09-404	Outside rose and bushing
E	Outside rose and knob/lever:	
	09-506	All designs except AST, AVA, MER
	09-655	AST, AVA, MER
F	09-509	Thumbturn
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder
I	09-633	Inside escutcheon for knob/lever: L and N x thumbturn
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder
K	09-665	1¼" armor front x Schlage logo, deadbolt
M	30-001	Full face cylinder with compression ring and spring, clover leaf cam
O	30-021	Full face cylinder with compression spring, clover leaf cam
Q	36-083	Compression ring and spring
R	C203-736	Case mounting screw pack
S	Escutcheon thru-bolts/screws (qty 2 each):	
	K510-389	N escutcheon
	L583-120	L escutcheon
T	K110-020	Armor screw pack
U	K110-550	Knob truarc rings and spacer pack
X	L283-030	Lever truarc rings
Y	L283-031	Inside lever mounting plate
AA	L283-060	Spindle and spring (qty 2)
BB	XL11-661	Assembled lock case, deadbolt with fixed trim ‡
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever (qty 2)
DD	L583-195	Compression spring
EE	L583-212	Mounting posts, (qty 2)
HH	L583-321	Inside knob mounting plate
II	L583-322	Outside lever spacer (qty 2)

‡ Not sold separately as a part.

Trim assemblies

Fixed outside x turn trim

L9412-XL11-907, L9460 x XL11-886, L9480, LV9480, L9485, LV9485

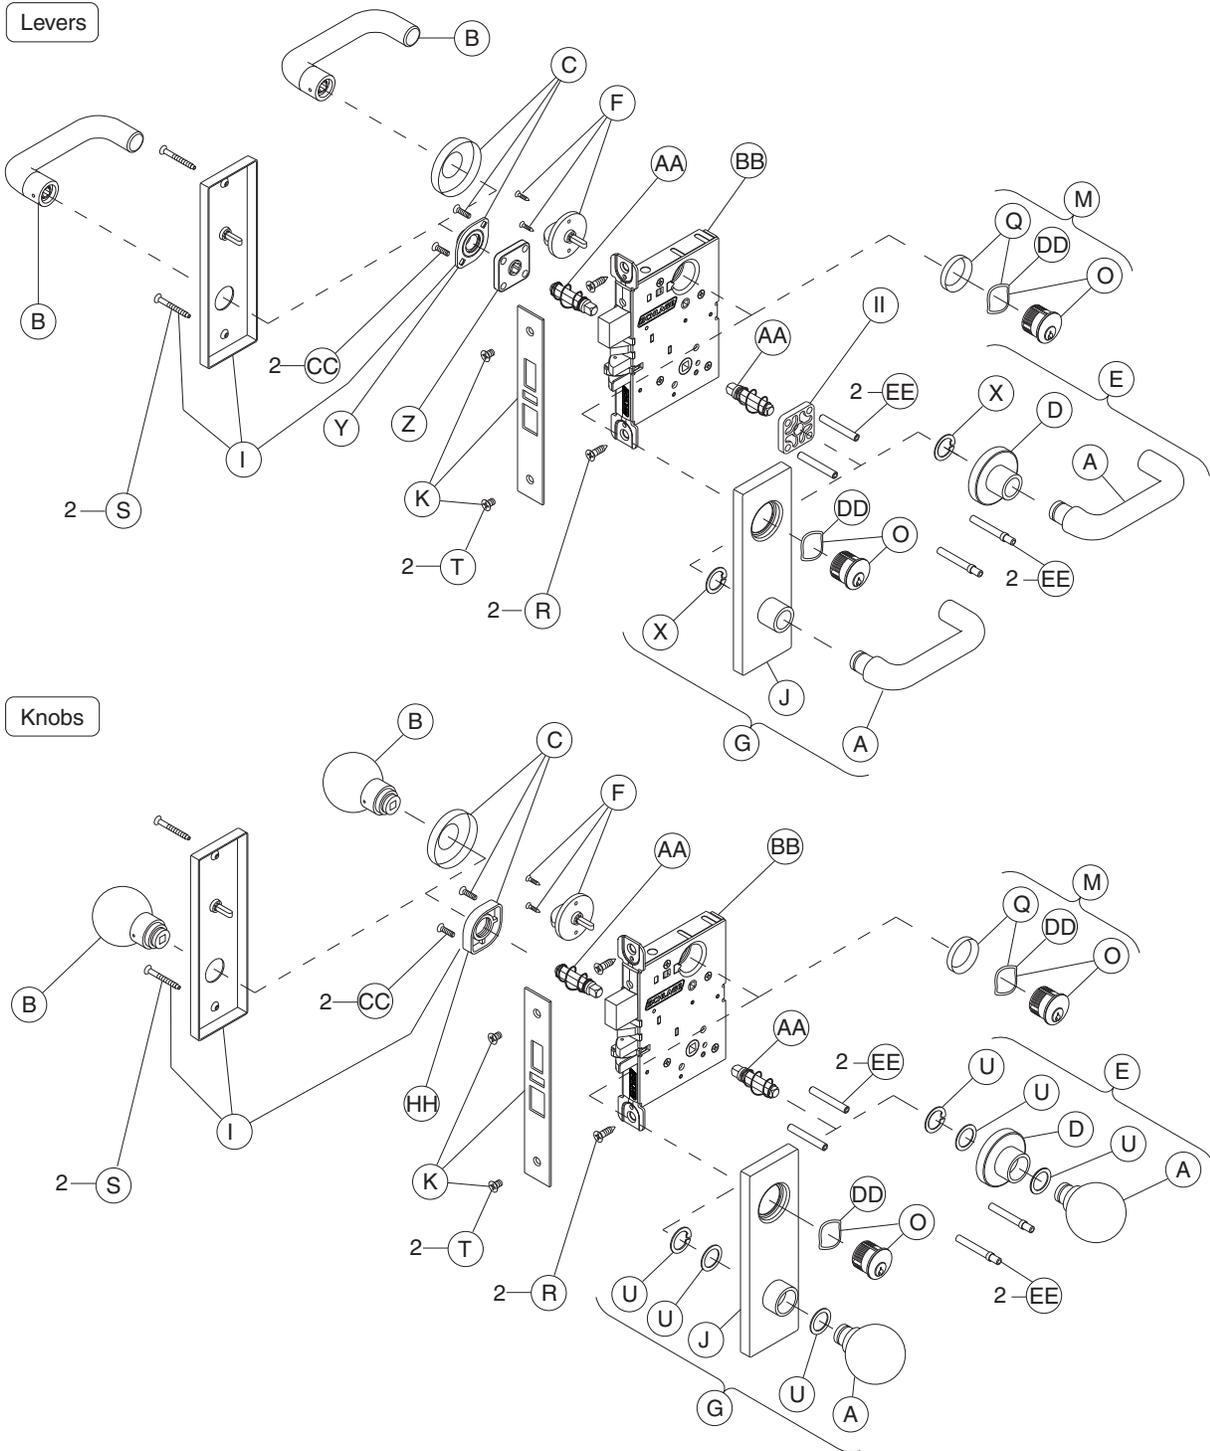

Notes: L9460 x XL11-886 lock function has a deadbolt only. Lock case and armor front shown with latch, auxiliary latch, and deadbolt. Standard full face mortise cylinder shown.  
 L9460 x XL11-886 and L/LV9485 available with 180° indicator trim.  
 LV9480 available with lever x lever trim only.  
 L9412 x XL11-907 lock function has a blank outside escutcheon.

## Trim assemblies

	P/N	Description	L9412/XL11-907	L9460/XL11-886	L9480	LV9480	L9485	LV9485
A	09-401	Outside knob and lever	.	.	.	.	.	.
B	09-402	Inside knob and lever	.	.	.	.	.	.
C	09-403	Inside rose	.	.	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.	.	.
Outside rose and knob/lever:								
E	09-506	All designs except AST, AVA, MER	.	.	.	.	.	.
	09-655	AST, AVA, MER	.	.	.	.	.	.
F	09-509	Thumbturn	.	.	.	.	.	.
G	09-550	Outside escutcheon x knob/lever except 93 lever, L and N x blank	.	.	.	.	.	.
	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.	.	.
I	09-633	Inside escutcheon for knob/lever, L and N x thumbturn	.	.	.	.	.	.
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	.	.	.	.	.	.
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	.	.	.	.	.	.
1¼" armor front x Schlage logo:								
K	09-665	Deadbolt	.	.	.	.	.	.
	09-666	Latch, auxiliary latch and deadbolt	.	.	.	.	.	.
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	.	.	.	.	.	.
O	30-021	Full face cylinder with compression spring , clover leaf cam	.	.	.	.	.	.
Q	36-083	Compression ring and spring	.	.	.	.	.	.
R	C203-736	Case mounting screw pack	.	.	.	.	.	.
Escutcheon thru-bolts/screws:								
S	K510-389	N escutcheon	2	2	2	2	2	2
	L583-120	L escutcheon	2	2	2	2	2	2
T	K110-020	Armor screw pack	.	.	.	.	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.	.	.
Z	L283-040	Lever spring cage	.	.	.	2	.	2
AA	L283-060	Spindle and spring	2	2	2	2	2	2
Assembled lock case,								
BB	L283-139 x XL11-886	Deadbolt retract x inside knob/lever ‡	.	.	.	.	.	.
	L283-141	Storeroom lock with deadbolt	.	.	.	.	.	.
	L283-141 x XL11-907	Storeroom/faculty restroom ‡	.	.	.	.	.	.
	L283-178	Storeroom/faculty restroom, LV	.	.	.	.	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2	2	2
DD	L583-195	Compression springs	.	.	.	.	.	.
EE	L583-212	Mounting posts, L	2	2	2	.	2	.
	L583-497	Mounting posts, LV	.	.	.	2	.	2
HH	L583-321	Inside knob mounting plate	.	.	.	.	.	.
II	L583-322	Outside lever spacer	.	.	.	.	.	.

‡ Not sold separately as a part.



## Trim assemblies


	P/N	Description	L9482/XL11-543	L V9482/XL11-543
A	09-401	Outside knob and lever	•	•
B	09-402	Inside knob and lever	•	•
C	09-403	Inside rose	•	•
D	09-404	Outside rose and bushing	•	•
E	Outside rose and knob/lever:			
	09-506	All designs except AST, AVA, MER	•	•
	09-655	AST, AVA, MER	•	•
G	09-553	Outside escutcheon x knob/lever (except 93 lever), L and N x full face cylinder	•	•
I	09-635	Inside escutcheon for knob/lever, L and N x full face cylinder	•	•
J	09-639	Outside escutcheon and bushing x knob/lever (except 93 lever), L and N x full face cylinder	•	•
K	09-666	1¼" armor front x Schlage logo, latch, auxiliary latch and deadbolt	•	•
M	30-001	Full face cylinder with compression ring and spring, clover leaf cam	2	2
O	30-021	Full face cylinder with compression spring, clover leaf cam	2	2
P	36-082	Blocking ring	2	2
Q	36-083	Compression ring and spring	•	•
R	C203-736	Case mounting screw pack	•	•
S	Escutcheon thru-bolts/screws:			
	K510-389	N escutcheon	2	2
	L583-120	L escutcheon	2	2
T	K110-020	Armor screw pack	•	•
U	K110-550	Knob truarc rings and spacer pack	•	•
X	L283-030	Lever truarc rings	•	•
Y	L283-031	Inside lever mounting plate	•	•
Z	L283-040	Lever spring cage		2
AA	L283-060	Spindle and spring	2	2
BB	Assembled lock case,			
	L283-146 x XL11-543	Institution deadbolt ‡	•	
	L283-183 x XL11-543	Institution deadbolt ‡		•
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2
DD	L583-195	Compression springs	2	2
EE	L583-212	Mounting posts, L	2	
	L583-497	Mounting posts, LV		2
HH	L583-321	Inside knob mounting plate	•	•
II	L583-322	Outside lever spacer	2	

‡ Not sold separately as a part.

Trim assemblies

Prison lock trim

L9485 x XL11-557

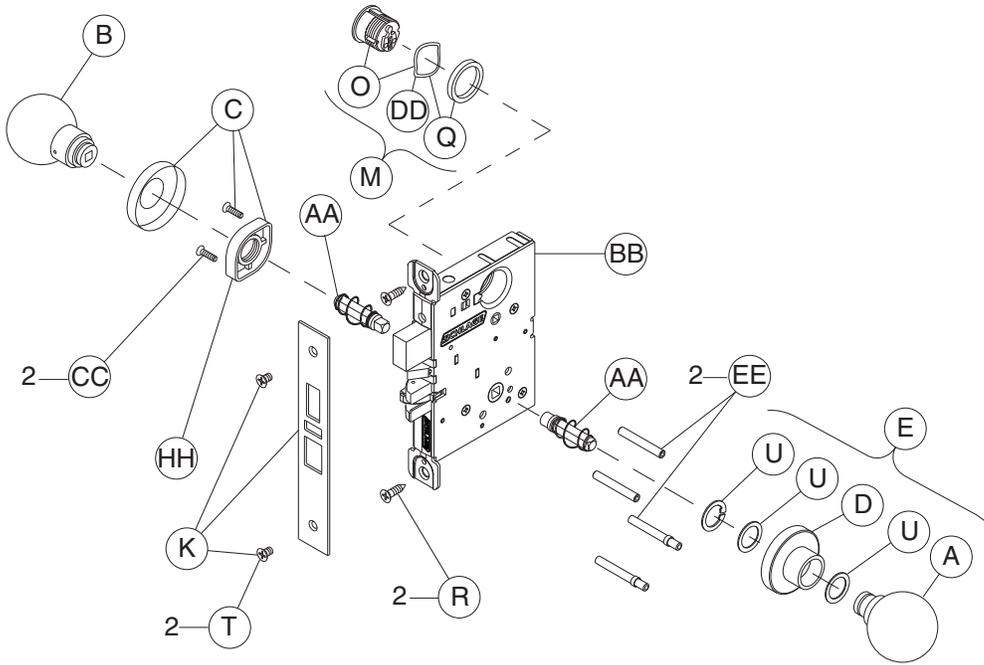

Notes: Standard full face mortise cylinder shown.  
Available with knob x rose trim only.  
Furnished with tamper-resistant Torx® screws.

## Trim assemblies

	P/N	Description
A	09-401	Outside knob and lever
B	09-402	Inside knob and lever
C	09-403	Inside rose
D	09-404	Outside rose and bushing
E	09-506	Outside rose and knob/lever: All designs except AST, AVA, MER
K	09-666	1¼" armor front x Schlage logo, latch, auxiliary latch and deadbolt
M	30-002	Full face cylinder with compression ring and spring , clover leaf cam, hotel (handed)
O	30-022	Full face cylinder with compression spring , clover leaf cam, hotel (handed)
Q	36-083	Compression ring and spring
R	C203-736	Case mounting screw pack
T	K110-020	Armor screw pack
U	K110-550	Knob truarc rings and spacer pack
AA	L283-060	Spindle and spring
	XL11-766	Free spinning spindle and spring (inside) ‡
BB	XL11-557	Prison ‡
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever (qty 2)
DD	L583-195	Compression spring
EE	L583-212	Mounting posts, L (qty 2)
HH	L583-321	Inside knob mounting plate
II	L583-322	Outside lever spacer (qty 2)

‡ Not sold separately as a part.




## Trim assemblies

	P/N	Description	L9486 ‡	LV9486 ‡	L9496	LV9496
A	09-401	Outside knob and lever	.	.	.	.
B	09-402	Inside knob and lever	.	.	.	.
C	09-403	Inside rose	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.
E	Outside rose and knob/lever:					
	09-506	All designs except AST, AVA, MER	.	.	.	.
	09-655	AST, AVA, MER	.	.	.	.
F	09-509	Thumbturn	.	.	.	.
K	09-664	1¼" armor front x Schlage logo, latch and deadbolt	.	.	.	.
	09-666	1¼" armor front x Schlage logo, latch, auxiliary latch and deadbolt	.	.	.	.
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	.	.	.	.
	30-002	Full face cylinder with compression ring and spring , hotel (handed)	.	.	.	.
O	30-021	Full face cylinder with compression spring , clover leaf cam	.	.	.	.
	30-022	Full face cylinder with compression spring , hotel (handed)	.	.	.	.
Q	36-083	Compression ring and spring	.	.	.	.
R	C203-736	Case mounting screw pack	.	.	.	.
T	K110-020	Armor screw pack	.	.	.	.
U	K110-550	Knob truarc rings and spacer pack	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.
Z	L283-040	Lever spring cage	.	2	.	2
AA	L283-060	Spindle and spring	2	2	2	2
BB	Assembled lock case,					
	L283-138	Corridor, classroom security x deadbolt	.	.	.	.
	L283-141	Storeroom/faculty restroom	.	.	.	.
	L283-177	Corridor, classroom security x deadbolt, LV	.	.	.	.
	L283-178	Storeroom/faculty restroom, LV	.	.	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x knob/lever	2	2	2	2
DD	L583-195	Compression spring	.	.	.	.
EE	L583-212	Mounting posts, L	2	.	2	.
	L583-497	Mounting posts, LV	.	2	.	2
HH	L583-321	Inside knob mounting plate	.	.	.	.
II	L583-322	Outside lever spacer	.	.	.	.

‡ Available with "occupied" indicator option. Specify 09-611 x L583-375.

# Passage and electrically locked/unlocked, two-point latch trim

LM9210, LM9290 EL/EU, LM9291 EL/EU

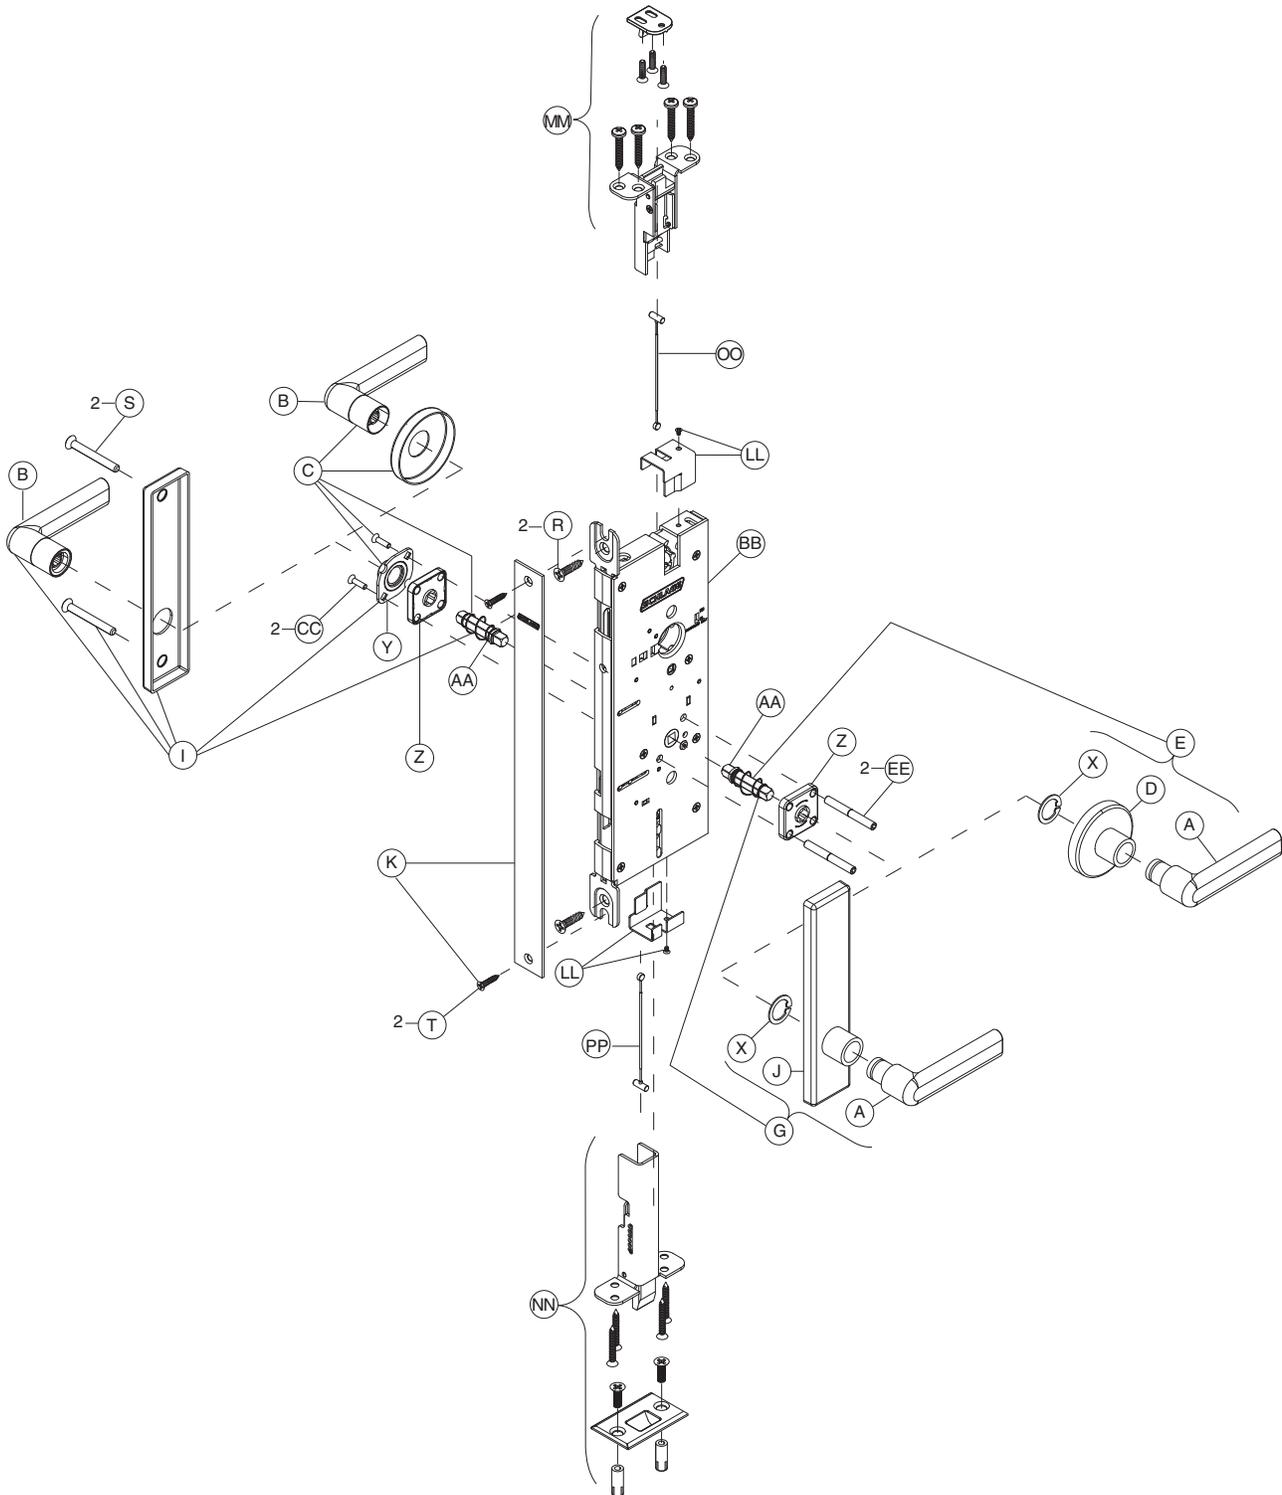

Notes: Bottom latch and cable are optional (lock may be ordered less bottom latch (LBL)).  
 LM9290 EL/EU and LM9291 EL/EU lock functions have wiring for electric motor. Lock case shown without electrified option.  
 LM9291 EL/EU lock function has double dummy spindle and spring (item AA on parts chart, page 85).

## Trim assemblies


	P/N	Description	LM9210	LM9290 EL/EU	LM9291EL/EU
A	09-401	Outside lever	.	.	.
B	09-402	Inside lever	.	.	.
C	09-403	Inside rose	.	.	.
D	09-404	Outside rose and bushing	.	.	.
E	Outside rose and lever:				
	09-506	All designs except AST, AVA, MER	.	.	.
	09-655	AST, AVA, MER	.	.	.
G	09-550	Outside escutcheon x lever (except 93 lever) L and N x blank	.	.	.
I	09-632	Inside escutcheon for lever, L and N x blank	.	.	.
J	09-636	Outside escutcheon and bushing x lever except 93 lever, L and N x blank	.	.	.
K	24771248	1¼" armor front x Schlage logo	.	.	.
R	C203-736	Case mounting screw pack	.	.	.
S	Escutcheon thru-bolts/screws:				
	K510-389	N escutcheon	2	2	2
	L583-120	L escutcheon	2	2	2
T	K110-020	Armor screw pack	.	.	.
X	L283-030	Lever truarc rings	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.
Z	L283-040	Lever spring cage	2	2	2
AA	L283-060	Spindle and spring	2	2	
	L283-064	Spindle and spring double dummy			.
BB	Assembled lock case:				
	24759599	Passage for two point latch	.		
	24759656	Electrically locked or unlocked outside, for two point latch		.	
	24759664	Electrically locked or unlocked both sides, for two point latch			.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x lever except single dummy	2	2	2
EE	L583-212	Mounting posts	2	2	2
LL	24871584	Latch cover (qty 2)	.	.	.
MM	24721714	Top latch assembly	.	.	.
NN	24721722	Bottom latch assembly	.	.	.
OO	24691750	Top cable, door range 6'8" - 7'0" *	.	.	.
PP	24647265	Bottom cable	.	.	.

\* For additional door range options , see "LM9200 Series two point lock" on page 186.

Trim assemblies

Outside lever only, two-point latch trim

LM9225

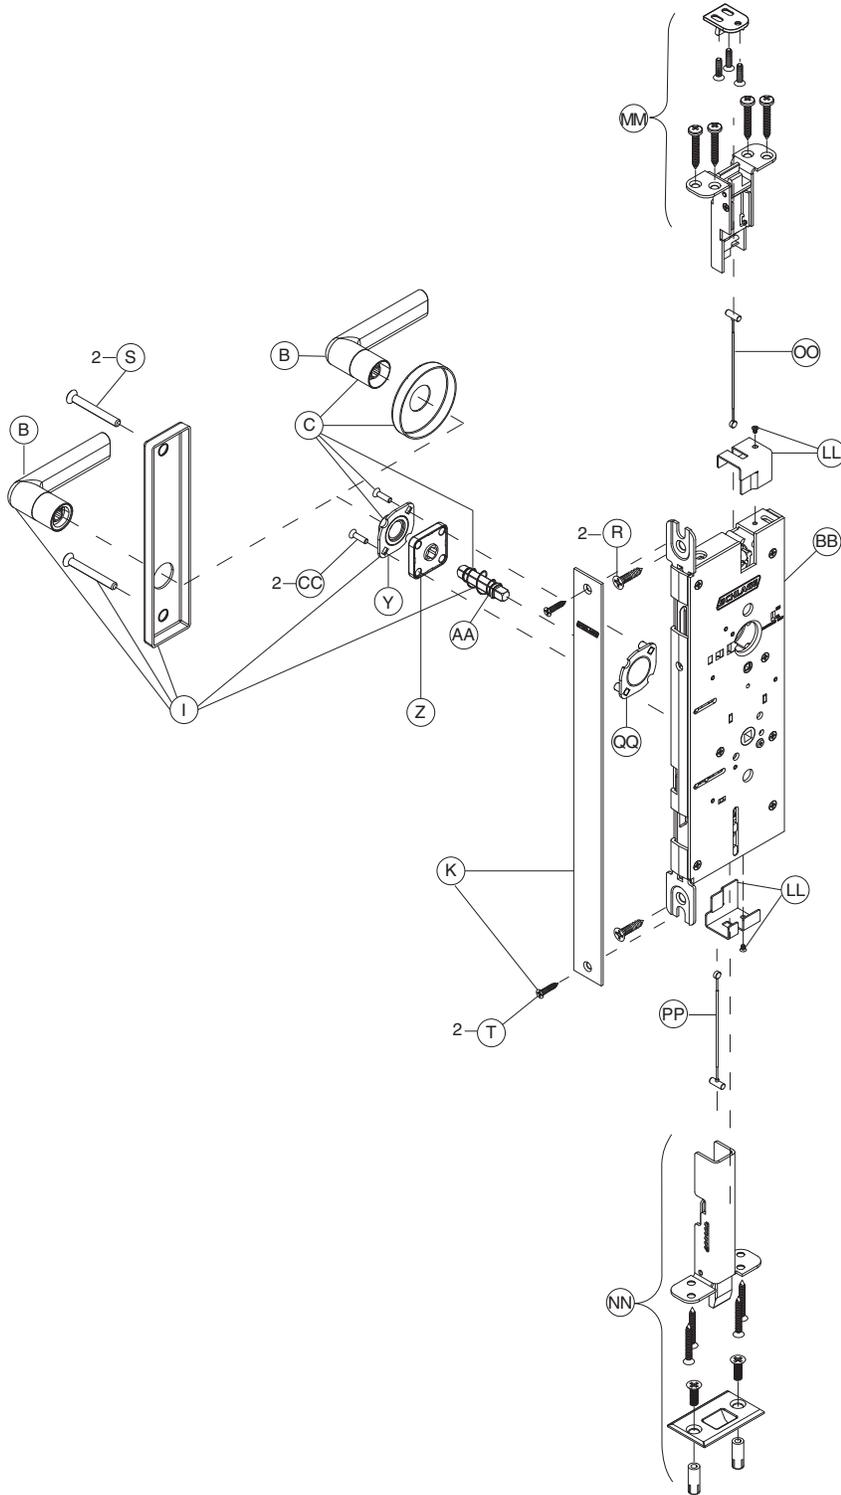

Note: Bottom latch and cable are optional (lock may be ordered less bottom latch (LBL)).

## Trim assemblies


	P/N	Description
B	09-402	Inside lever
C	09-403	Inside rose
K	24771248	1¼" armor front x Schlage logo
R	C203-736	Case mounting screw pack
T	K110-020	Armor screw pack
Y	L283-031	Inside lever mounting plate
Z	L283-040	Lever spring cage
AA	L283-060	Spindle and spring
BB	24759599	Assembled lock case, passage/exit for two point latch
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x lever (except single dummy) (qty 2)
LL	24871584	Latch cover (qty 2)
MM	24721714	Top latch assembly
NN	24721722	Bottom latch assembly
OO	24691750	Top cable, door range 6'8" - 7'0" *
PP	24647265	Bottom cable
QQ	L283-151	Mounting plate and studs

\* For additional door range options , see "LM9200 Series two point lock" on page 186.

Trim assemblies

Cylinder x turn, two-point latch trim

LM9250, LM9256

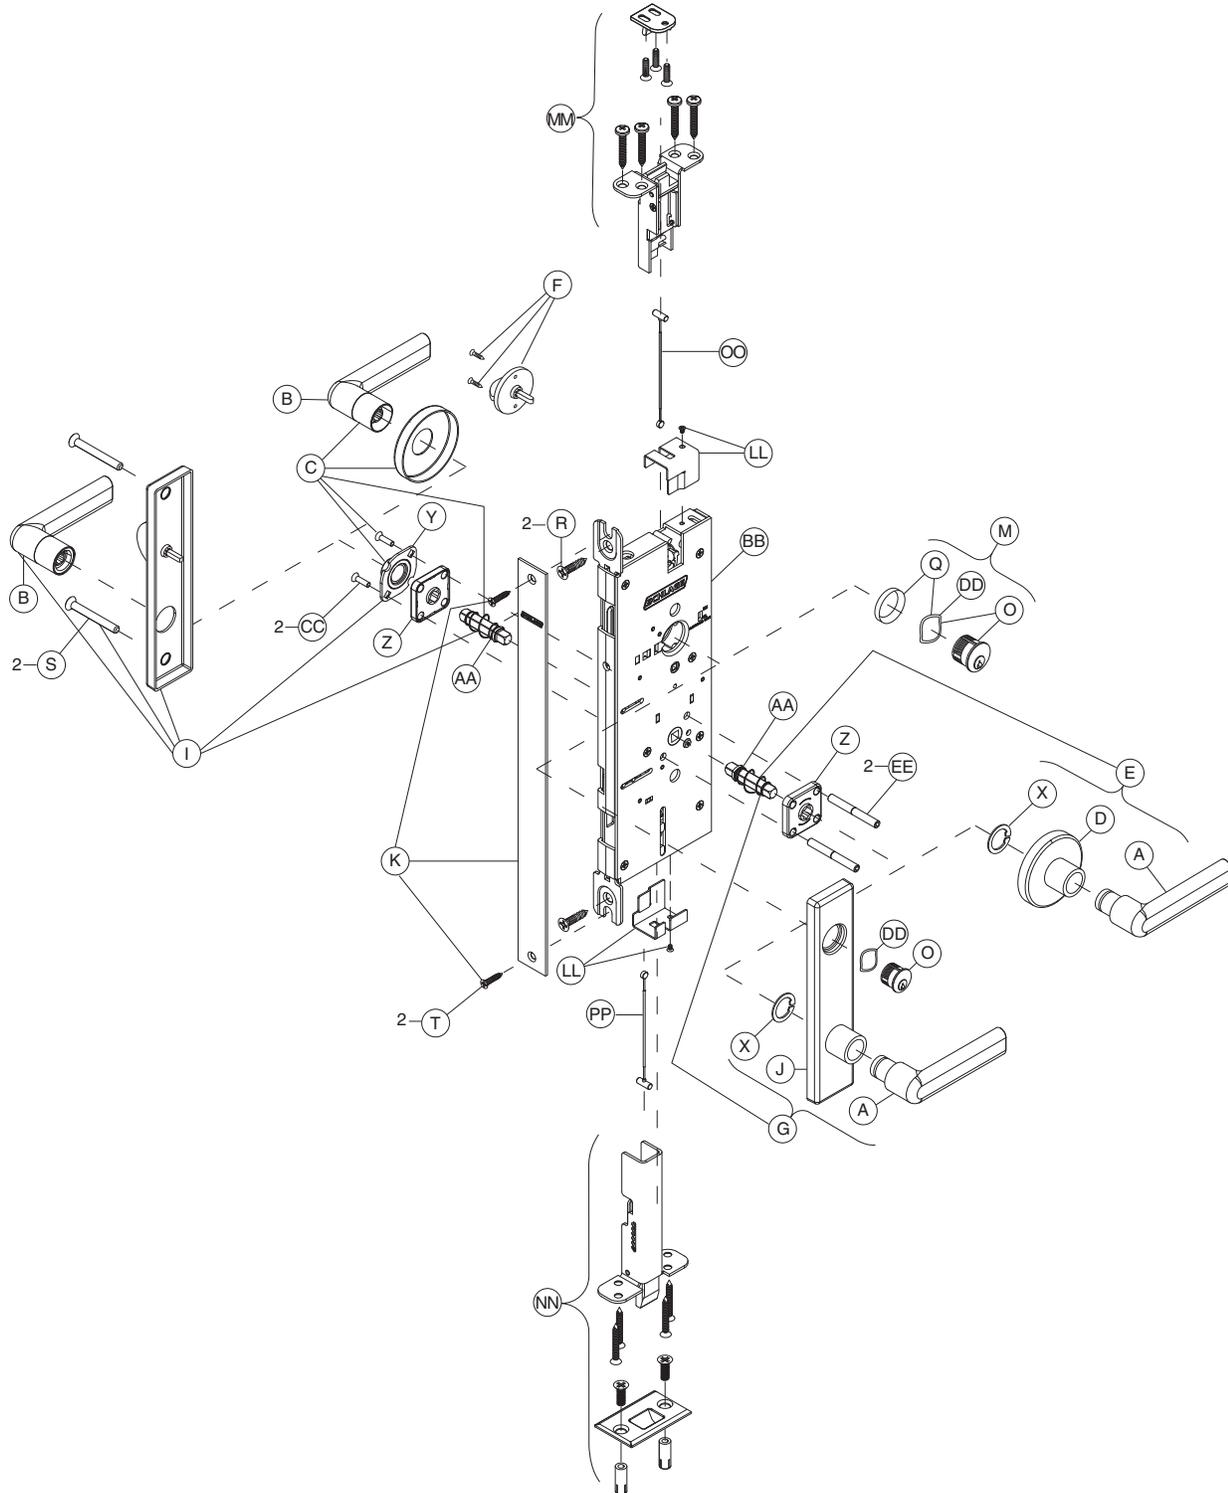

Note: Bottom latch and cable are optional (lock may be ordered less bottom latch (LBL)).


Trim assemblies

	P/N	Description	LM9250	LM9256
A	09-401	Outside lever	.	.
B	09-402	Inside lever	.	.
C	09-403	Inside rose	.	.
D	09-404	Outside rose and bushing	.	.
E	Outside rose and lever:			
	09-506	All designs except AST, AVA, MER	.	.
	09-655	AST, AVA, MER	.	.
F	09-509	Thumbturn	.	.
G	09-553	Outside escutcheon x lever (except 93 lever), L and N x full face cylinder	.	.
I	09-633	Inside escutcheon for lever, L and N x thumbturn	.	.
J	09-639	Outside escutcheon and bushing x lever (except 93 lever), L and N x full face cylinder	.	.
	09-652	Outside N escutcheon and bushing x 93 lever, full face cylinder	.	.
K	24771248	1¼" armor front x Schlage logo		
M	30-001	Full face cylinder with compression ring and spring – clover leaf cam	.	.
O	30-021	Full face cylinder with compression spring – clover leaf cam	.	.
Q	36-083	Compression ring and spring	.	.
R	C203-736	Case mounting screw pack	.	.
S	Escutcheon thru-bolts/screws:			
	K510-389	N escutcheon	2	2
	L583-120	L escutcheon	2	2
T	K110-020	Armor screw pack	.	.
X	L283-030	Lever truarc rings	.	.
Y	L283-031	Inside lever mounting plate	.	.
Z	L283-040	Lever spring cage	2	2
AA	L283-060	Spindle and spring	2	2
BB	Assembled lock case:			
	24759623	Office/entry for two point latch	.	.
	24616914	Office/entry with automatic unlocking for two point latch		.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x lever (except single dummy)	2	2
DD	L583-195	Compression spring	.	.
EE	L583-212	Mounting posts, L	2	2
LL	24871584	Latch cover (qty 2)	.	.
MM	24721714	Top latch assembly	.	.
NN	24721722	Bottom latch assembly	.	.
OO	24691750	Top cable, door range 6'8" - 7'0" *	.	.
PP	24647265	Bottom cable	.	.

\* For additional door range options , see "LM9200 Series two point lock" on page 186.

# Outside cylinder and electrically locked/unlocked outside cylinder, two-point latch trim

LM9270, LM9280, LM9292 EL/EU, LM9293 EL/EU

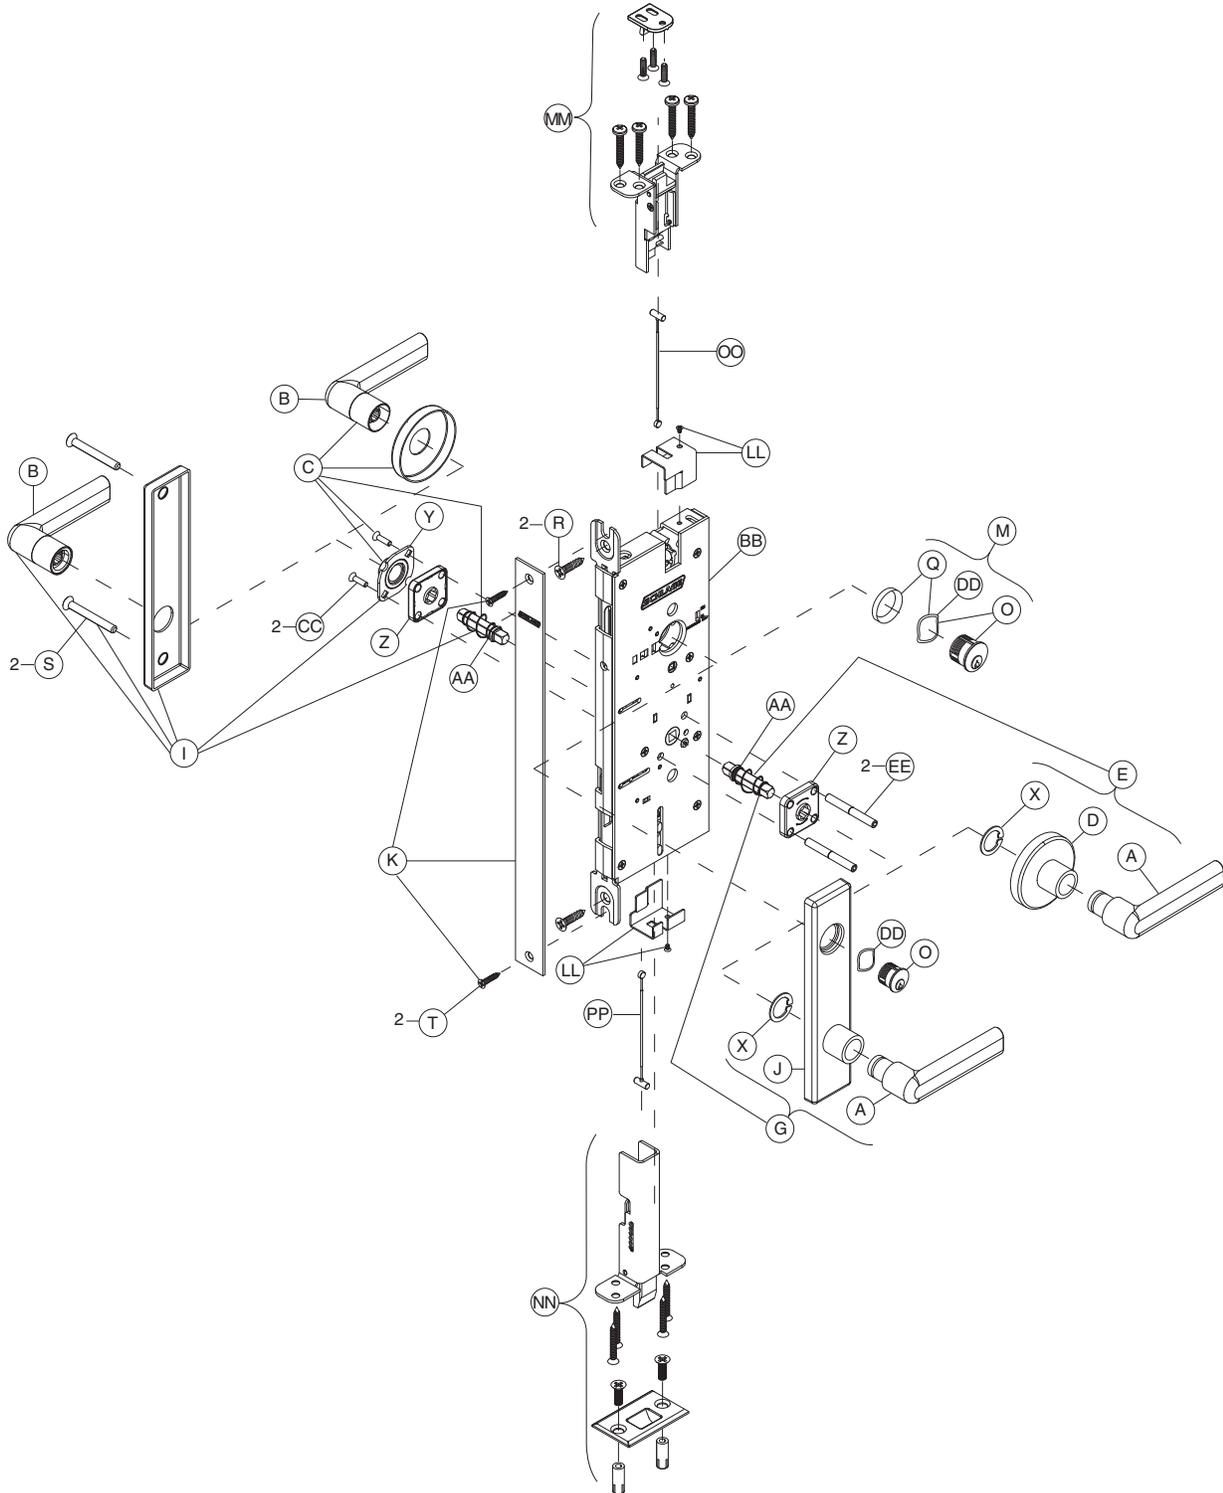

Notes: Bottom latch and cable are optional (lock may be ordered less bottom latch (LBL)).  
LM9292 EL/EU and LM9293 EL/EU lock functions have wiring for electric motor. Lock case shown without electrified option.  
LM9293 EL/EU lock function has double dummy spindle and spring (item AA on parts chart, page 91).

## Trim assemblies


	P/N	Description	LM9270	LM9280	LM9292 EL/EU	LM9293 EL/EU
A	09-401	Outside lever	.	.	.	.
B	09-402	Inside lever	.	.	.	.
C	09-403	Inside rose	.	.	.	.
D	09-404	Outside rose and bushing	.	.	.	.
E	Outside rose and lever:					
	09-506	All designs except AST, AVA, MER	.	.	.	.
	09-655	AST, AVA, MER	.	.	.	.
G	09-553	Outside escutcheon x lever (except 93 lever), L and N x full face cylinder	.	.	.	.
i	09-632	Inside escutcheon for lever, L and N x blank	.	.	.	.
J	09-639	Outside escutcheon and bushing x lever (except 93 lever), L and N x full face cylinder	.	.	.	.
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	.	.	.	.
K	24771248	1¼" armor front x Schlage logo	.	.	.	.
M	30-000	Full face cylinder with compression ring and spring , clover leaf cam	.	.	.	.
	30-001	Full face cylinder with compression ring and spring , clover leaf cam	.	.	.	.
O	30-019	Full face cylinder with compression spring , clover leaf cam	.	.	.	.
	30-021	Full face cylinder with compression spring , clover leaf cam	.	.	.	.
P	36-082	Blocking ring	.	.	.	.
Q	36-083	Compression ring and spring	.	.	.	.
R	C203-736	Case mounting screw pack	.	.	.	.
S	Escutcheon thru-bolts/screws:					
	K510-389	N escutcheon	2	2	2	2
	L583-120	L escutcheon	2	2	2	2
T	K110-020	Armor screw pack	.	.	.	.
X	L283-030	Lever truarc rings	.	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.	.
Z	L283-040	Lever spring cage	2	2	2	2
AA	L283-060	Spindle and spring	2	2	2	.
	L283-064	Spindle and spring double dummy				.
BB	Assembled lock case:					
	24759623	Classroom/storeroom for two point latch	.	.	.	.
	24759656	Electrically locked or unlocked outside, cylinder one side, for two point latch	.	.	.	.
	24759664	Electrically locked or unlocked both sides, cylinder one side, for two point latch	.	.	.	.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x lever	2	2	2	2
DD	L583-195	Compression springs	.	.	.	.
EE	L583-212	Mounting posts	2	2	2	2
LL	24871584	Latch cover (qty 2)	.	.	.	.
MM	24721714	Top latch assembly	.	.	.	.
NN	24721722	Bottom latch assembly	.	.	.	.
OO	24691750	Top cable, door range 6'8" - 7'0" *	.	.	.	.
PP	24647265	Bottom cable	.	.	.	.

\* For additional door range options , see "LM9200 Series two point lock" on page 186.

## Trim assemblies

# Double cylinder and electrically locked/unlocked outside cylinder, two-point latch trim

LM9271, LM9294 EL/EU, LM9295 EL/EU

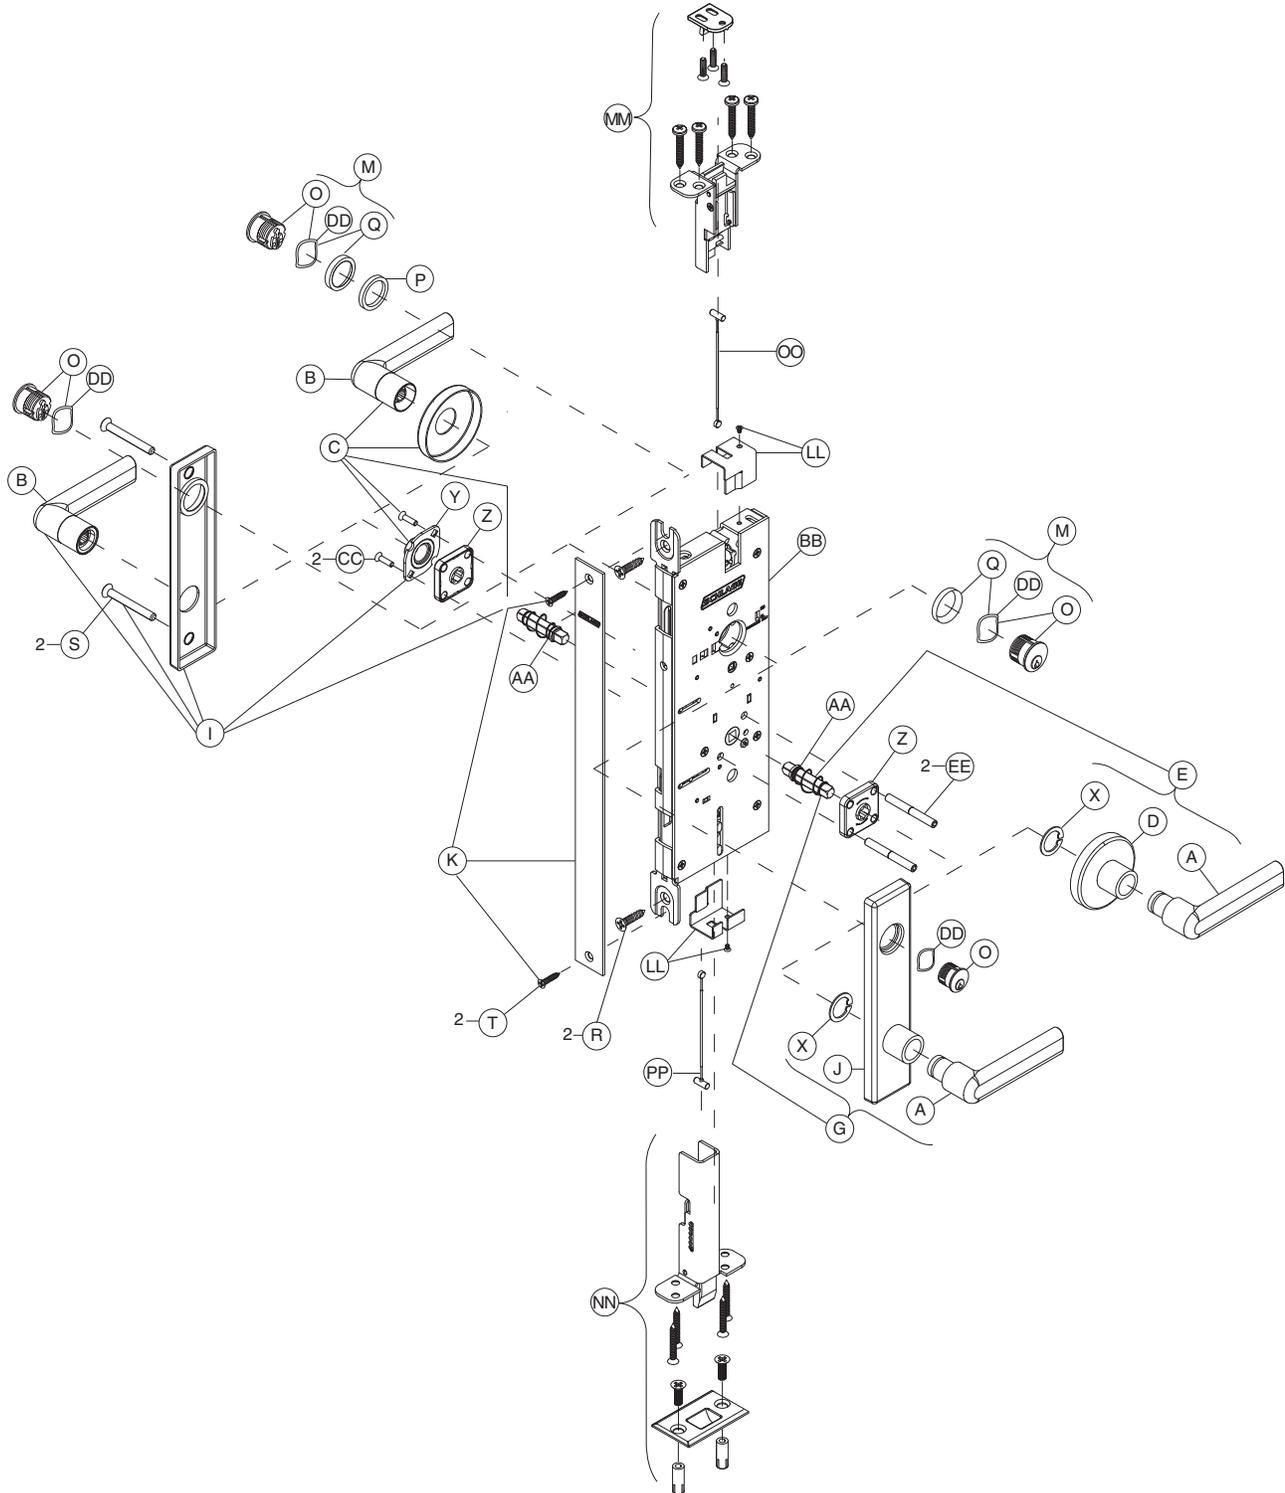

Notes: Bottom latch and cable are optional (lock may be ordered less bottom latch (LBL)).  
LM9294 EL/EU and LM9295 EL/EU lock functions have wiring for electric motor. Lock case shown without electrified option.  
LM9295 EL/EU lock function has double dummy spindle and spring (item AA on parts chart, page 93).

Trim assemblies

	P/N	Description	LM927	LM9294 EL/EU	LM9295 EL/EU
A	09-401	Outside lever	.	.	.
B	09-402	Inside lever	.	.	.
C	09-403	Inside rose	.	.	.
D	09-404	Outside rose and bushing	.	.	.
E	Outside rose and lever:				
	09-506	All designs except AST, AVA, MER	.	.	.
	09-655	AST, AVA, MER	.	.	.
G	09-553	Outside escutcheon x lever (except 93 lever), L and N x full face cylinder	.	.	.
i	09-632	Inside escutcheon for lever, L and N x blank	.	.	.
J	09-639	Outside escutcheon and bushing x lever (except 93 lever), L and N x full face cylinder	.	.	.
	09-652	Outside escutcheon and bushing x 93 lever, full face cylinder	.	.	.
K	24771248	1¼" armor front x Schlage logo	.	.	.
M	30-001	Full face cylinder with compression ring and spring , clover leaf cam	2	2	2
O	30-021	Full face cylinder with compression spring , clover leaf cam	2	2	2
P	36-082	Blocking ring	.	.	.
Q	36-083	Compression ring and spring	.	.	.
R	C203-736	Case mounting screw pack	.	.	.
S	Escutcheon thru-bolts/screws:				
	K510-389	N escutcheon	2	2	2
	L583-120	L escutcheon	2	2	2
T	K110-020	Armor screw pack	.	.	.
X	L283-030	Lever truarc rings	.	.	.
Y	L283-031	Inside lever mounting plate	.	.	.
Z	L283-040	Lever spring cage	2	2	2
AA	L283-060	Spindle and spring	2	2	
	L283-064	Spindle and spring double dummy			.
BB	Assembled lock case:				
	24759623	Classroom security for two point latch	.		
	24759656	Electrically locked or unlocked outside, cylinder both sides, for two point latch		.	
	24759664	Electrically locked or unlocked both sides, cylinder both sides, for two point latch			.
CC	L583-066	Mounting trim screws, wood/metal door x rose/escutcheon x lever	2	2	2
DD	L583-195	Compression springs	.	.	.
EE	L583-212	Mounting posts	2	2	2
LL	24871584	Latch cover (qty 2)	.	.	.
MM	24721714	Top latch assembly	.	.	.
NN	24721722	Bottom latch assembly	.	.	.
OO	24691750	Top cable, door range 6'8" - 7'0" *	.	.	.
PP	24647265	Bottom cable	.	.	.

\* For additional door range options , see "LM9200 Series two point lock" on page 186.


# Lock case assemblies

96	L460, L462, L463, L464, L480, L496	146	L9485 x XL11-557
97	L9010	147	LM9210, LM9225
98	L9025	148	LM9256
99	L9026	149	LM9250, LM9270, LM9271, LM9280
100	LM9310, LM9325	150	LM9290 EL/EU, LM9292 EL/EU, LM9294 EL/EU
101	L9040, L9040 x XL11-446, L9044	151	LM9291 EL/EU, LM9293 EL/EU, LM9295 EL/EU
102	LV9040, LV9040 x XL11-446, LV9044	152	Lock case assembly compatibility
103	L9050, L9060, L9066 x XL11-897, L9070, L9071		
104	LV9050, LV9060, LV9070, LV9071		
105	LM9350, LM9370, LM9371		
106	LMV9350, LMV9370, LMV9371		
107	L9056		
108	LV9056		
109	L9076, L9077		
110	LV9076, LV9077		
111	L9080		
112	LV9080		
113	LM9380		
114	LMV9380		
115	L9080EL, L9080EL-RX		
116	LV9080EL		
117	L9080EU, L9080EU-RX		
118	LV9080EU		
119	L9082		
120	LV9082		
121	L9082EL		
122	L9082EU		
123	L9090EL/EU, L9092EL/EU, L9094EL/EU		
124	L9091EL/EU, L9093EL/EU, L9095 EL/EU		
125	L9492EL/EU, L9494 EL/EU		
126	L9493 EL/EU, L9495 EL/EU		
127	L9110 x XL11-741		
128	L9175		
129	L9176		
130	L9440, L9444		
131	LV9440, LV9444		
132	L9453		
133	LV9453		
134	L9456, L9457, L9496		
135	LV9456, LV9457, LV9496		
136	L9458		
137	LV9458		
138	L9460, L9462, L9463, L9464		
139	L9460 x XL11-635		
140	L9460 x XL11-886, L9462 x XL11-886, L9464 x XL11-886		
141	L9465, L9466, L9473		
142	L9480, L9485, L9486, L9486 x L583-375, L9412 x XL11-907		
143	LV9480, LV9485, LV9486, LV9486 x L583-375		
144	L9482 x XL11-543		
145	LV9482 x XL11-543		



Lock case assemblies

L460, L462, L463, L464, L480, L496

Assembled Lock Case L283-099

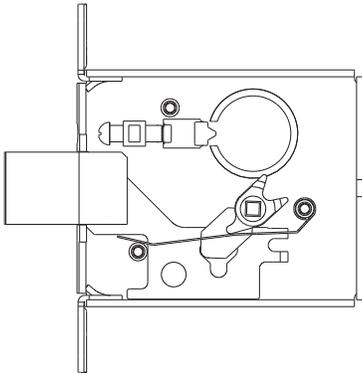


Number	Description	Part Number
3	Deadbolt	L283-003
10	Cylinder Plate & Screw	L283-055
14	L400 Lock Case	L283-128
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
57	Lock Case Cover	L583-494

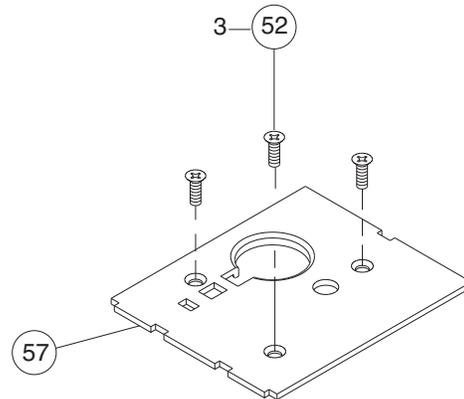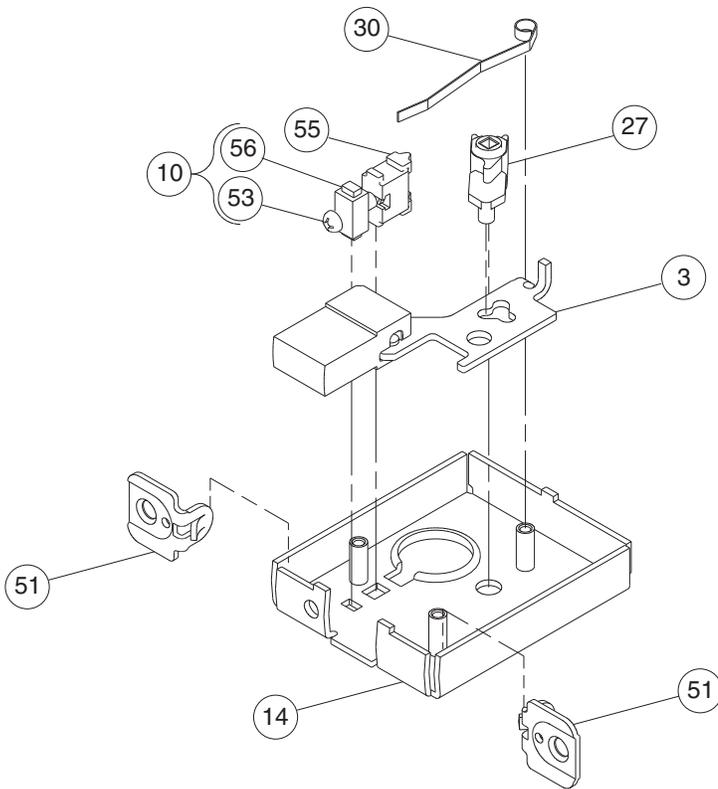


Lock case assemblies

L9010

Assembled Lock Case L283-131

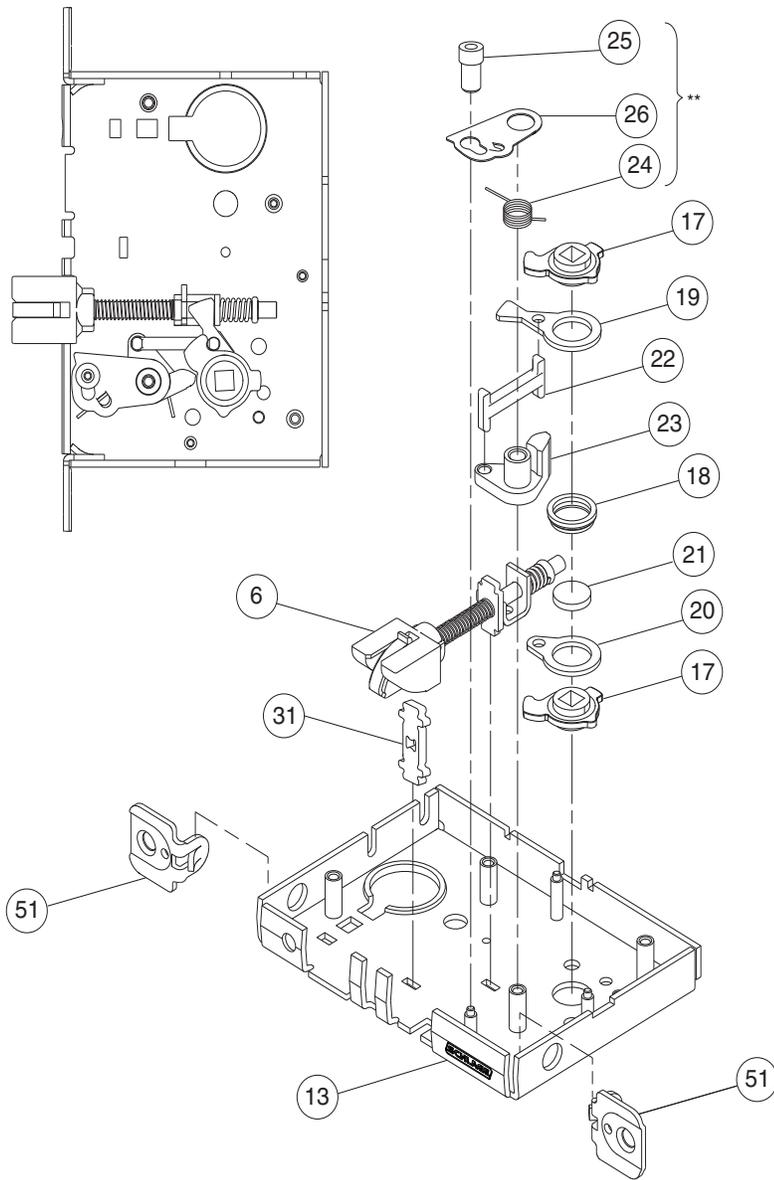

Number	Description	Part Number
6	Latchbolt	L283-008
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
31	Auxiliary Bar Guide	L583-038
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
58	Lock Case Cover	L583-496

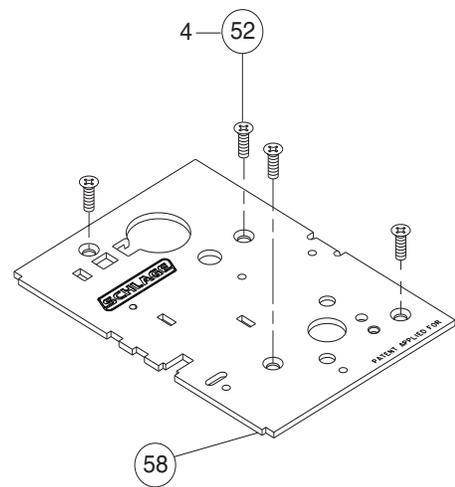


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

L9025

Assembled Lock Case L283-725

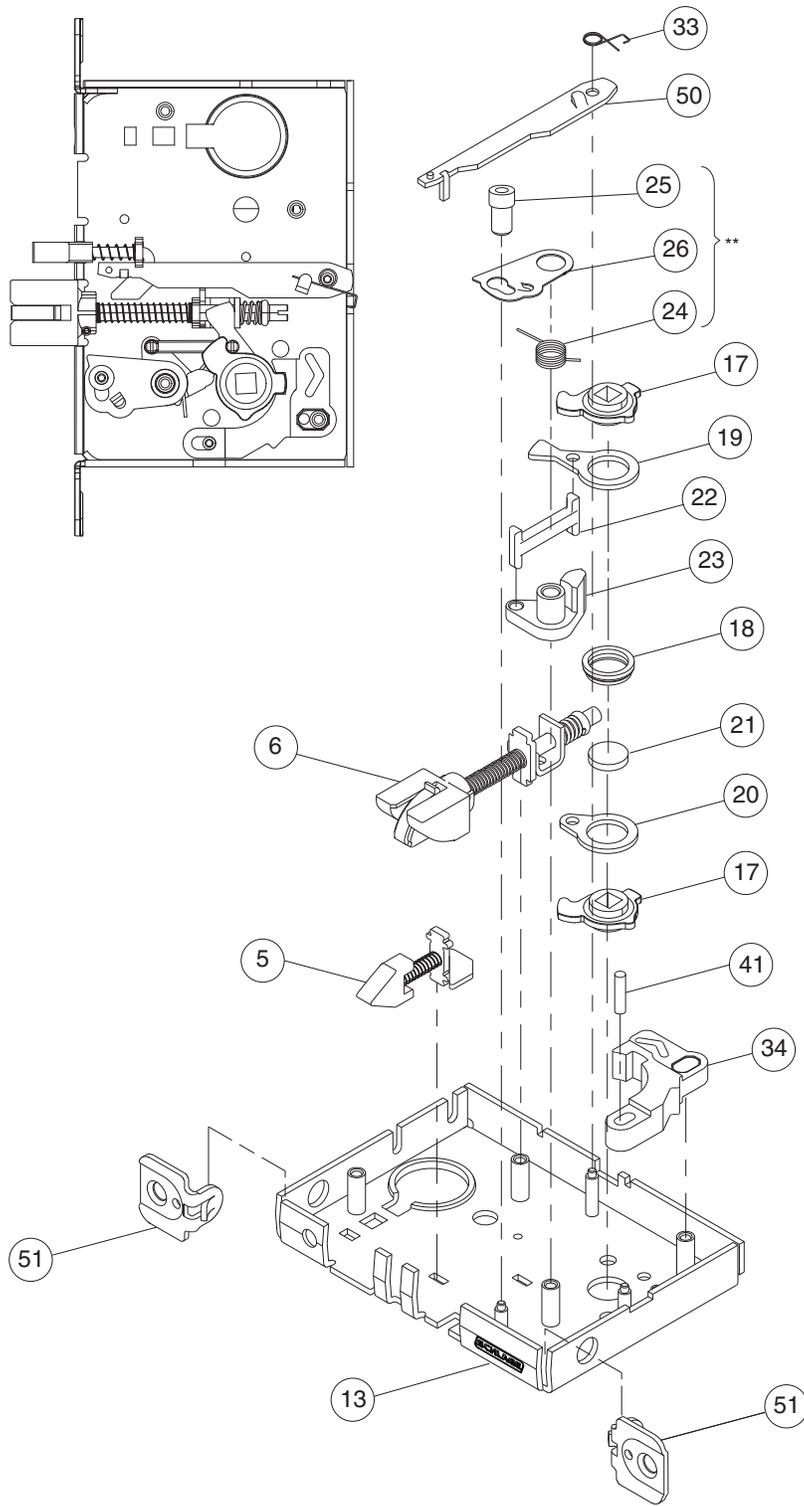


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
34	Locking Catch	L583-045
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-747
54	Lock Handling Screw	L583-485
58	L9000 Lock Case Cover	L583-496

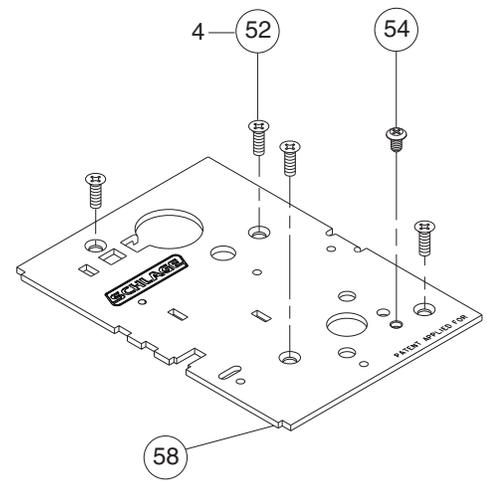


\*\* See "Assembly of lock case parts" on page 153.

# L9026

## Assembled Lock Case L283-134

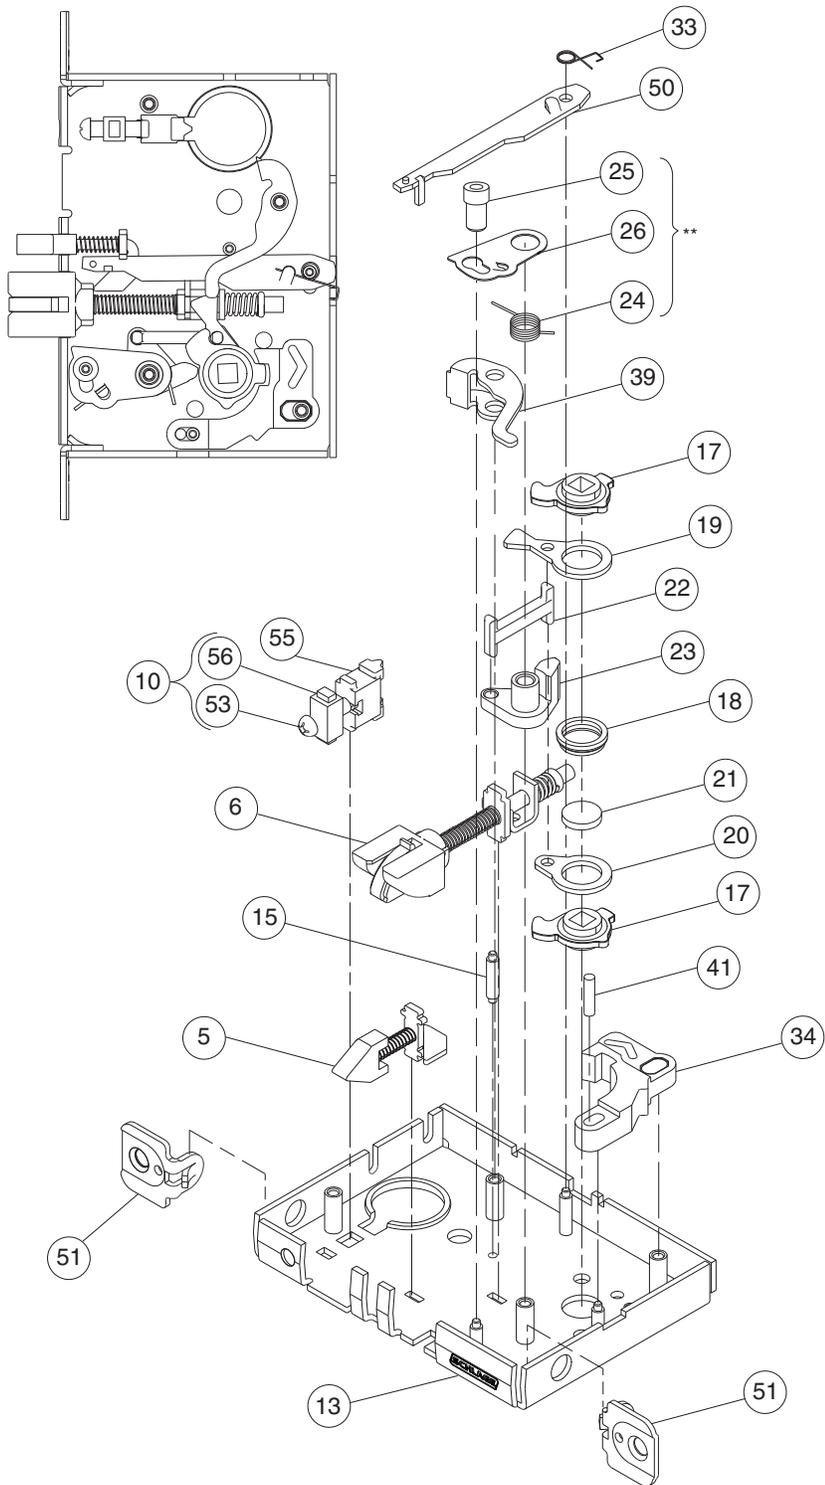


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
34	Locking Catch	L583-045
39	Transfer Lever	L583-051
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

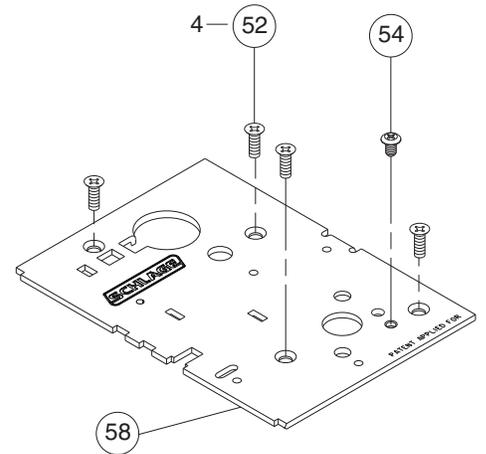


\*\* See "Assembly of lock case parts" on page 153.

LM9310, LM9325

Assembled Lock Case L283-314

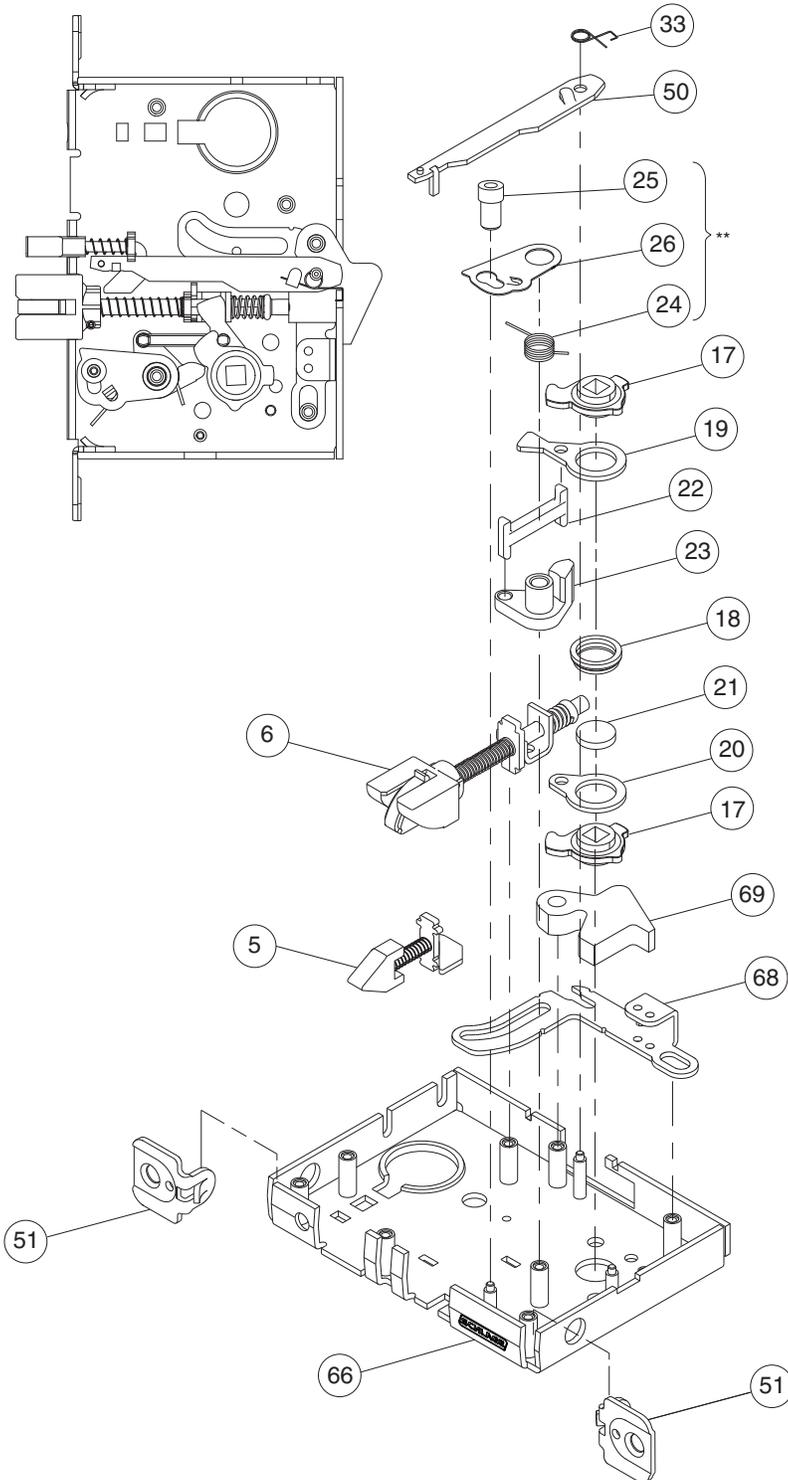

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-336
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-747
66	LM9000 Lock Case	L283-312
67	LM9000 Lock Case Cover	L583-491
68	Locking Link	L583-505
69	Lifter	L583-506

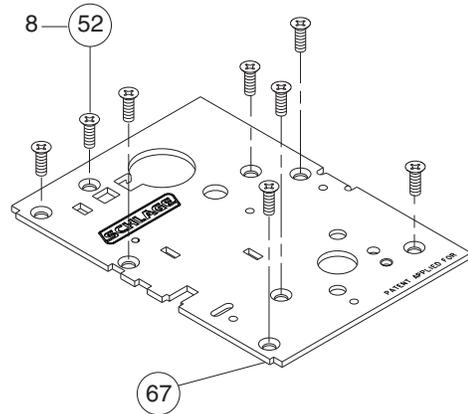


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

L9040, L9040 x XL11-446, L9044

Assembled Lock Case L283-132

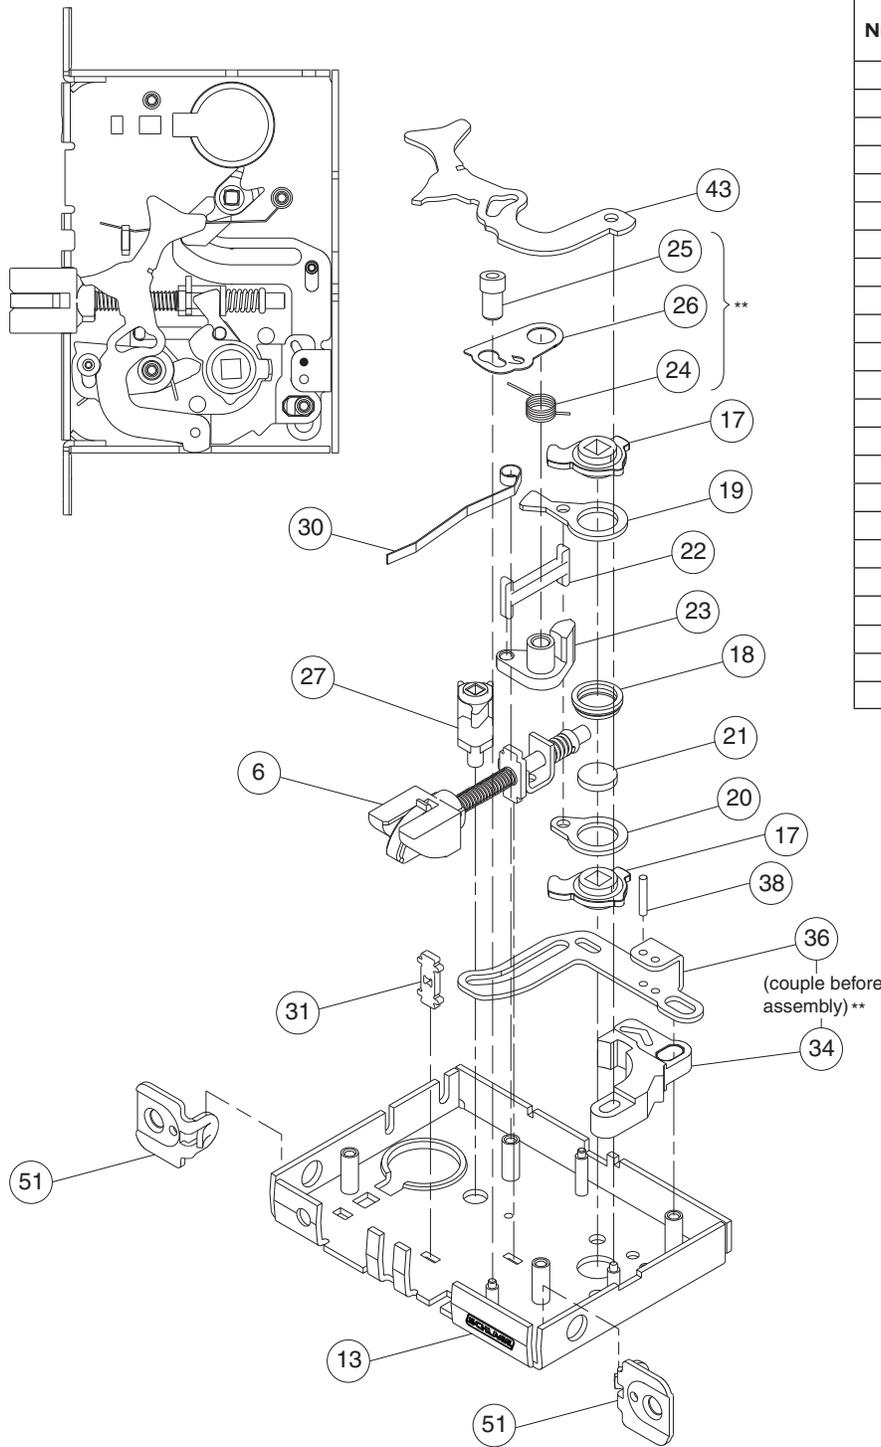


Number	Description	Part Number
6	Latchbolt	L283-008
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
43	Simultaneous Retractor	L583-058
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
54	Lock Handling Screw	L583-485
58	Lock Case Cover	L583-496

\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

LV9040, LV9040 x XL11-446, LV9044

Assembled Lock Case L283-171

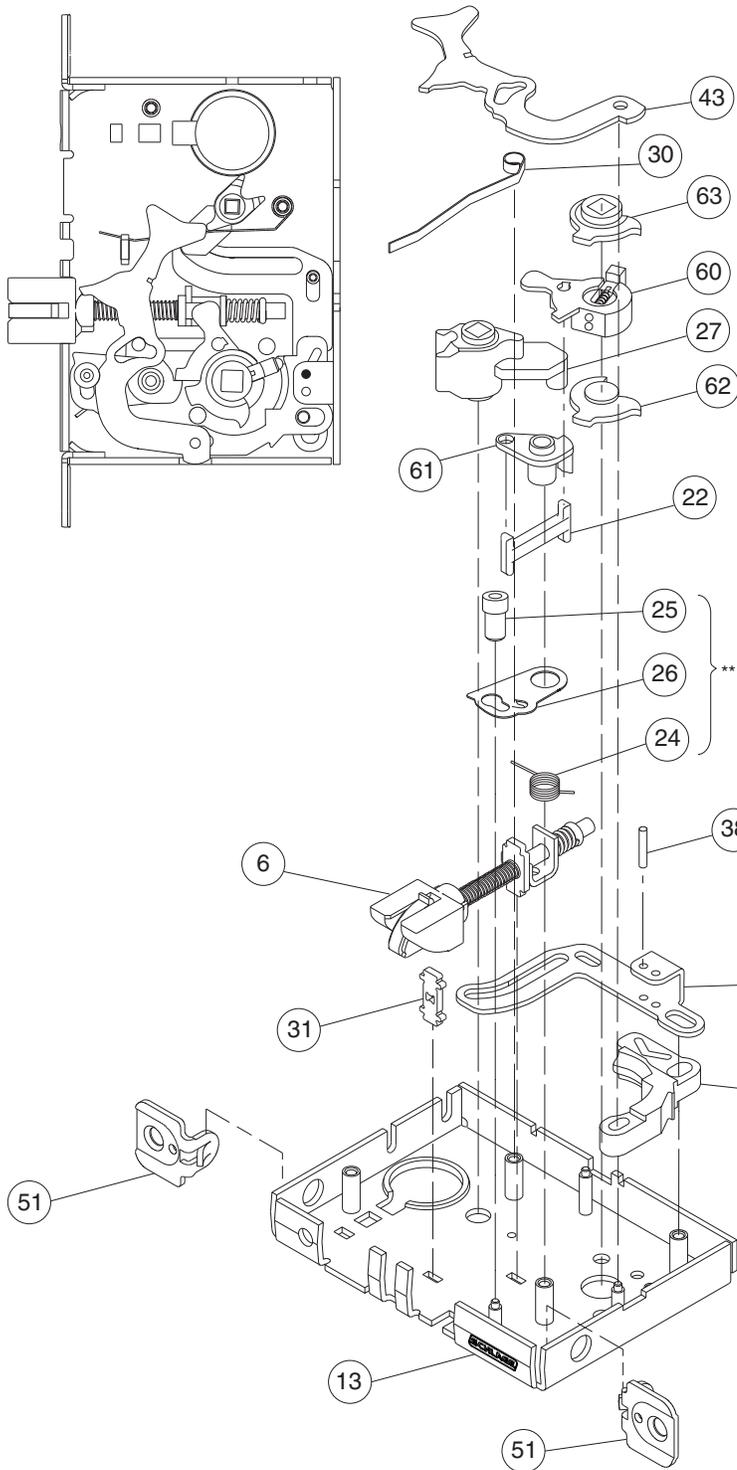

Number	Description	Part Number
6	Latchbolt	L283-008
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
36	Locking Link	L583-048
38	Link Pin	L583-050
43	Simultaneous Retractor	L583-058
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
54	Lock Handling Screw	L583-485
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897

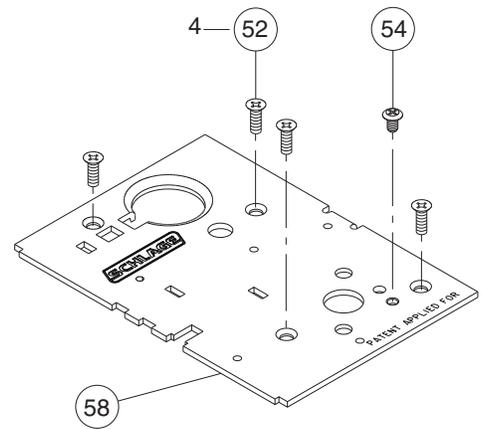


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

L9050, L9060, L9066 x XL11-897, L9070, L9071

Assembled Lock Case L283-133

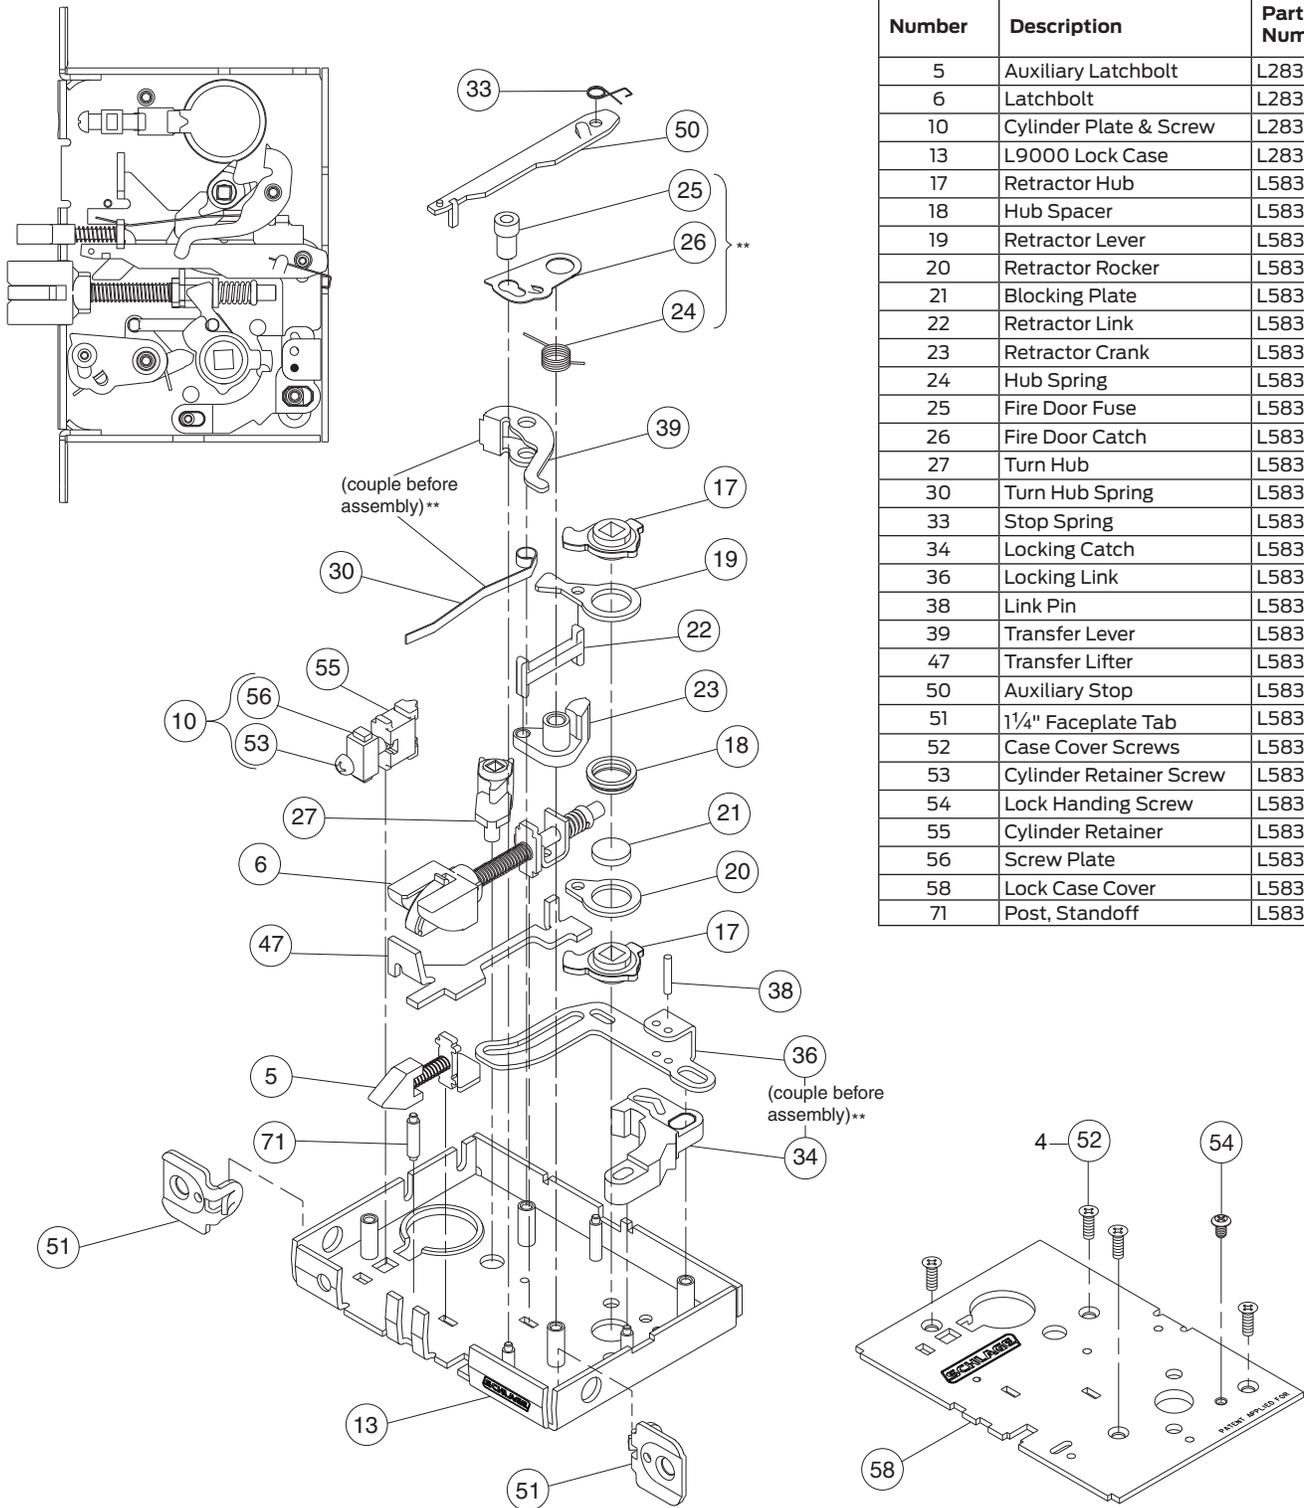


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
47	Transfer Lifter	L583-156
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
71	Post, Standoff	L583-004

Note: L9066 x XL11-897 chassis does not include blocking plate, part number L583-023.

\*\* See "Assembly of lock case parts" on page 153.

LV9050, LV9060, LV9070, LV9071

Assembled Lock Case L283-170

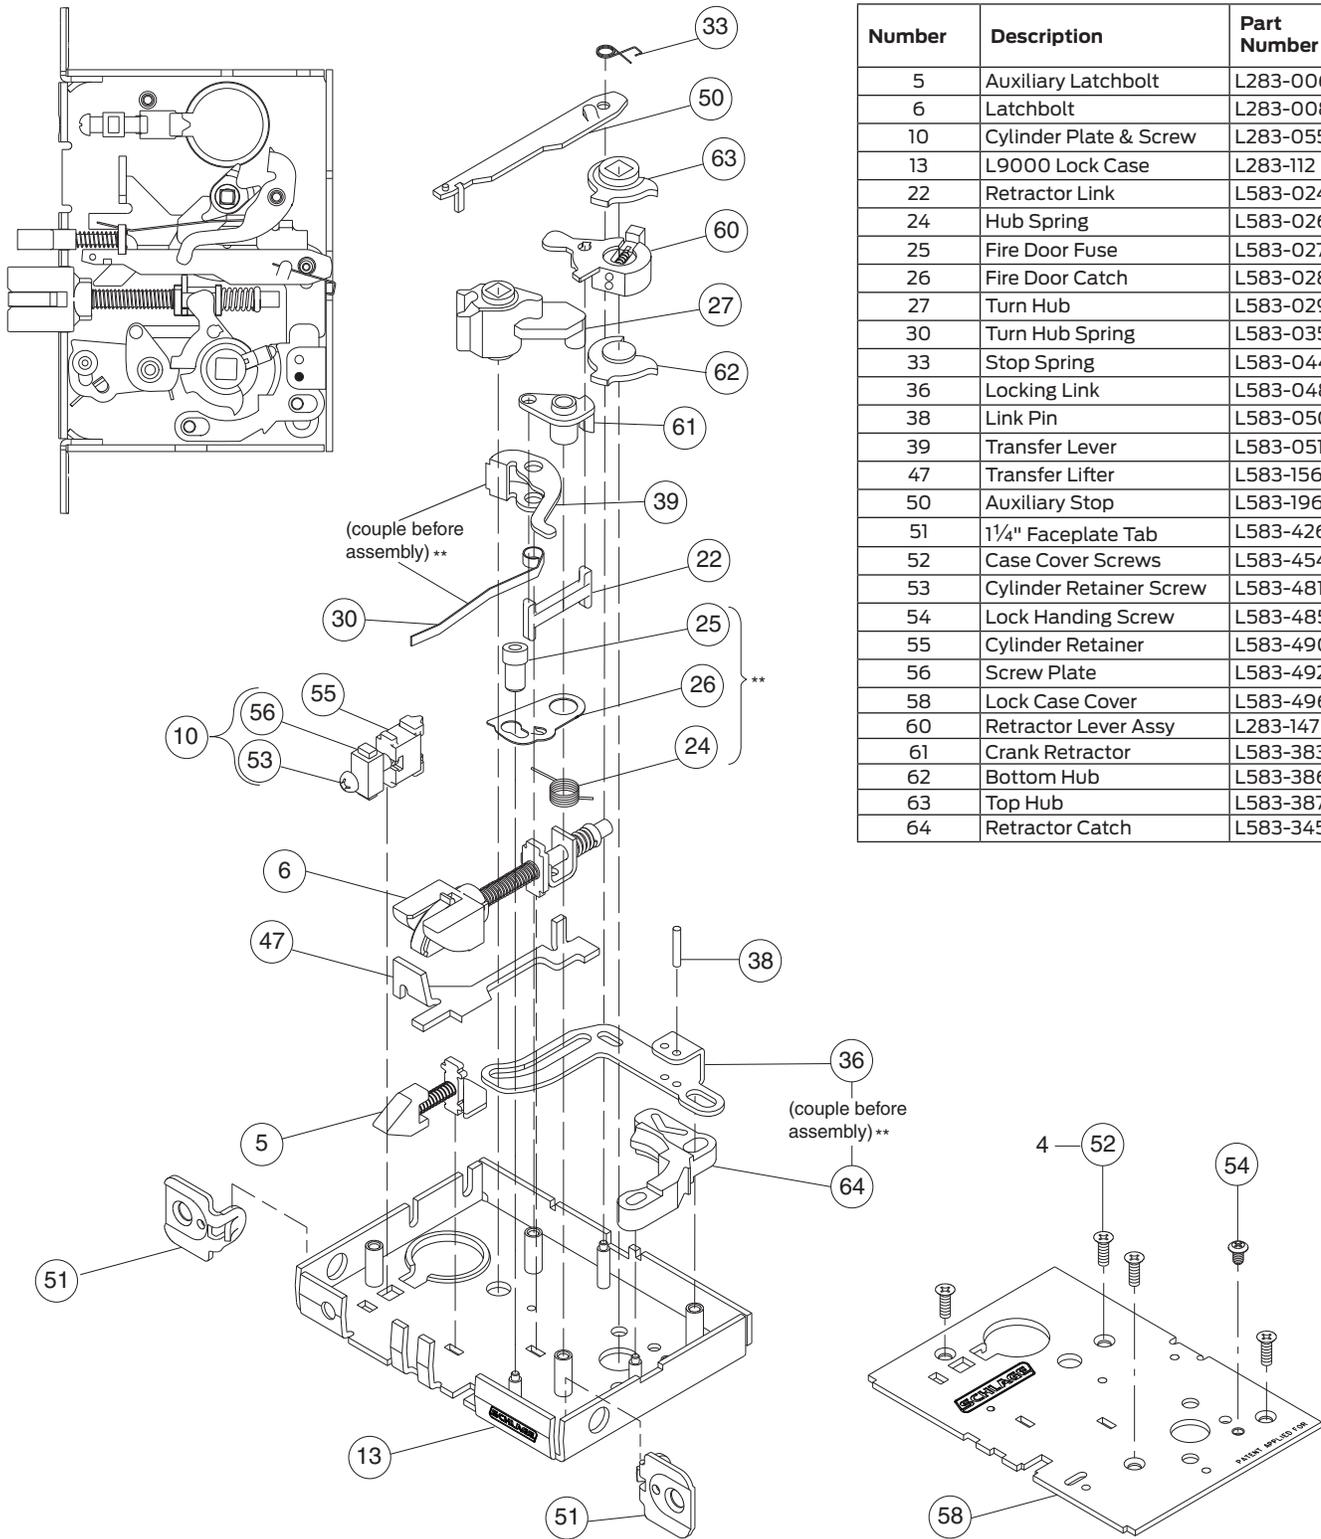


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
47	Transfer Lifter	L583-156
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

LM9350, LM9370, LM9371

Assembled Lock Case L283-316

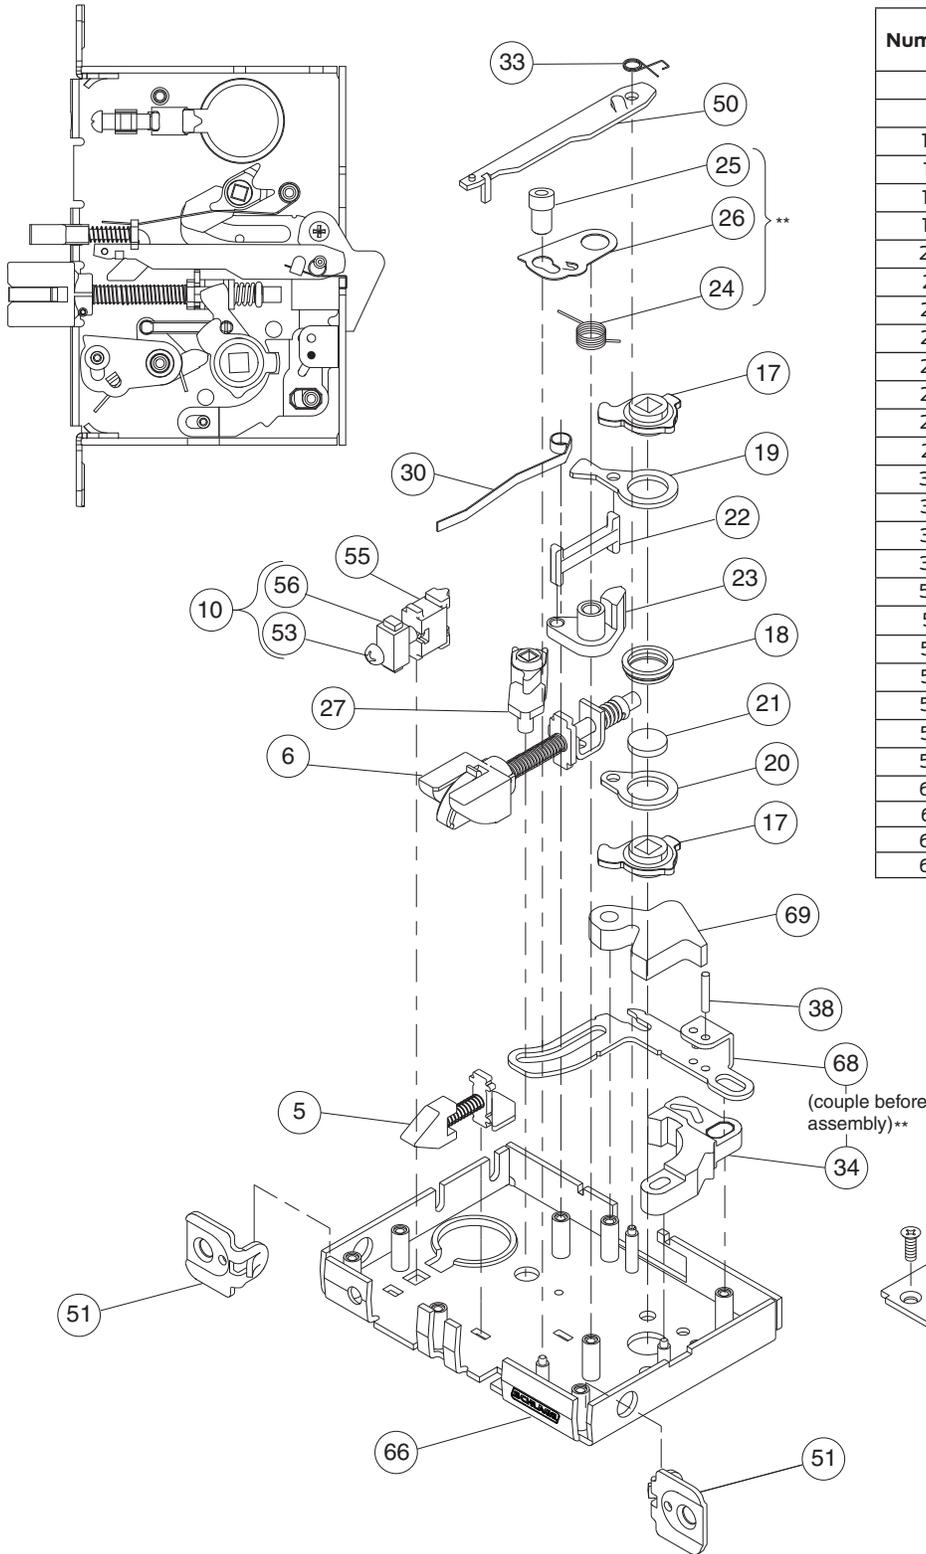


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-336
10	Cylinder Plate & Screw	L283-055
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
38	Link Pin	L583-050
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-747
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
66	LM9000 Lock Case	L283-312
67	LM9000 Lock Case Cover	L583-491
68	Locking Link	L583-505
69	Lifter	L583-506

\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

LMV9350, LMV9370, LMV9371

Assembled Lock Case L283-317

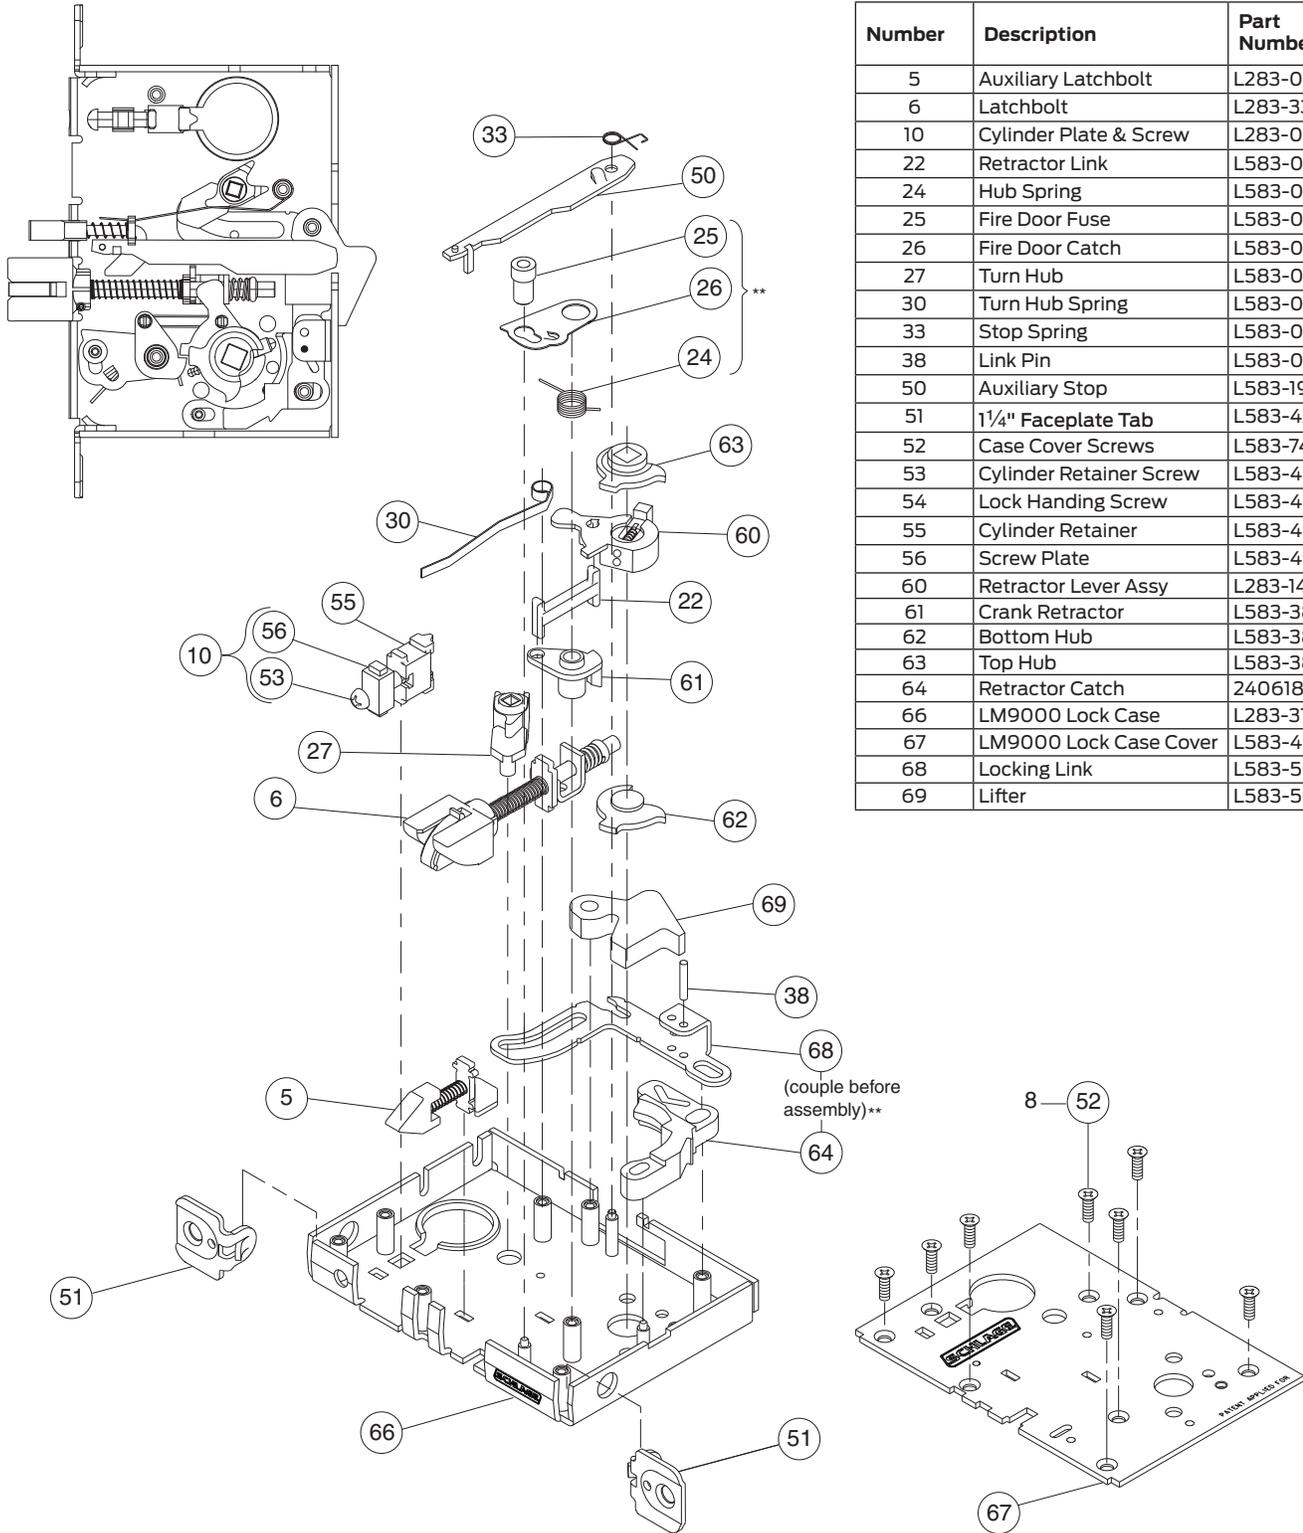


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-336
10	Cylinder Plate & Screw	L283-055
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
38	Link Pin	L583-050
50	Auxiliary Stop	L583-196
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-747
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897
66	LM9000 Lock Case	L283-312
67	LM9000 Lock Case Cover	L583-491
68	Locking Link	L583-505
69	Lifter	L583-506


\*\* See "Assembly of lock case parts" on page 153.

# L9056

## Assembled Lock Case L283-126

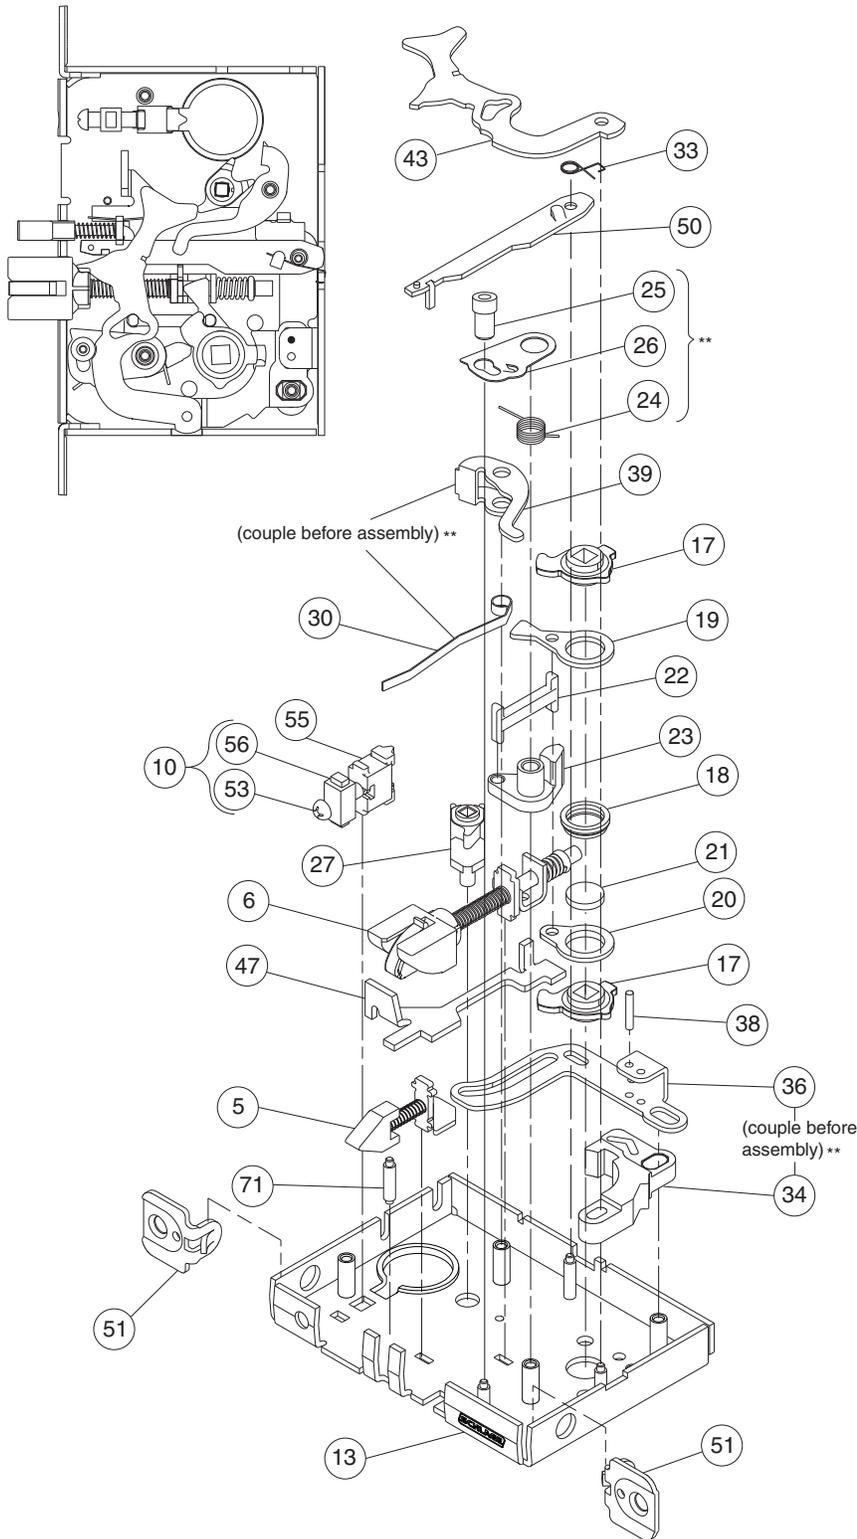

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
43	Simultaneous Retractor	L583-058
47	Transfer Lifter	L583-156
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
71	Post Standoff	L583-004

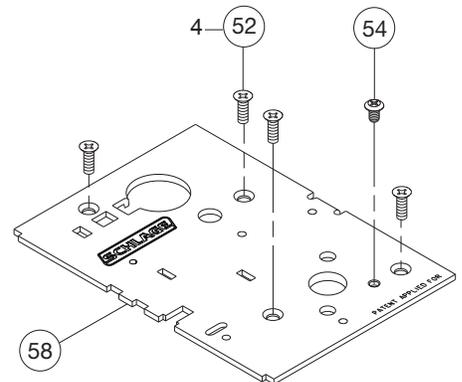


\*\* See "Assembly of lock case parts" on page 153.


## Lock case assemblies

# LV9056

### Assembled Lock Case L283-180

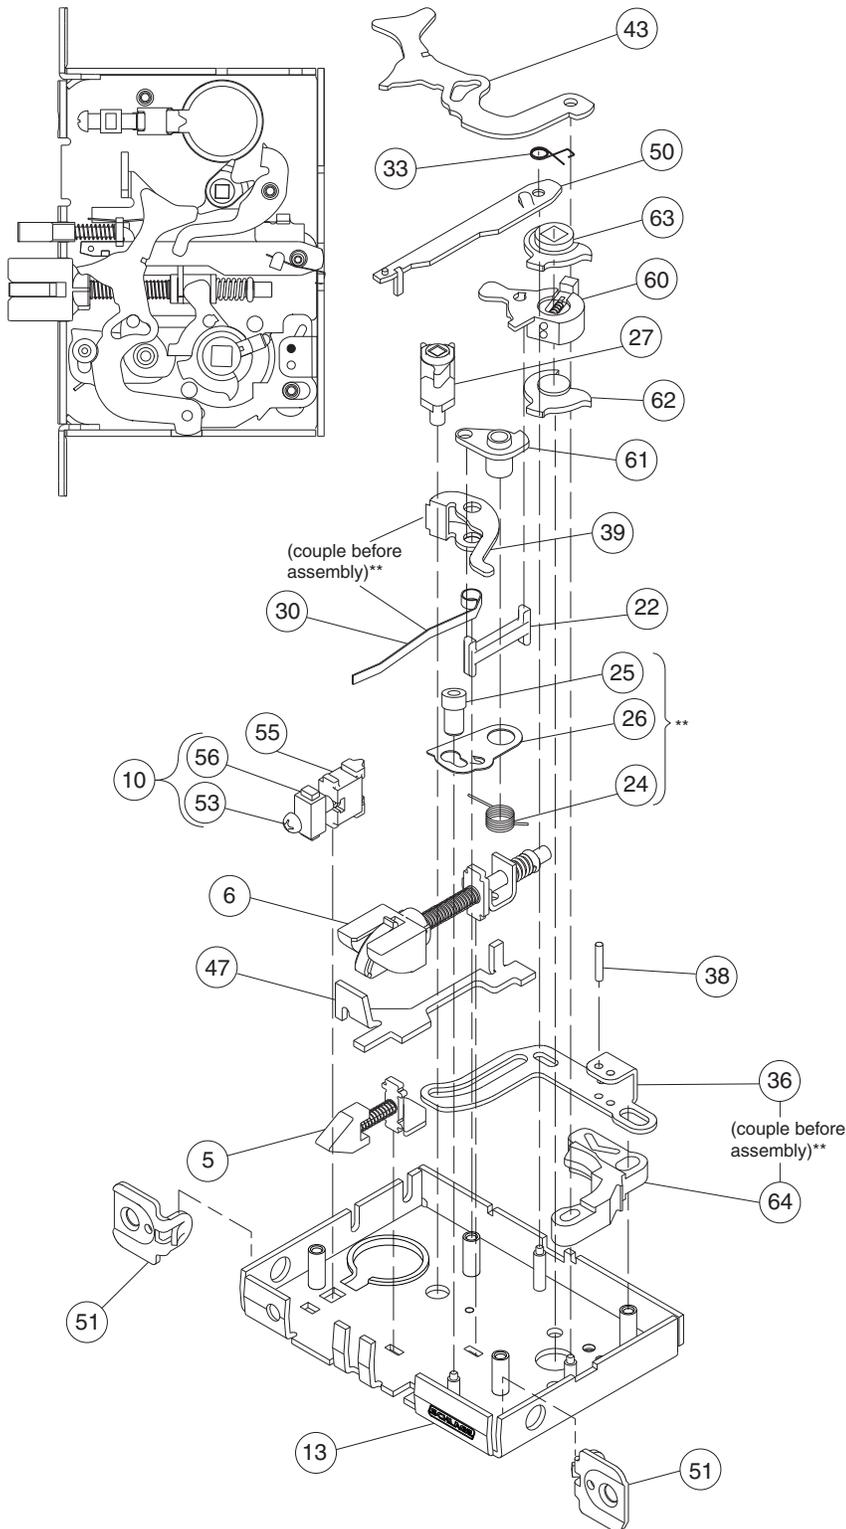

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
43	Simultaneous Retractor	L583-058
47	Transfer Lifter	L583-156
50	Auxiliary Stop	L583-196
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897

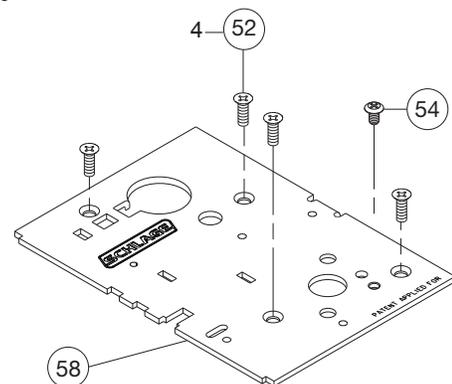


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

L9076, L9077

Assembled Lock Case L283-039

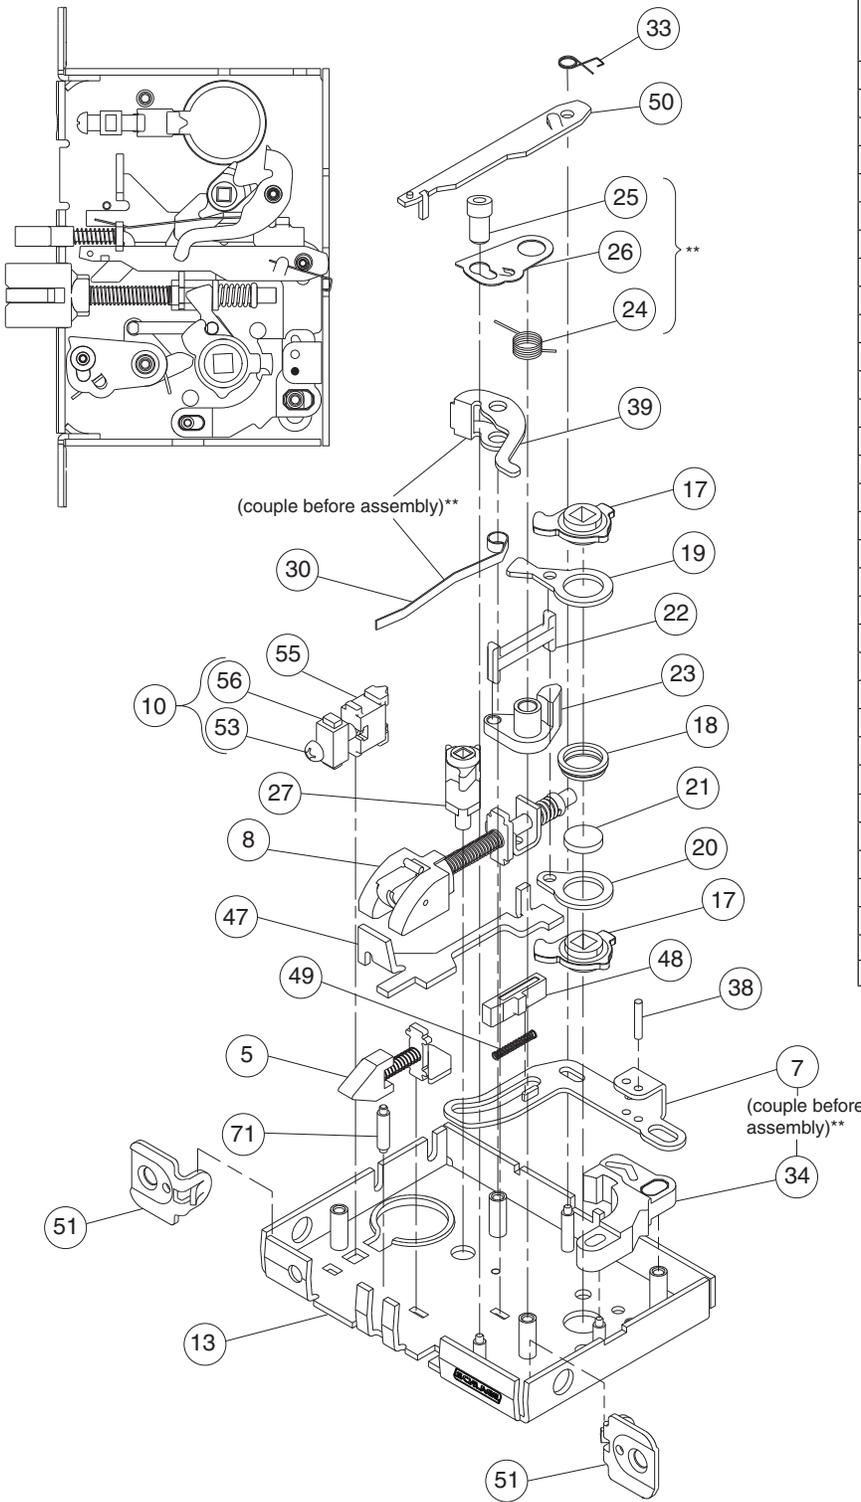

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
7	Locking Link	L283-010
8	Latchbolt	L283-049
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
38	Link Pin	L583-050
39	Transfer Lever	L583-051
47	Transfer Lifter	L583-156
48	Holdback Dog	L583-174
49	Dog Spring	L583-192
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
71	Post Standoff	L583-004

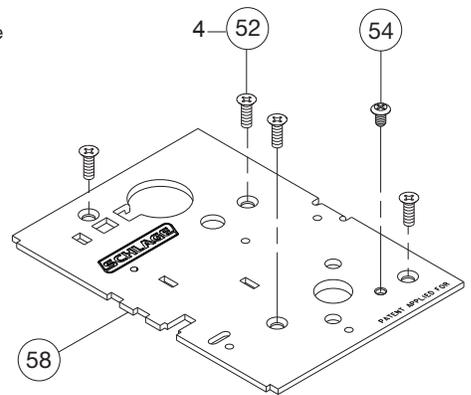


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

LV9076, LV9077

Assembled Lock Case L283-172

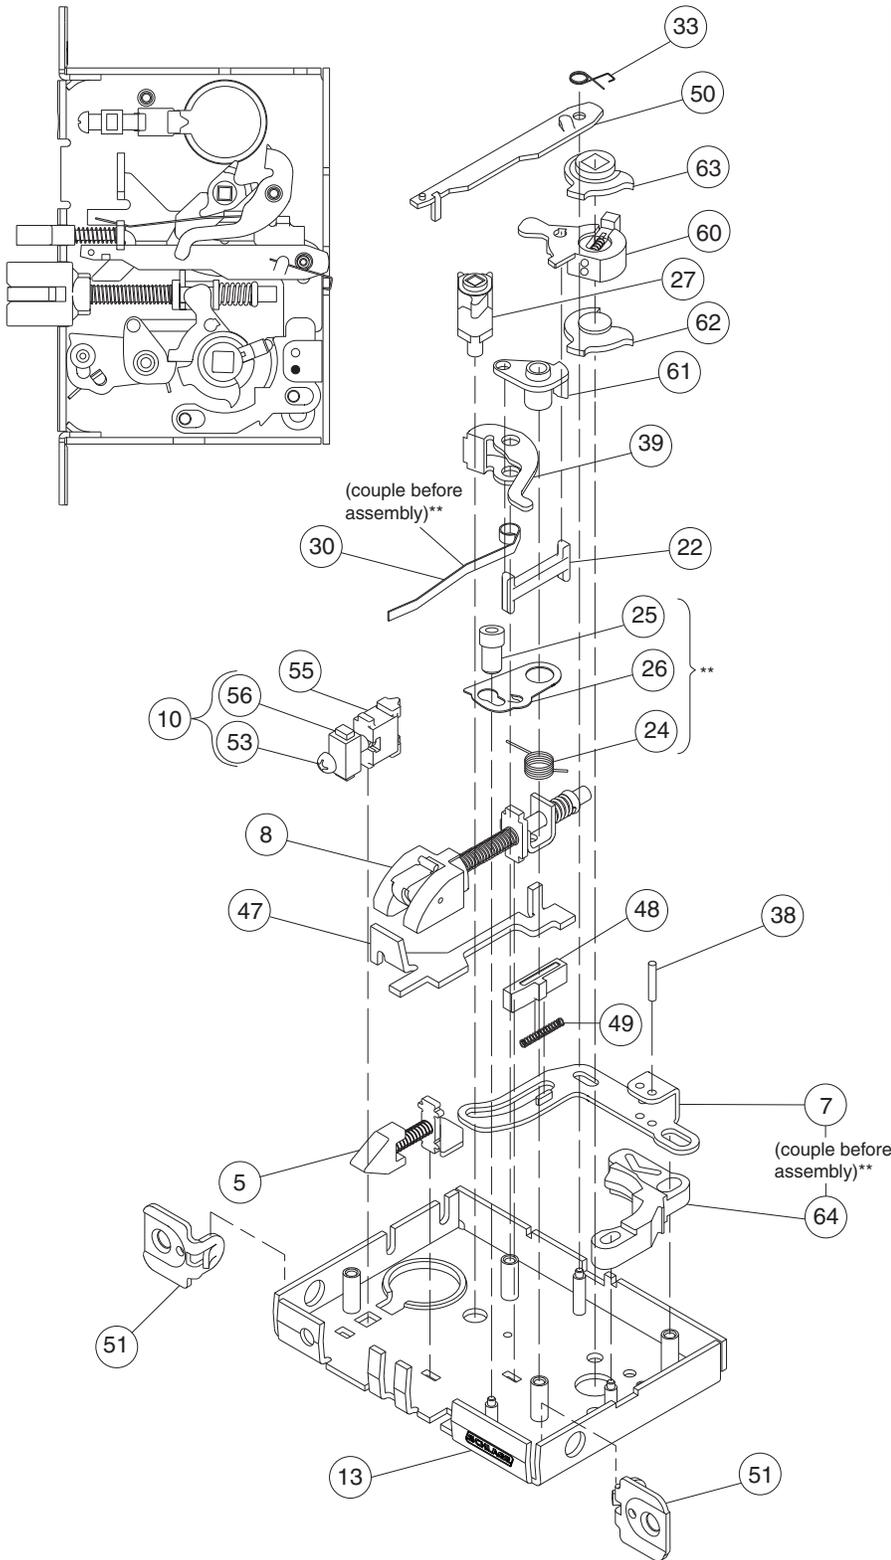

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
7	Locking Link	L283-010
8	Latchbolt	L283-049
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
47	Transfer Lifter	L583-156
48	Holdback Dog	L583-174
49	Dog Spring	L583-192
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

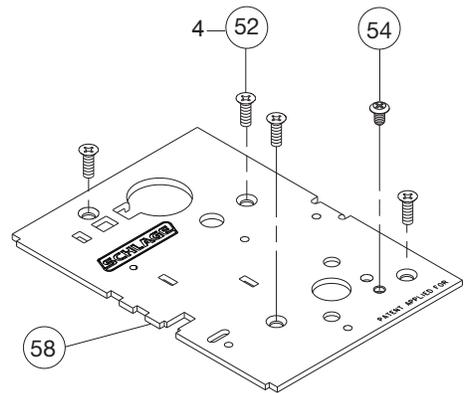


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

L9080

Assembled Lock Case L283-134

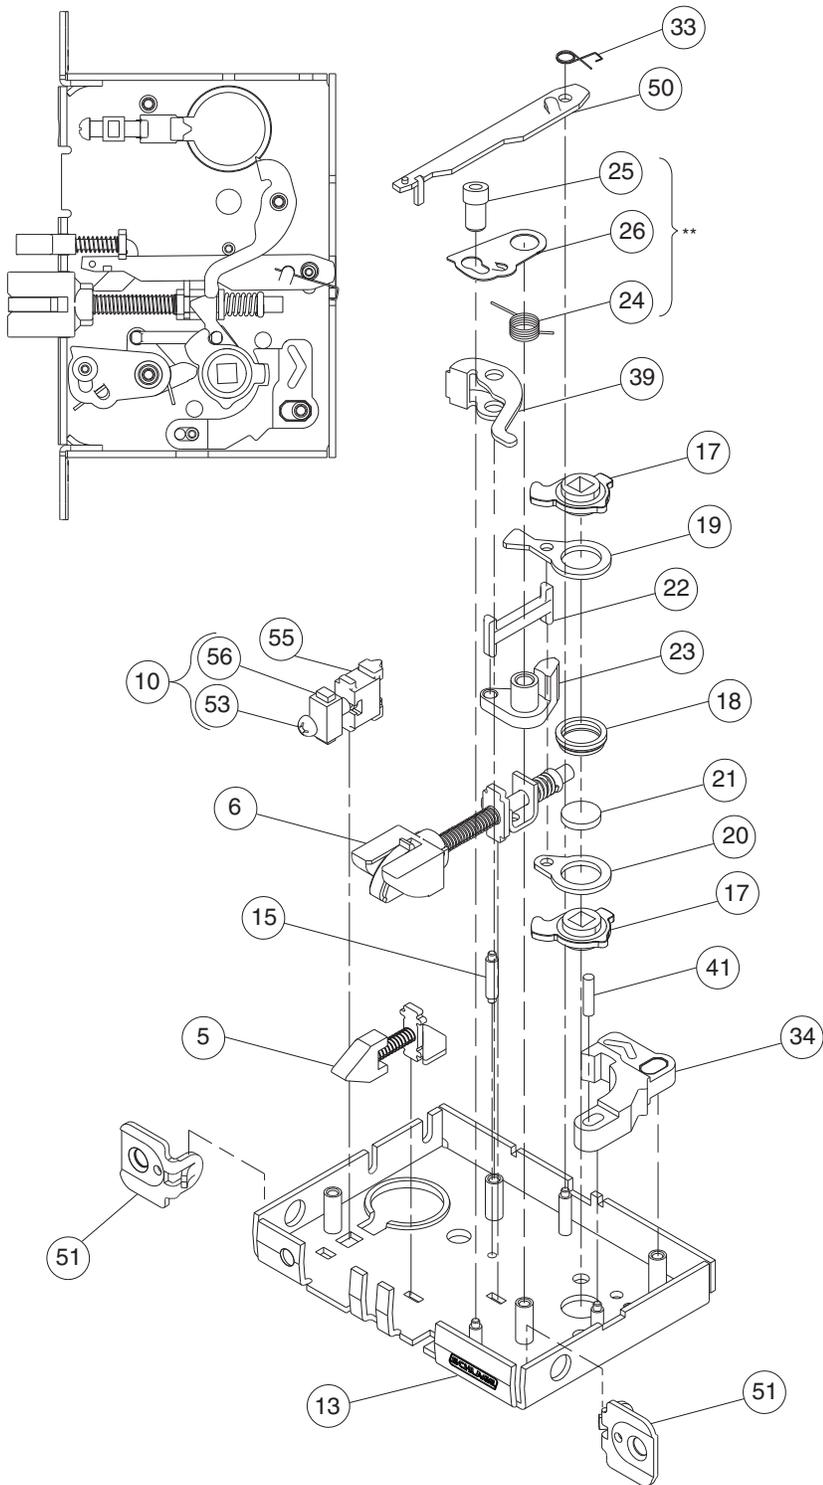

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
34	Locking Catch	L583-045
39	Transfer Lever	L583-051
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

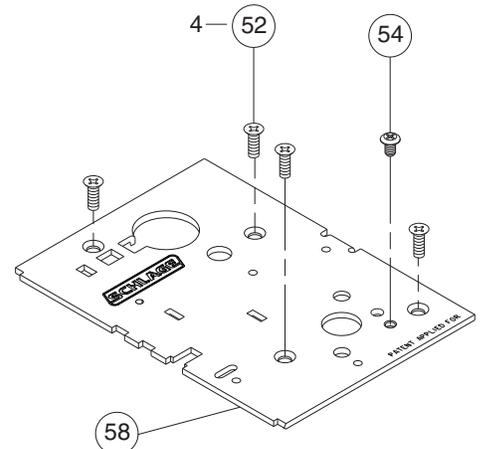


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

LV9080

Assembled Lock Case L283-173

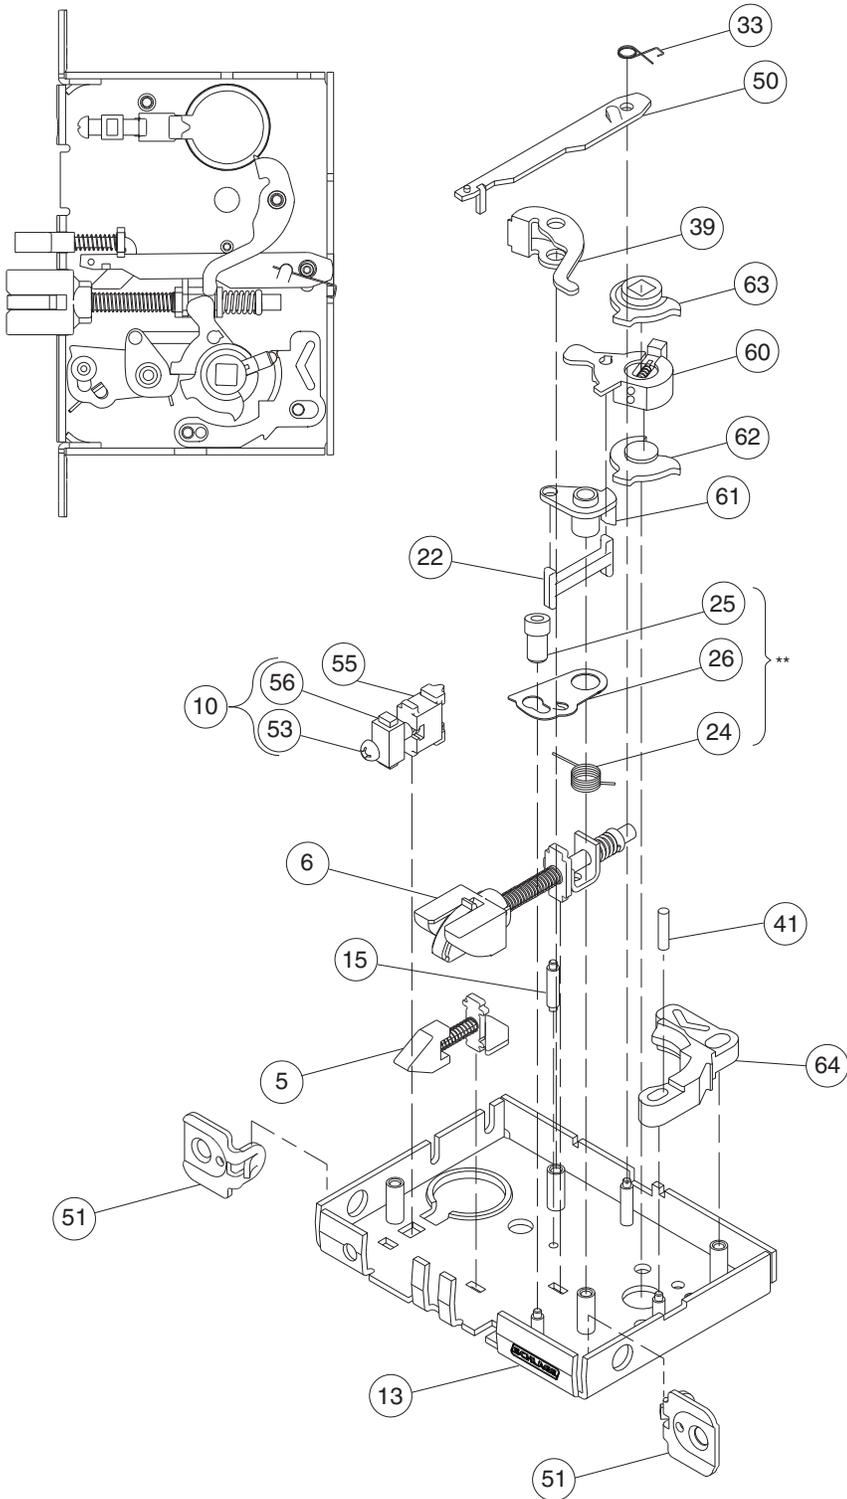


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

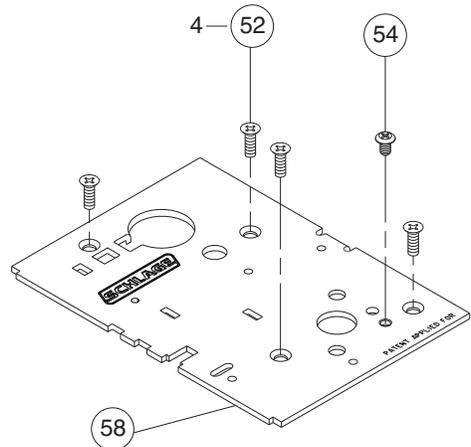


\*\* See "Assembly of lock case parts" on page 153.

# LM9380

## Assembled Lock Case L283-316

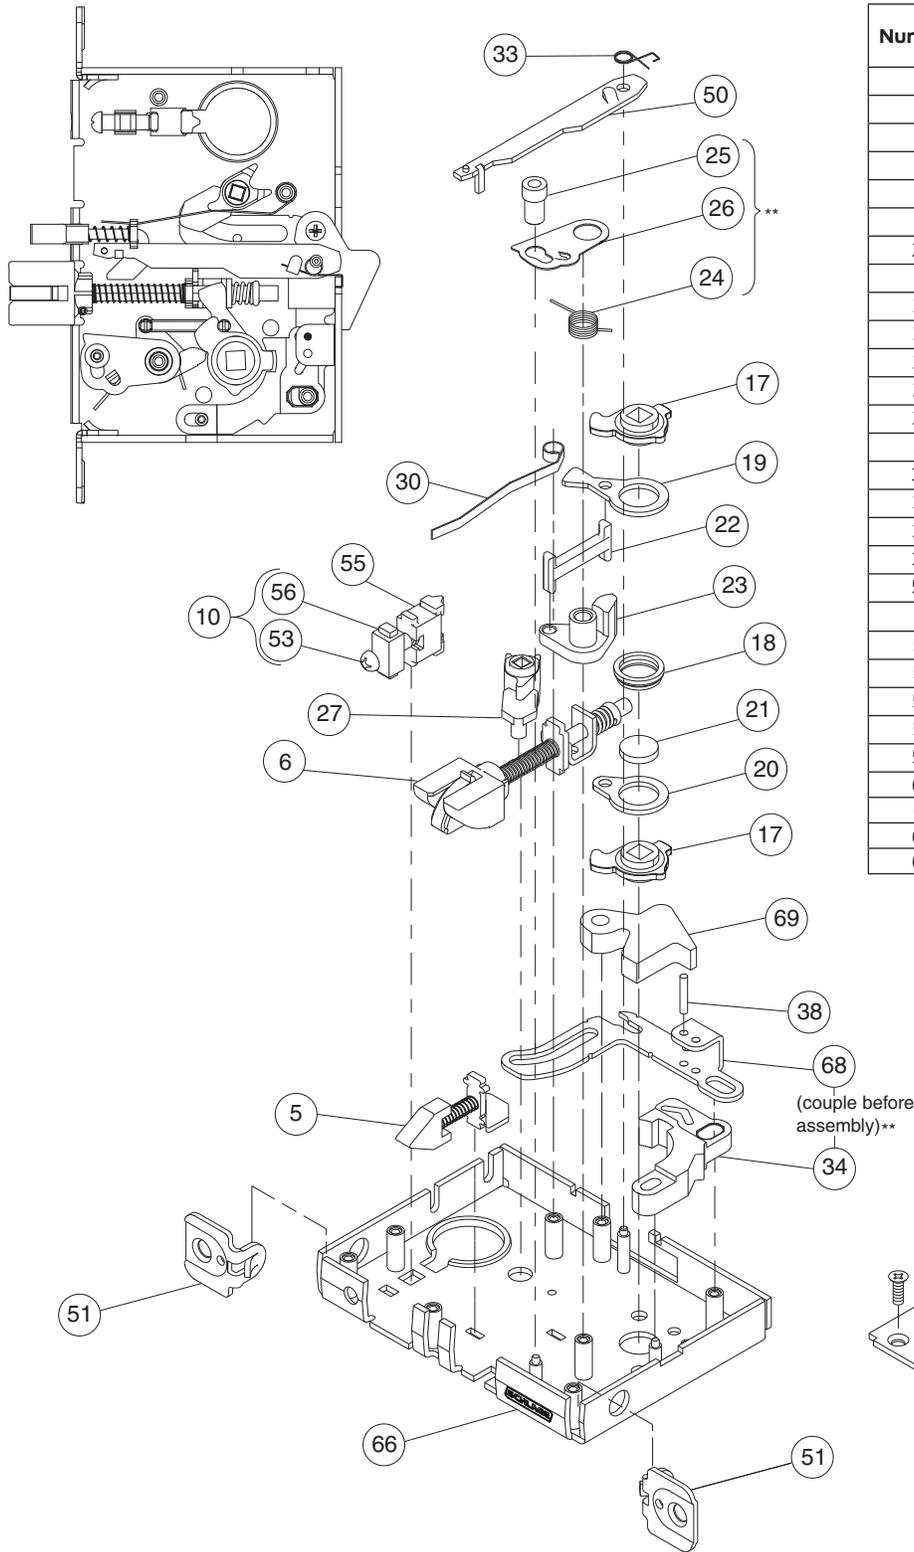


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-336
10	Cylinder Plate & Screw	L283-055
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
38	Link Pin	L583-050
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-747
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
66	LM9000 Lock Case	L283-312
67	LM9000 Lock Case Cover	L583-491
68	Locking Link	L583-505
69	Lifter	L583-506

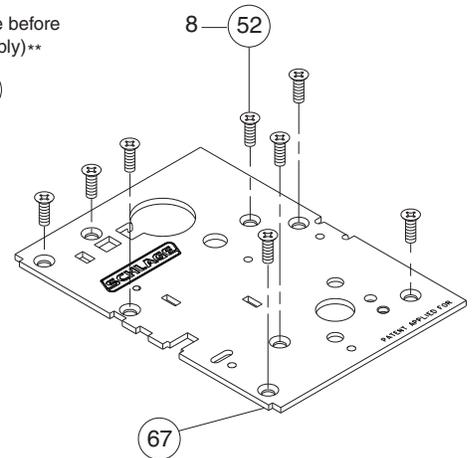


\*\* See "Assembly of lock case parts" on page 153.

# LMV9380

## Assembled Lock Case L283-317

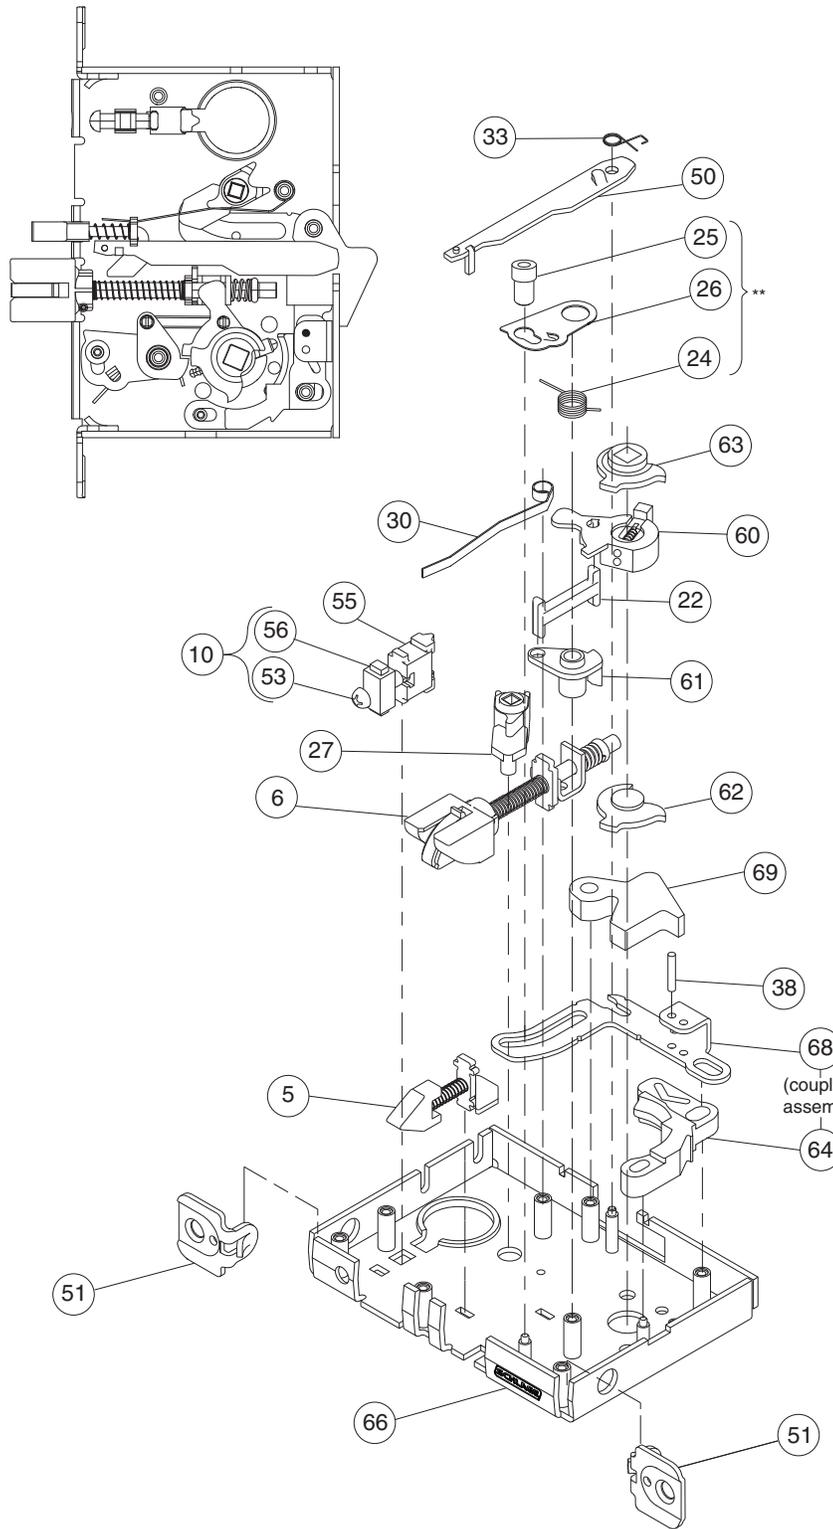

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-336
10	Cylinder Plate & Screw	L283-055
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
38	Link Pin	L583-050
50	Auxiliary Stop	L583-196
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-747
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345
66	LM9000 Lock Case	L283-312
67	LM9000 Lock Case Cover	L583-491
68	Locking Link	L583-505
69	Lifter	L583-506

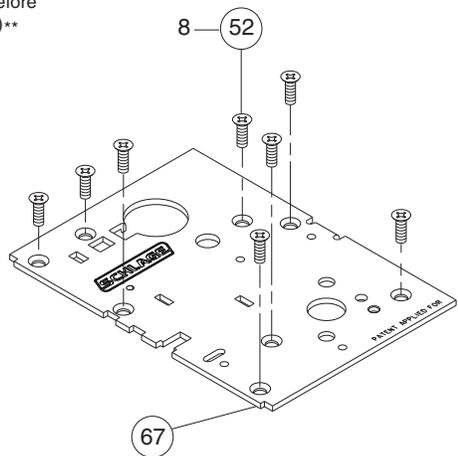


\*\* See "Assembly of lock case parts" on page 153.


# L9080EL, L9080EL-RX

Discontinued effective December 2014

## Assembled Lock Case L283-142

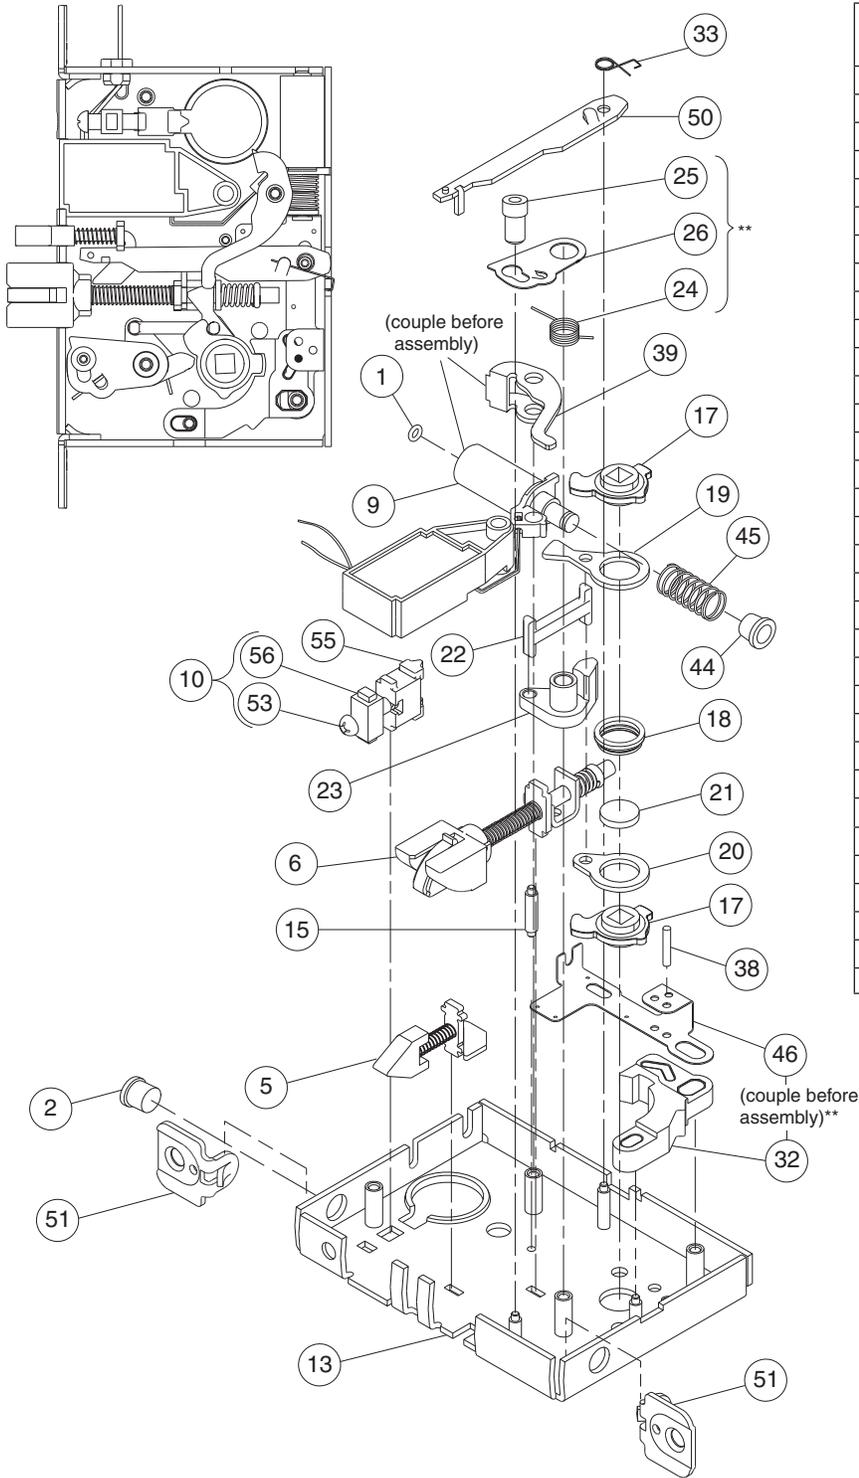

Number	Description	Part Number
1	Lock O-Ring	36-080
2	Lock Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch	L583-043
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

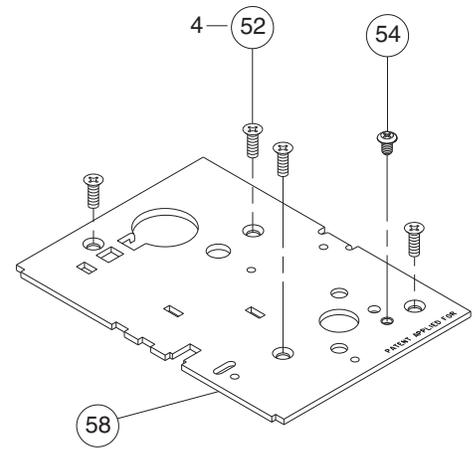


\*\* See "Assembly of lock case parts" on page 153.


# LV9080EL

Discontinued effective December 2014

## Assembled Lock Case L283-174

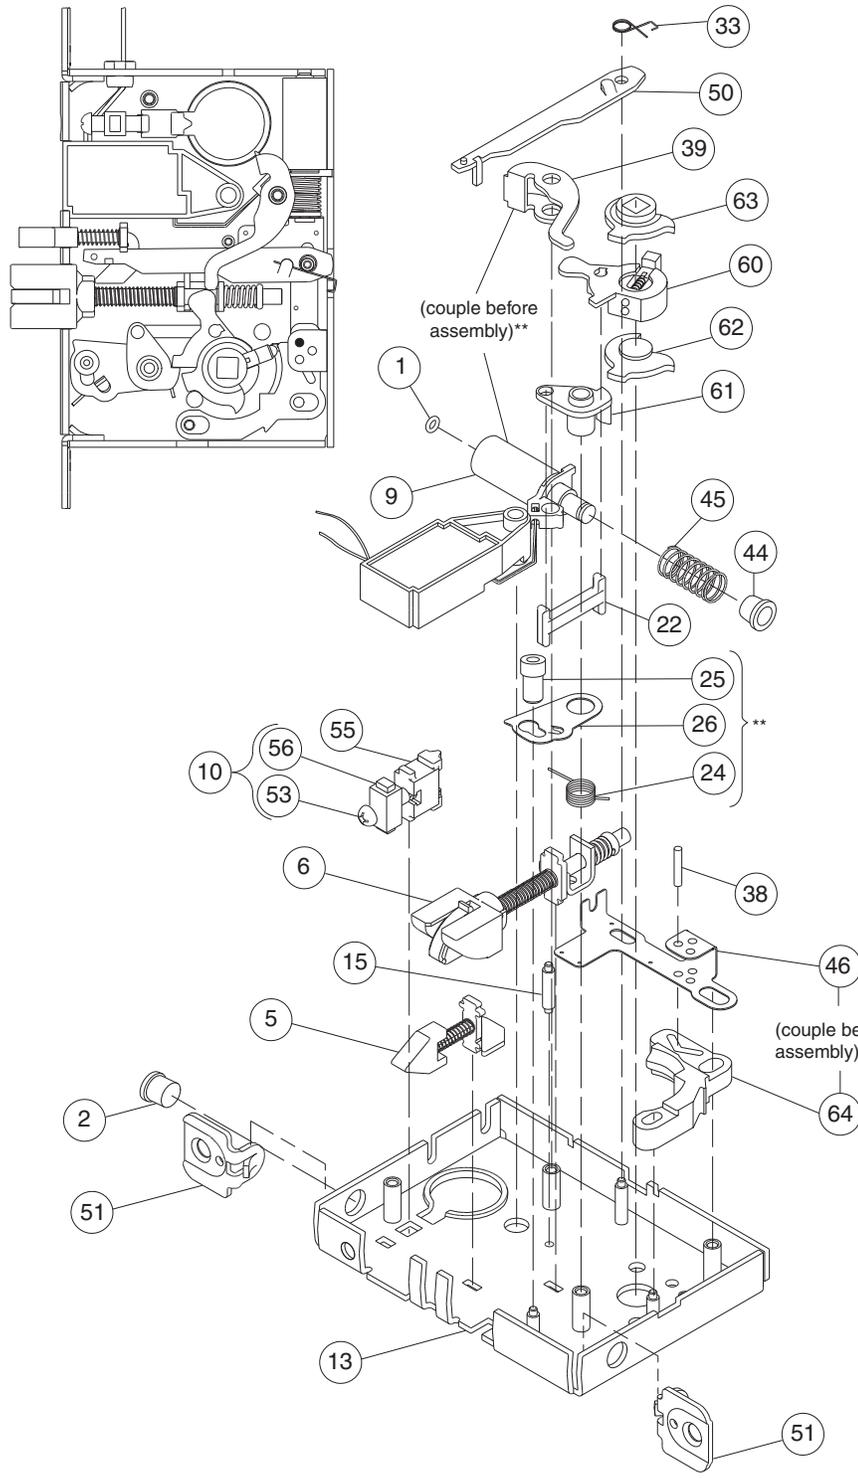

Number	Description	Part Number
1	EL Lock O-Ring	36-080
2	EL Lock Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

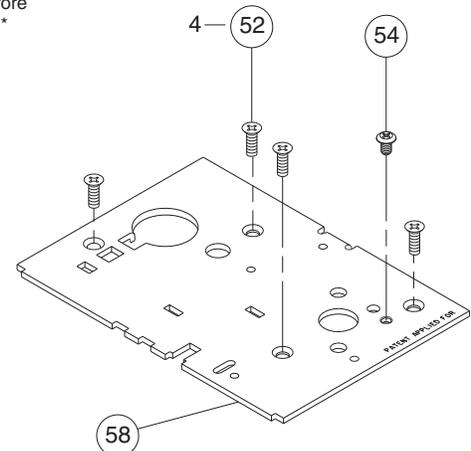


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies


L9080EU, L9080EU-RX

Discontinued effective December 2014

Assembled Lock Case L283-143

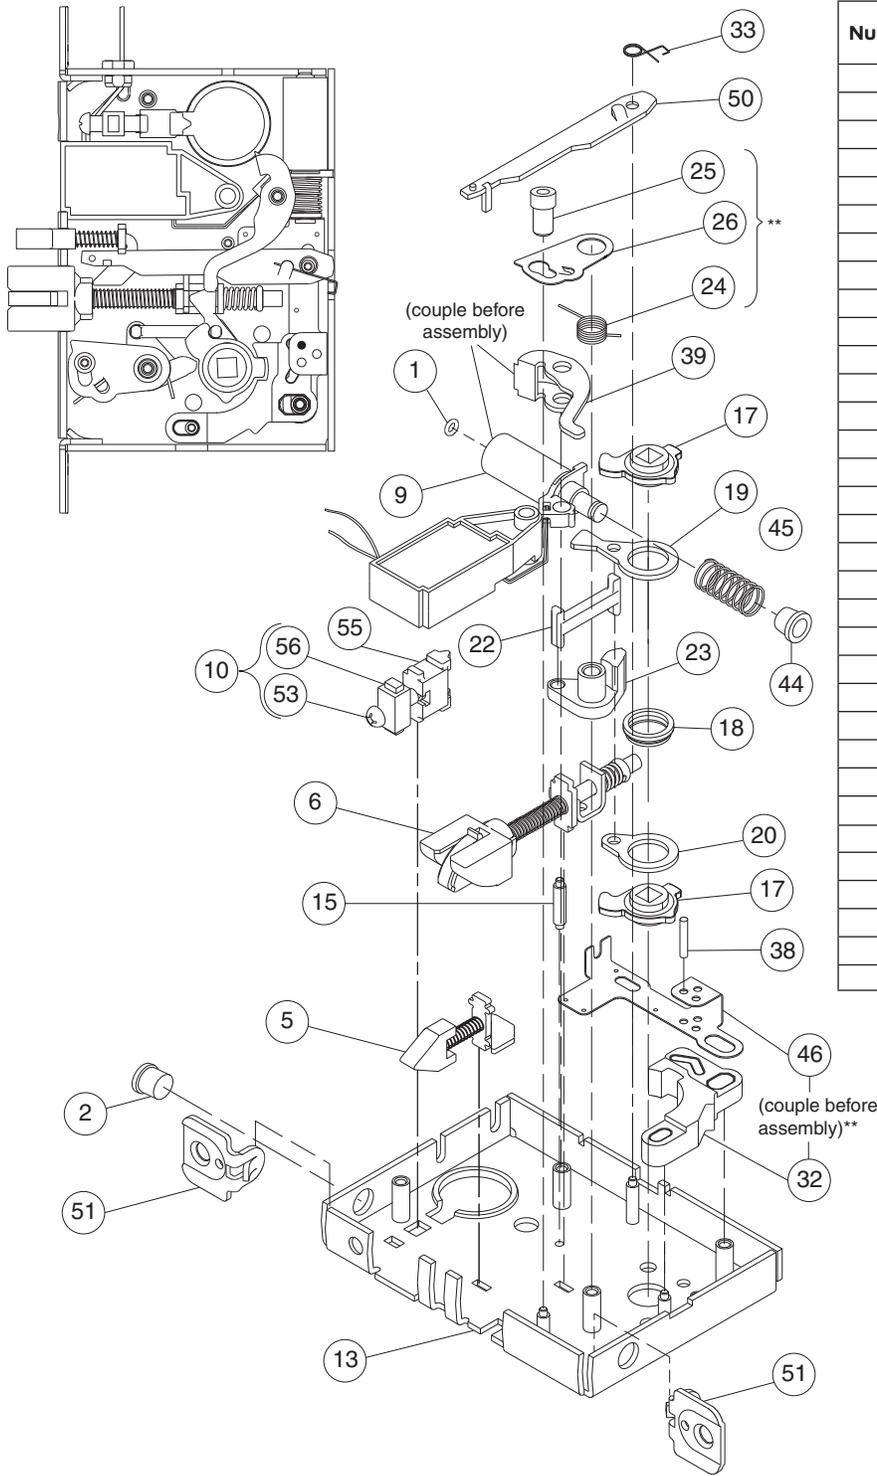

Number	Description	Part Number
1	O-Ring	36-080
2	Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch	L583-043
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

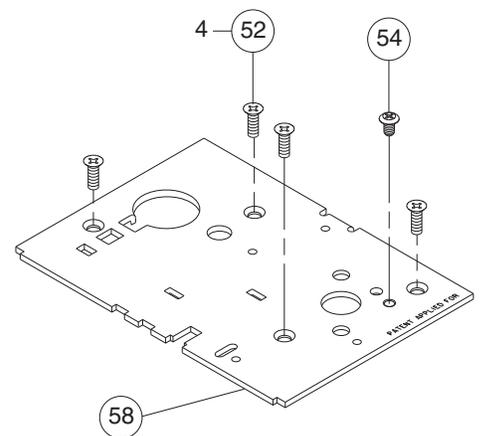


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

LV9080EU

Discontinued effective December 2014

Assembled Lock Case L283-175

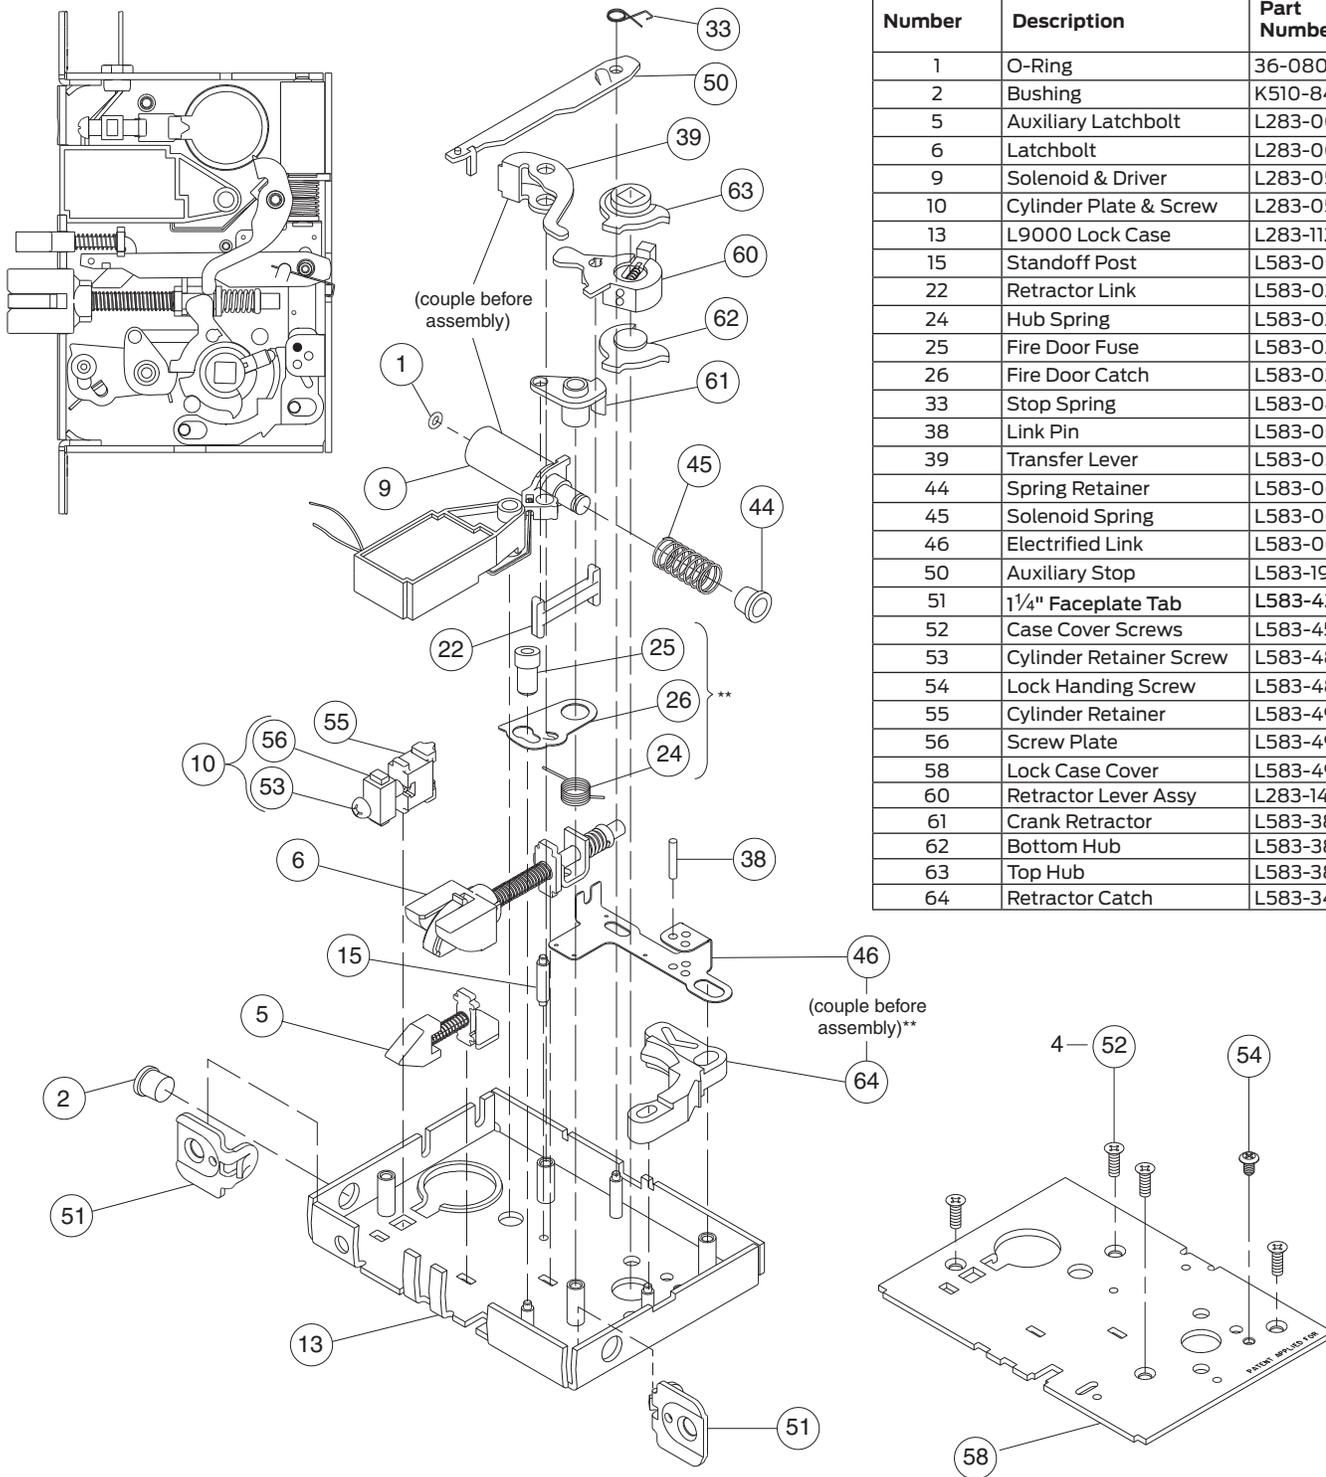


Number	Description	Part Number
1	O-Ring	36-080
2	Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345


\*\* See "Assembly of lock case parts" on page 153.

# L9082

## Assembled Lock Case L283-146

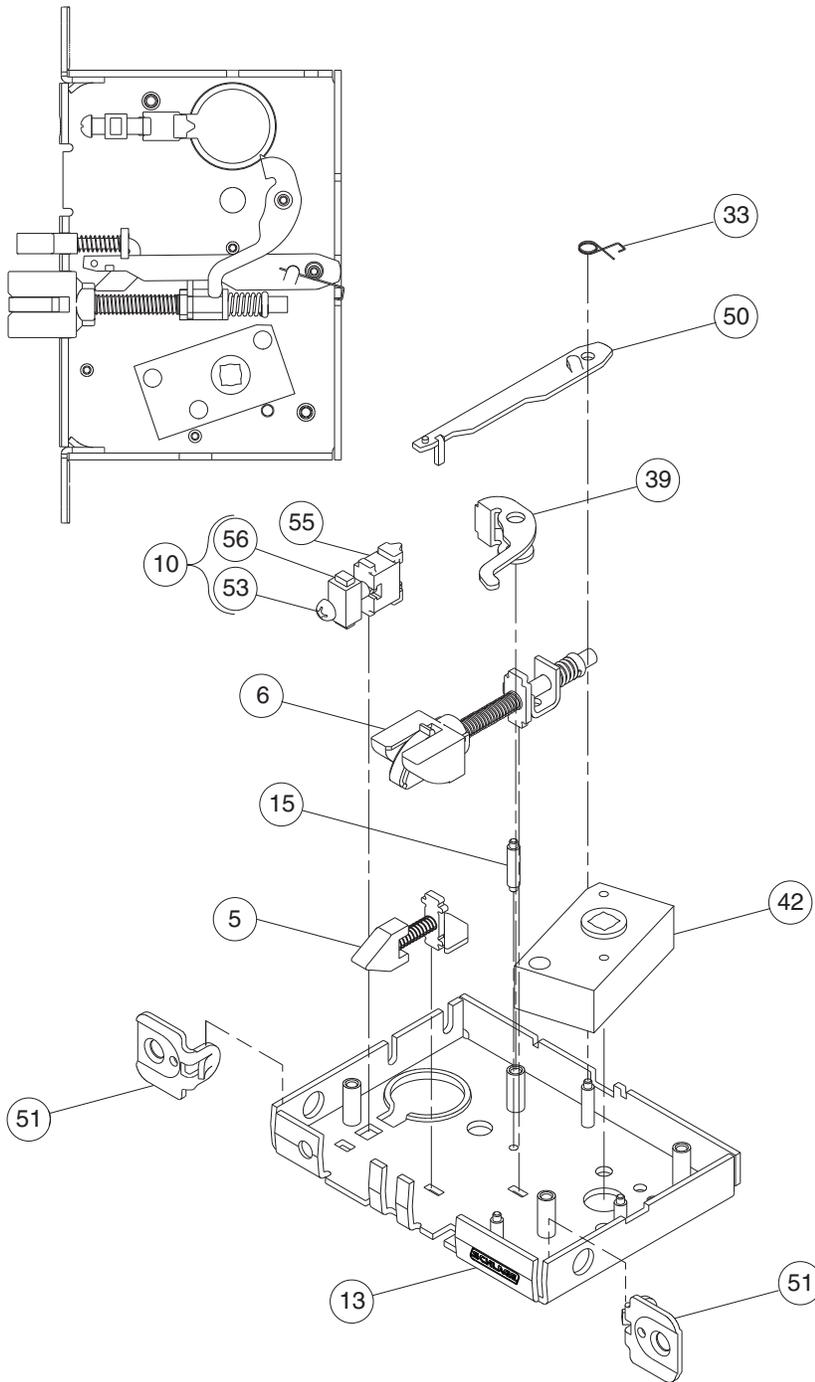


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
42	Spindle Anchor	L583-057
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

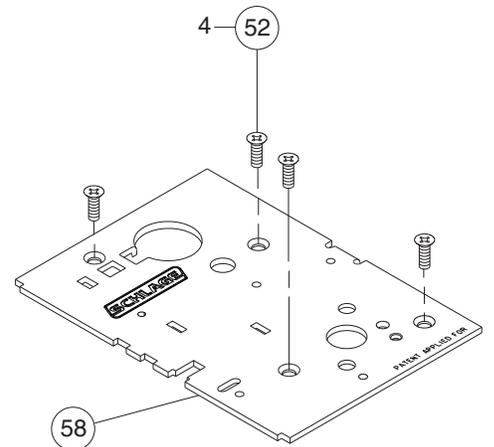


# LV9082

## Assembled Lock Case L283-182

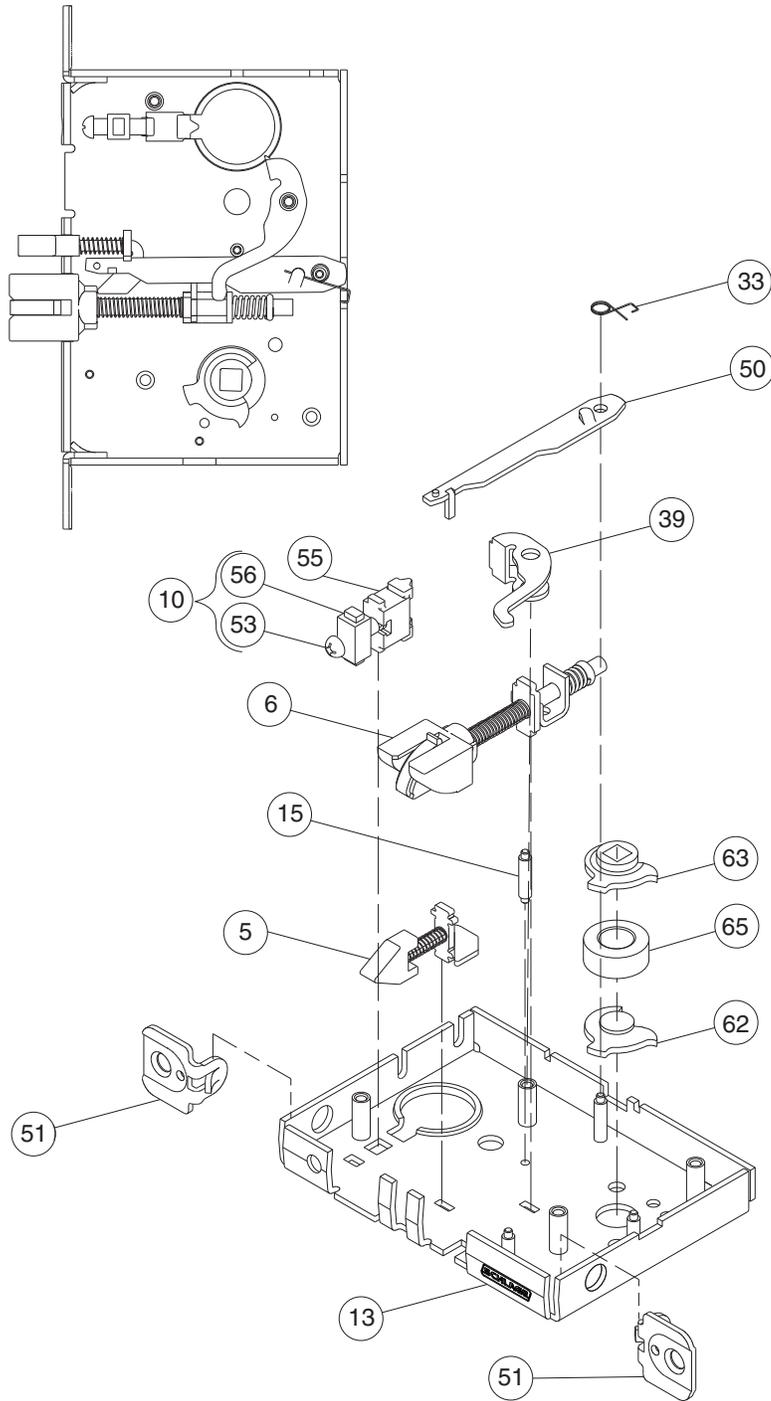

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
62	Bottom Hub	L583-386
63	Top Hub	L583-387
65	Spacer	L583-346

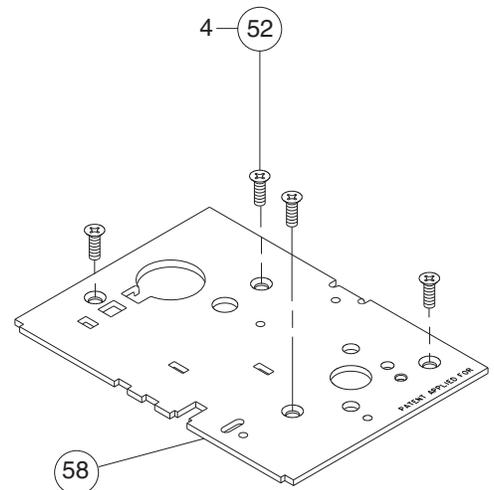


Lock case assemblies


L9082EL

Discontinued effective December 2014

Assembled Lock Case L283-085

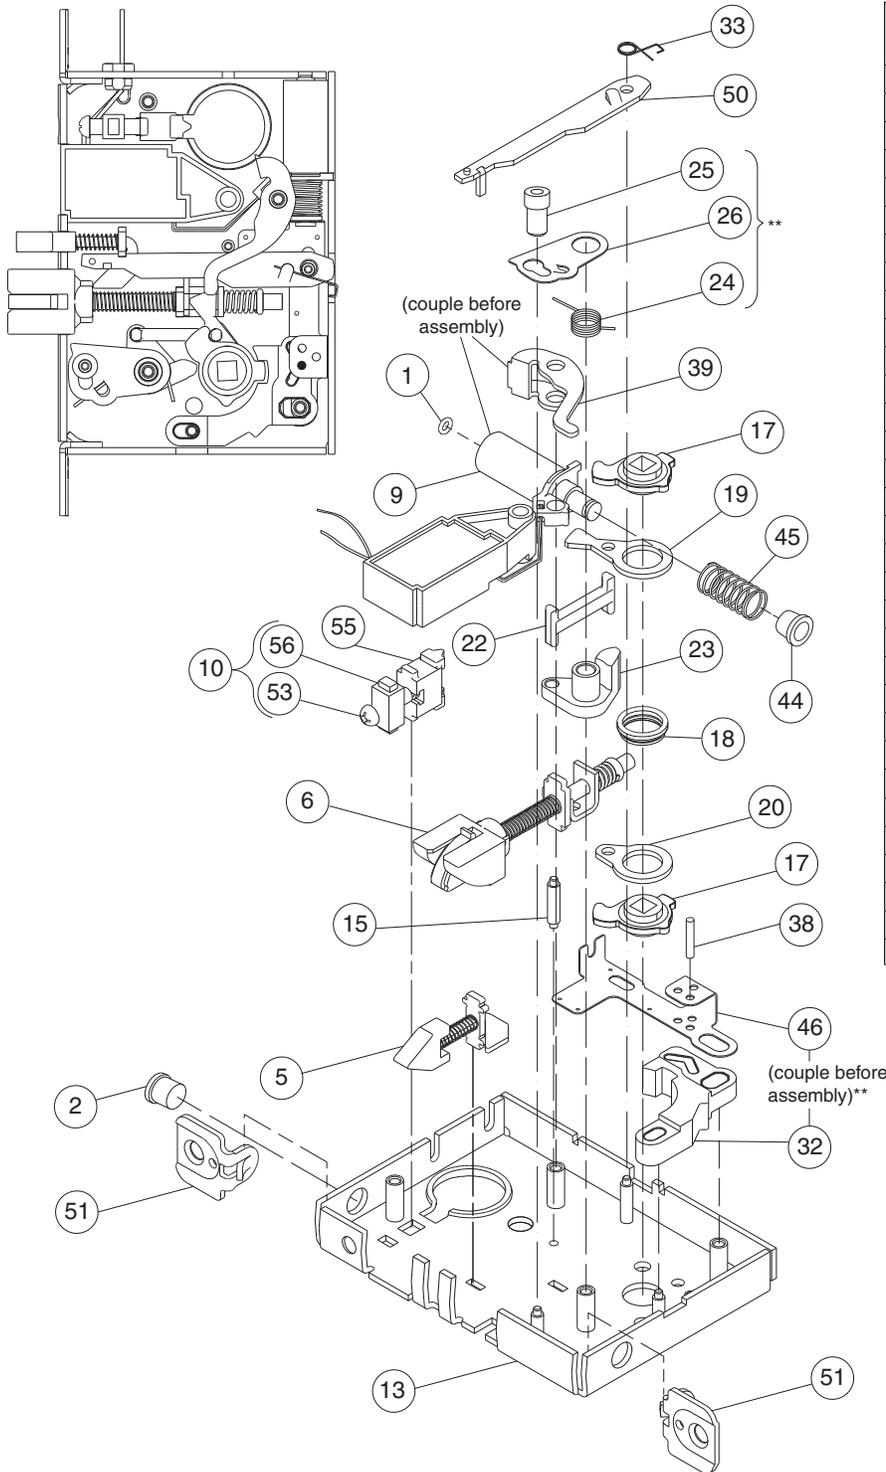

Number	Description	Part Number
1	O-Ring	36-080
2	Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch	L583-043
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	sL583-496

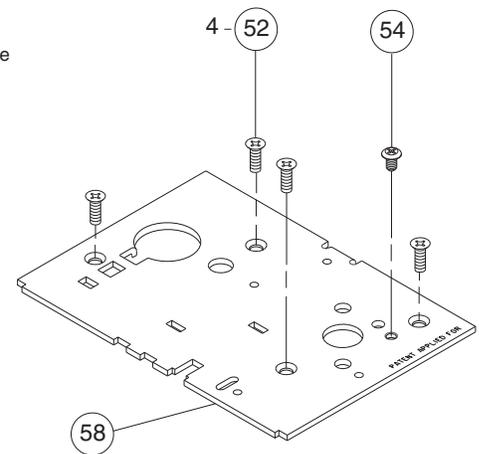


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies


L9082EU

Discontinued effective December 2014

Assembled Lock Case L283-086

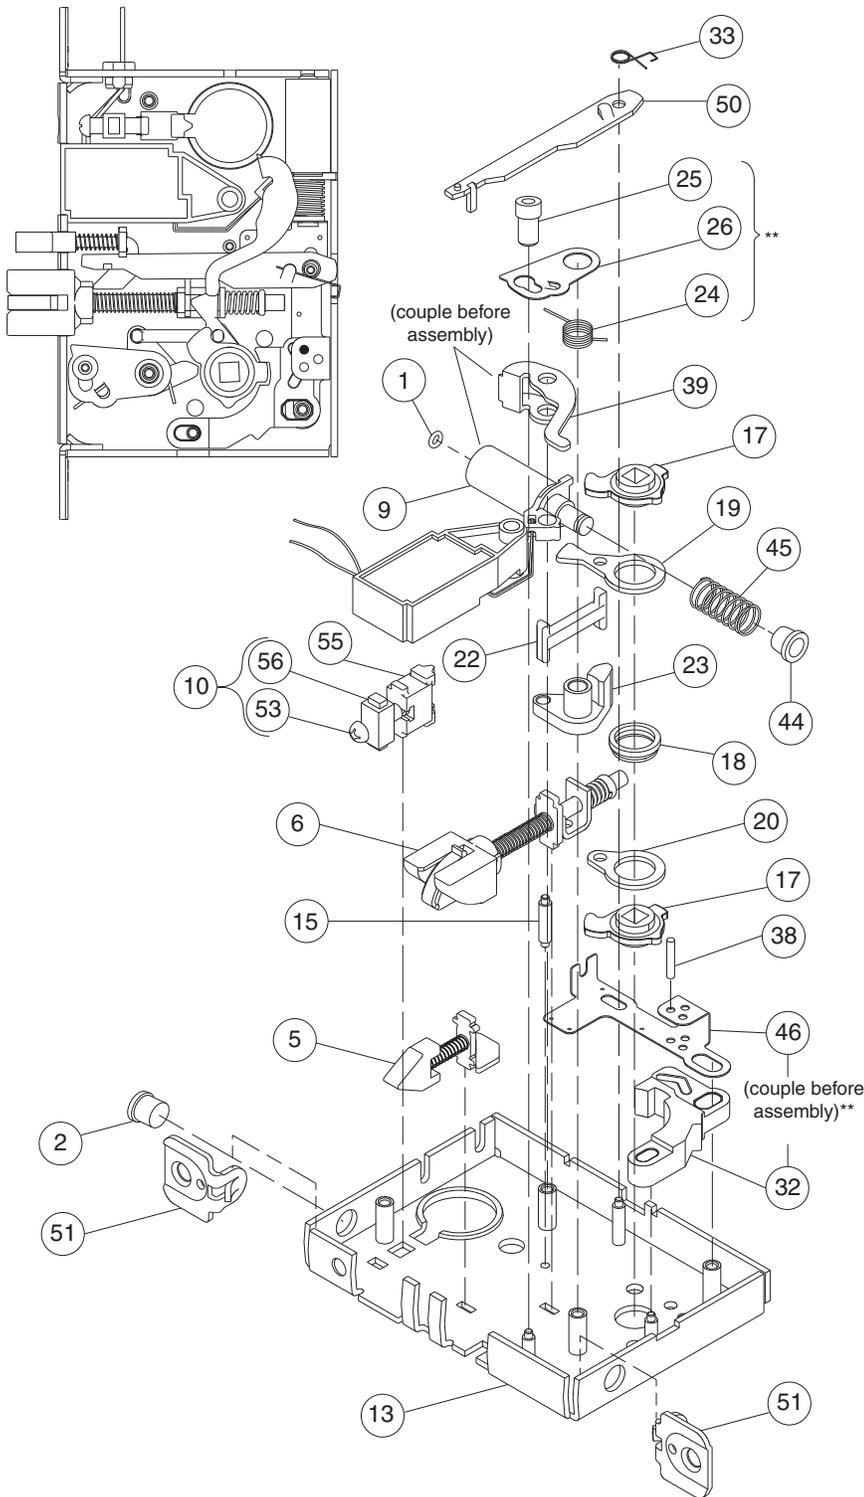

Number	Description	Part Number
1	O-Ring	36-080
2	Bushing	K510-842
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
9	Solenoid & Driver	L283-053
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
15	Standoff Post	L583-004
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch	L583-043
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
44	Spring Retainer	L583-063
45	Solenoid Spring	L583-064
46	Electrified Link	L583-065
50	Auxiliary Stop	L583-196
51	1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

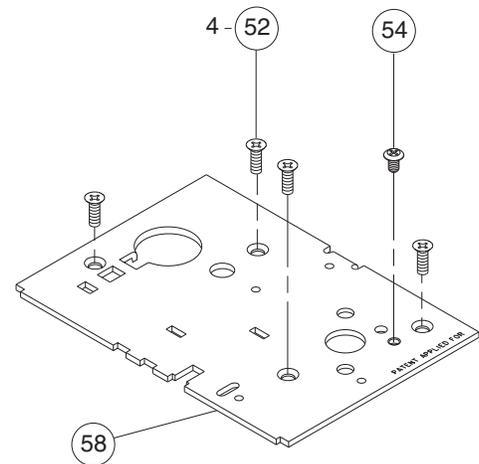


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies


L9090EL/EU, L9092EL/EU, L9094EL/EU

Assembled Lock Case Numbers:

L283-347 = EL/EU; L283-392 = EL/EU with RX; L283-393 = EL/EU with LX; L283-394 = EL/EU with LX and RX

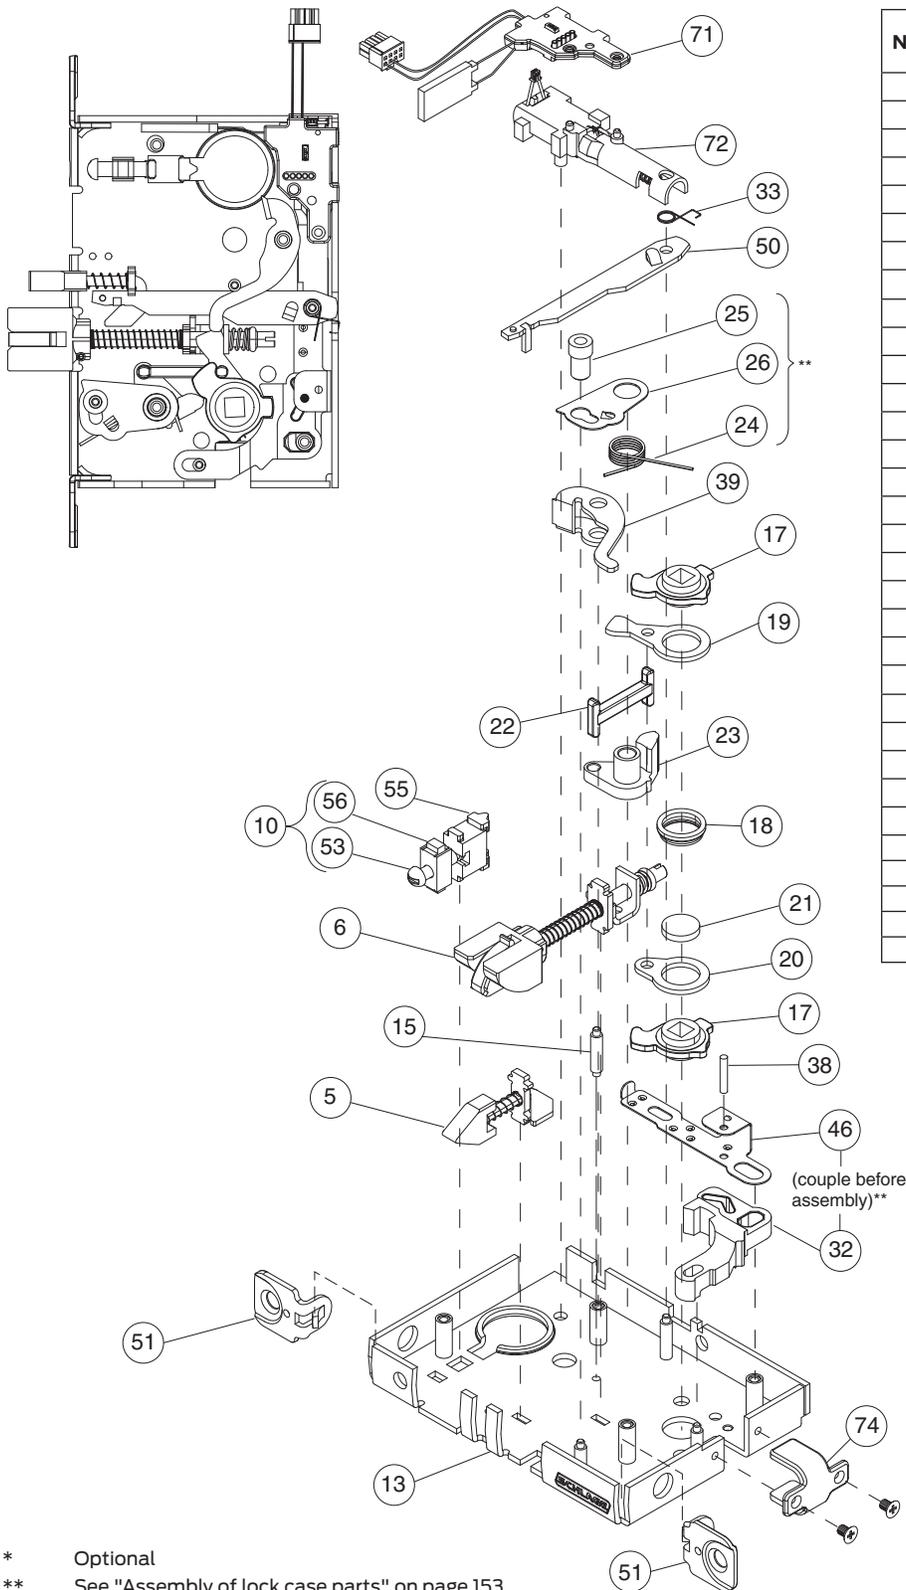

Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L909X Lock Case	L283-673
15	Standoff Post	L583-004
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch, Electrified	24302960
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
46	Electrified Link	24253338
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
71	PCB Overmold	L283-344
72	Motor Assembly	L283-680
73	RX Switch Assembly *	L283-452
74	Dust Cover ***	L583-749

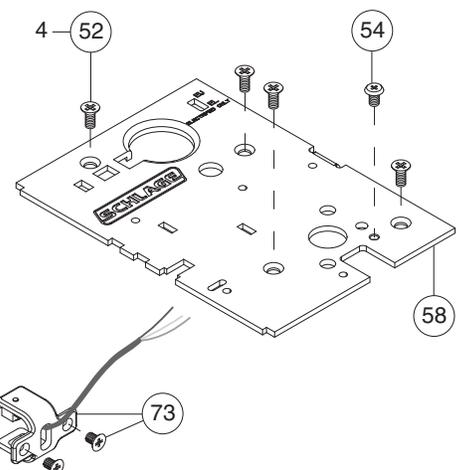


\* Optional  
 \*\* See "Assembly of lock case parts" on page 153.  
 \*\*\* Not sold separately.


# L9091EL/EU, L9093EL/EU, L9095 EL/EU

**Assembled Lock Case Numbers:**

L283-395 = EL/EU; L283-396 = EL/EU with RX; L283-397 = EL/EU with LX; L283-398 = EL/EU with LX and RX

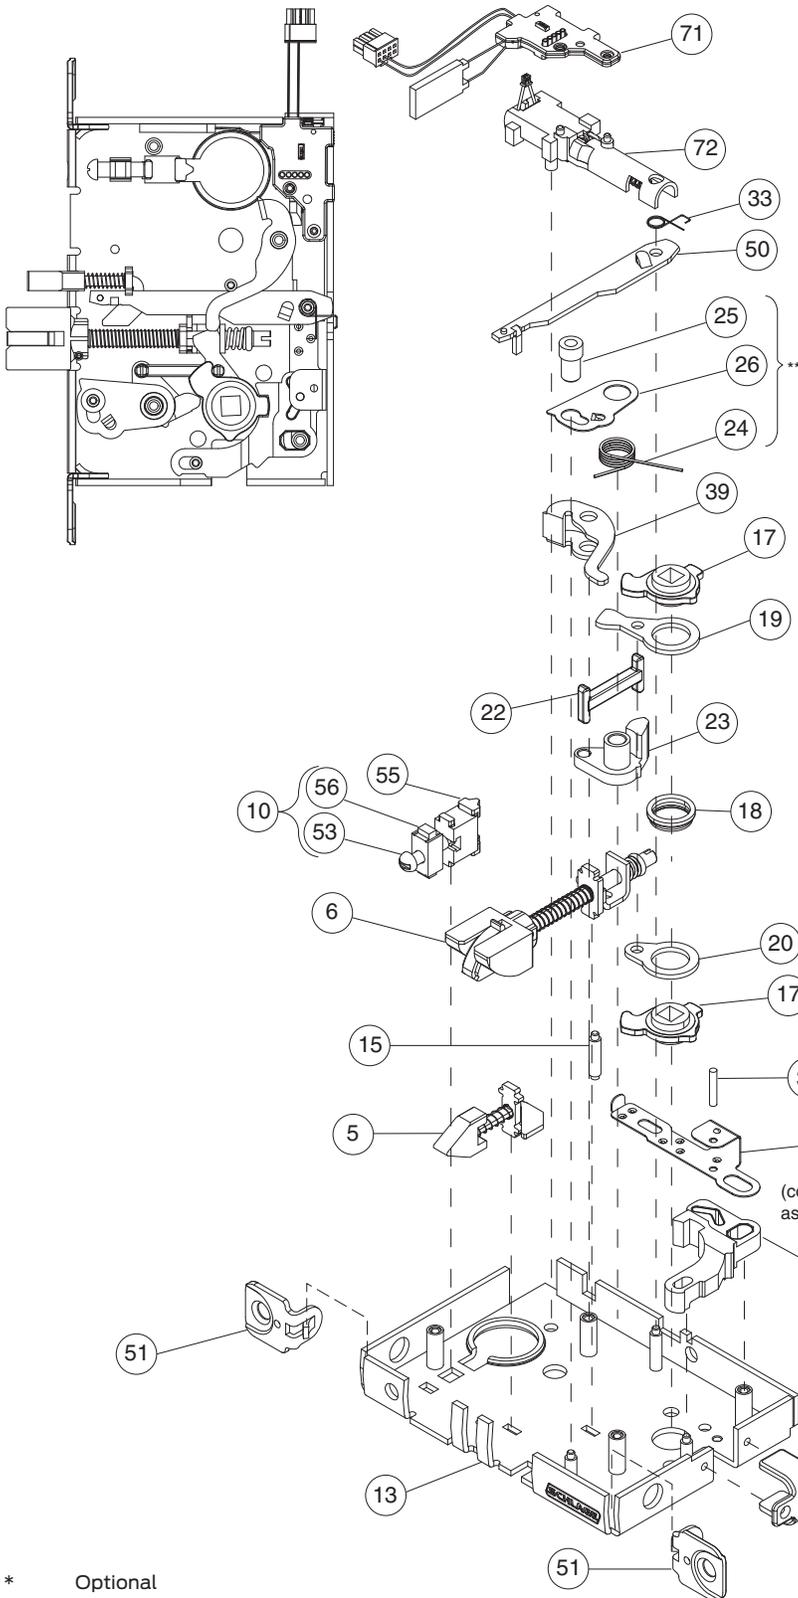


Number	Description	Part Number
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L909X Lock Case	L283-673
15	Standoff Post	L583-004
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
32	Locking Catch, Electrified	24302960
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
46	Electrified Link	24253338
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
71	PCB Overmold	L283-344
72	Motor Assembly	L283-680
73	RX Switch Assembly *	L283-452
74	Dust Cover ***	L583-749

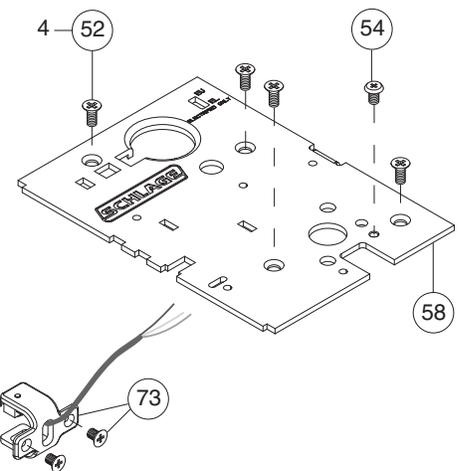


\* Optional  
 \*\* See "Assembly of lock case parts" on page 153.  
 \*\*\* Not sold separately.

# L9492EL/EU, L9494 EL/EU

## Assembled Lock Case L283-467

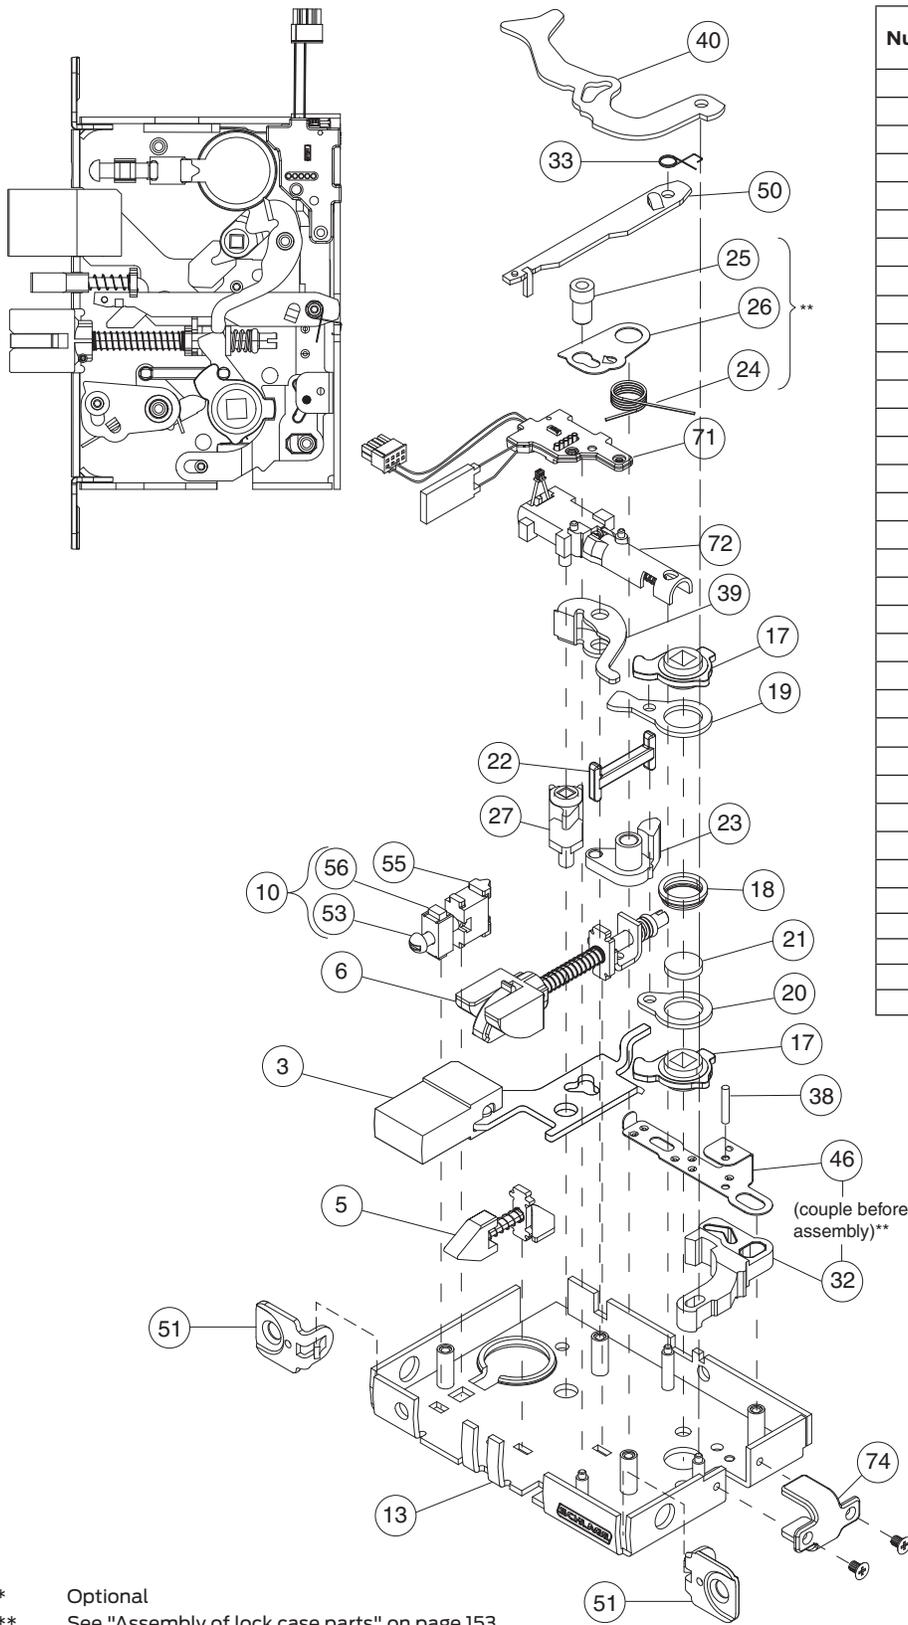


Number	Description	Part Number
3	Deadbolt Assembly	L283-676
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L909X Lock Case	L283-673
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L283-029
32	Locking Catch, Electrified	24302960
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous retractor	L583-053
46	Electrified Link	24253338
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
71	PCB Overmold	L283-344
72	Motor Assembly	L283-680
73	RX Switch Assembly *	L283-452
74	Dust Cover ***	L583-749

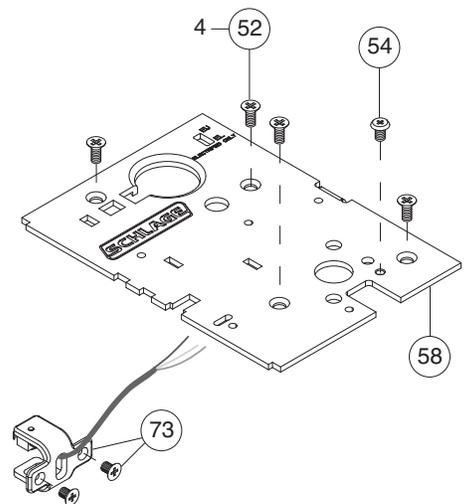

\* Optional  
 \*\* See "Assembly of lock case parts" on page 153.  
 \*\*\* Not sold separately.

# L9493 EL/EU, L9495 EL/EU

## Assembled Lock Case L283-468

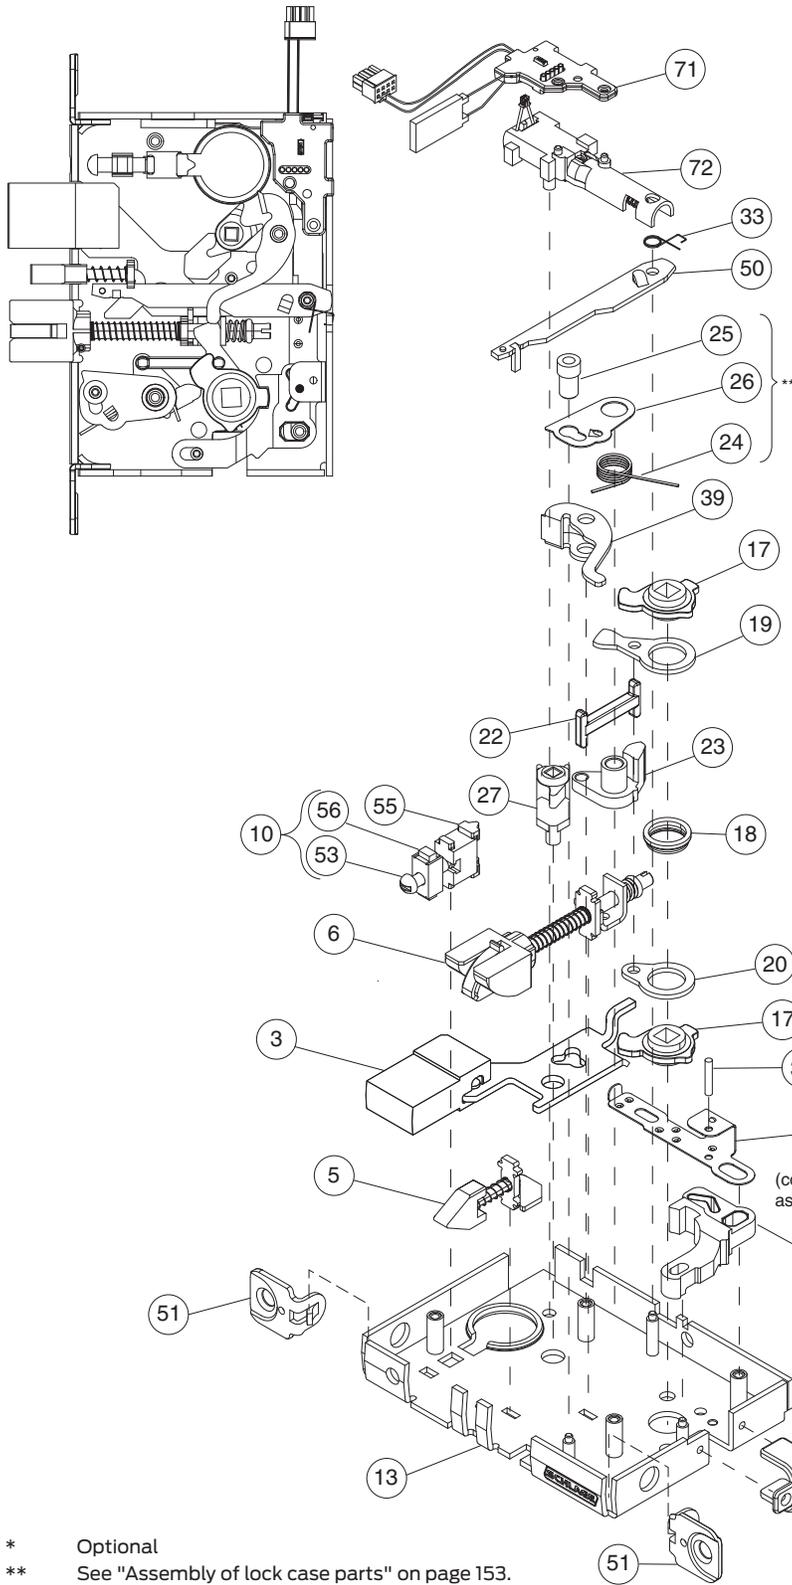


Number	Description	Part Number
3	Deadbolt Assembly	L283-676
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L909X Lock Case	L283-673
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L283-029
32	Locking Catch, Electrified	24302960
33	Stop Spring	L583-044
38	Link Pin	L583-050
39	Transfer Lever	L583-051
46	Electrified Link	24253338
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
71	PCB Overmold	L283-344
72	Motor Assembly	L283-680
73	RX Switch Assembly *	L283-452
74	Dust Cover ***	L583-749

\* Optional  
 \*\* See "Assembly of lock case parts" on page 153.  
 \*\*\* Not sold separately.


Lock case assemblies

L9110 x XL11-741

Assembled Lock Case XL11-741

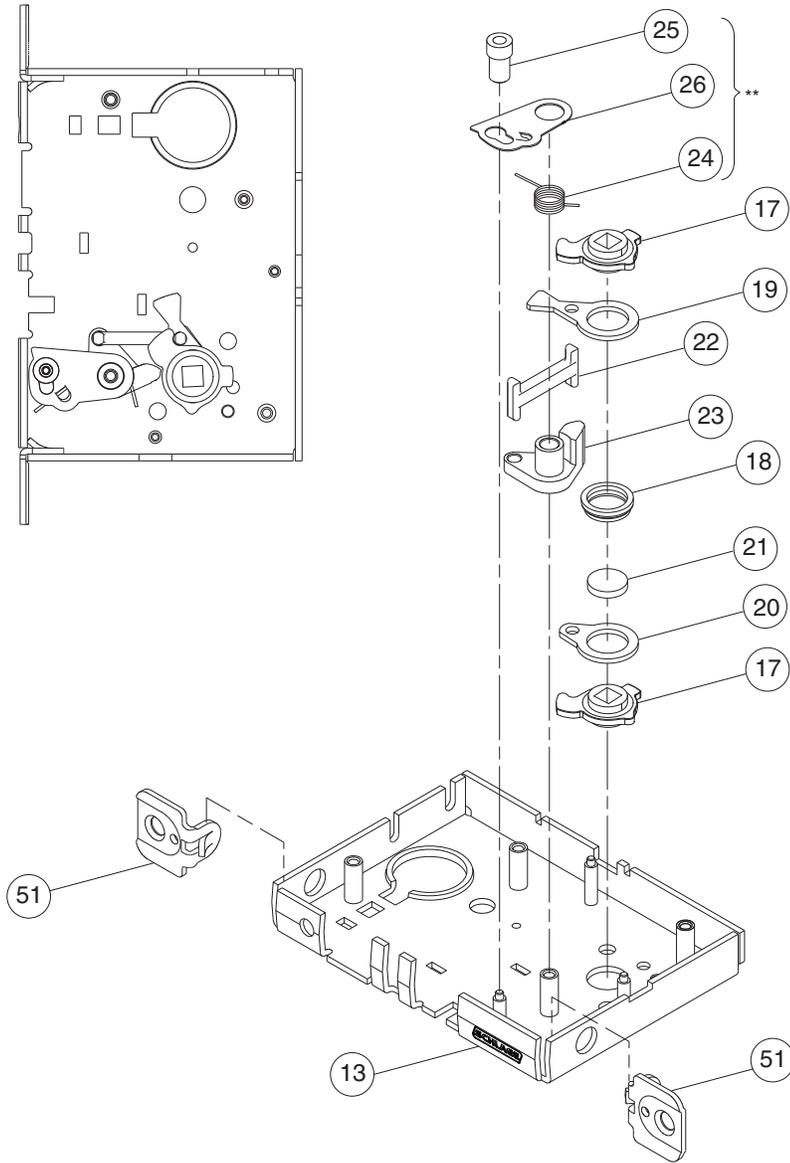

Number	Description	Part Number
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
58	Lock Case Cover	L583-496

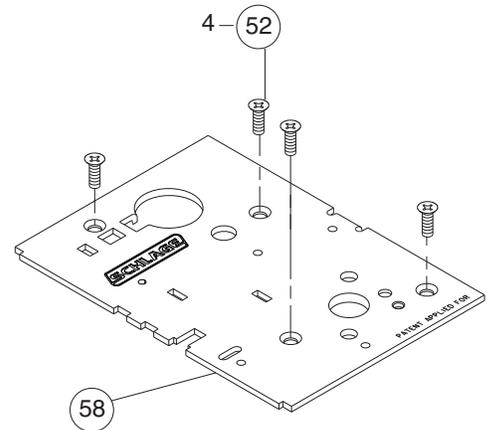


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

L9175

Assembled Lock Case L283-144

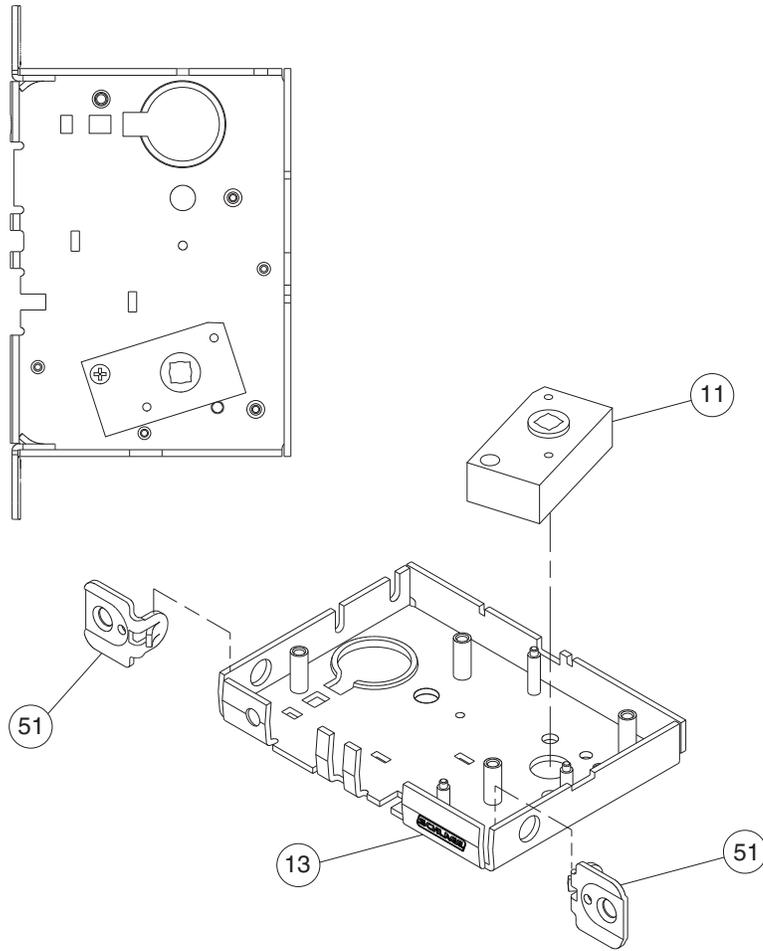

Number	Description	Part Number
11	Spindle Anchor Single	L583-468
13	L9000 Lock Case	L283-112
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
58	Lock Case Cover	L583-496

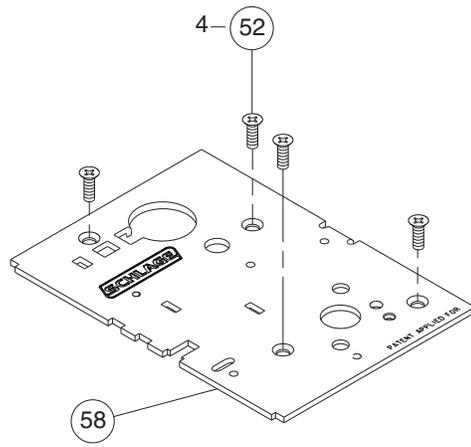


Lock case assemblies

L9176

Assembled Lock Case L283-145


Number	Description	Part Number
13	L9000 Lock Case	L283-112
42	Spindle Anchor	L583-057
51	1¼" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
58	Lock Case Cover	L583-496

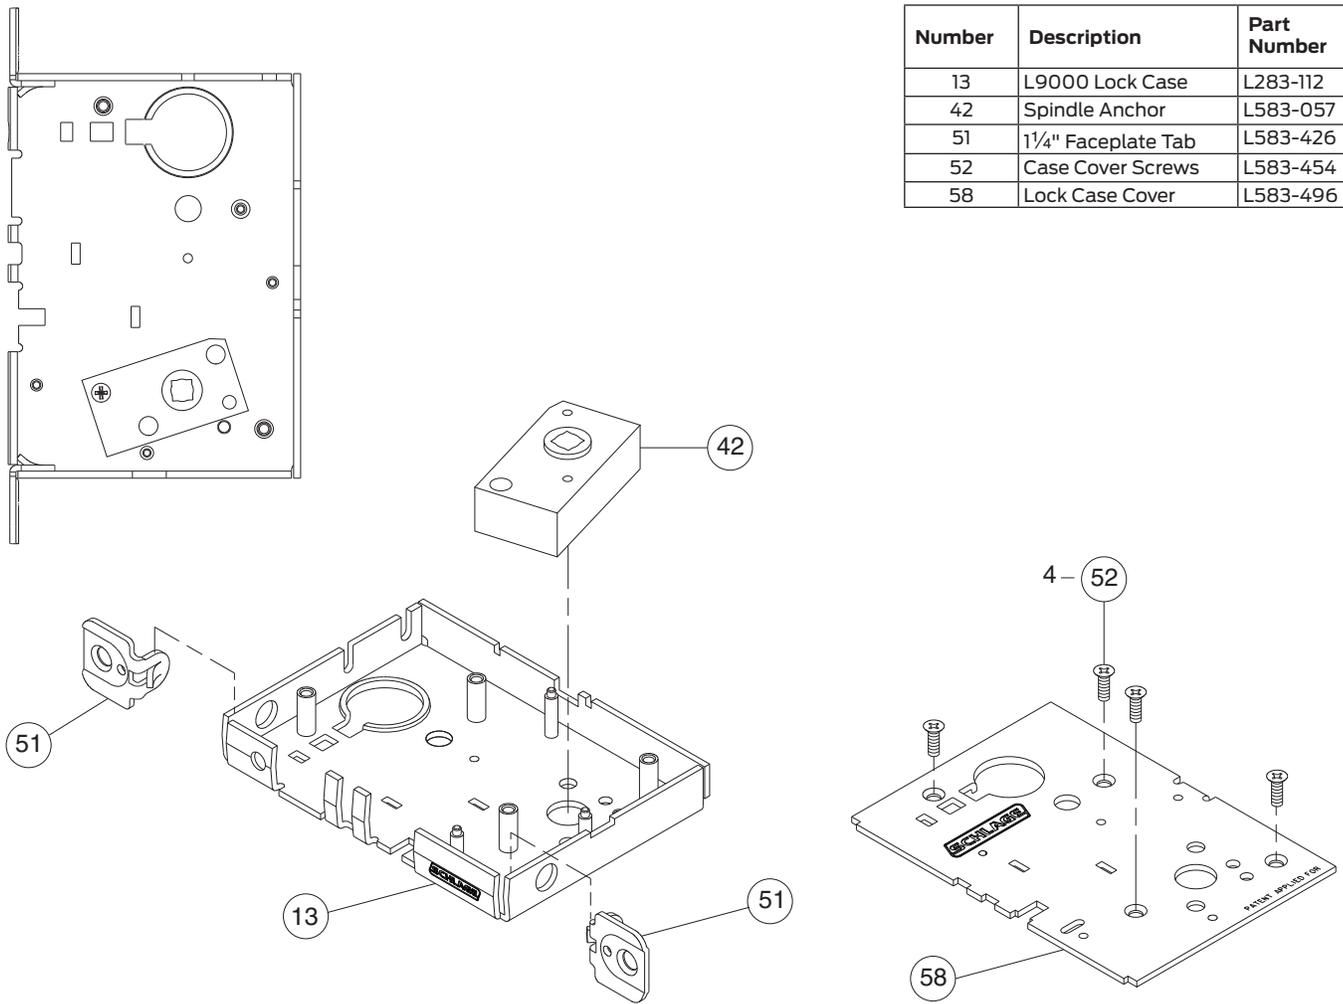


# Lock case assemblies

## L9440, L9444

### Assembled Lock Case L283-062

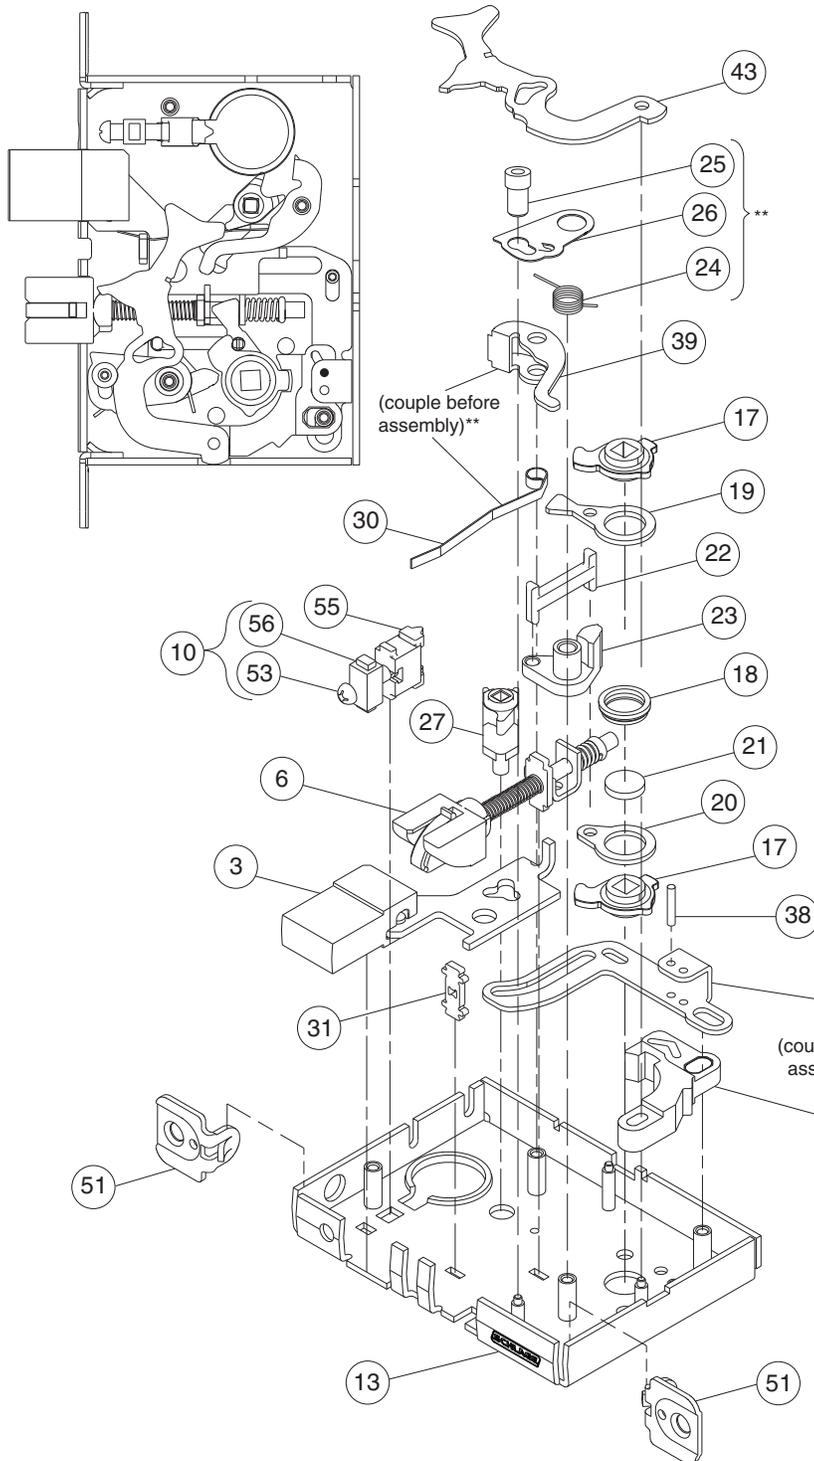

Number	Description	Part Number
3	Deadbolt	L283-003
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
43	Simultaneous Retractor	L583-058
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

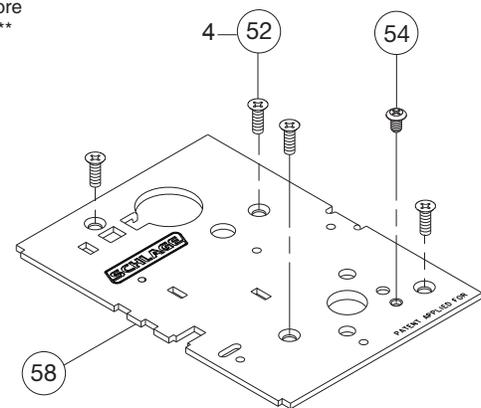


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

LV9440, LV9444

Assembled Lock Case L283-181

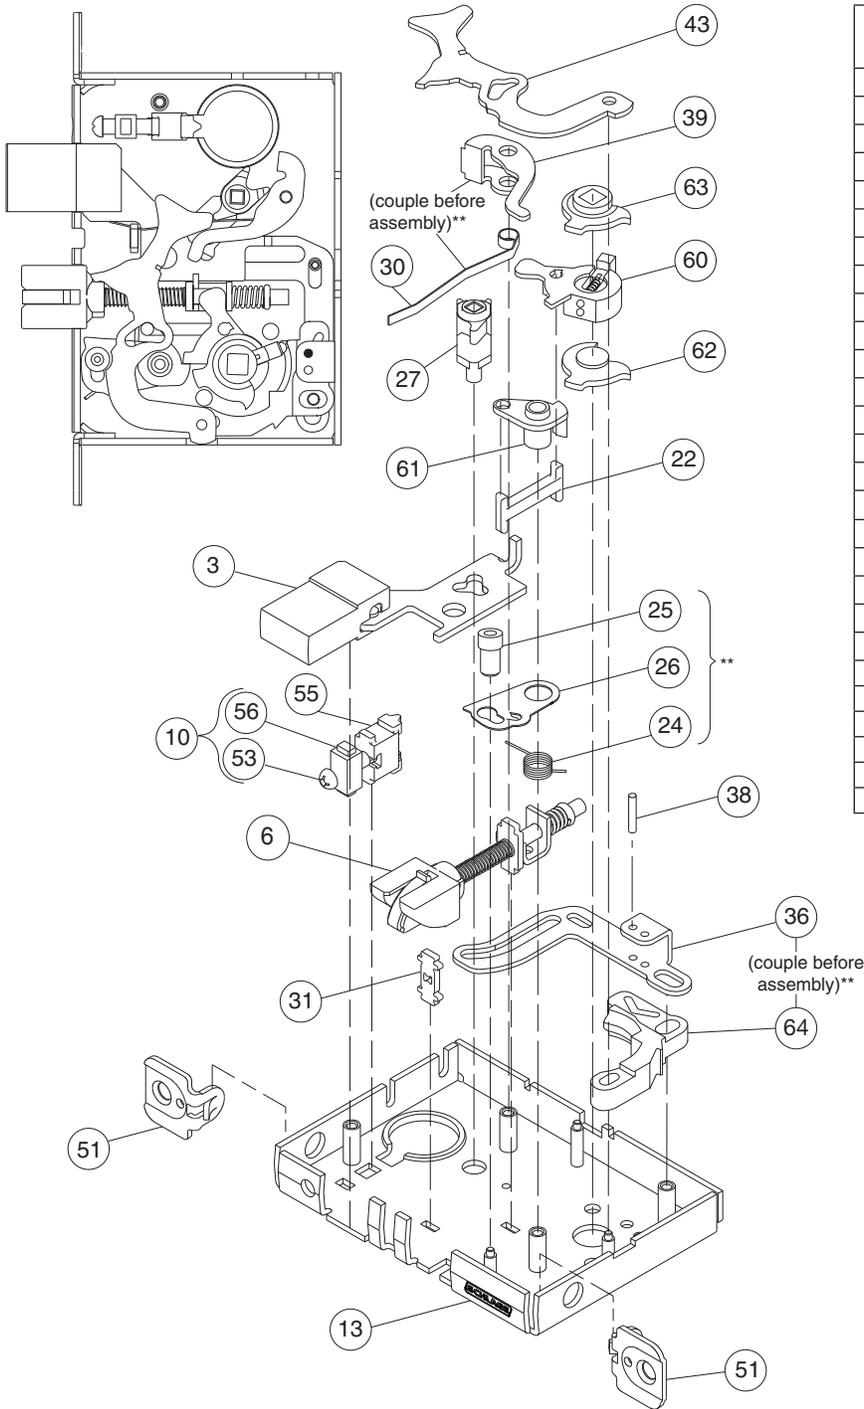


Number	Description	Part Number
3	Deadbolt	L283-003
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
43	Simultaneous Retractor	L583-058
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897

\*\* See "Assembly of lock case parts" on page 153.

# L9453

## Assembled Lock Case L283-137

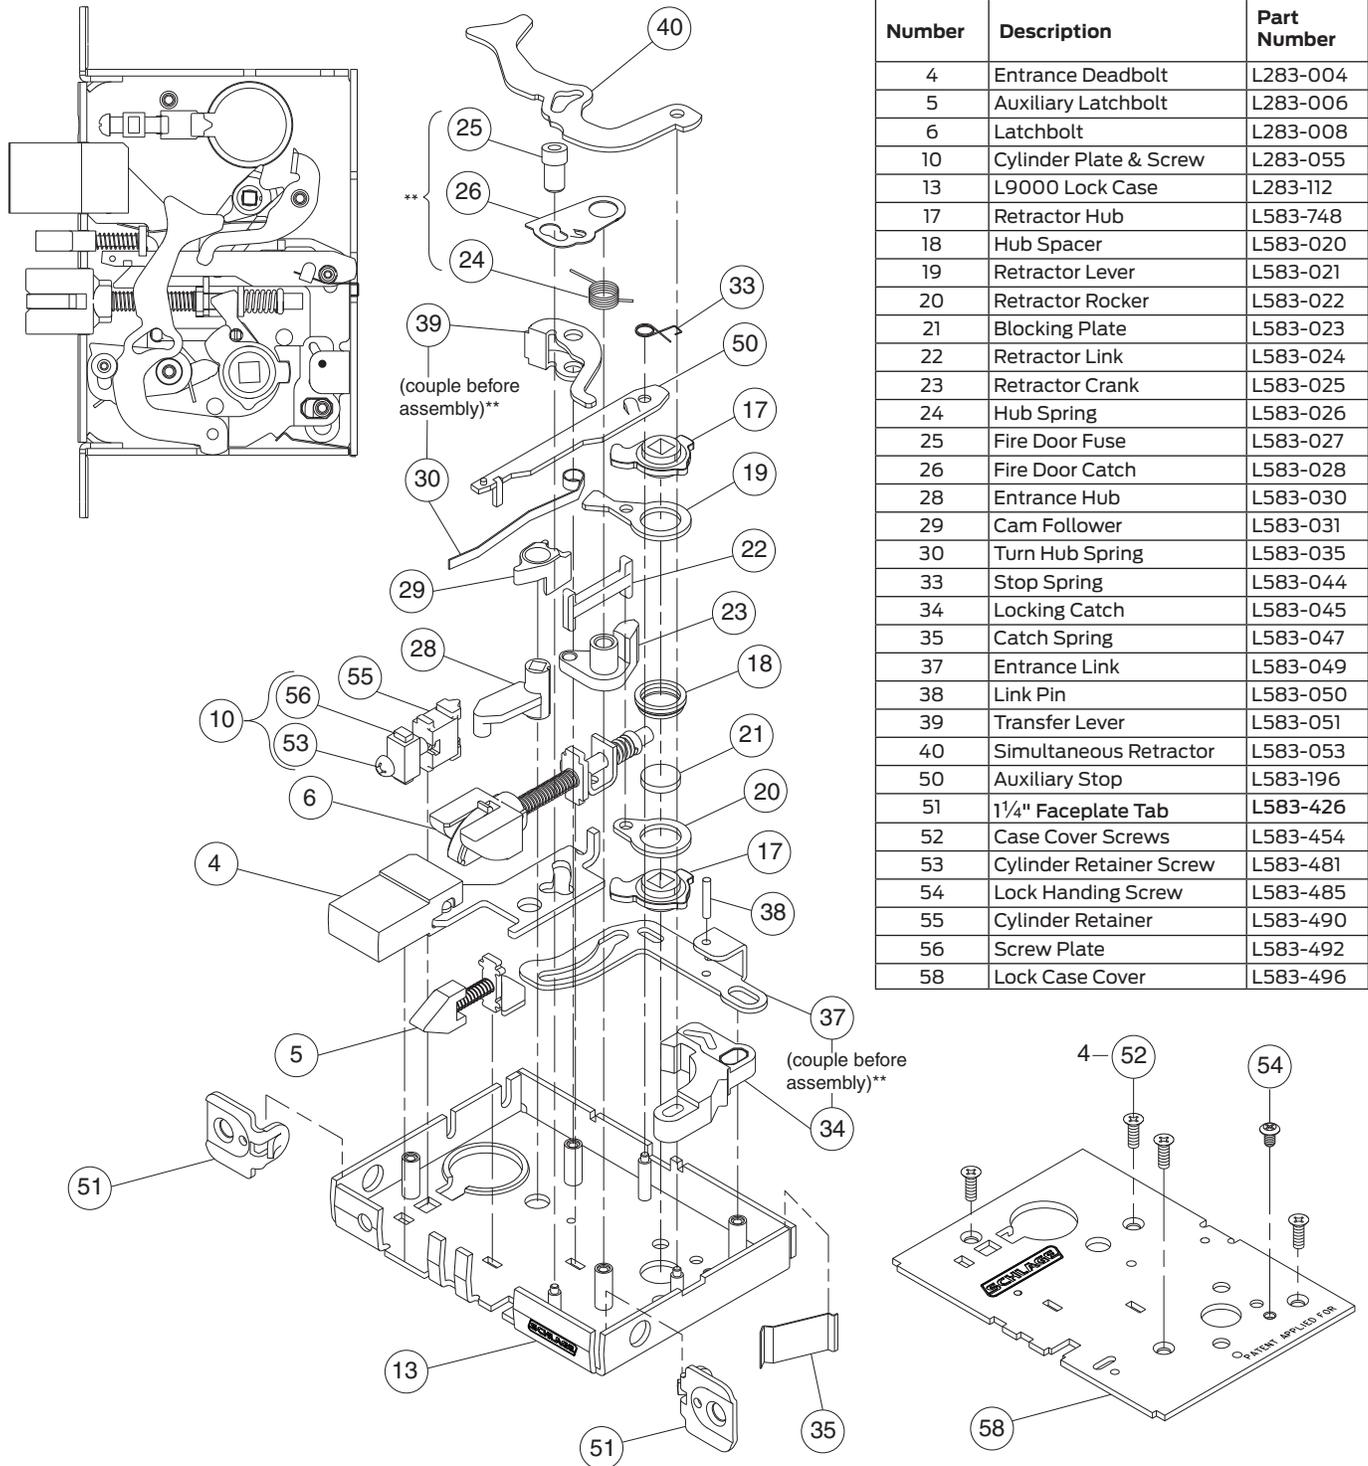


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

LV9453

Assembled Lock Case L283-176

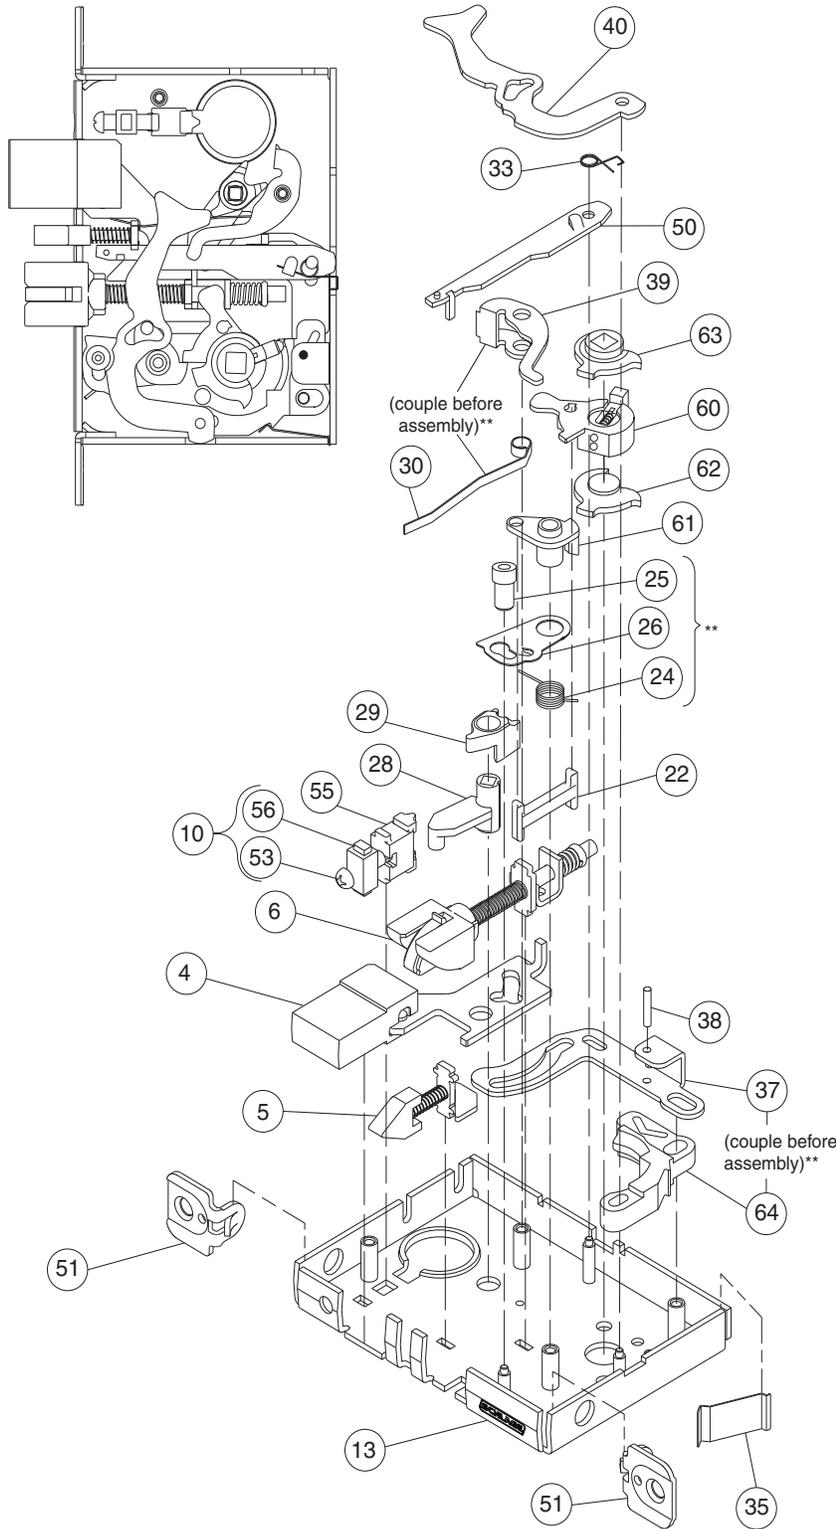

Number	Description	Part Number
4	Entrance Deadbolt	L283-004
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
28	Entrance Hub	L583-030
29	Cam Follower	L583-031
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
35	Catch Spring	L583-047
37	Entrance Link	L583-049
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

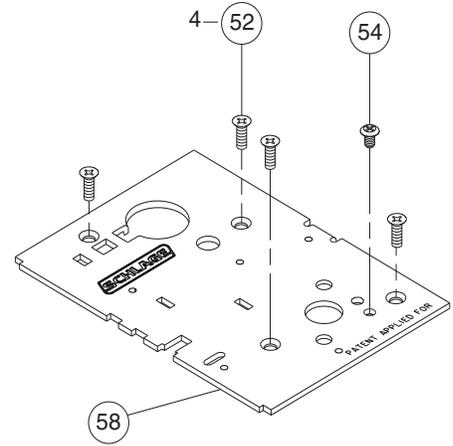


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

L9456, L9457, L9496


Assembled Lock Case L283-138

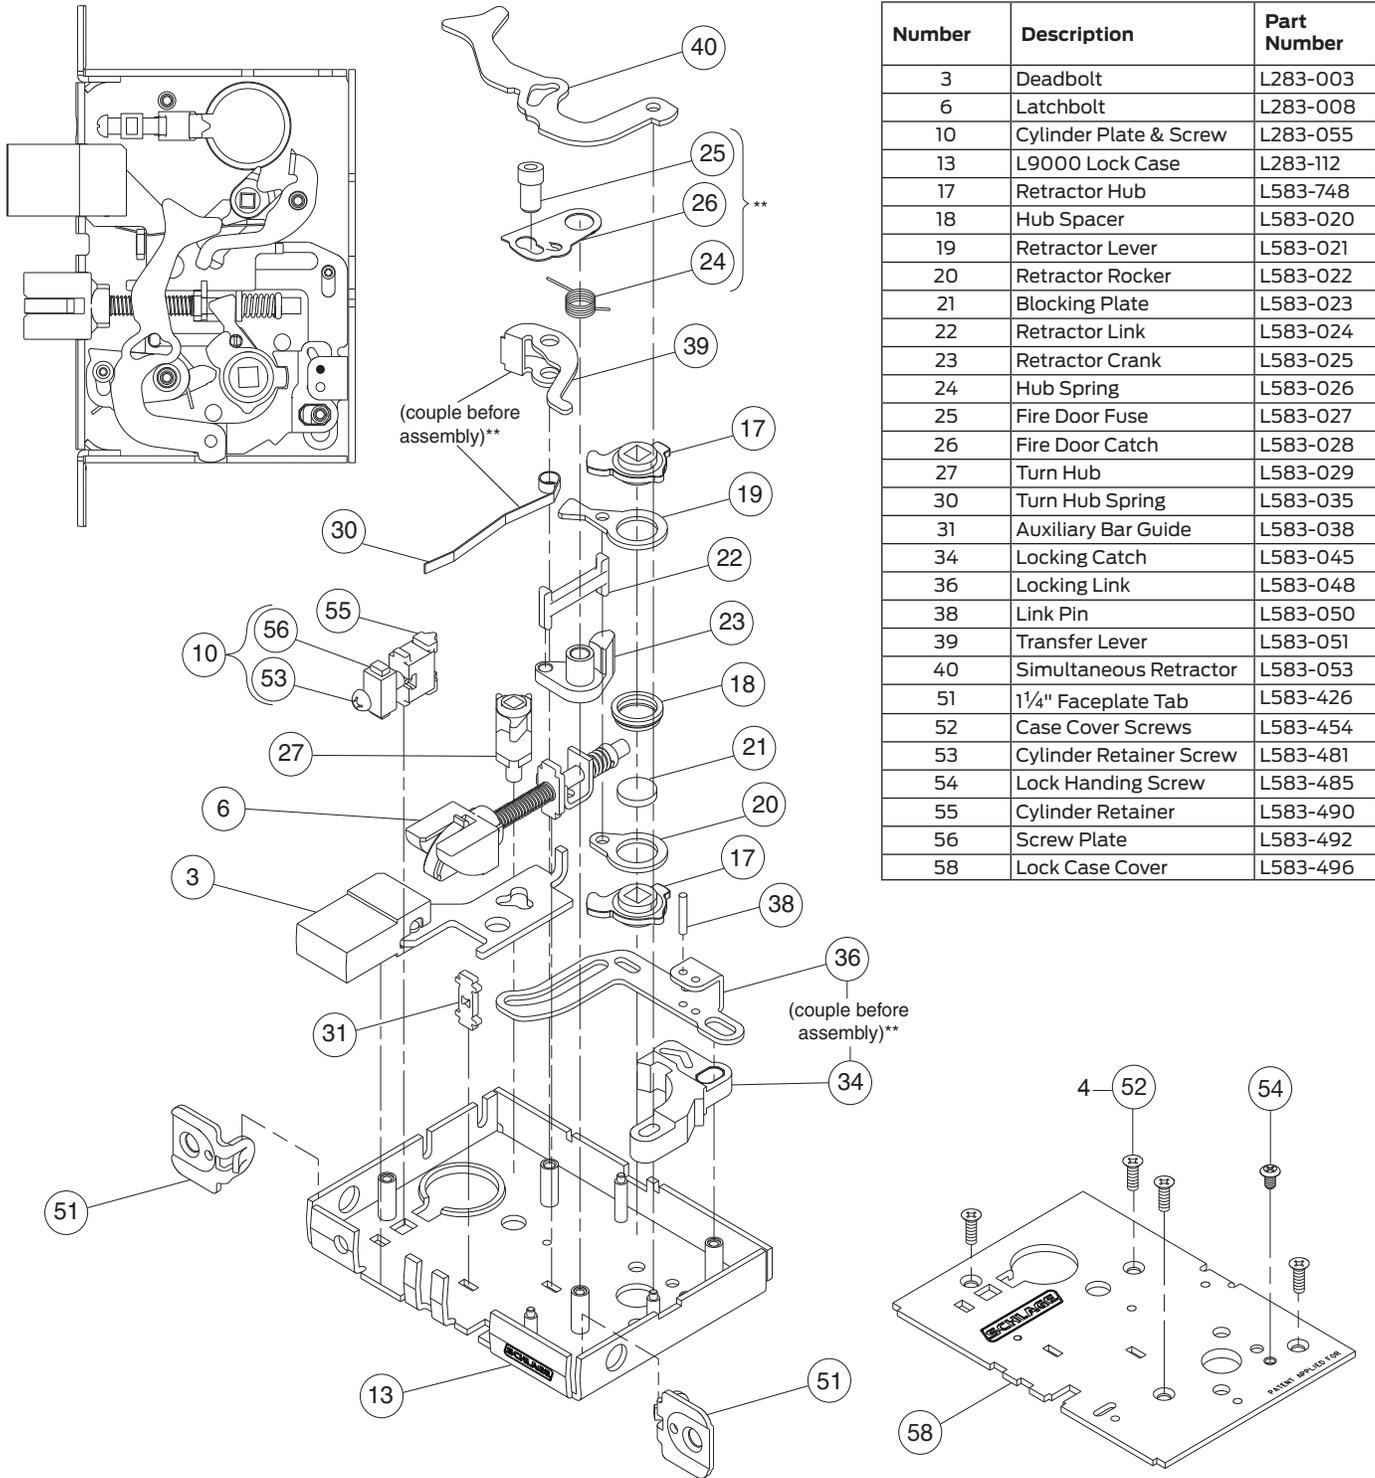

\*\* See "Assembly of lock case parts" on page 153.

LV9456, LV9457, LV9496

Assembled Lock Case L283-177

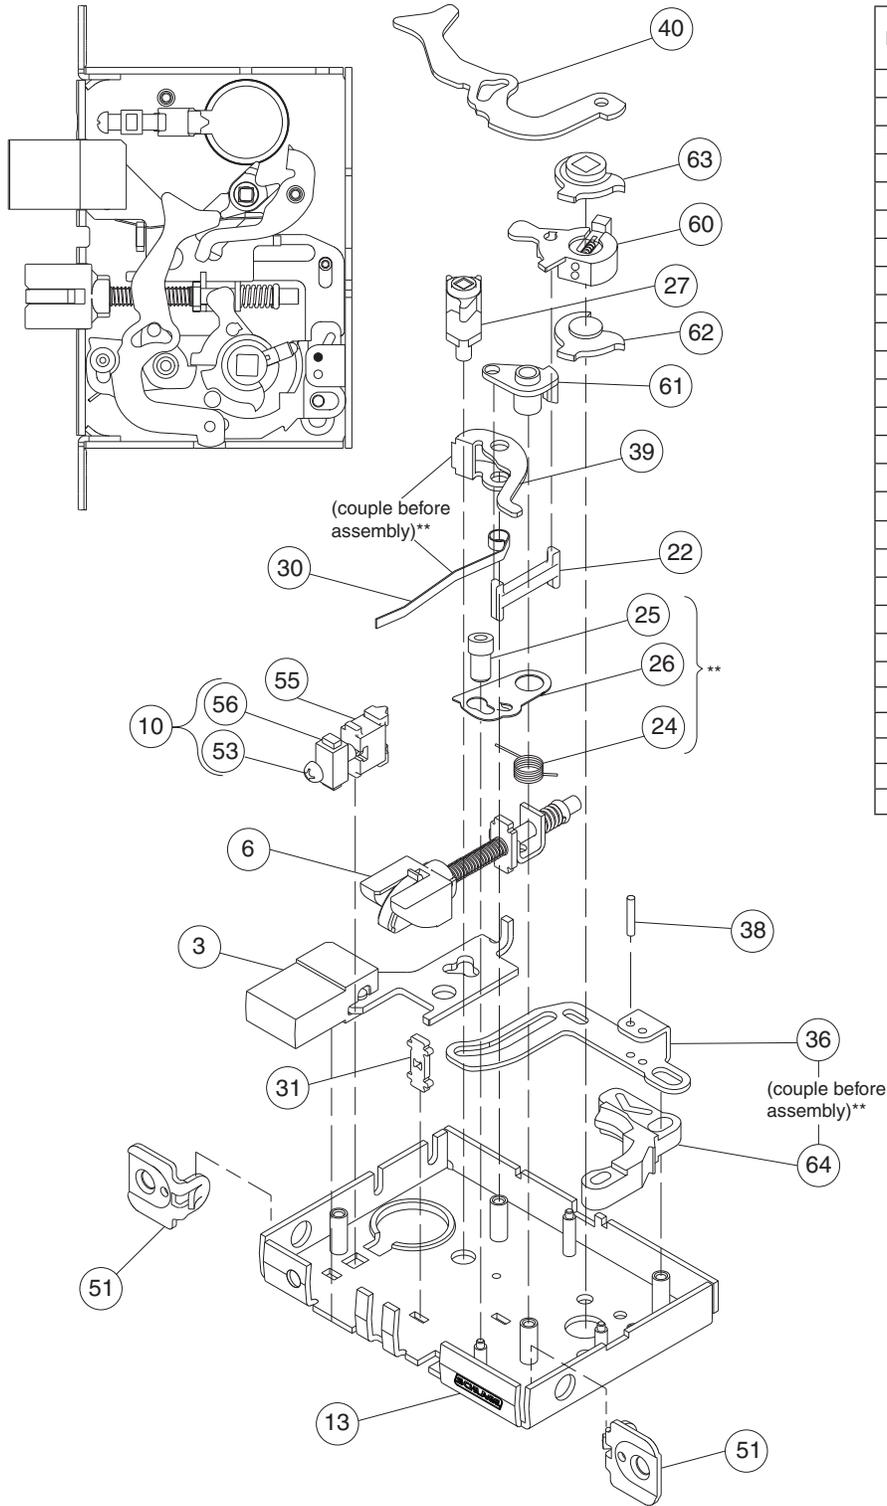


Number	Description	Part Number
3	Deadbolt	L283-003
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	24061897

\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

L9458

Assembled Lock Case L283-310

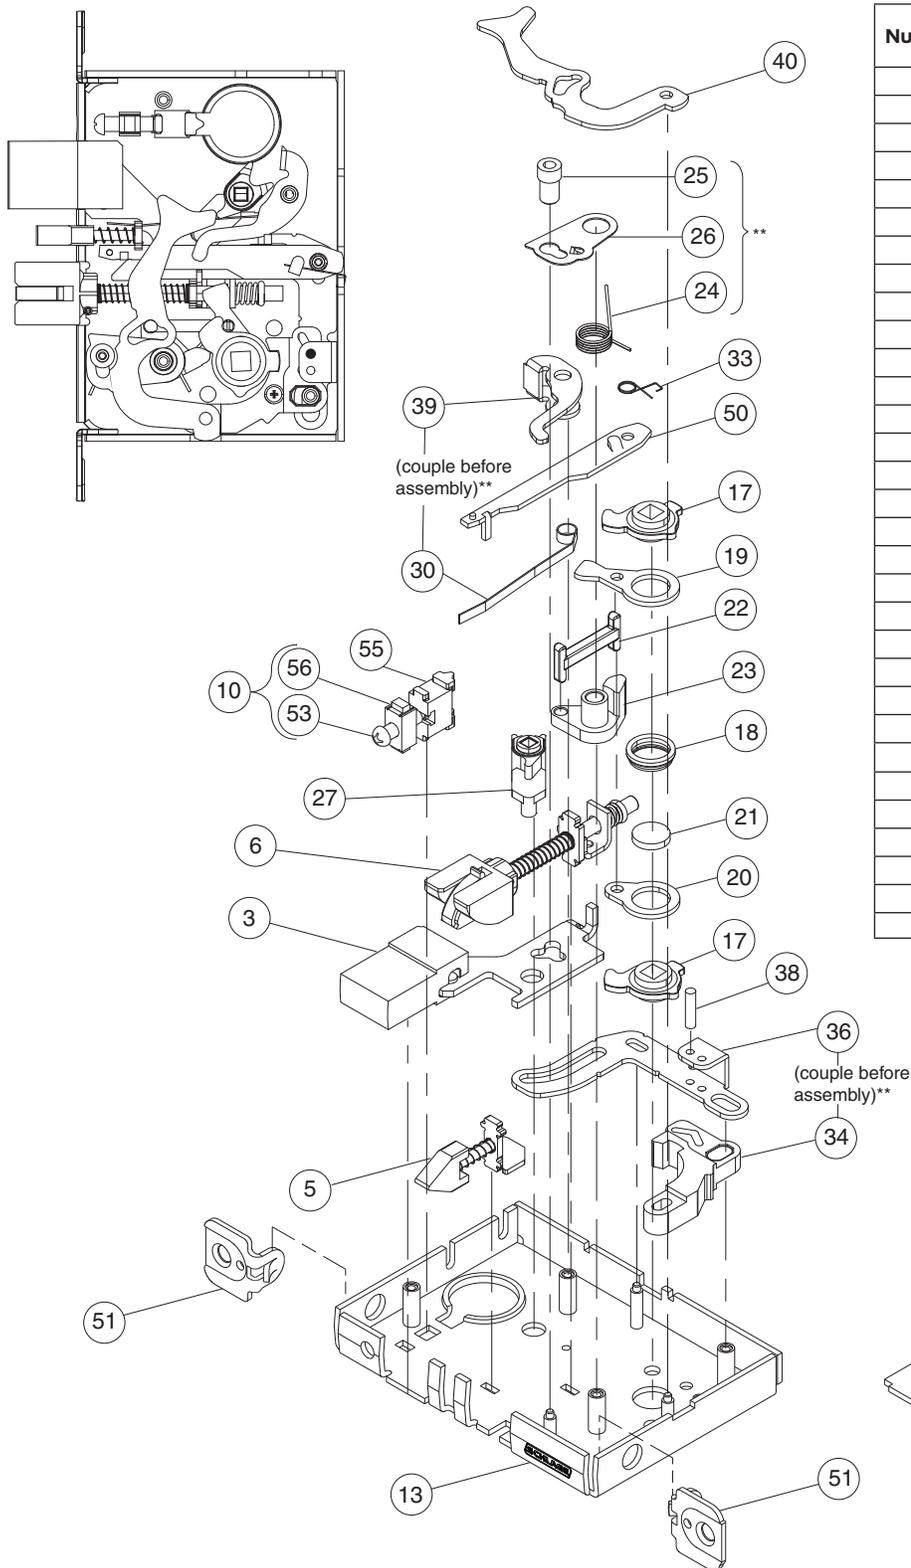


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handling Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496


\*\* See "Assembly of lock case parts" on page 153.

# LV9458

## Assembled Lock Case L283-311

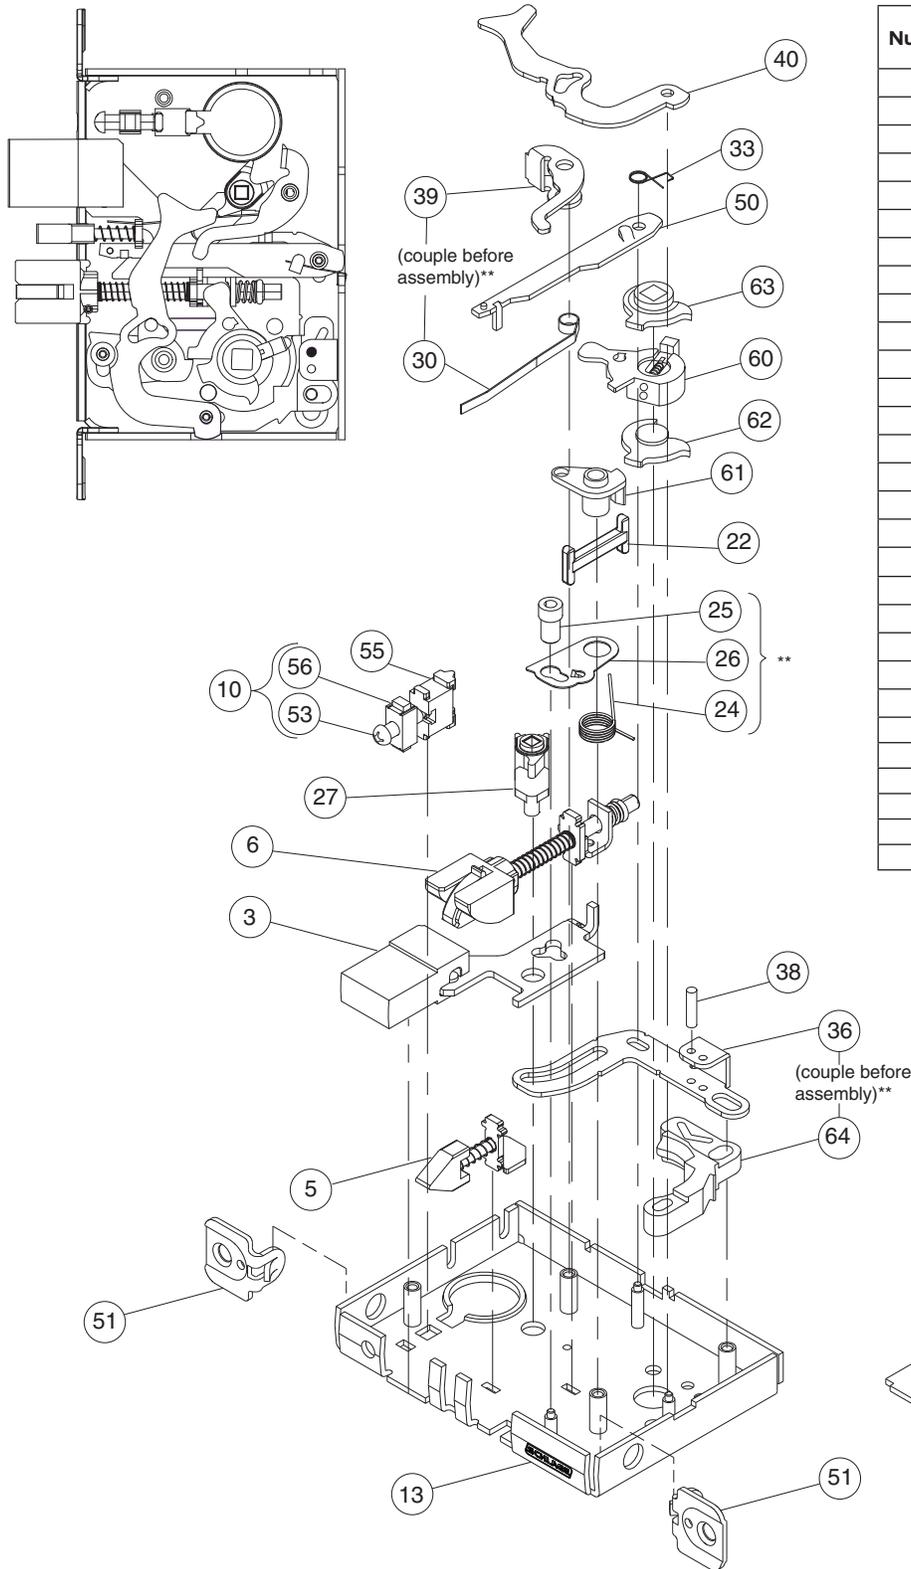

Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

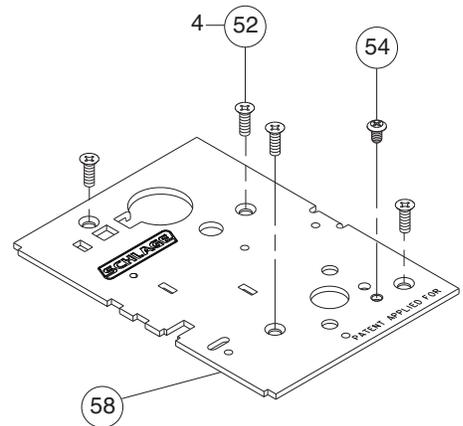


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

L9460, L9462, L9463, L9464

Assembled Lock Case L283-139

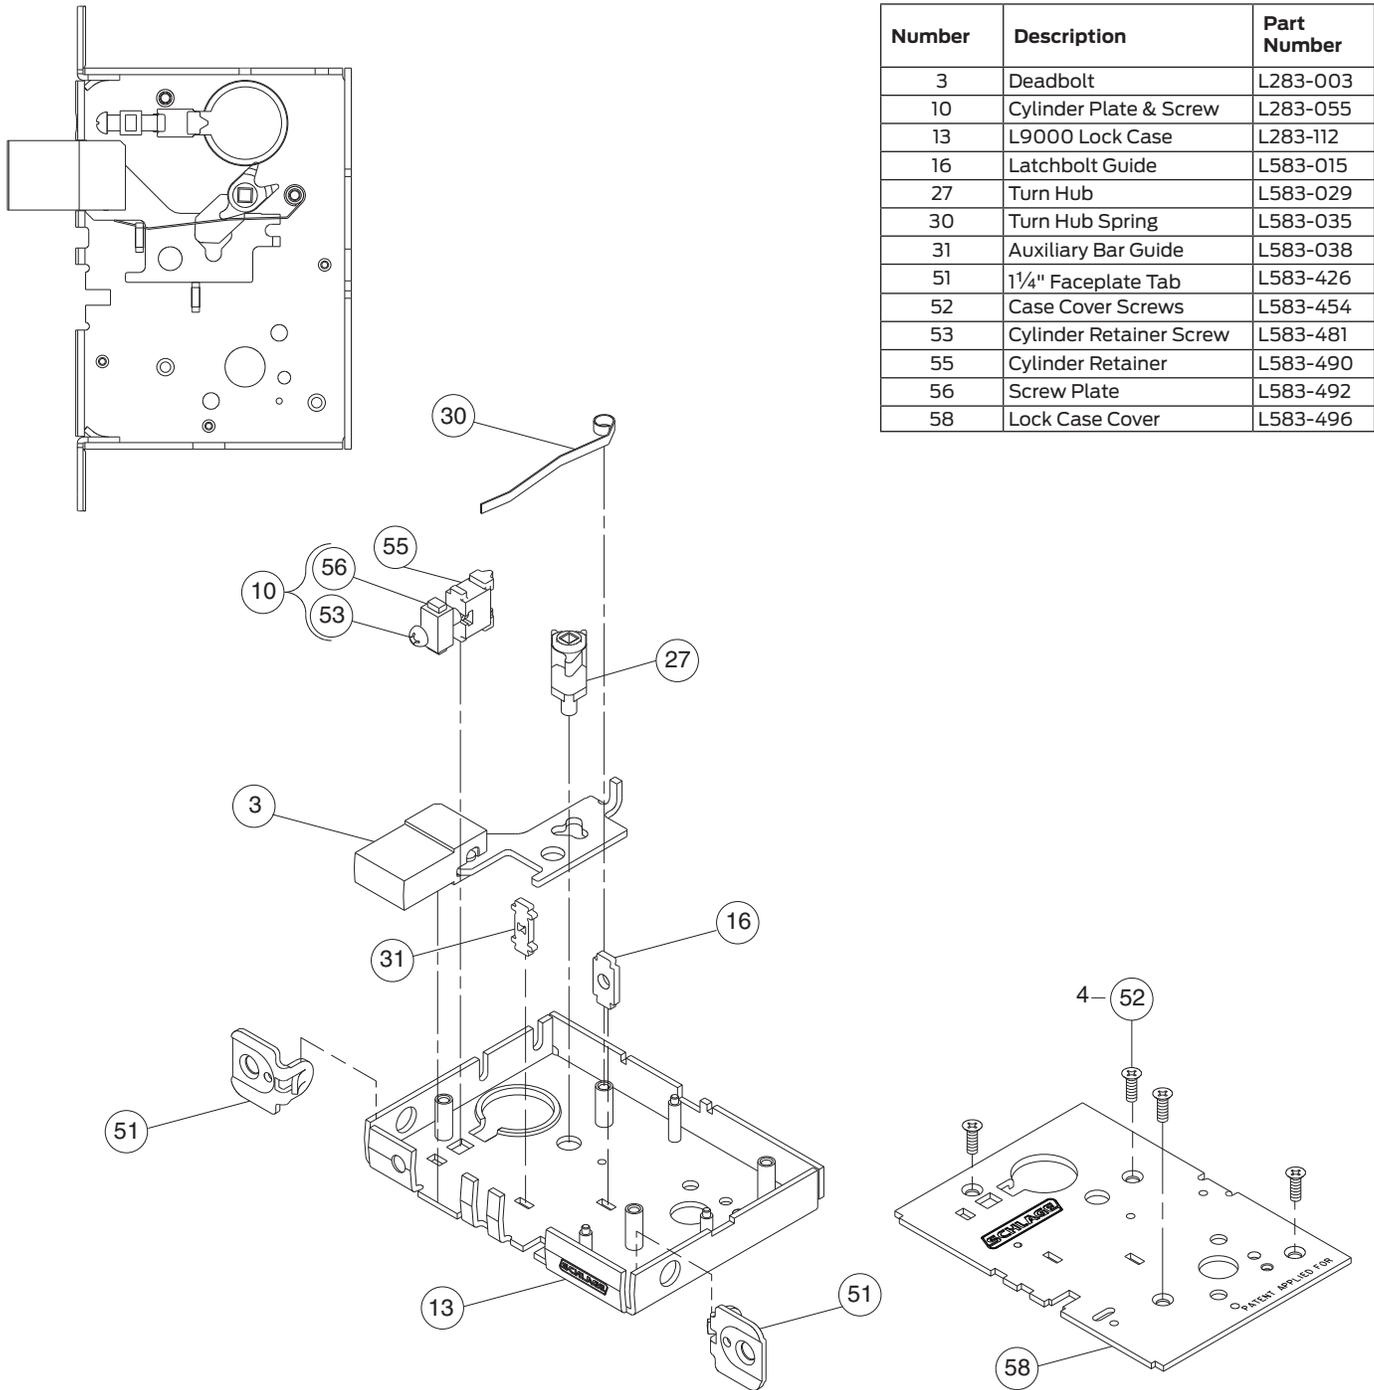


Number	Description	Part Number
3	Deadbolt	L283-003
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
16	Latchbolt Guide	L583-015
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496


Lock case assemblies

L9460 x XL11-635

Assembled Lock Case XL11-661

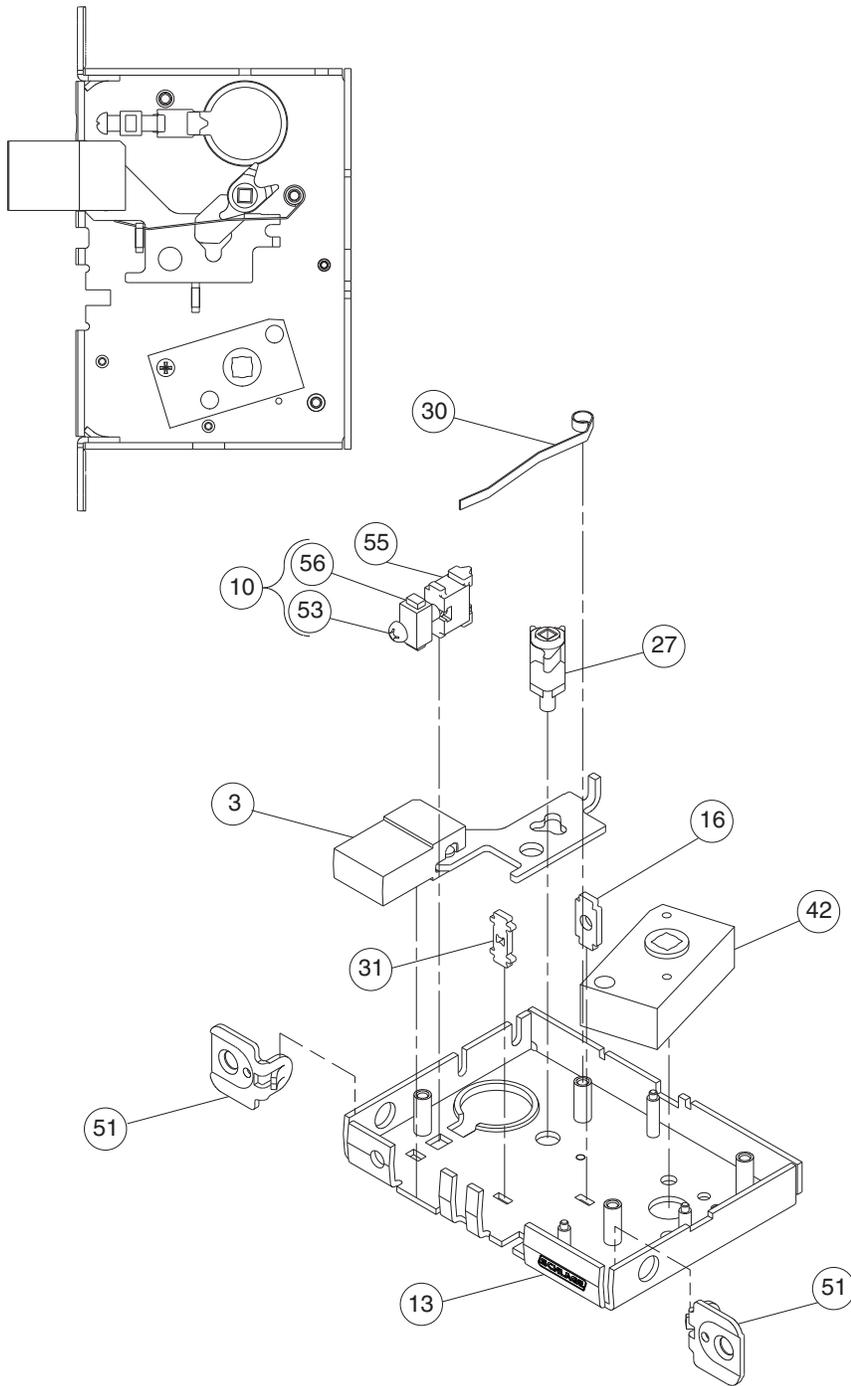


Number	Description	Part Number
3	Deadbolt	L283-003
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
16	Latchbolt Guide	L583-015
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
42	Spindle Anchor	L583-057
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

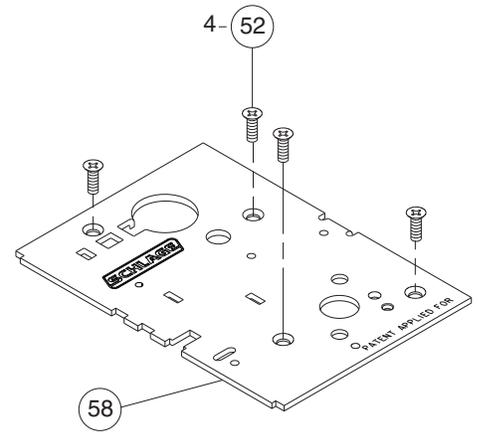

Lock case assemblies

L9460 x XL11-886, L9462 x XL11-886, L9464 x XL11-886

Assembled Lock Case XL11-886

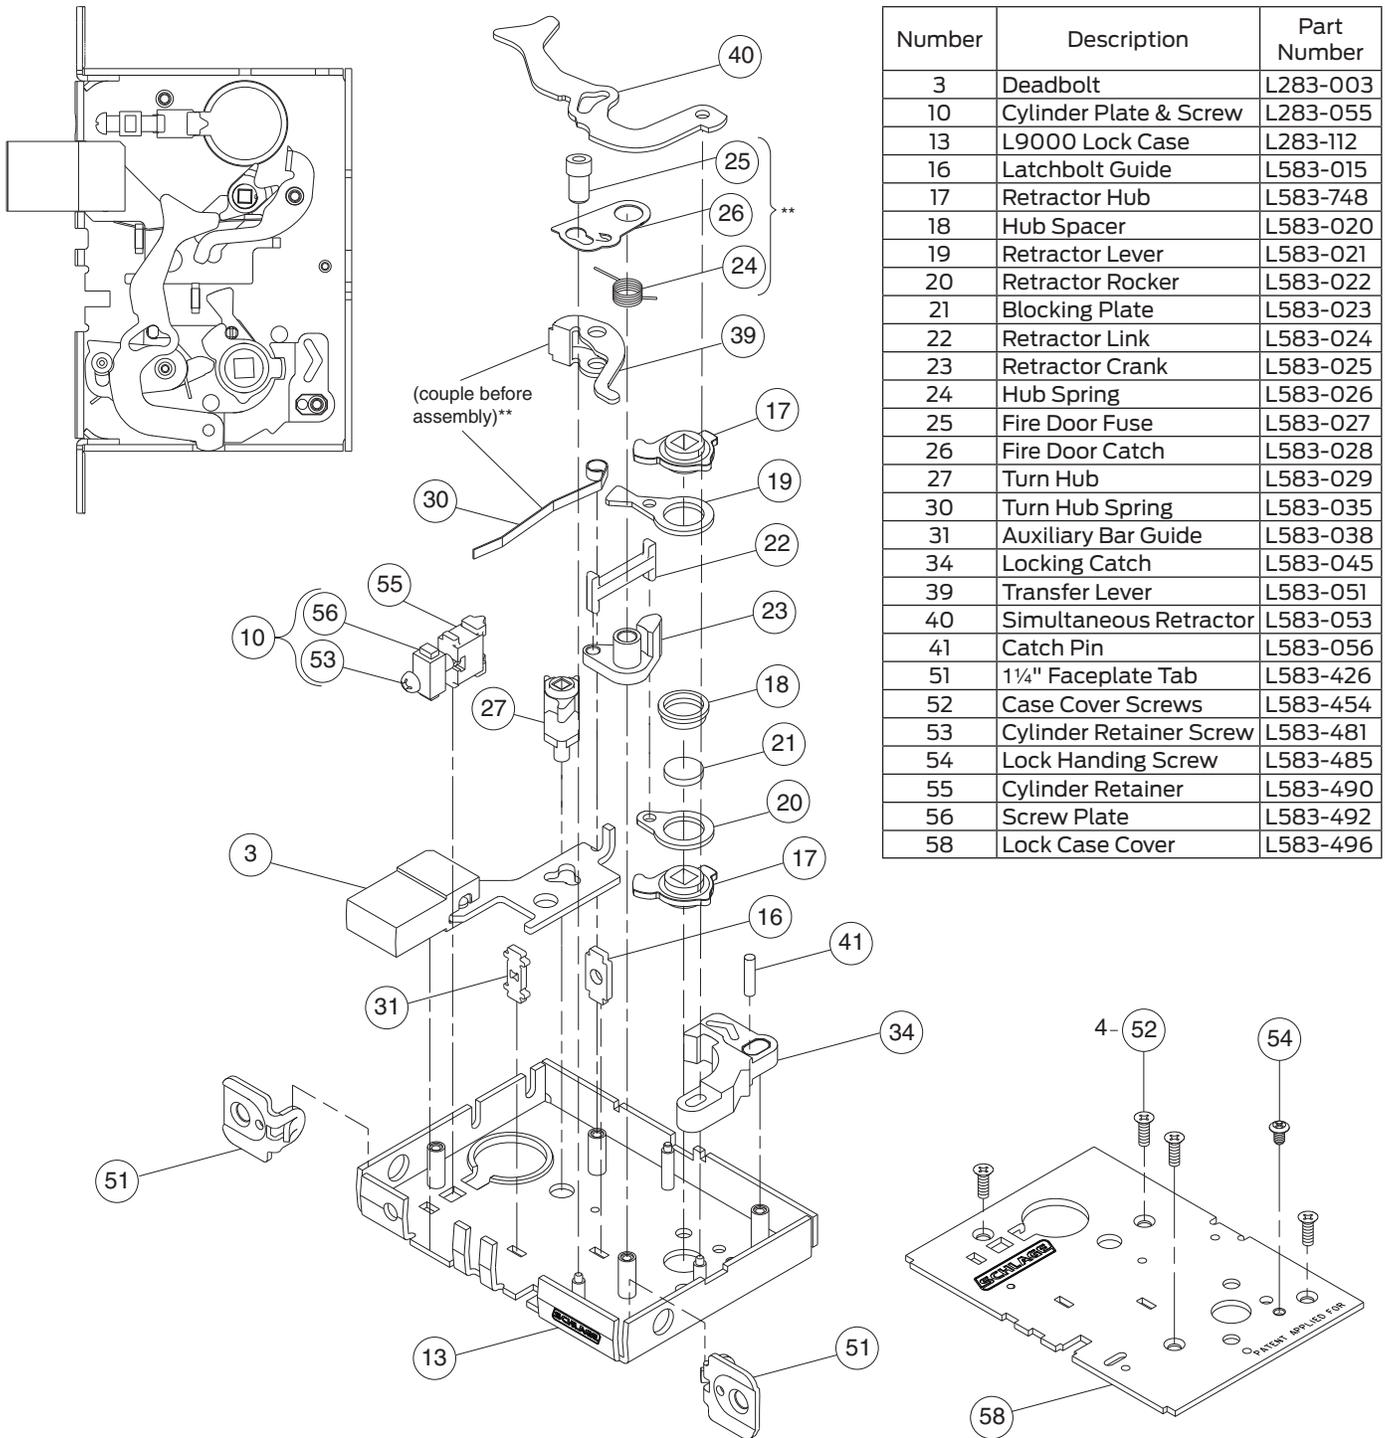


Number	Description	Part Number
3	Deadbolt	L283-003
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
16	Latchbolt Guide	L583-015
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
34	Locking Catch	L583-045
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
41	Catch Pin	L583-056
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

L9465, L9466, L9473

Assembled Lock Case L283-140

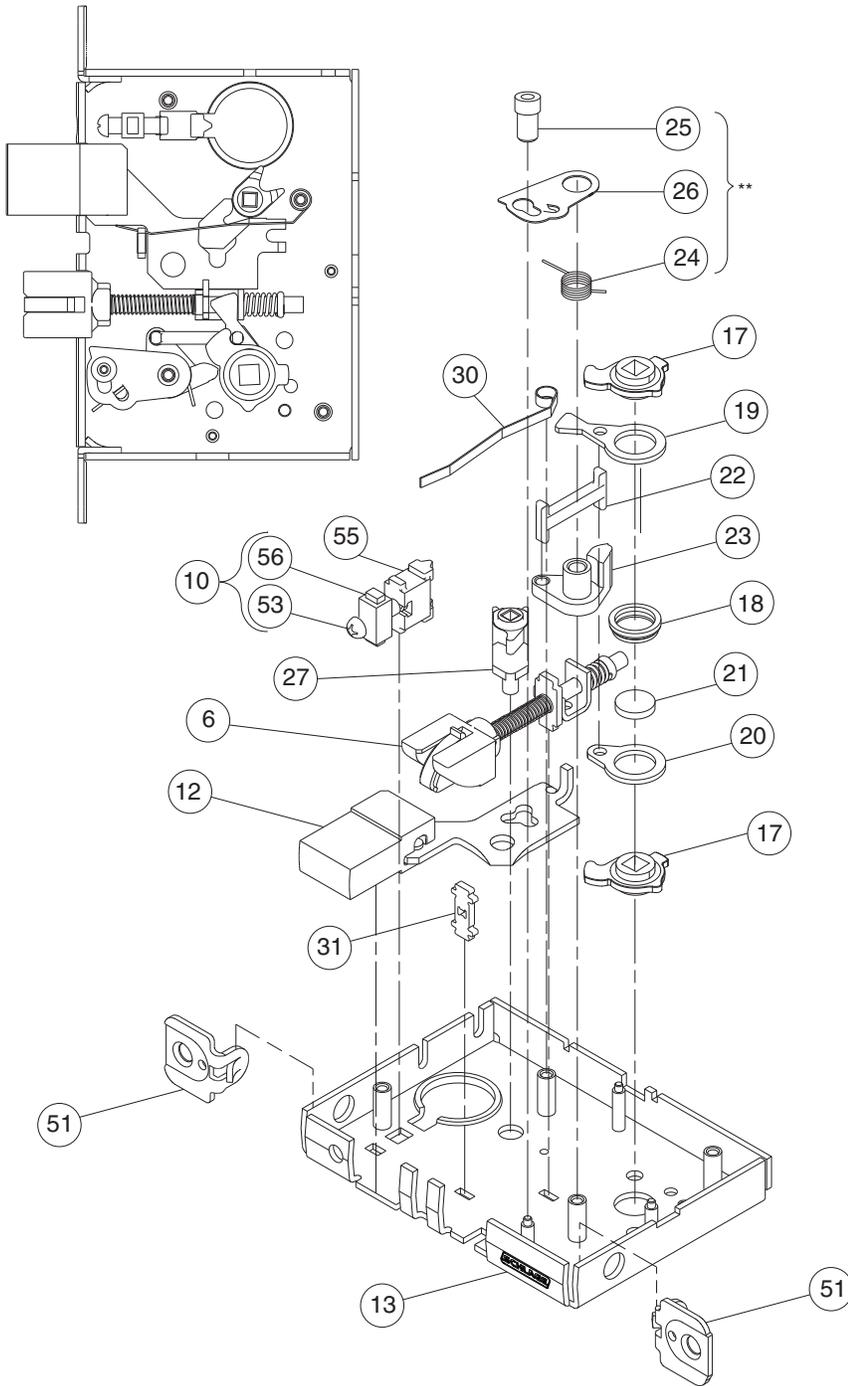

Number	Description	Part Number
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
12	Deadbolt	L583-075
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
31	Auxiliary Bar Guide	L583-038
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

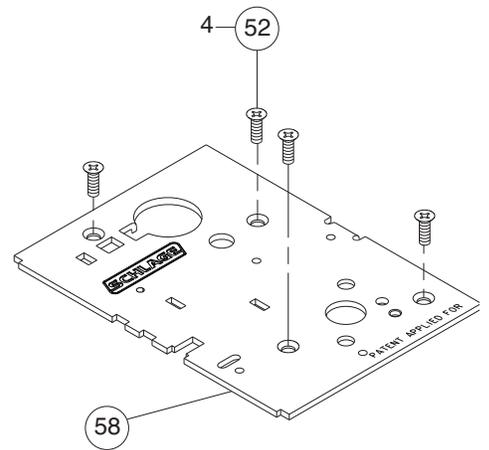


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

L9480, L9485, L9486, L9486 x L583-375, L9412 x XL11-907

Assembled Lock Case L283-141 (specify L9486 x L583-375 or L9412 x XL11-907 as applicable)

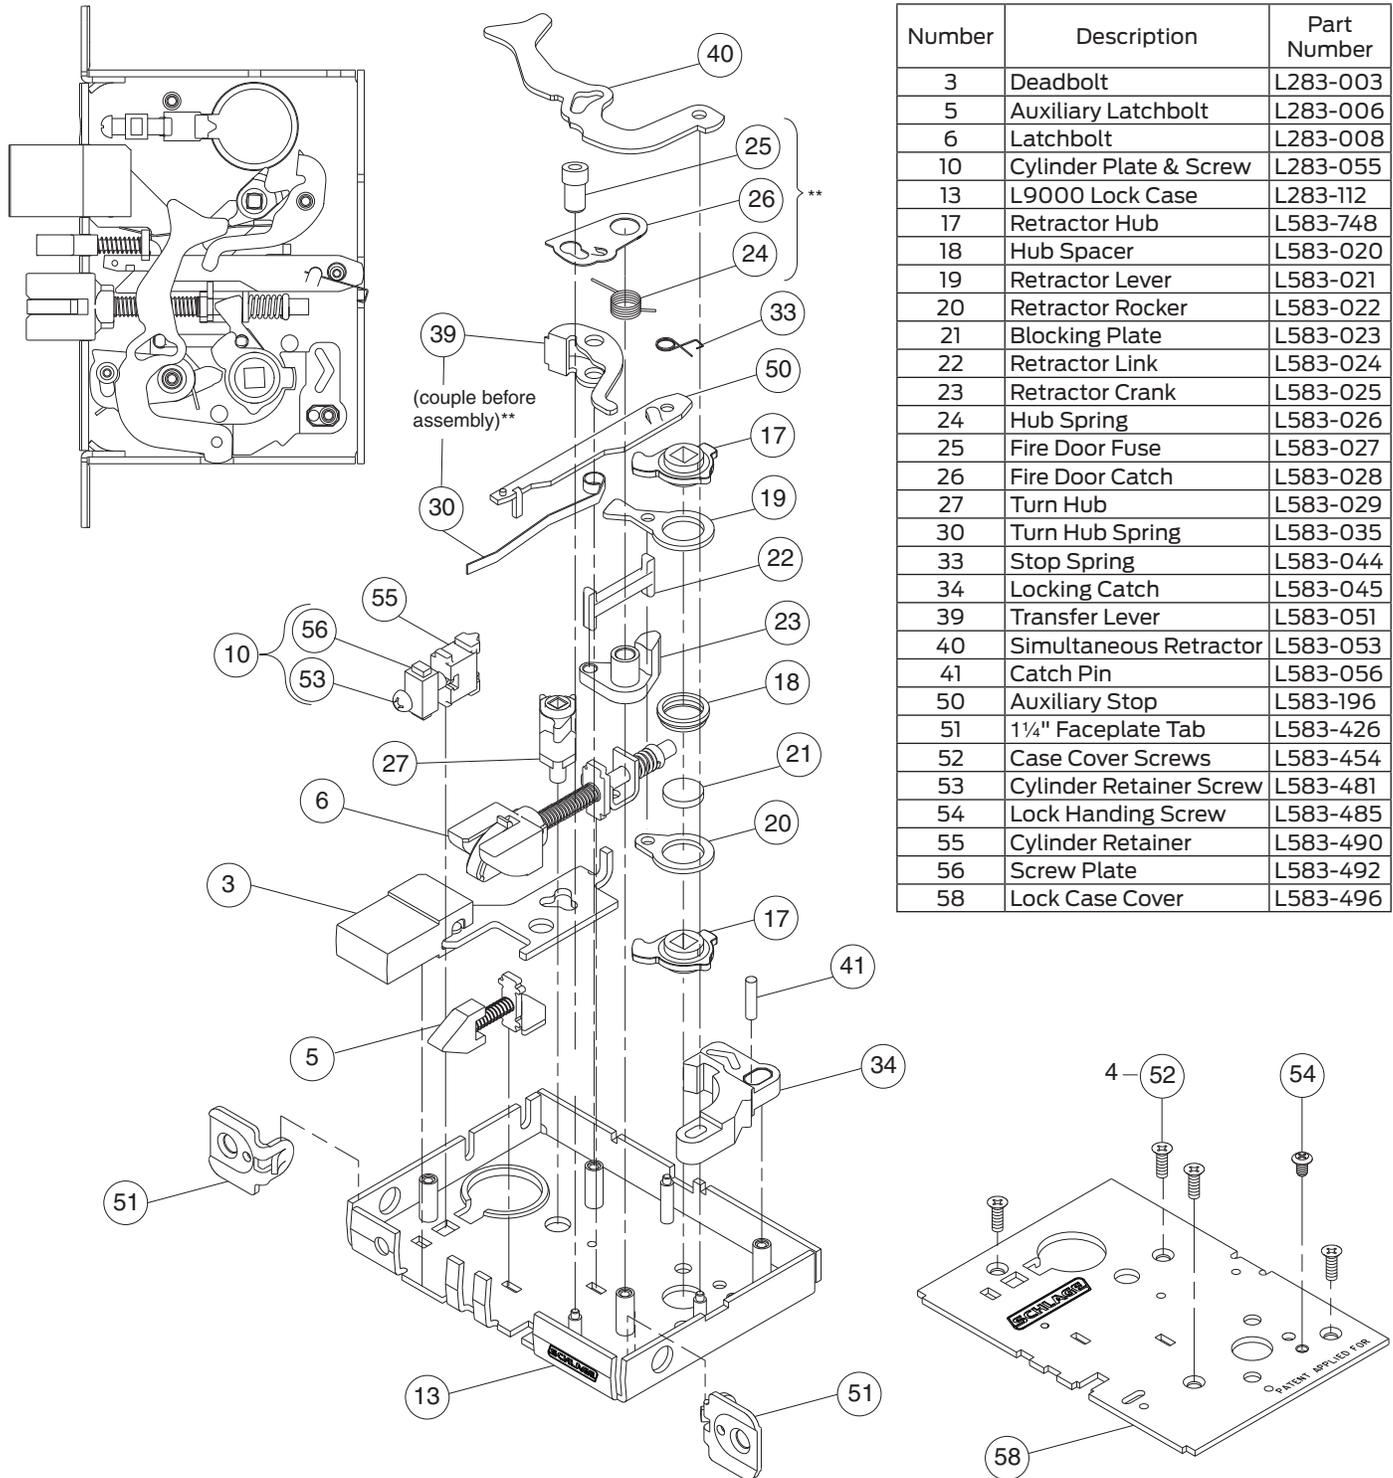


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

LV9480, LV9485, LV9486, LV9486 x L583-375

Assembled Lock Case L283-178

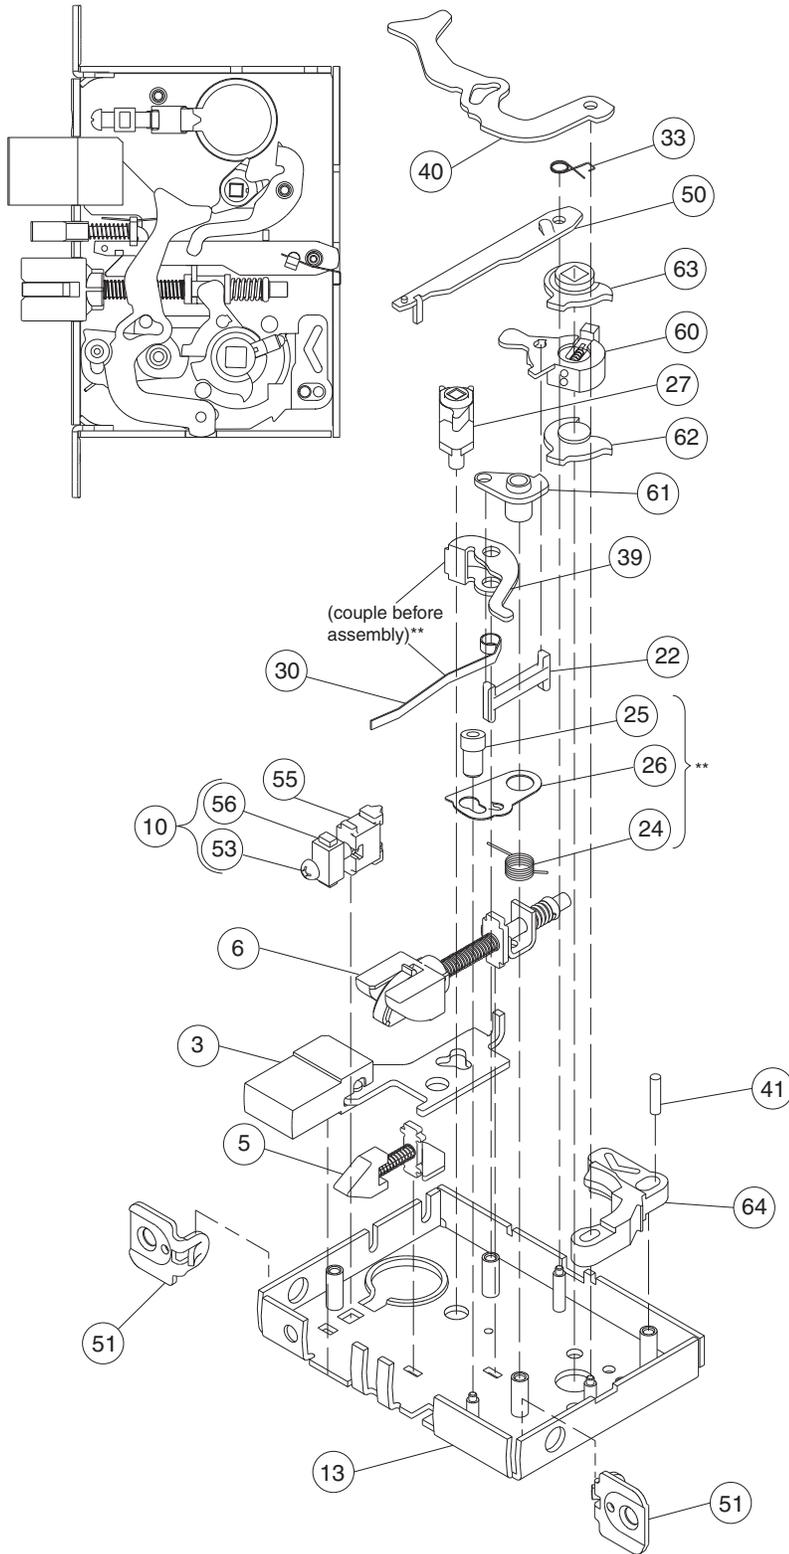

Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
22	Retractor Link	L583-024
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
40	Simultaneous Retractor	L583-053
41	Catch Pin	L583-056
50	Auxiliary Stop	L583-196
51	1 1/4 " Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
60	Retractor Lever Assy	L283-147
61	Crank Retractor	L583-383
62	Bottom Hub	L583-386
63	Top Hub	L583-387
64	Retractor Catch	L583-345

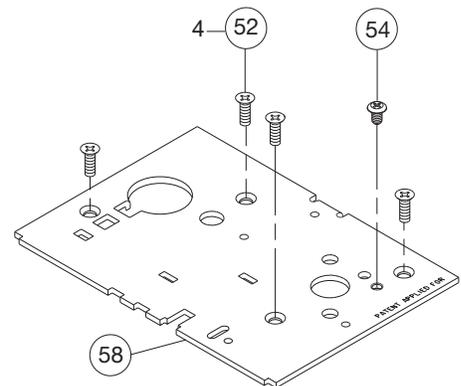


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

L9482 x XL11-543

Assembled Lock Case L283-146 x XL11-543

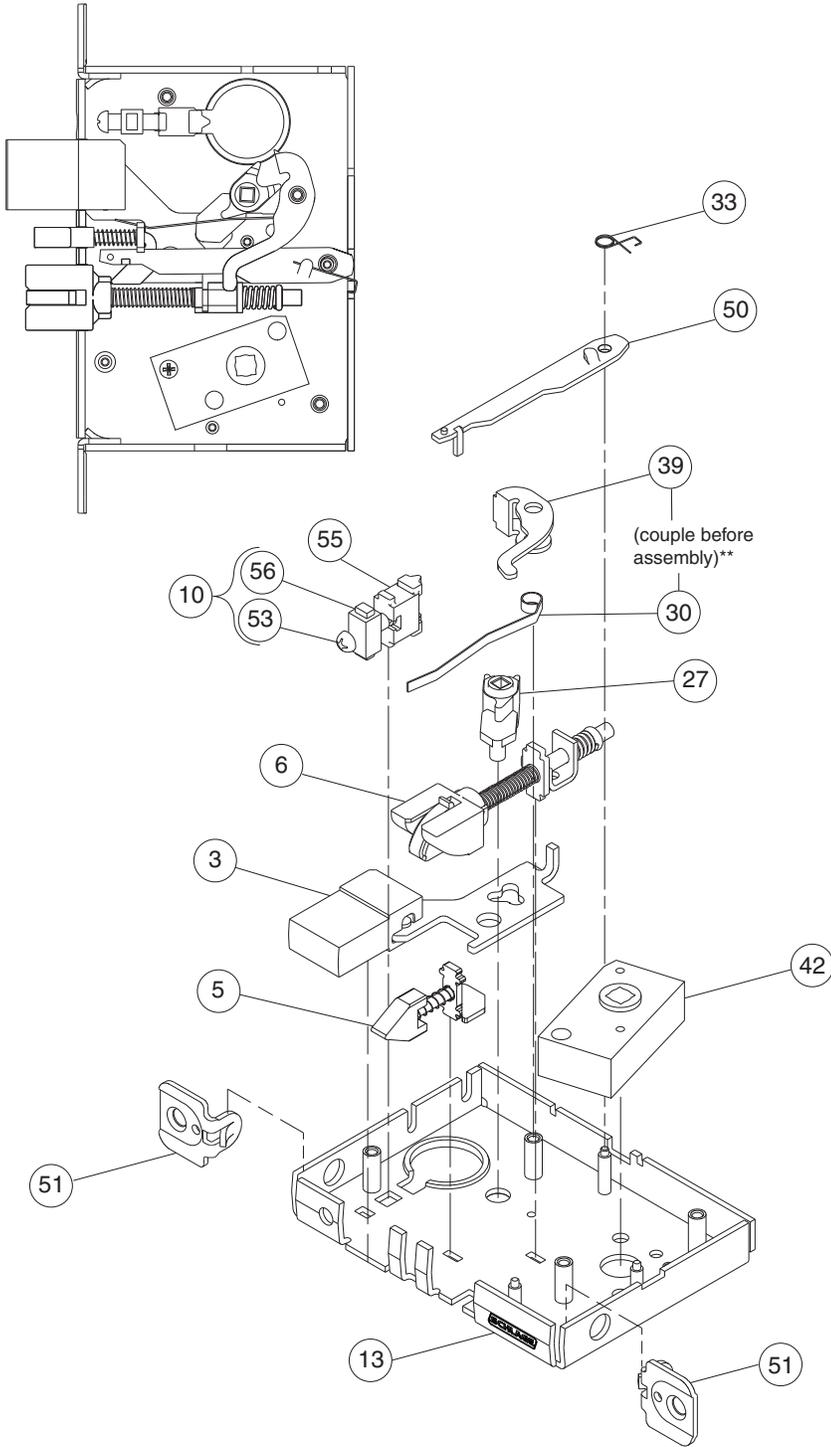

Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
42	Spindle Anchor	L583-057
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

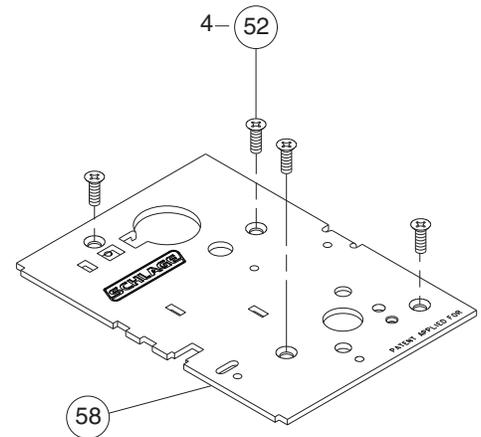


\*\* See "Assembly of lock case parts" on page 153.


Lock case assemblies

LV9482 x XL11-543

Assembled Lock Case L283-183

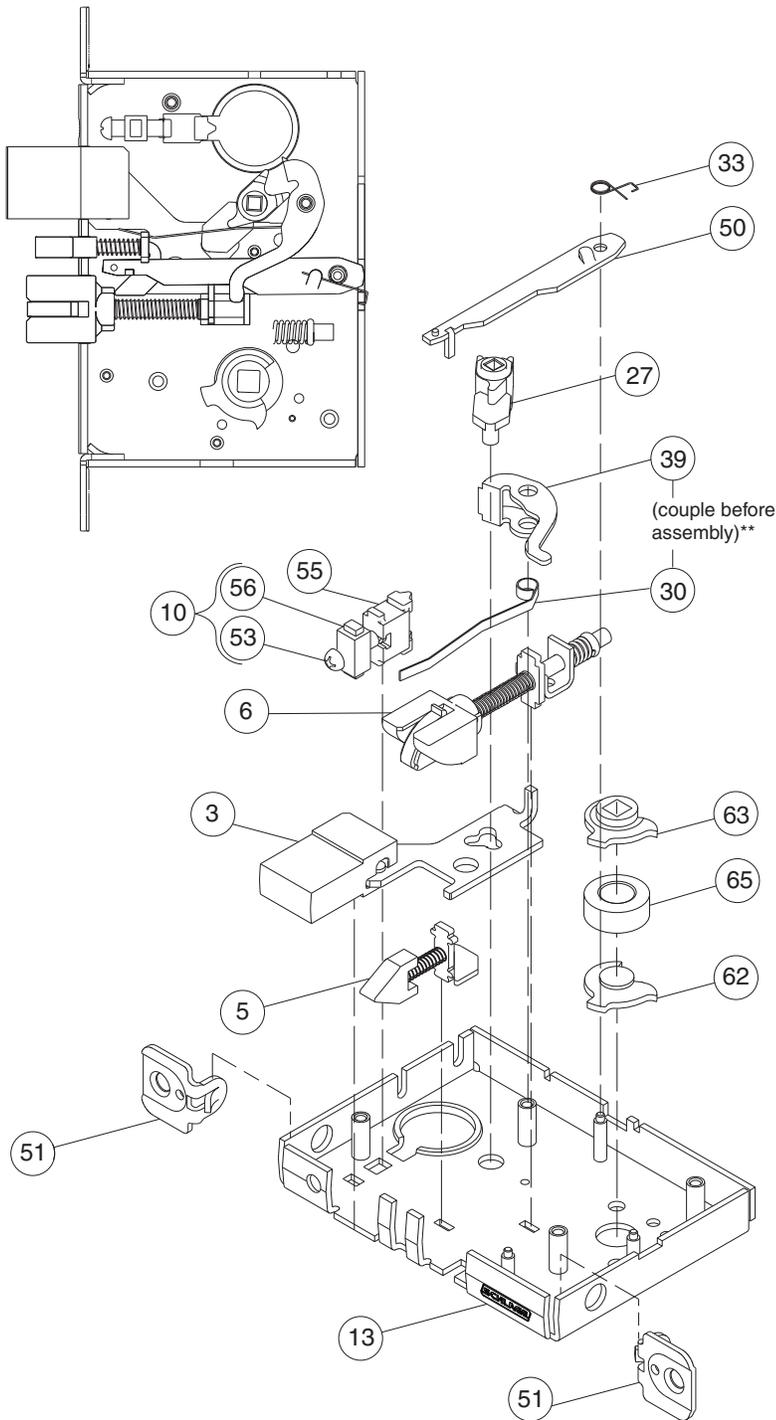


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
39	Transfer Lever	L583-051
50	Auxiliary Stop	L583-196
51	1 1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496
62	Bottom Hub	L583-386
63	Top Hub	L583-387
65	Spacer	L583-346

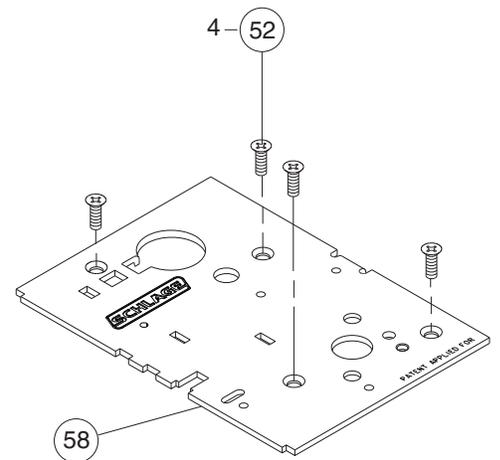

\*\* See "Assembly of lock case parts" on page 153.

# L9485 x XL11-557

## Assembled Lock Case XL11-557

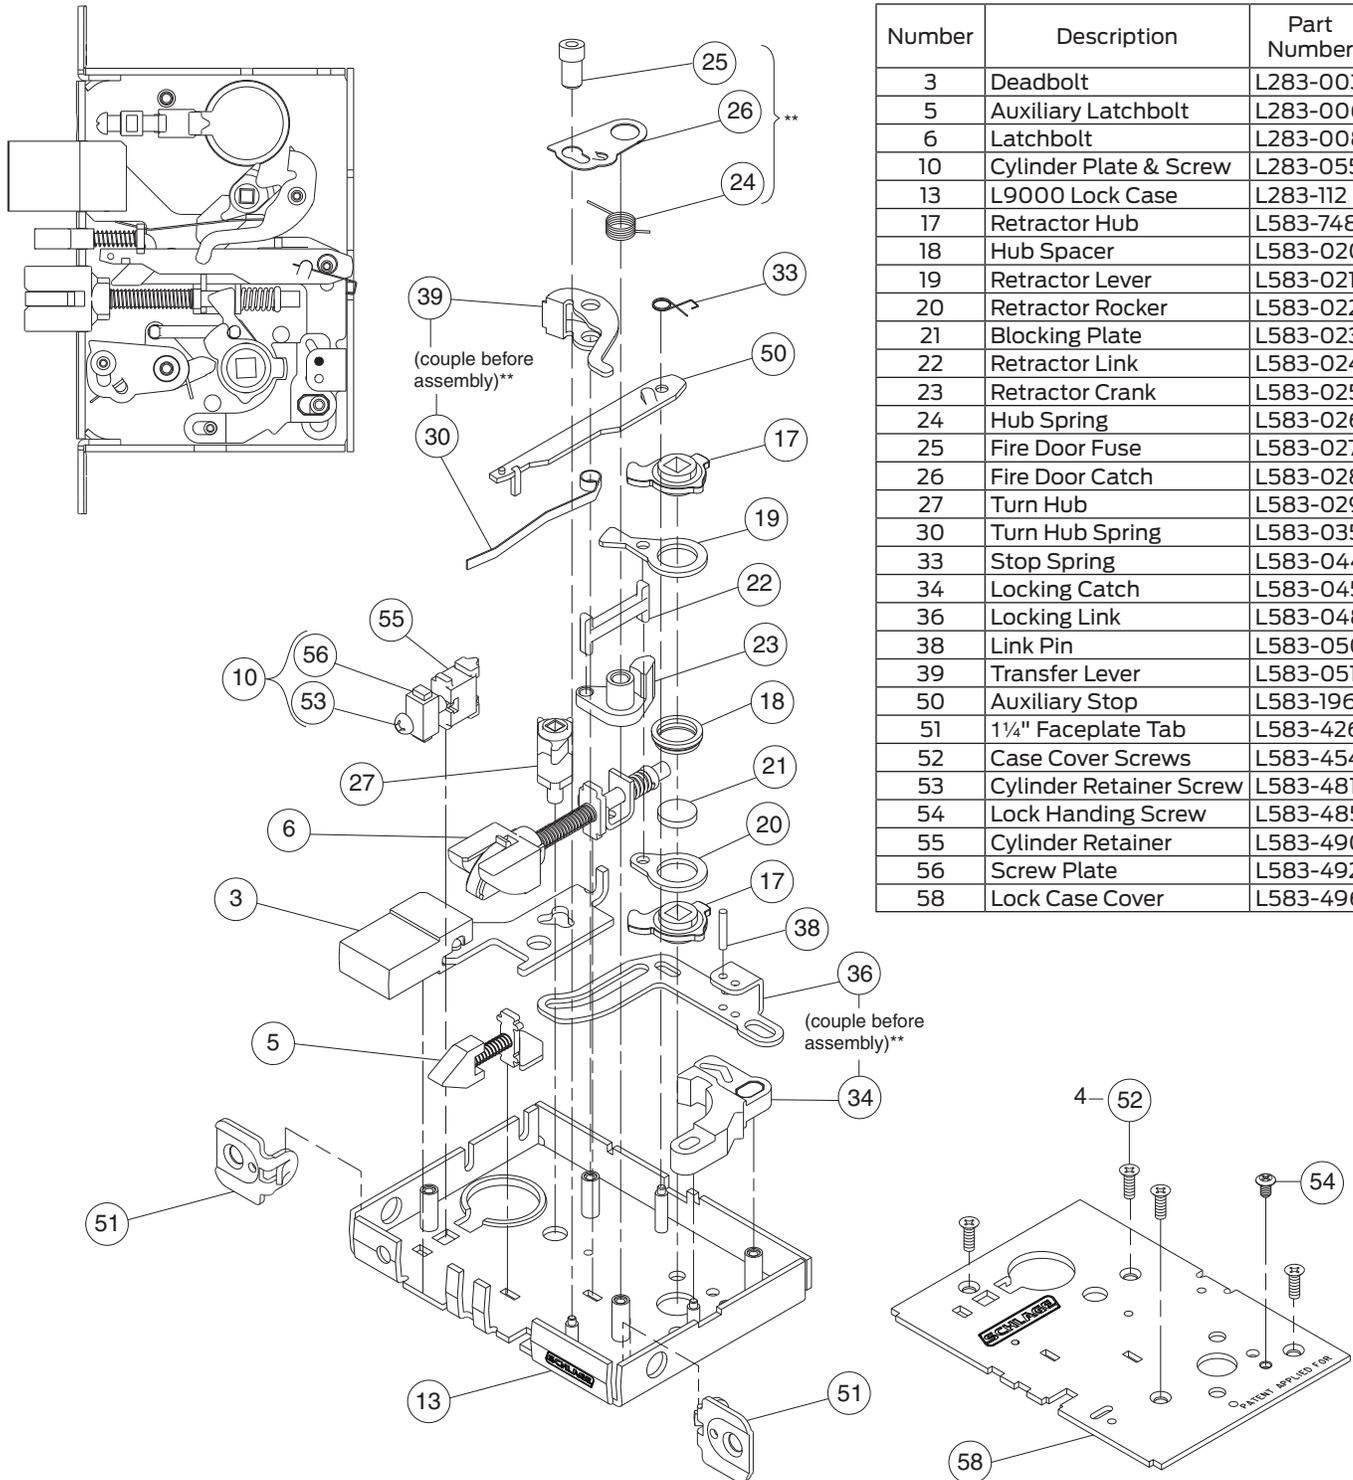


Number	Description	Part Number
3	Deadbolt	L283-003
5	Auxiliary Latchbolt	L283-006
6	Latchbolt	L283-008
10	Cylinder Plate & Screw	L283-055
13	L9000 Lock Case	L283-112
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	L583-026
25	Fire Door Fuse	L583-027
26	Fire Door Catch	L583-028
27	Turn Hub	L583-029
30	Turn Hub Spring	L583-035
33	Stop Spring	L583-044
34	Locking Catch	L583-045
36	Locking Link	L583-048
38	Link Pin	L583-050
39	Transfer Lever	L583-051
50	Auxiliary Stop	L583-196
51	1/4" Faceplate Tab	L583-426
52	Case Cover Screws	L583-454
53	Cylinder Retainer Screw	L583-481
54	Lock Handing Screw	L583-485
55	Cylinder Retainer	L583-490
56	Screw Plate	L583-492
58	Lock Case Cover	L583-496

\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

LM9210, LM9225


Assembled Lock Case 24759599

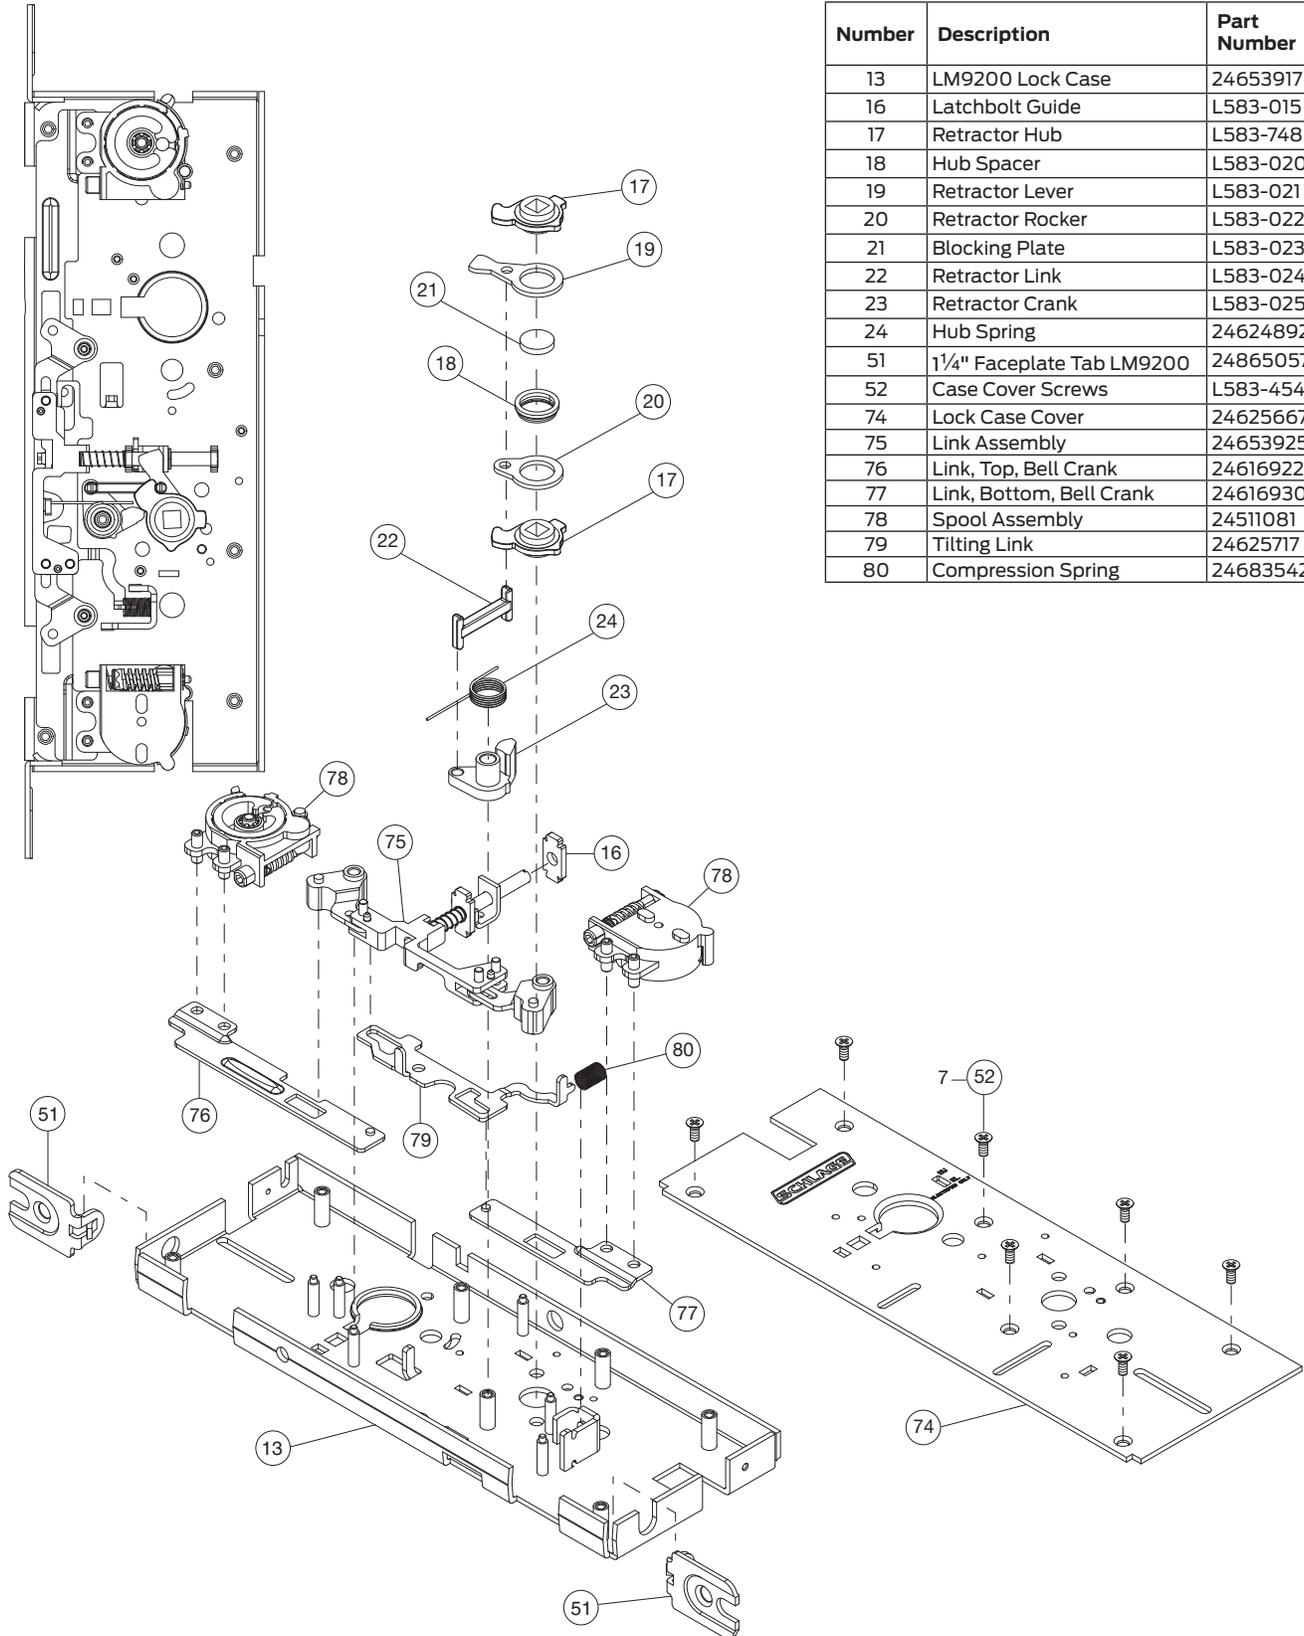

Number	Description	Part Number
13	LM9200 Lock Case	24653917
16	Latchbolt Guide	L583-015
17	Retractor Hub	L583-748
18	Hub Spacer	L583-020
19	Retractor Lever	L583-021
20	Retractor Rocker	L583-022
21	Blocking Plate	L583-023
22	Retractor Link	L583-024
23	Retractor Crank	L583-025
24	Hub Spring	24624892
51	1 1/4" Faceplate Tab LM9200	24865057
52	Case Cover Screws	L583-454
74	Lock Case Cover	24625667
75	Link Assembly	24653925
76	Link, Top, Bell Crank	24616922
77	Link, Bottom, Bell Crank	24616930
78	Spool Assembly	24511081
79	Tilting Link	24625717
80	Compression Spring	24683542

# LM9256

## Assembled Lock Case 24616914

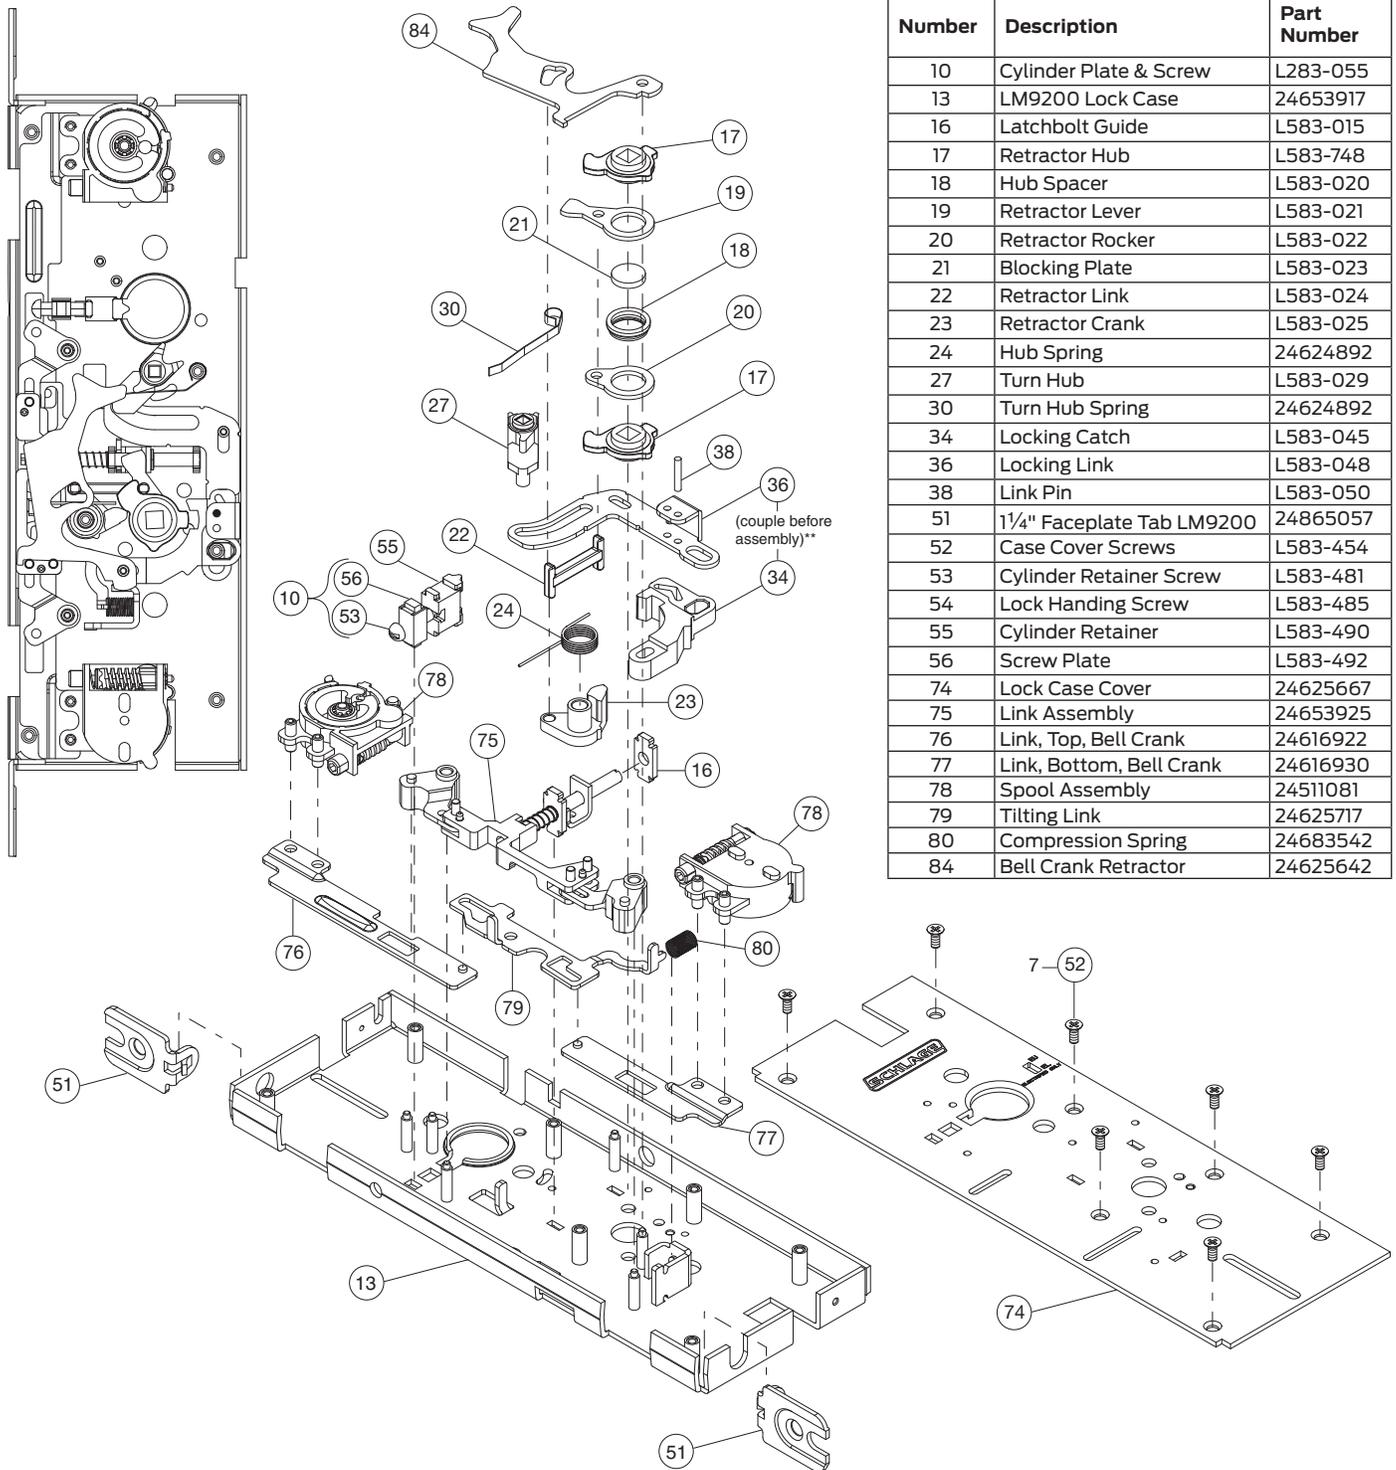


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

LM9250, LM9270, LM9271, LM9280


Assembled Lock Case 24759623

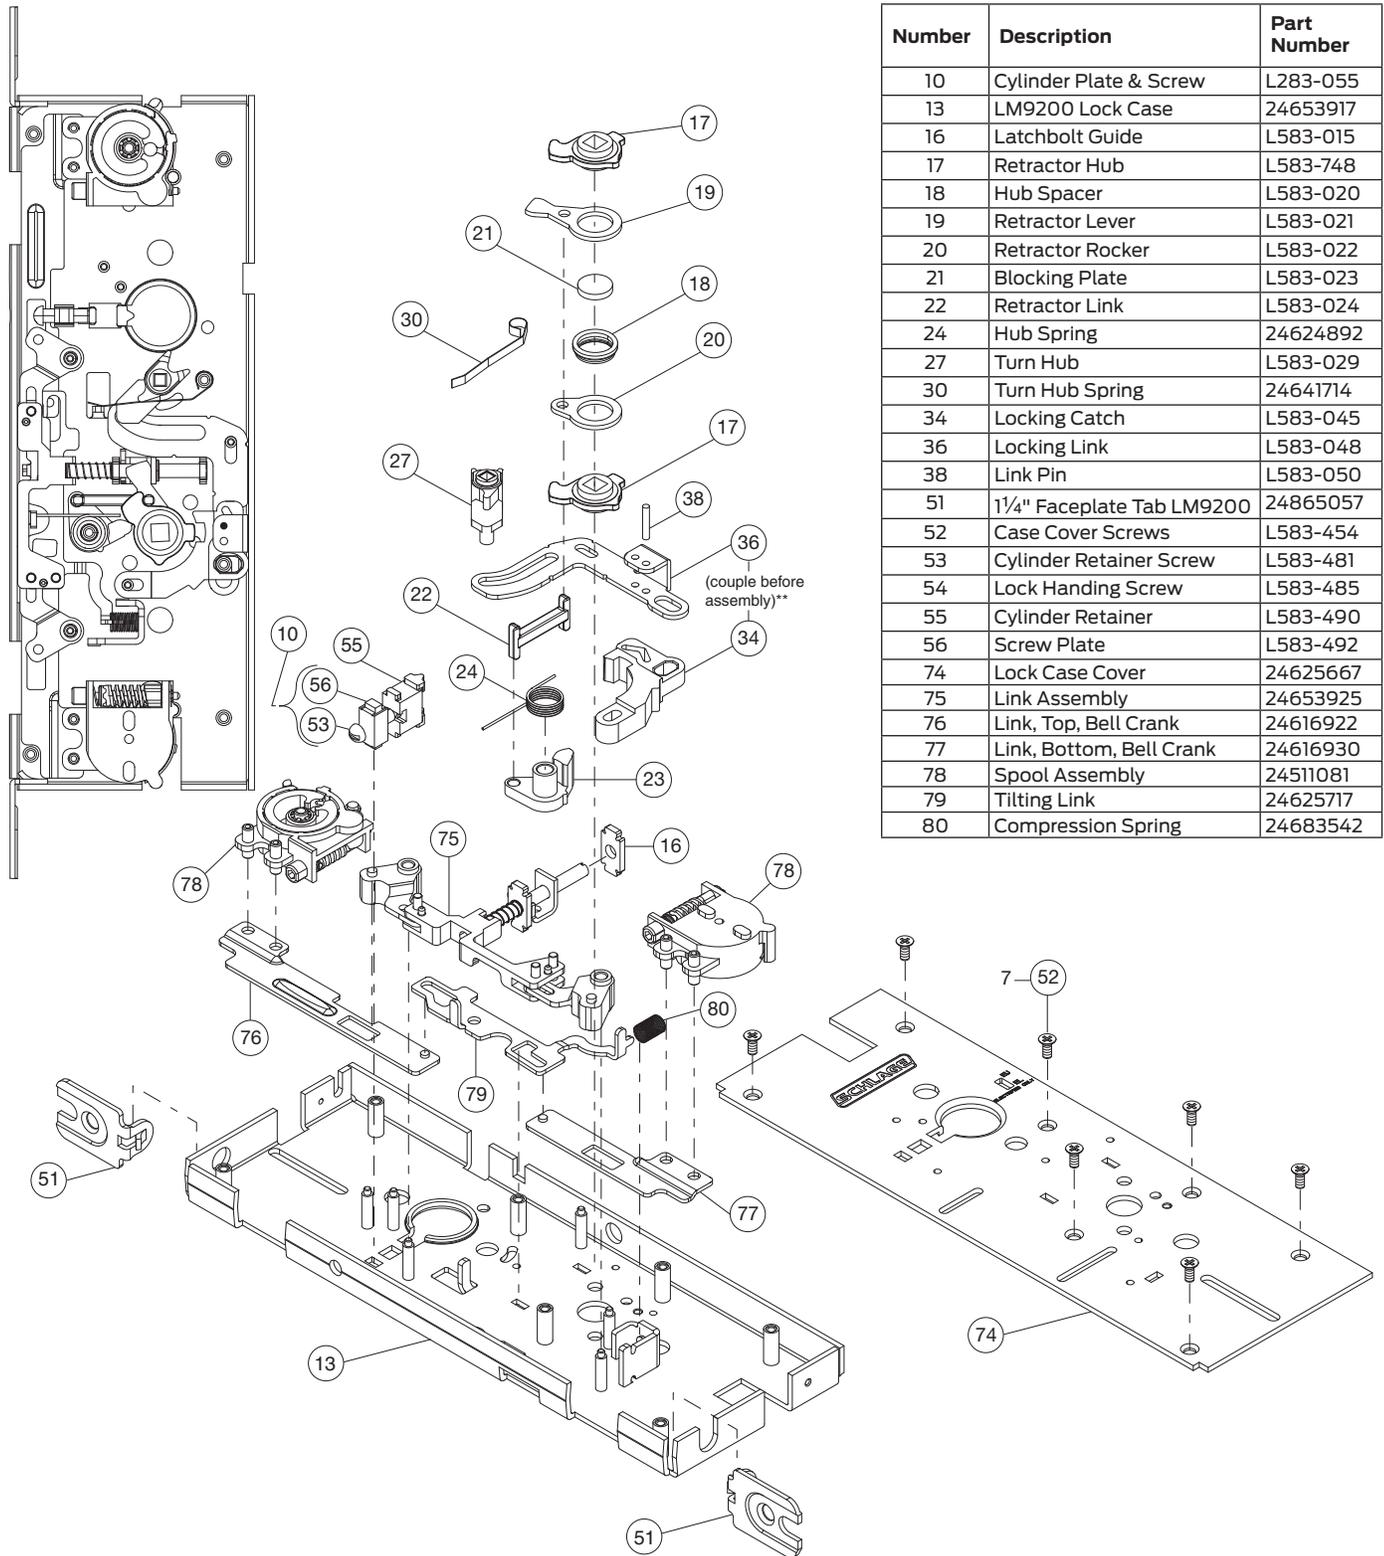

\*\* See "Assembly of lock case parts" on page 153.

LM9290 EL/EU, LM9292 EL/EU, LM9294 EL/EU

Assembled Lock Case 24759656

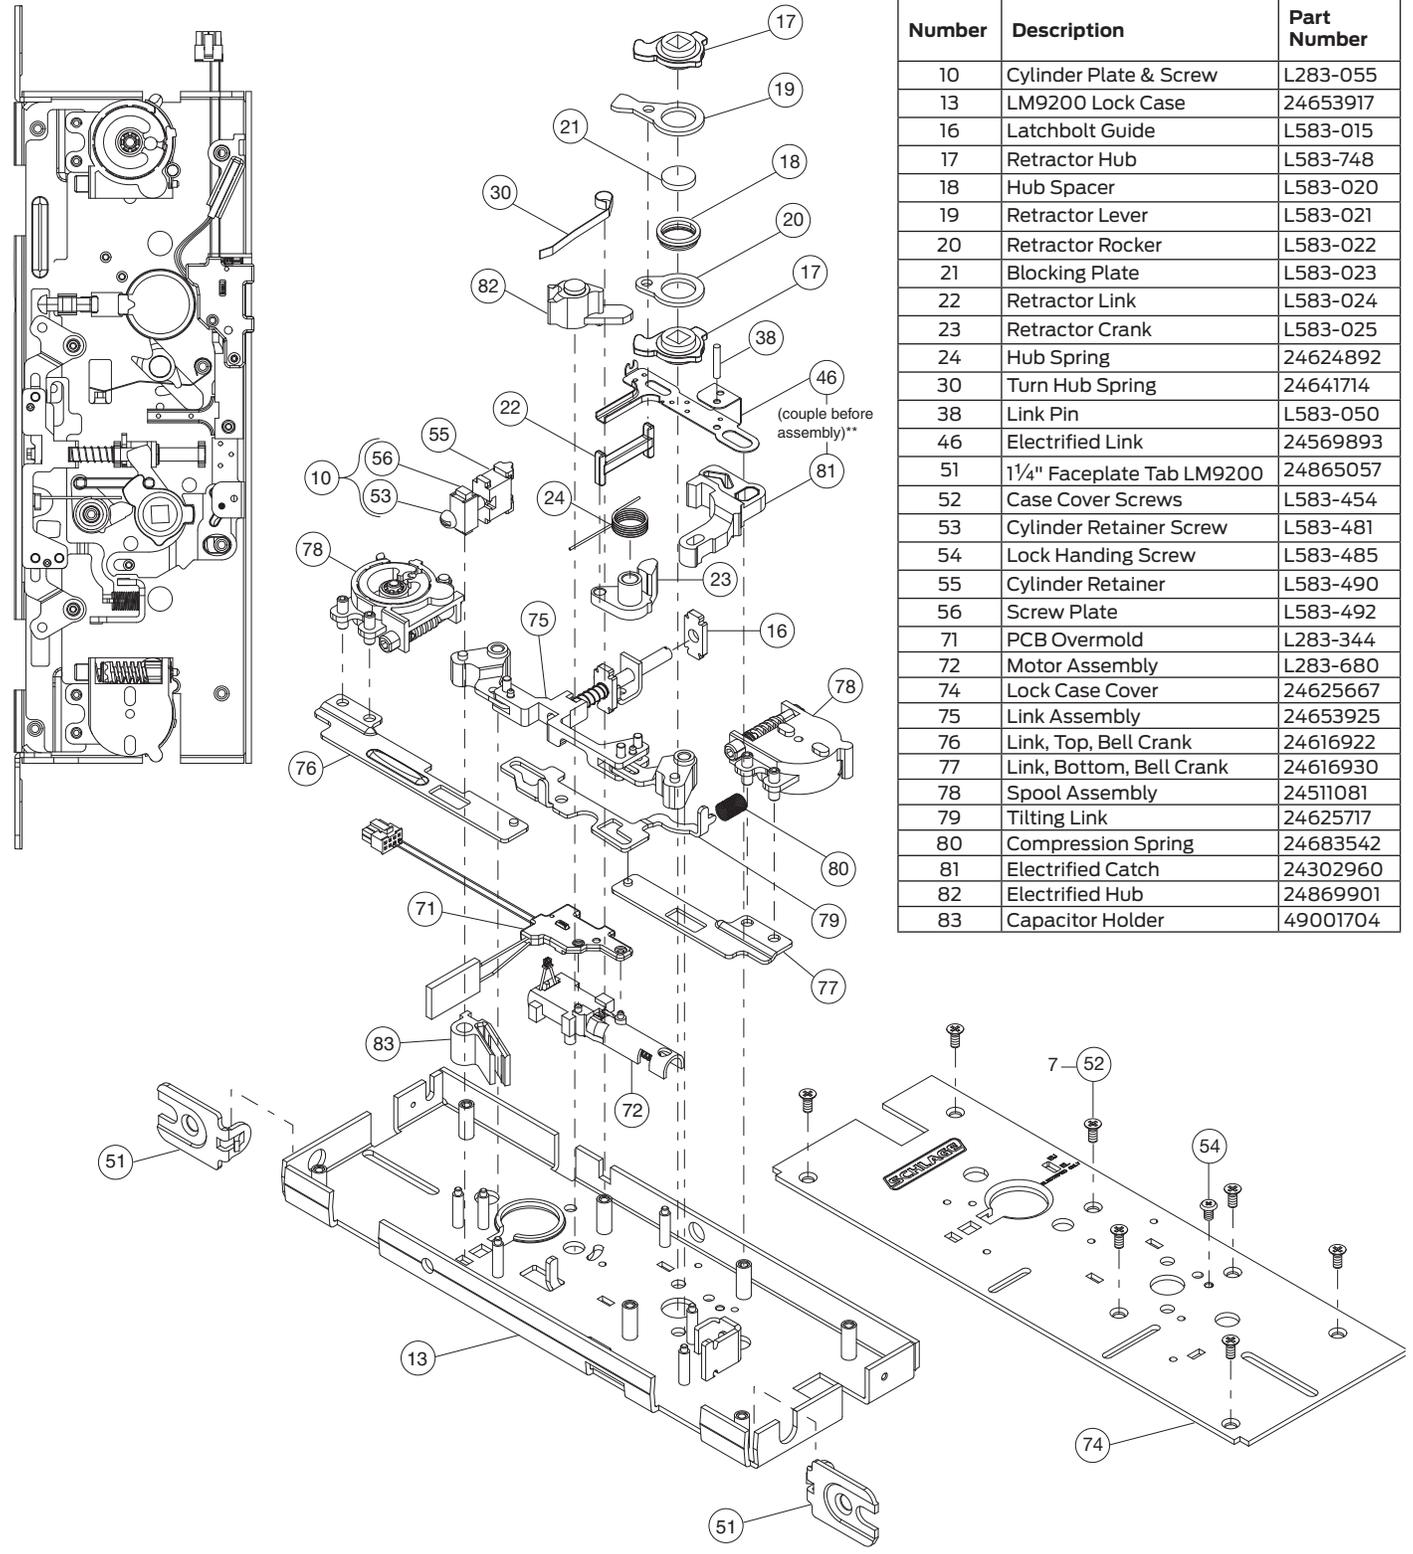


\*\* See "Assembly of lock case parts" on page 153.

Lock case assemblies

LM9291 EL/EU, LM9293 EL/EU, LM9295 EL/EU

Assembled Lock Case 24759664

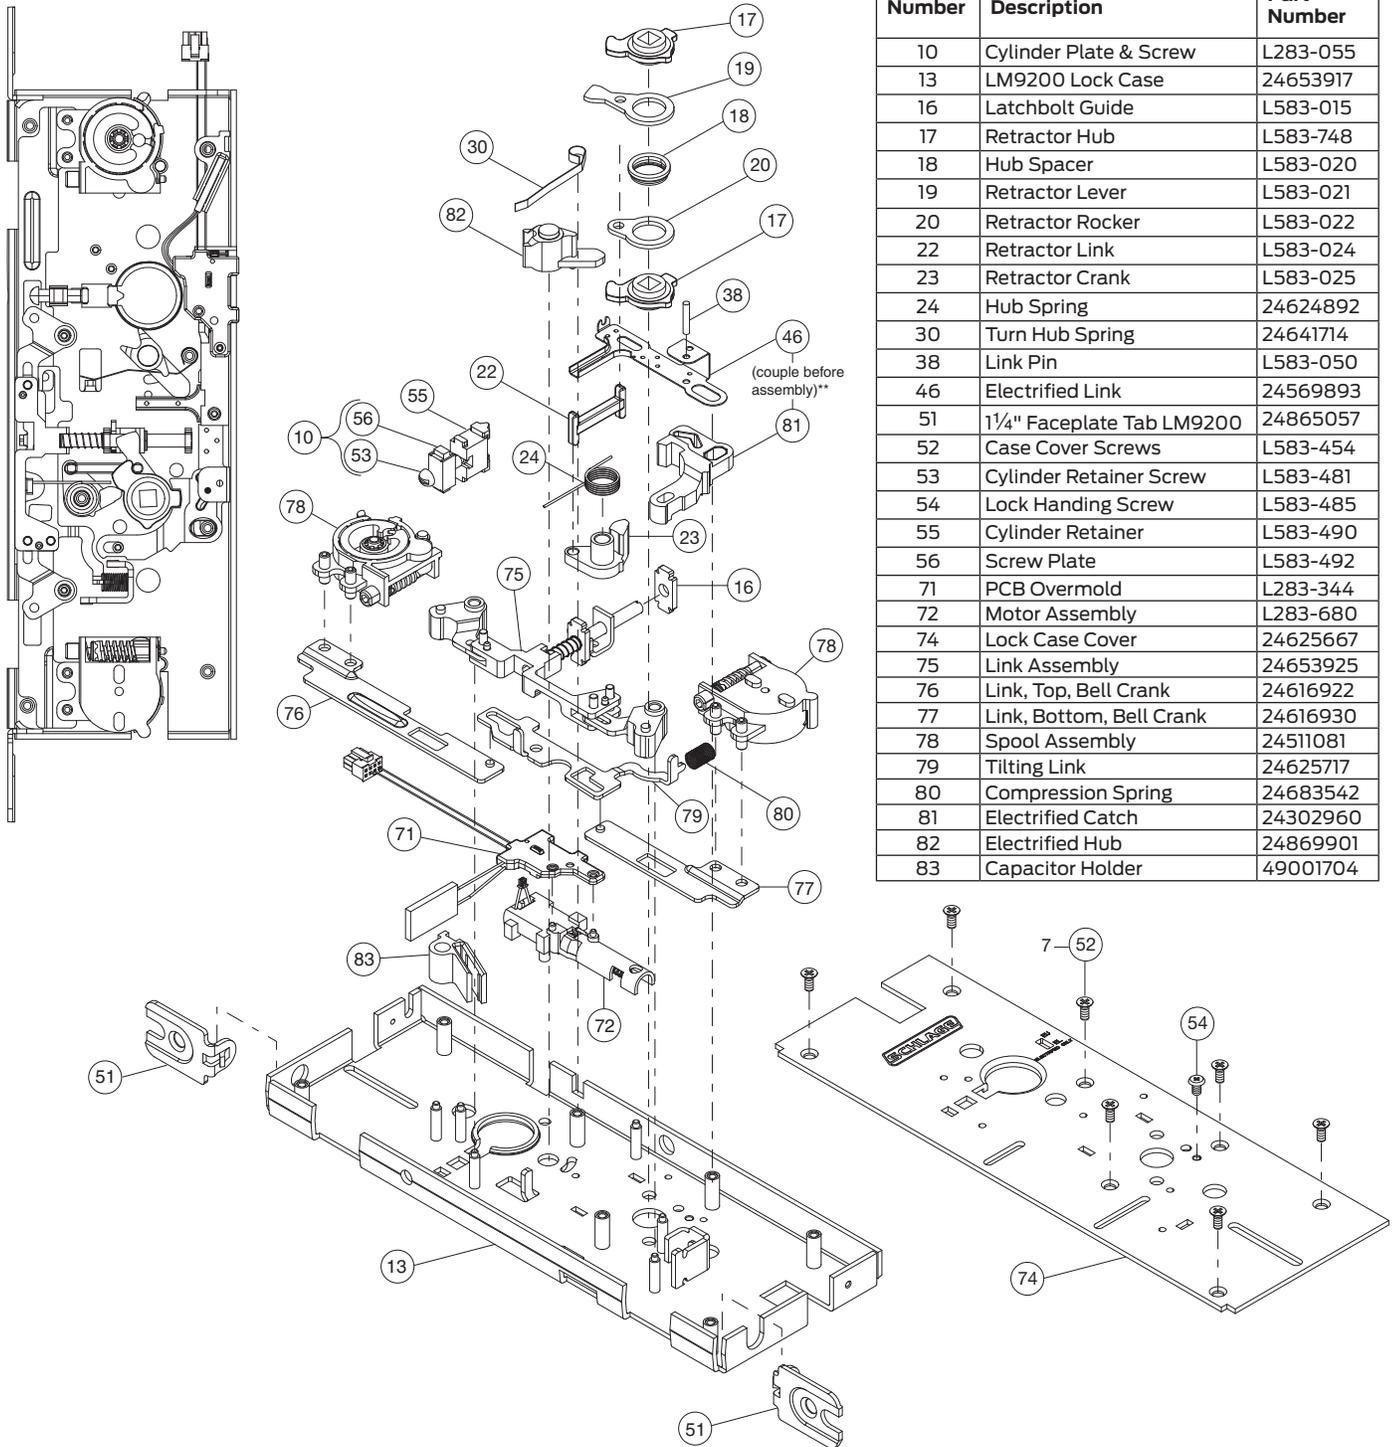

\*\* See "Assembly of lock case parts" on page 153.

## Lock case assemblies


### Lock case assembly compatibility

Use this table to determine compatibility between parts for lock manufactured in 1994.


	L283-005 Cylinder Anchor Assembly	L583-046 Lock Handling Screw	L583-046 Faceplate Tab Screw	L583-006, L583-007 Faceplate Tab	L583-452 Lock Case Cover	L283-080 Lock Case	L583-480/481/482 Cylinder Retainer Assembly	L583-485 Lock Handling Screw	L583-426, L583-427 Faceplate Tab	L583-484 Lock Case Cover	L283-130 Lock Case (April 1, 1994)	L283-130 Lock Case (July 15, 1994)
L283-005 Cylinder Anchor Assembly					.	.						
L583-046 Lock Handling Screw					.	.						
L583-046 Faceplate Tab Screw				.		.					.	
L583-006 L583-007 Faceplate Tab			.			.					.	
L583-452 Lock Case Cover	.	.				.						
L283-080 Lock Case	.	.	.	.	.							
L583-480/481/482 Cylinder Retainer Assembly										.	.	.
L583-485 Lock Handling Screw										.	.	.
L583-426 L583-427 Faceplate Tab												.
L583-484 Lock Case Cover							.	.			.	.
L283-130 Lock Case (4-1-94)			.	.			.	.		.		
L283-130 Lock Case (7-15-94)							.	.	.	.		

# Assembly of lock case parts

Turn hub spring and transfer lever

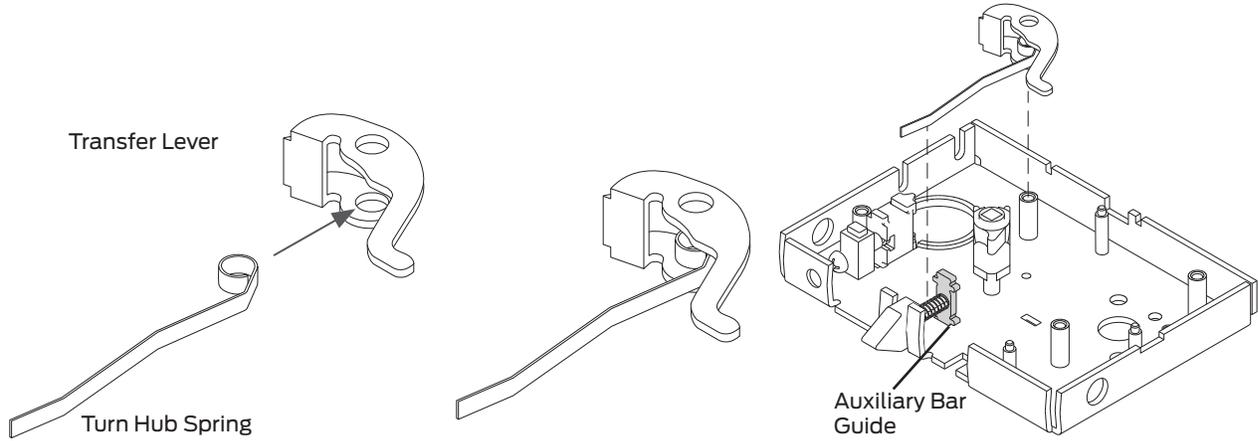


Locking catch/retractor catch and locking link

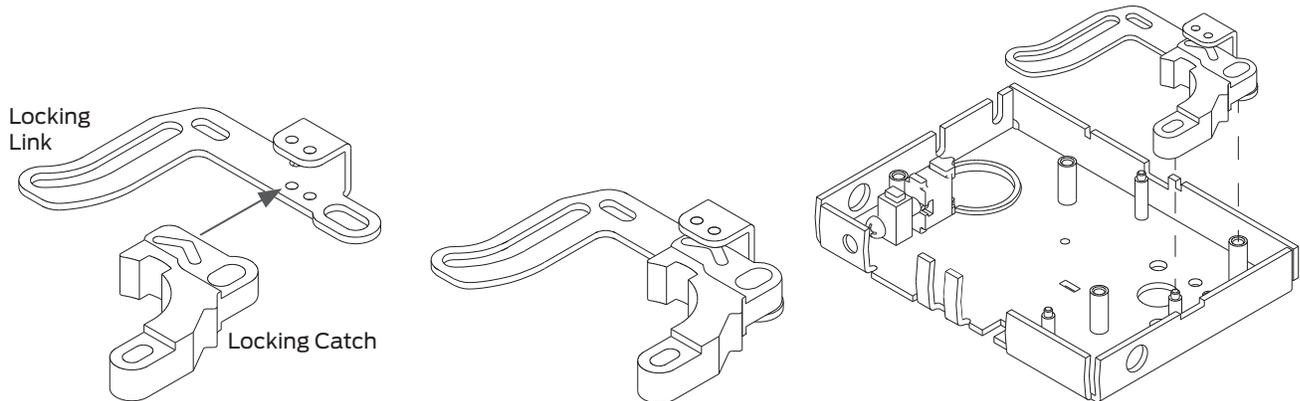


Assembly of lock case parts

L functions only: fire door fuse, fire door catch and hub spring

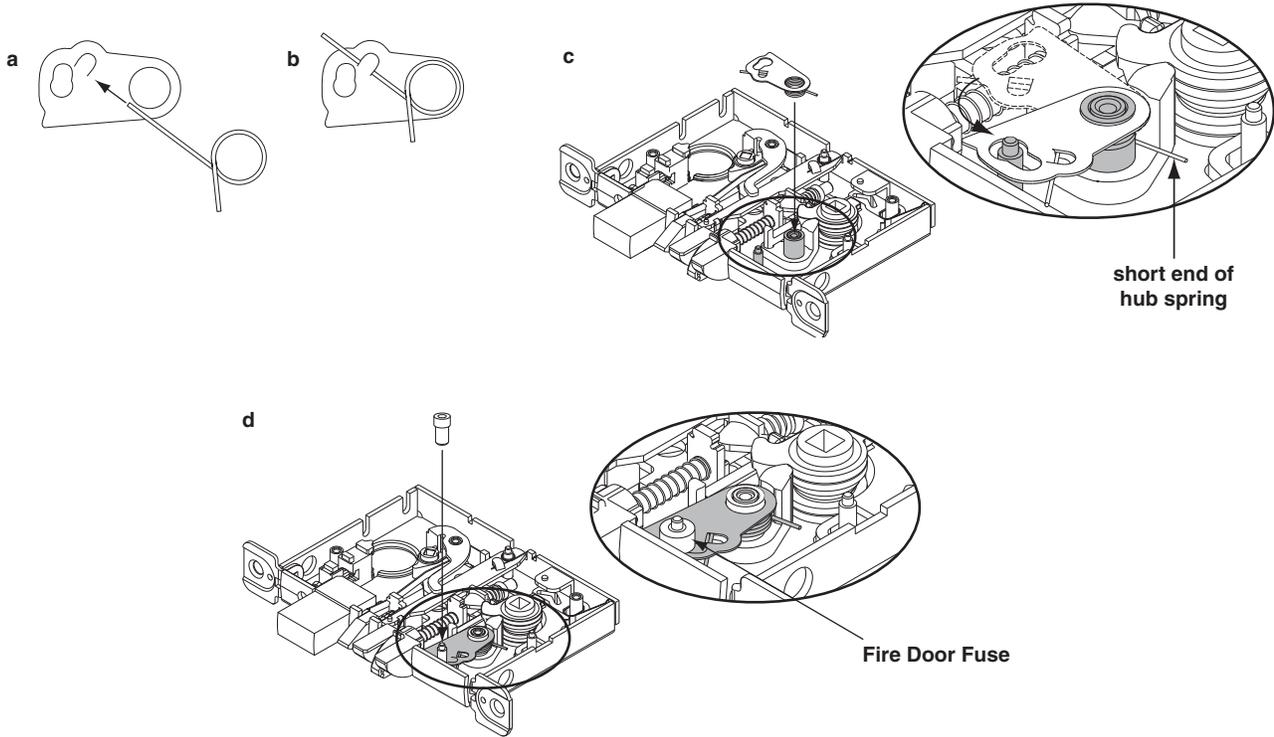

LV functions only: fire door fuse, fire door catch and hub spring

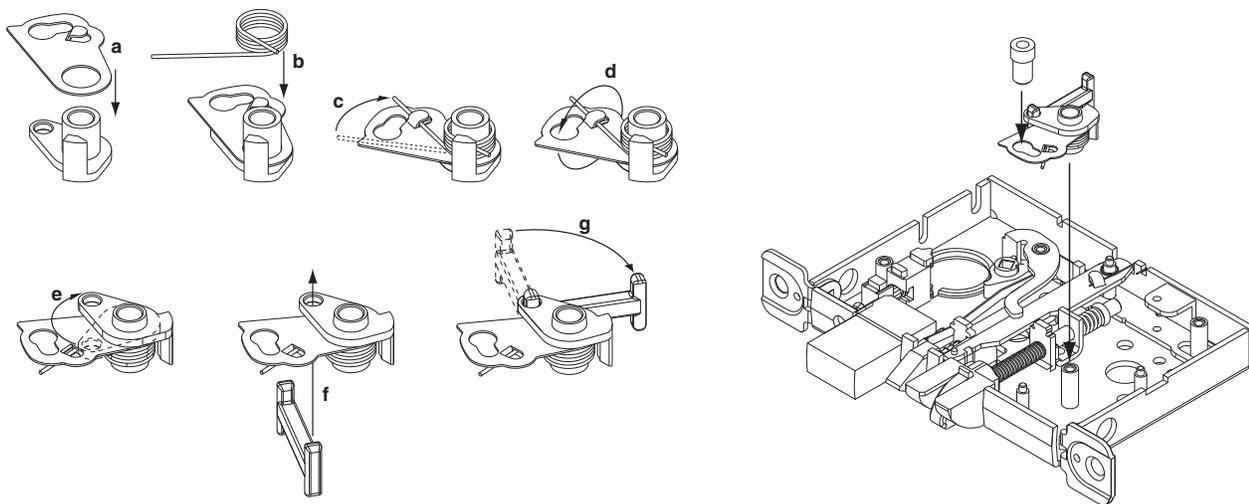


Trim options


# Trim options

## Cast or forged levers, standard lever designs


Standard levers are available in forged brass or bronze, and cast stainless steel. Levers are shown with rose trim A or B. Also available with L or N escutcheon. See escutcheon options on pages 161-163.

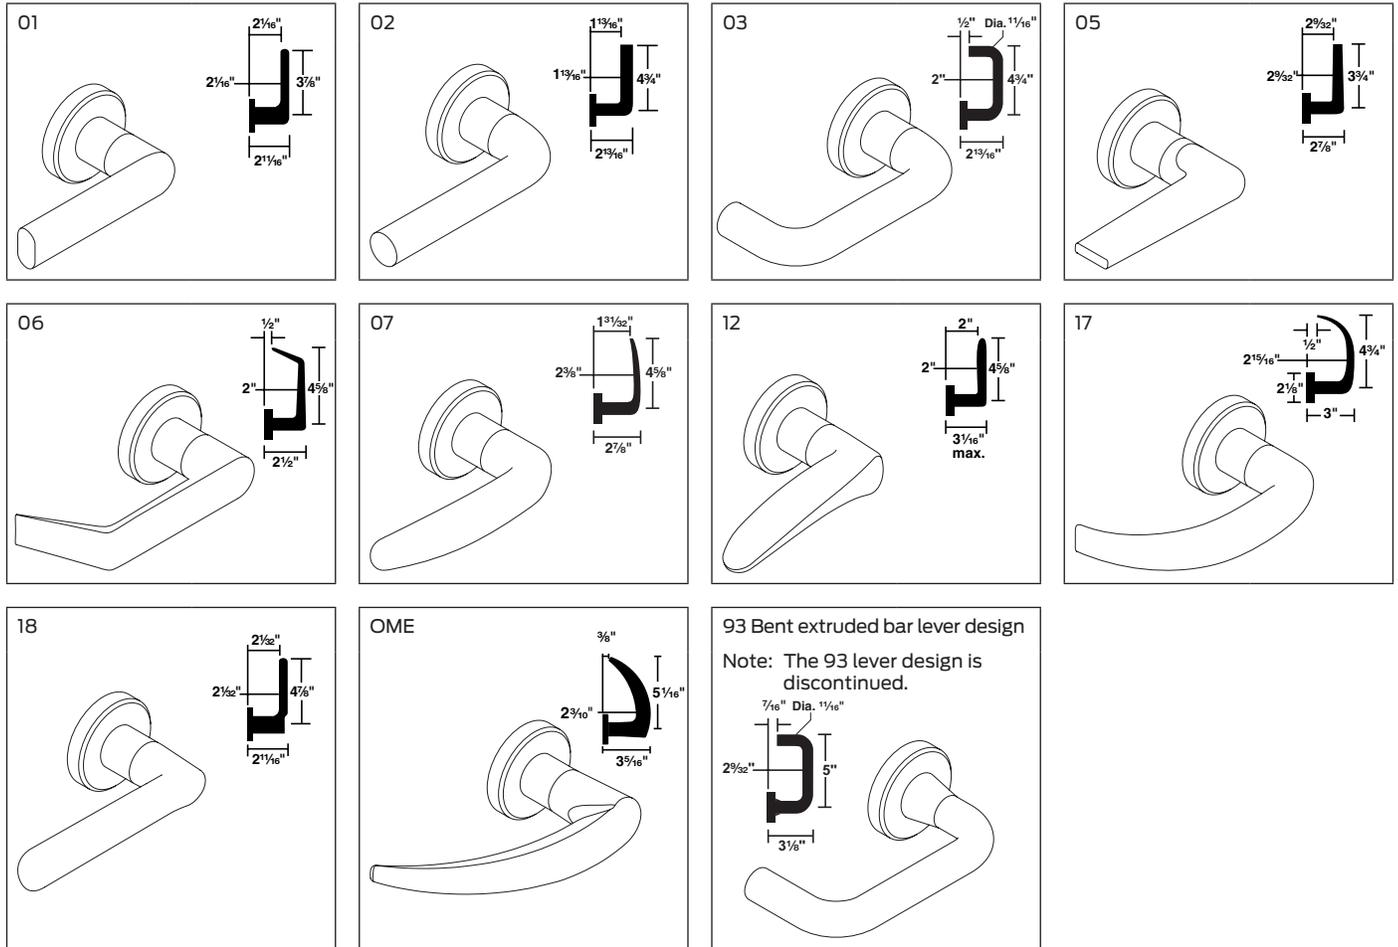

**Inside lever assembly**

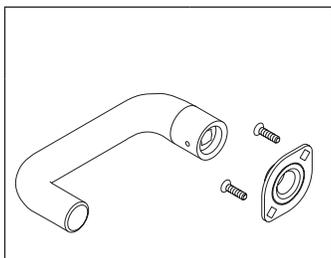

**Outside lever assembly**





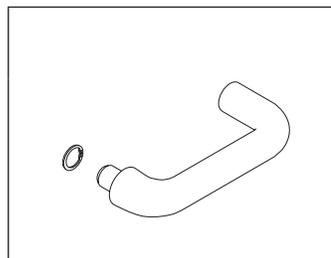


Note: See Schlage Commercial Price Book for available finishes.


Decorative trim

# Decorative trim


## Decorative levers

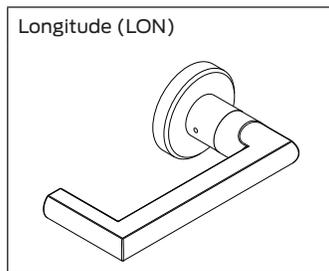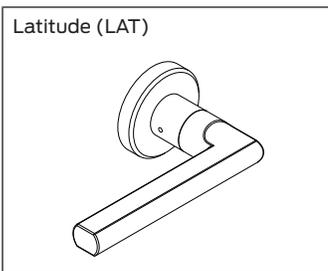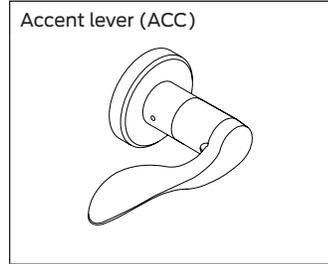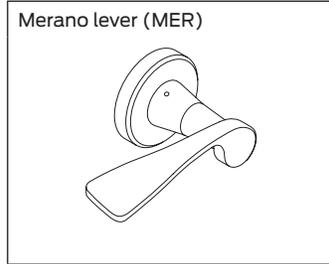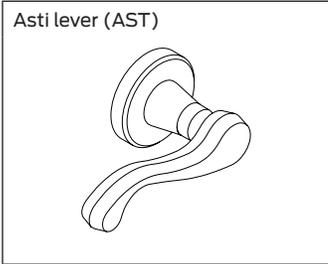


## Decorative roses

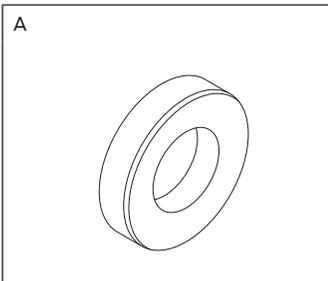


2 1/8" diameter

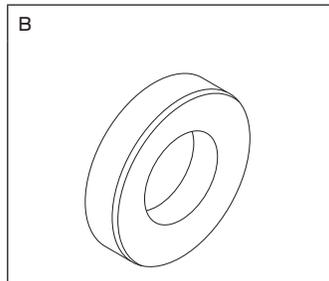


2 9/16" diameter

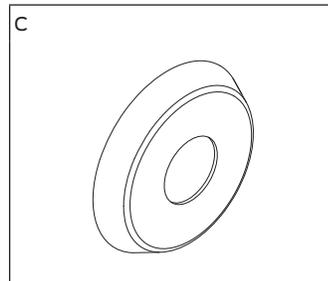

2 5/8" diameter

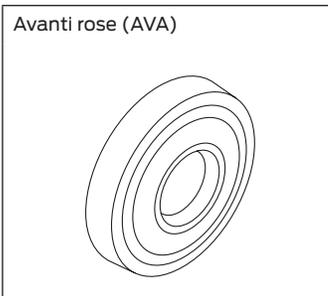

2 5/8" diameter

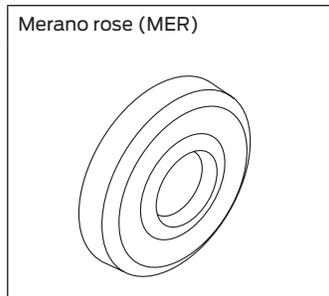


2 5/8" diameter


**M collection levers**

# M collection levers

Standard levers are available in solid brass and solid stainless steel. Levers are shown with rose trim A or B. Also available with L or N escutcheon. See escutcheon options on pages 161-163.

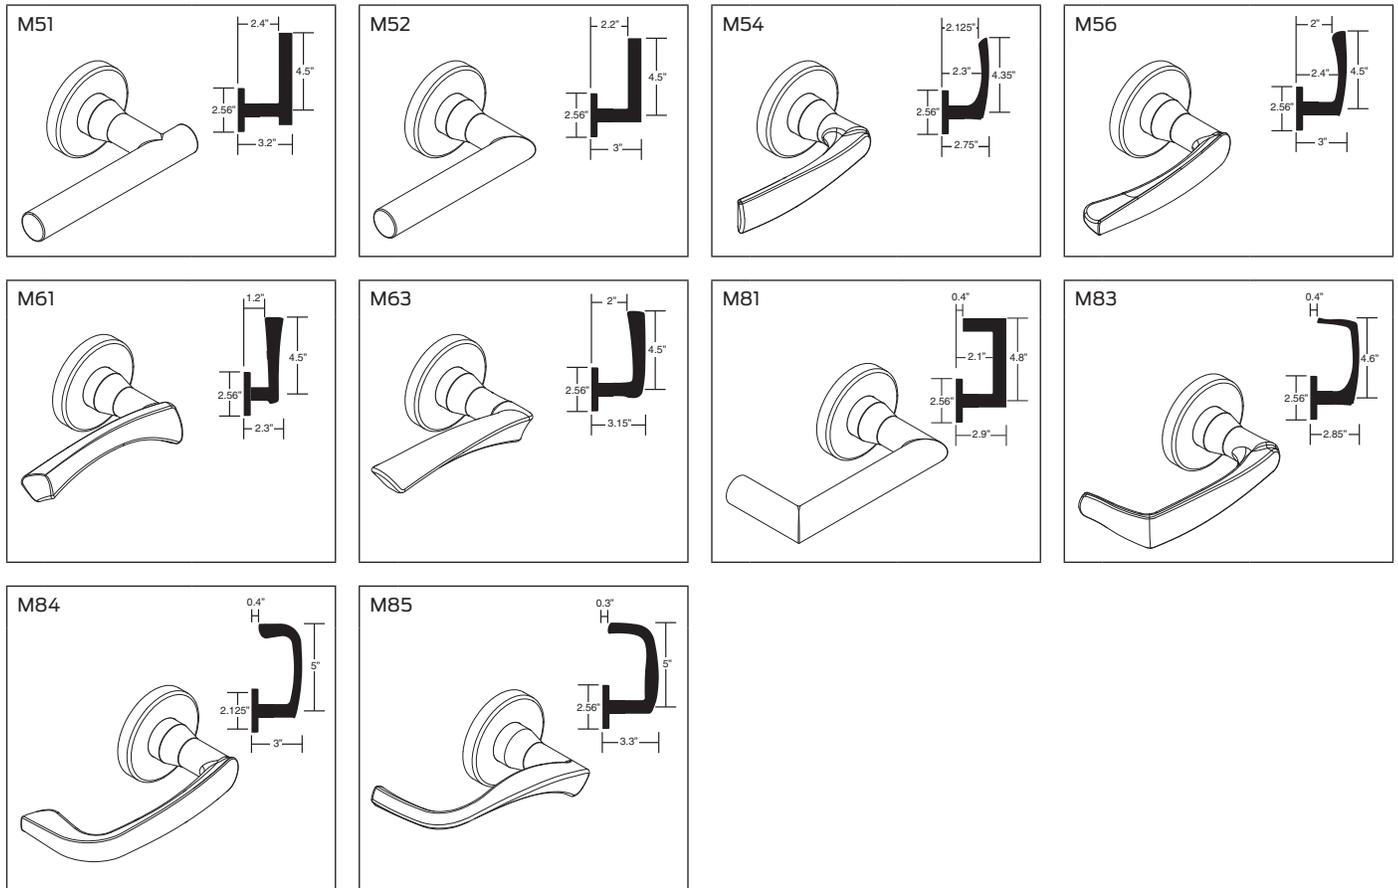


**Inside lever assembly**

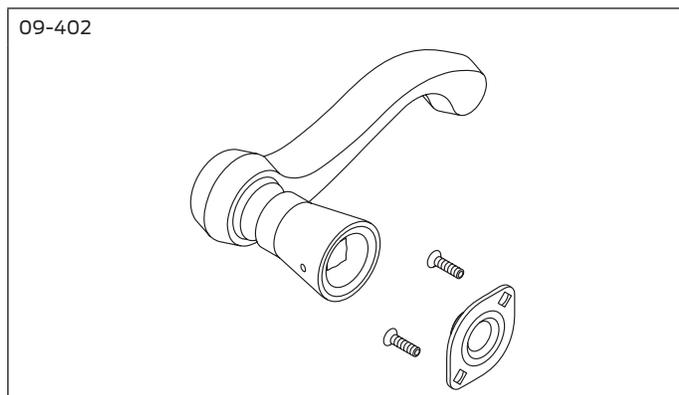

Bushing attached at factory. Furnished with spanner wrench.

Note: See Schlage Commercial Price Book for available finishes.

**Outside lever assembly**










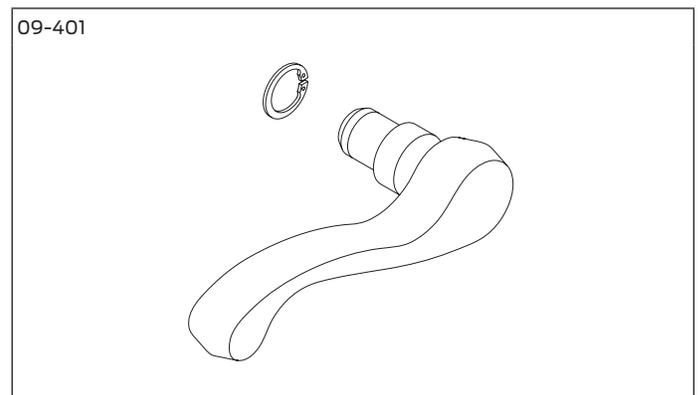


Furnished with retainer seating tool.

# Danmark stainless steel levers

For reference only. Danmark lever styles are discontinued.

## 630 Satin stainless steel finish

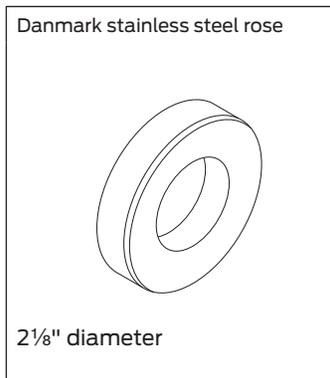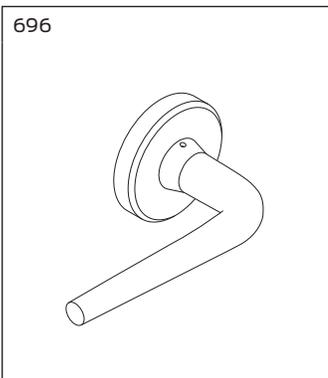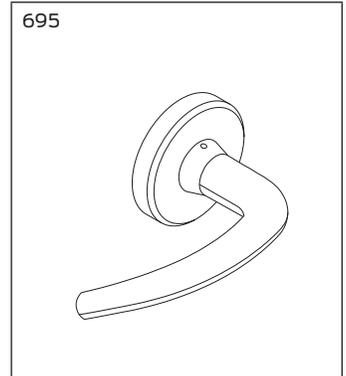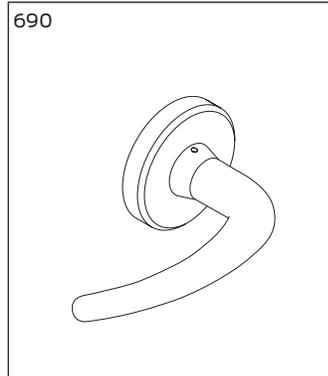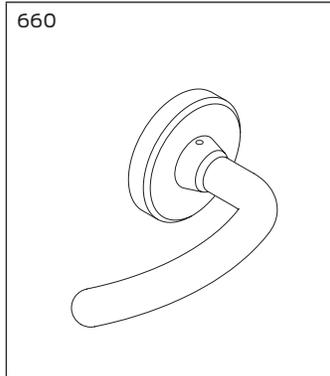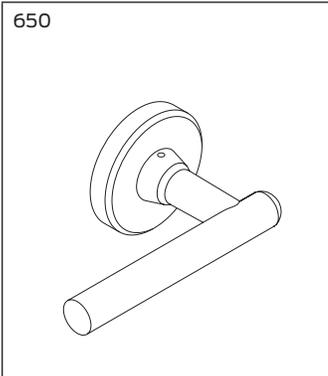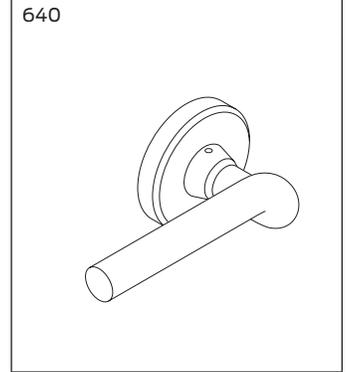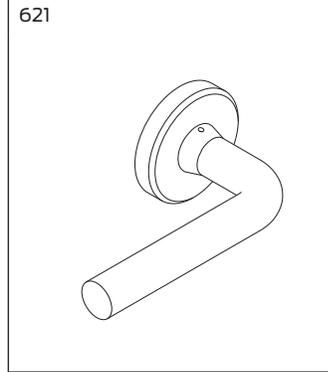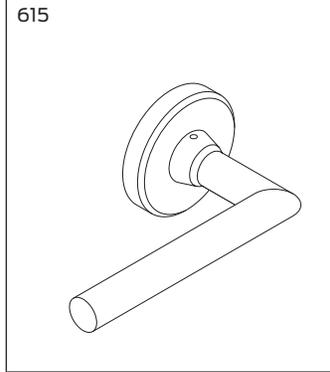
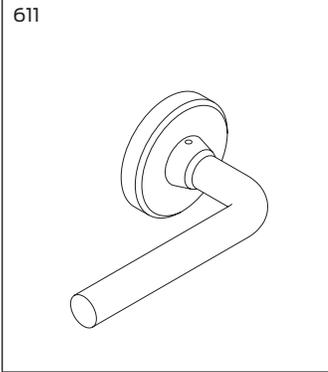


## Wrought knob designs


# Wrought knob designs

Knobs shown with rose trim A or B. Also available with L or N escutcheons.


See escutcheon options on pages 161-163.

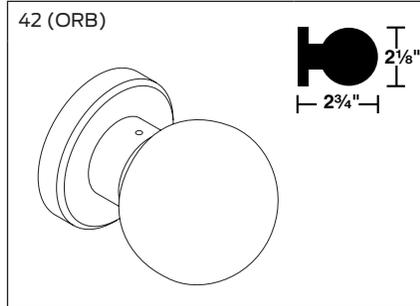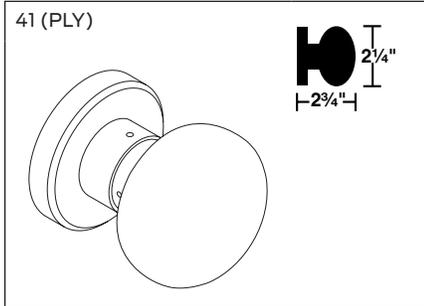

### Inside knob assembly

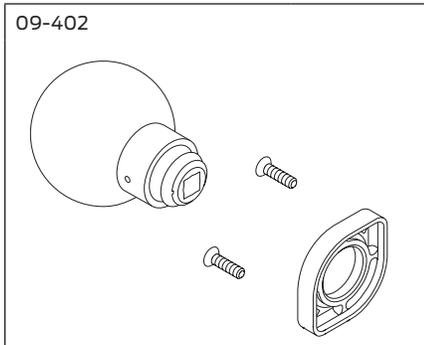

### Outside knob assembly

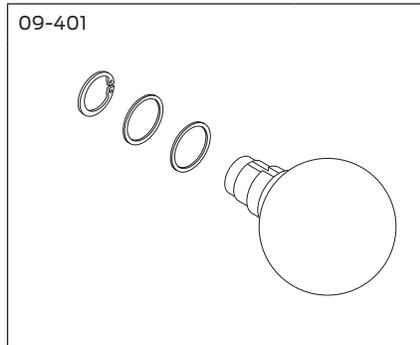

Note: See Schlage Commercial Price Book for available finishes.

# Rose trim A or B


## Inside rose

09-403

Rose design A— 2<sup>1</sup>/<sub>8</sub>" dia. x 1<sup>3</sup>/<sub>32</sub>"

Rose design B— 2<sup>9</sup>/<sub>16</sub>" dia. x 1<sup>3</sup>/<sub>32</sub>"

Rose design C— 2<sup>5</sup>/<sub>8</sub>" dia. x 1<sup>3</sup>/<sub>32</sub>"

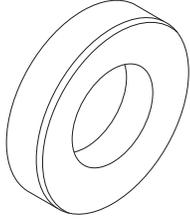

Furnished with mounting plate and screws.  
For decorative trim, see page 156.


## Blank outside rose

09-508

Rose design A— 2<sup>1</sup>/<sub>8</sub>" dia. x 1<sup>3</sup>/<sub>32</sub>"

Rose design B— 2<sup>9</sup>/<sub>16</sub>" dia. x 1<sup>3</sup>/<sub>32</sub>"




Rose design C— 2<sup>5</sup>/<sub>8</sub>" dia. x 1<sup>3</sup>/<sub>32</sub>"

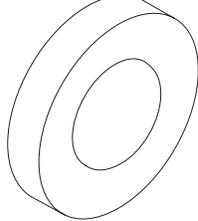

Furnished with mounting plate, screws, and plug. Used to mount inside rose trim on doors prepared for trim both sides.

## Outside rose dimensions

09-404 (bushing attached at factory) or 09-506 with knob or lever.

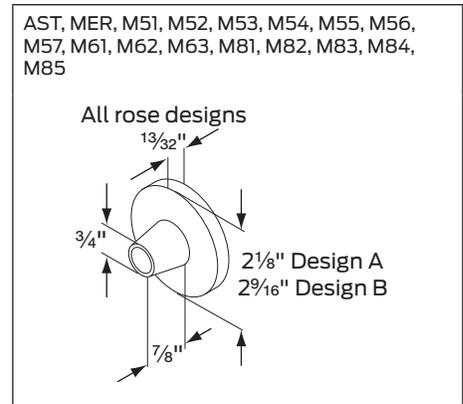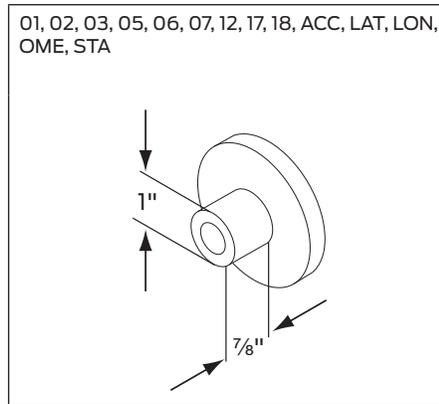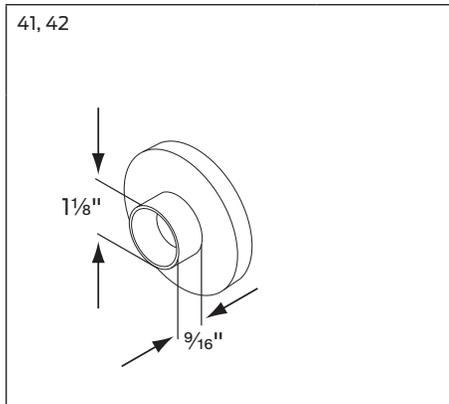


L escutcheon trim


# L escutcheon trim

### Outside escutcheon dimensions

Knob/lever design: 7<sup>1</sup>/<sub>16</sub>" x 1<sup>3</sup>/<sub>4</sub>" x 7<sup>7</sup>/<sub>16</sub>" cold forged brass, bronze, or stainless steel base material. Bushing is attached at factory.

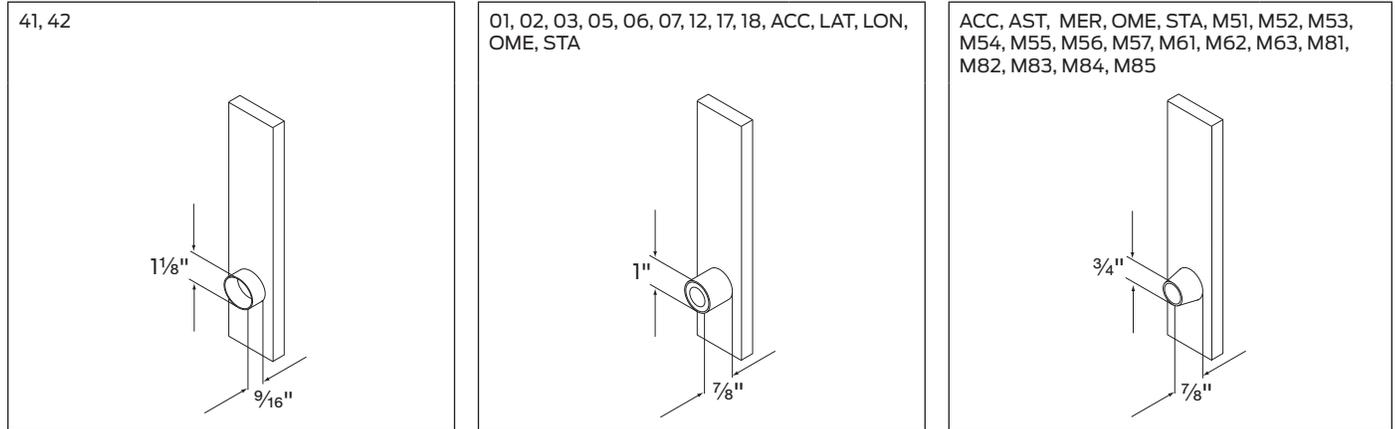

### Outside escutcheons

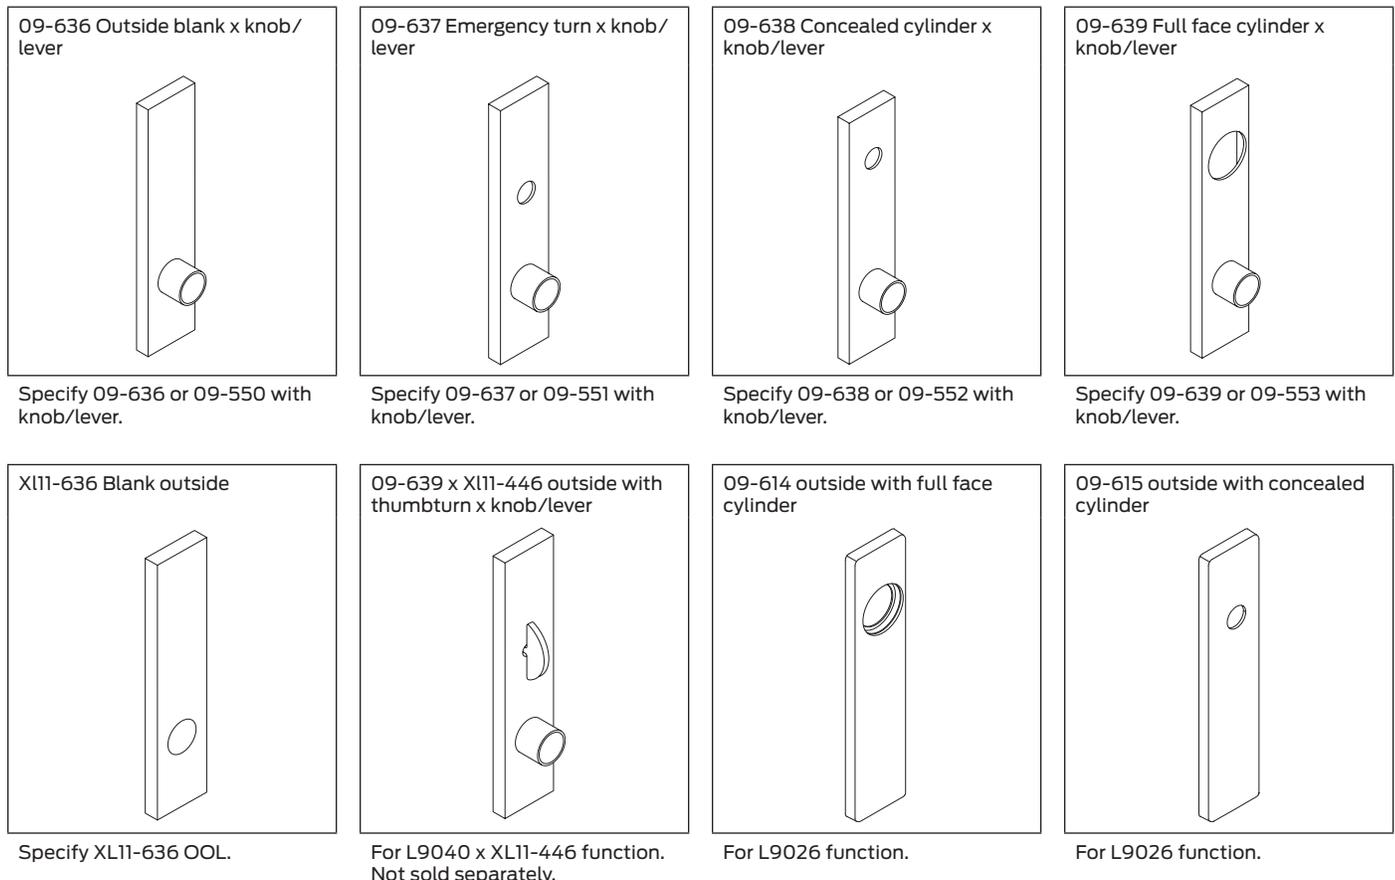


## L escutcheon trim

### Inside Escutcheons

09-632 Blank x knob/Lever




 09-633 Thumbturn x knob/Lever

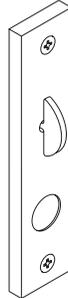

Specify door thickness: 1 $\frac{3}{8}$ " or 1 $\frac{1}{4}$ " Available with EZ Turn (ADA). See "Additional trim options" on page 165.

 09-634 Thumbturn x blank

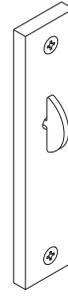

Specify door thickness: 1 $\frac{3}{8}$ " or 1 $\frac{1}{4}$ " Available with EZ Turn (ADA). See "Additional trim options" on page 165.

09-635 Full face cylinder x Knob/Lever



L583-187 Concealed cylinder x knob/lever



XL11-634 Blank inside






Notes: When ordering trim parts, specify the complete design and finish (e.g. 09-632 01L 605). See Schlage Commercial Price Book for available finishes.

**N escutcheon trim**

# N escutcheon trim

**Outside escutcheon dimensions**


Knob/lever design: 7/8" x 2 1/2" x 7/16" heavy wrought reinforced brass, bronze, or stainless steel base material. Bushing is attached at factory.

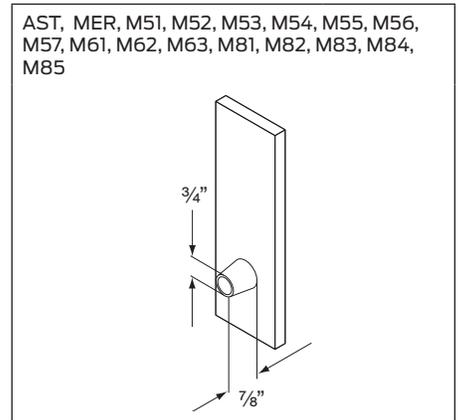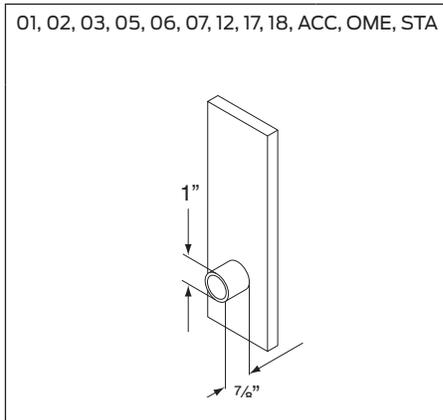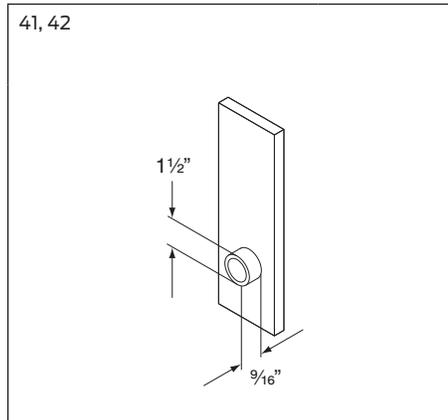


**Outside escutcheons**




Specify 09-636 or 09-550 with knob/lever.

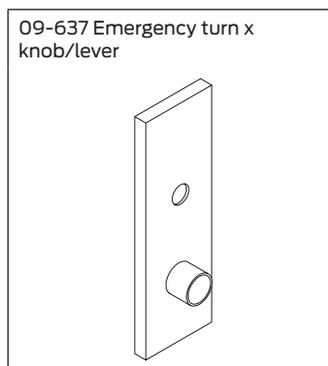

Specify 09-637 or 09-551 with knob/lever.

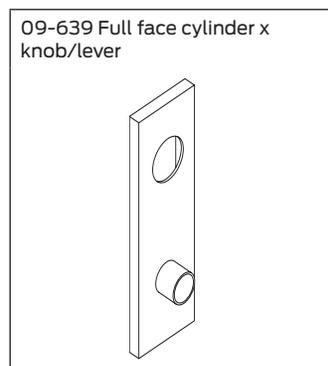




Specify 09-639 or 09-553 with knob/lever.

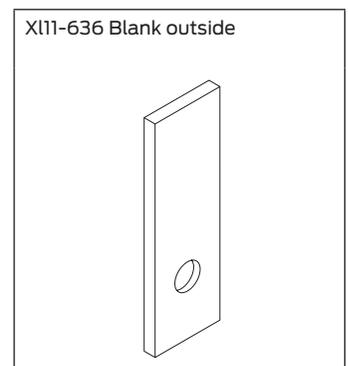

Specify XL11-636 00N and finish.

**Inside escutcheons**

(Includes two (2) screws and mounting plate)

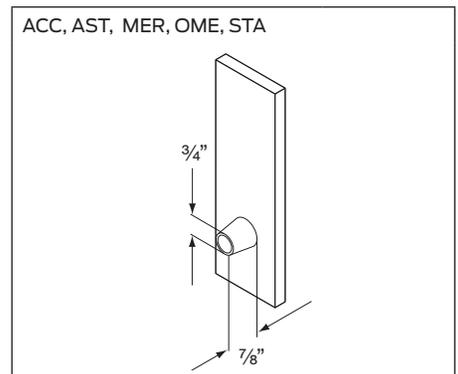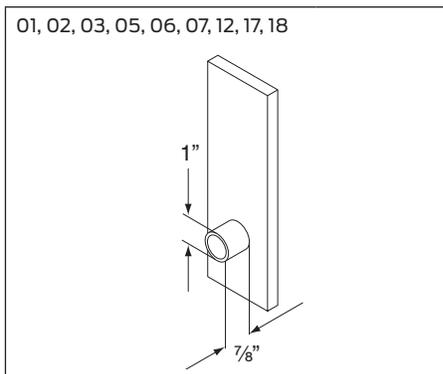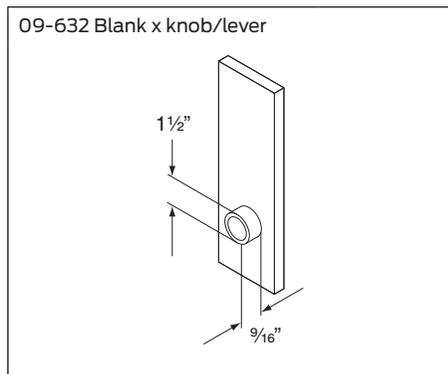

Notes: When ordering trim parts, specify the complete design and finish (e.g. 09-402 03N 605). See Schlage Commercial Price Book for available finishes.

## Indicator trim options

# Indicator trim options

Indicator trim is available for sectional and N escutcheon trim, for inside and outside trim where trim consists of a cylinder, thumb turn, coin turn or emergency turn. Specify part number for desired indicator message and placement (inside or outside). For sectional cylinder specifications, see "Indicator cylinders" on page 178. For escutcheon cylinders, see page 171.

	Indicator Message Options			
	Locked	Occupied	Do Not Disturb	Unlocked
	Unlocked	Vacant		Unlocked
Inside trim	L283-711	L283-712	L283-713	L283-714
Outside trim	L283-721	L283-722	L283-723	L283-724



## Indicator kits




	Locked	Occupied	Do Not Disturb	Unlocked
	Unlocked	Vacant		Unlocked
Sectional trim, cylinder for inside or outside of door	L283-413	L283-414	L283-415	L283-416
Sectional trim, thumb turn for inside of door	L283-417	L283-418	L283-419	L283-420
Sectional trim, coin turn for outside of door	L283-421	L283-422	L283-423	L283-424
Sectional trim, privacy for outside of door	L283-425	L283-426	L283-427	L283-428
Escutcheon trim, cylinder for outside of door *	L283-429	L283-430	L283-431	L283-432
Escutcheon trim, cylinder for inside of door	L283-433	L283-434	L283-435	L283-436
Escutcheon trim, thumb turn for inside of door	L283-437	L283-438	L283-439	L283-440
Escutcheon trim, coin turn for outside of door *	L283-441	L283-442	L283-443	L283-444
Escutcheon trim, privacy for outside of door *	L283-445	L283-446	L283-447	L283-448

\* 03, 06 or 17 levers with 626 or 630 finish only

## Indicator parts

Part number	Description	Part number	Description
L583-709	Message sign, locked/unlocked for 180° indicator	L583-712	Message sign, symbols only for 180° indicator
L583-710	Message sign, occupied/vacant for 180° indicator	L583-705	Cam, 180° indicator, thumb turn, coin turn, privacy
L583-711	Message sign, do not disturb/blank for 180° indicator	L583-739	Cam, 180° indicator, cylinder
L283-561	Cam kit, indicator (includes cam and 3/8" retaining ring)		


### 09-611 Occupancy indicators ("Old style" for sectional (rose) trim) Includes driver bar L583-245

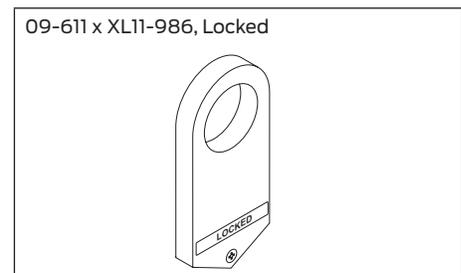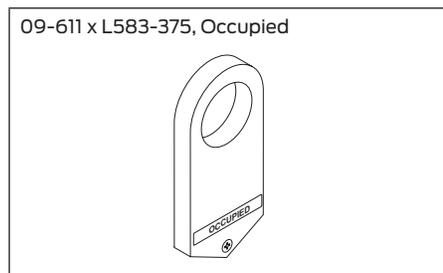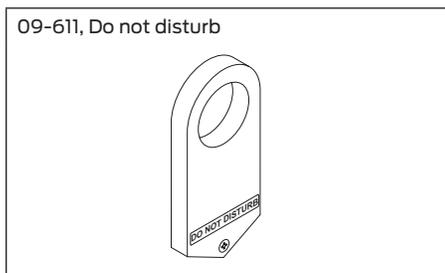

**Additional trim options**


# Additional trim options

**"EZ" thumbturn (ADA) for rose trim**

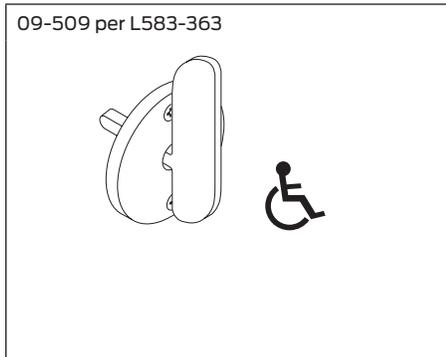


Not available for L463 or L9463 functions.

**"EZ" thumbturn (ADA) x knob/lever with L or N escutcheon**

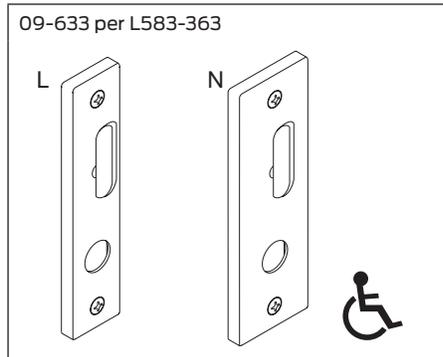

Not available for L9463 functions.


**"EZ" thumbturn (ADA) x blank with L escutcheon**

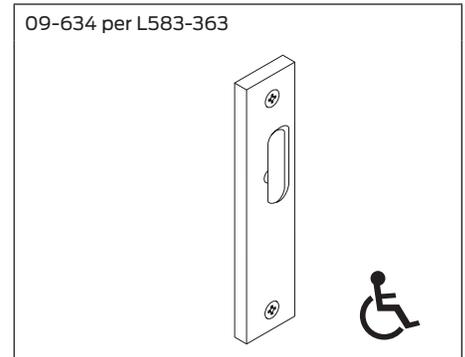

Not available for L9463 functions.


Notes: "EZ" thumbturn is not available on doors less than 1 3/8" thick.  
When ordering trim parts, specify the complete design and finish (e.g. 09-633-03L 605).  
See Schlage Commercial Price Book for available finishes.

**Thumbturn**

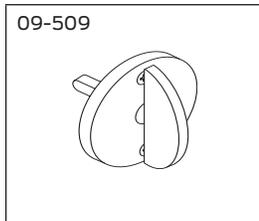


Thumbturn for deadbolt functions and privacy locks with rose trim. Specify finish and door thickness.

**ADA cylinder turn**

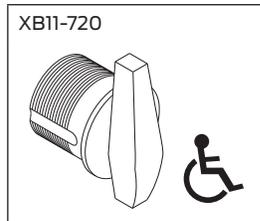


Available with L463 and L9463 locks. Specify per XB11-720, dimension, finish and door hand. If handing is not required, specify NH (non-handed). When ordered alone, specify either 09-900, 09-904, 09-905 or 09-907 per XB11-720.

**Cylinder classroom turn**

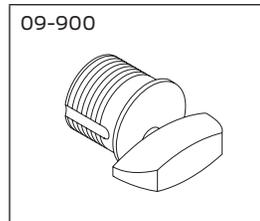


09-900 through 09-907  
Cylinder classroom turns are furnished with L463 and L9463 locks. Specify dimension, finish and door hand. If handing is not required, specify NH (non-handed). For handing instructions, see page 190.

**Coin turn**

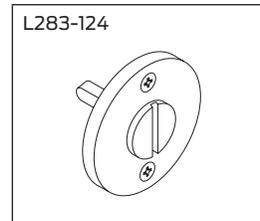


Coin turn for rose trim. Specify finish and door thickness. Available with Torx® screws, specify L283-056.

**Coin turn and plug**

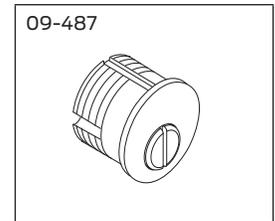


Specify dimension, finish and door hand. If handing is not required, specify NH (non-handed).

**Emergency turn**

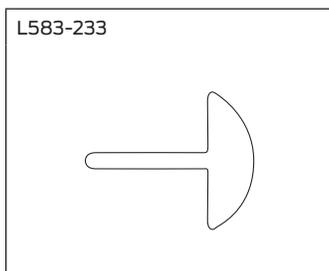


Furnished with L9040 and L9440. Specify finish as 458.

**Emergency button**

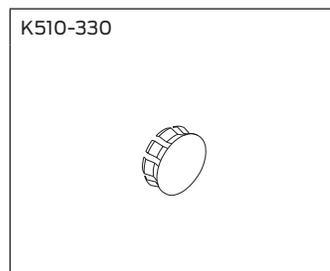


Furnished with L9040 and L9440. Specify finish.

**Modified inside and outside O3 lever for Folger Adam Co.® Lever Trak™**

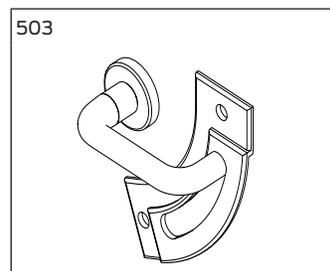

09-401, 09-402, or 09-506 per 503. Available for rose trim only. Lever Trak is not included.

**Occupancy indicator breakaway driver bar**

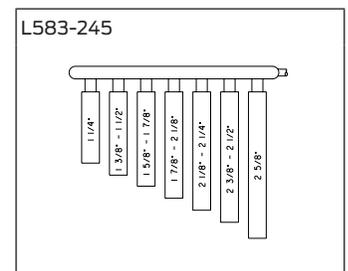


Breakaway driver bars, all door ranges. L496, L/LV9486 and L/LV9496 functions (09-611 occupancy indicator) only.


## Additional trim options

### Tactile warning (knurling)


Applied to outside knob/lever only unless otherwise specified.

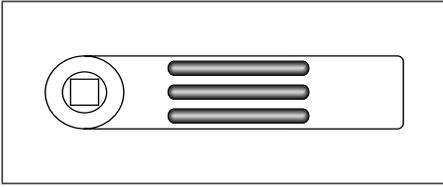


Milling pattern for backside of 01, 06, 07, 17, and 18 levers.

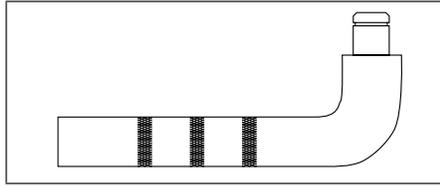


Knurling pattern for 02 lever.

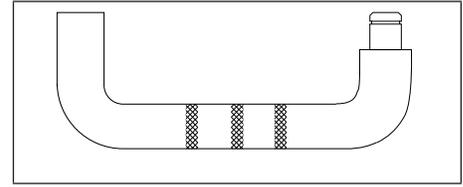


Knurling pattern for 03 lever.

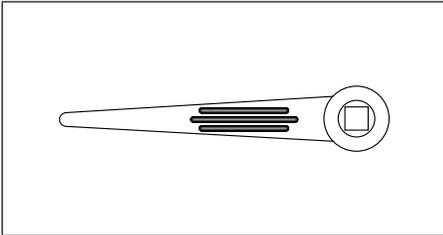

Milling pattern for backside of 05 lever.

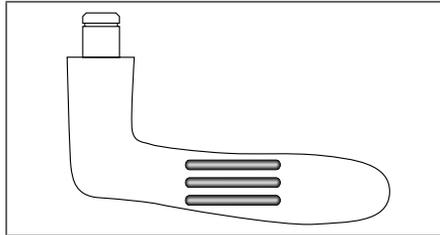

Milling pattern for underside of 12 lever. Specify door hand.

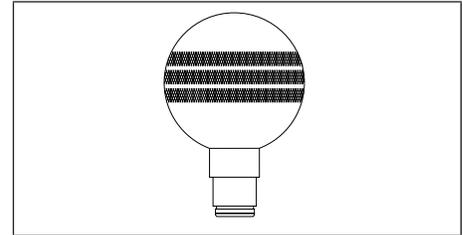

Knurling pattern for 42 knob. Tactile warning is available for 41 and 42 knobs.

Notes: When ordering trim parts, specify the complete design and finish (e.g. 09-633-03L 605). See Schlage Commercial Price Book for available finishes.

To specify knurling, place the number 8 in front of the lever design code (e.g. 801 for lever design 01 with knurling).

## Trim assembly parts

### Escutcheon thru-bolt/screws

Two required per lock

Part number	Specify finish	Description	Door thickness
L583-119	•	L escutcheon thru-bolts/screws	1 $\frac{3}{8}$ "
L583-120	•		1 $\frac{3}{4}$ "
L583-121	•		2"
L583-122	•		2 $\frac{1}{4}$ "
L583-123	•		2 $\frac{1}{2}$ "
K510-389	•	N escutcheon thru-bolts/screws	1 $\frac{3}{4}$ "
K510-390	•		2–2 $\frac{1}{4}$ "
L583-287	•	L escutcheon thru-bolts/screws, l0170 single	–
L583-133	•	N escutcheon thru-bolts/screws, l0170 single	–

## Additional trim options

### Standard screw packs

Part number	Specify finish	Description	Contents
C203-736	455	Lock case mounting screws	(2) C603-256, #12-24 WMS PFH
C203-736	•	Strike screws	(2) C603-256, #12-24 WMS PFH
K110-020	•	Armor mounting screws	(2) K510-210, #8-32 x ¼" PFHMS
K110-947	•	Rose trim thumbturn screws	(2) K510-445, #4 x ½" POH AB
L283-100		Trim mounting screws and posts, 1¼" doors	(2) L583-066, #8-32 x ⅝" PFH (2) L583-212, 1¼" ferrule
L283-101	•	L escutcheon thru-bolts, 1¼" doors	(2) L583-120

### Tamper resistant Torx® screw packs

Part number	Specify finish	Description	Contents
L283-121	•	Rose trim without thumbturn	(2) Armor screws, L583-370, #8-32 x ¼" (T-15) (2) Strike screws, L583-371, #12-24 x ½" (T-20)
L283-123	•	L escutcheon trim for 1¼" doors	(2) Armor screws, L583-370, #8-32 x ¼" (T-15) (2) Strike screws, L583-371, #12-24 x ½" (T-20) (2) Escutcheon mounting screws, L583-373, ¼-28 x 2⅛" (T-30)
L283-122	•	Rose trim with thumbturn	(2) Armor screws, L583-370, #8-32 x ¼" (T-15) (2) Strike screws, L583-371, #12-24 x ½" (T-20) (2) Thumbturn screws, L583-372, #4 x 2½" (T-8)
XL11-848	•	N escutcheon trim for 1¼" doors	(2) Armor screws, L583-370, #8-32 x ¼" (T-15) (2) Strike screws, L583-371, #12-24 x ½" (T-20) (2) Escutcheon mounting screws, XL11-841, #8-32 x 1½" (T-20)

Note: Torx® screw packs are furnished with appropriate T-xx installation tools.

### Mounting posts

Two required per lock

L Functions	
Part number	Door thickness
L583-211	1⅝"
L583-212	1¾"
L583-213	2"
L583-215	2½"
L583-216	2¾"
L583-217	3"
L583-218	3¼"
L583-219	3½"

LV Functions	
Part number	Door thickness
N/A	1⅝"
L583-497	1¾"
L583-498	2"
L583-500	2½"
L583-501	2¾"
L583-502	3"
L583-503	3¼"
L583-504	3½"

### Spindles and springs

Two required per lock

Part number	Description
L283-060	1⅝"–1⅞" doors
L283-061	2"–3½" doors
L283-064*	L0172 double dummy, L9082 EL/EU, L9066 x XL11-897, L9091 EL/EU, L9093 EL/EU, L9095 EL/EU, L9493 EL/EU, L9495 EL/EU
L283-065*	L0170 single dummy

\* One required per lock

**Additional trim options**


**Mounting plate for trim one side only**

**L283-150** Mounting plate and posts for rose trim on one side of door. For lever, use with spring cage L283-031. For knob, use with mounting plate L583-321.

**DOOR DETAIL**

For location of cylinder and/or thumbturn holes, as well as all other dimensions, see appropriate lock function template.

Measure backset from  $\mathcal{Q}$  of door edge.

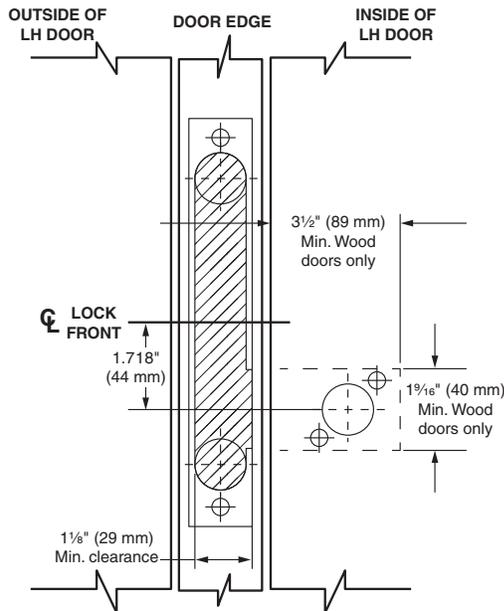


**NOTE:** Prepare door for rose trim on one side of door only.



**L-Series Installation Instructions**

Mounting plate for trim one side

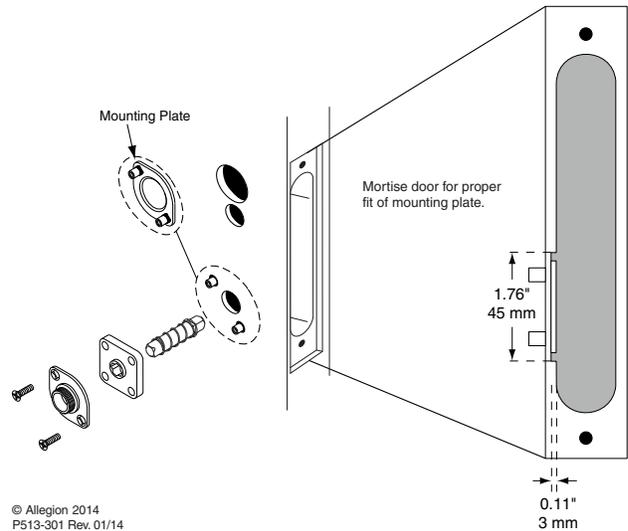


© Allegion 2014  
P513-301 Rev. 01/14

**ANSI A115.1 1990 Hollow steel door installations**










L283-029 For 1/4" thick hollow steel doors prepared per ANSI A115.1, 1990.

Install two spacers between the spring cage (or knob mounting plate) and lock as chassis shown. Spacers are required for both the inside and outside escutcheons.

Note: L escutcheon designs are not applicable for ANSI A115.1 door preparations.

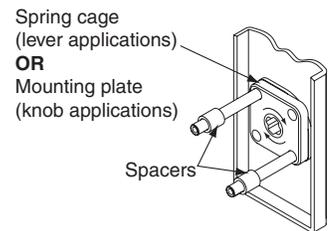


# Armor fronts

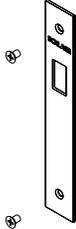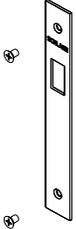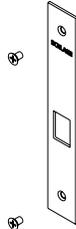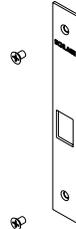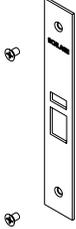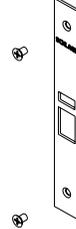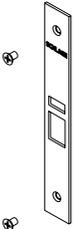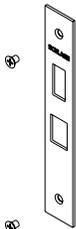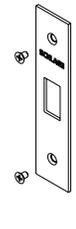         1/4" Square corner	1/16" Square corner*	Description and functions	1/4" Square corner	1/16" Square corner*	Description and functions
<b>Non UL</b> 09-661 	09-667 	Blank  L9110 L9175 L9176	<b>Non UL</b> 09-168 <b>UL</b> 09-665 	09-179  09-671 	Deadbolt  L9460 L9462 L9463 L9464
<b>Non UL</b> 09-165 <b>UL</b> 09-662 	09-216  09-668 	Latch  UL L9010 L/LV9040 L/LV9044	<b>Non UL</b> 09-169 <b>UL</b> 09-666 	09-180  09-672 	Latch x aux latch x deadbolt  UL L/LV9453      L/LV9482 L/LV9458      L/LV9485 L/LV9480      L/LV9486
<b>Non UL</b> 09-166 <b>UL</b> 09-663 	09-177  09-669 	Latch x auxiliary latch  UL L/LV9050      L/LV9071 L/LV9056      L9080 L/LV9060      L/LV9082 L/LV9070	<b>Non UL</b> 09-713 	—  	Latch x auxiliary latch (holdback)  L/LV9076 L/LVV9077
<b>Non UL</b> 09-167 <b>UL</b> 09-664 	09-178  09-670 	Latch x deadbolt  UL L/LV9440      L9465 L/LV9444      L9466 L/LV9456      L9473 L/LV9457      L/LV9496	<b>Non UL</b> 09-215 <b>UL</b> 09-717 	—  	Deadbolt  L460      L464 L462      L480 L463      L496

\* For use with 1 3/8" thick doors. Use with 1/16" faceplate tab, L583-427.

# Strikes

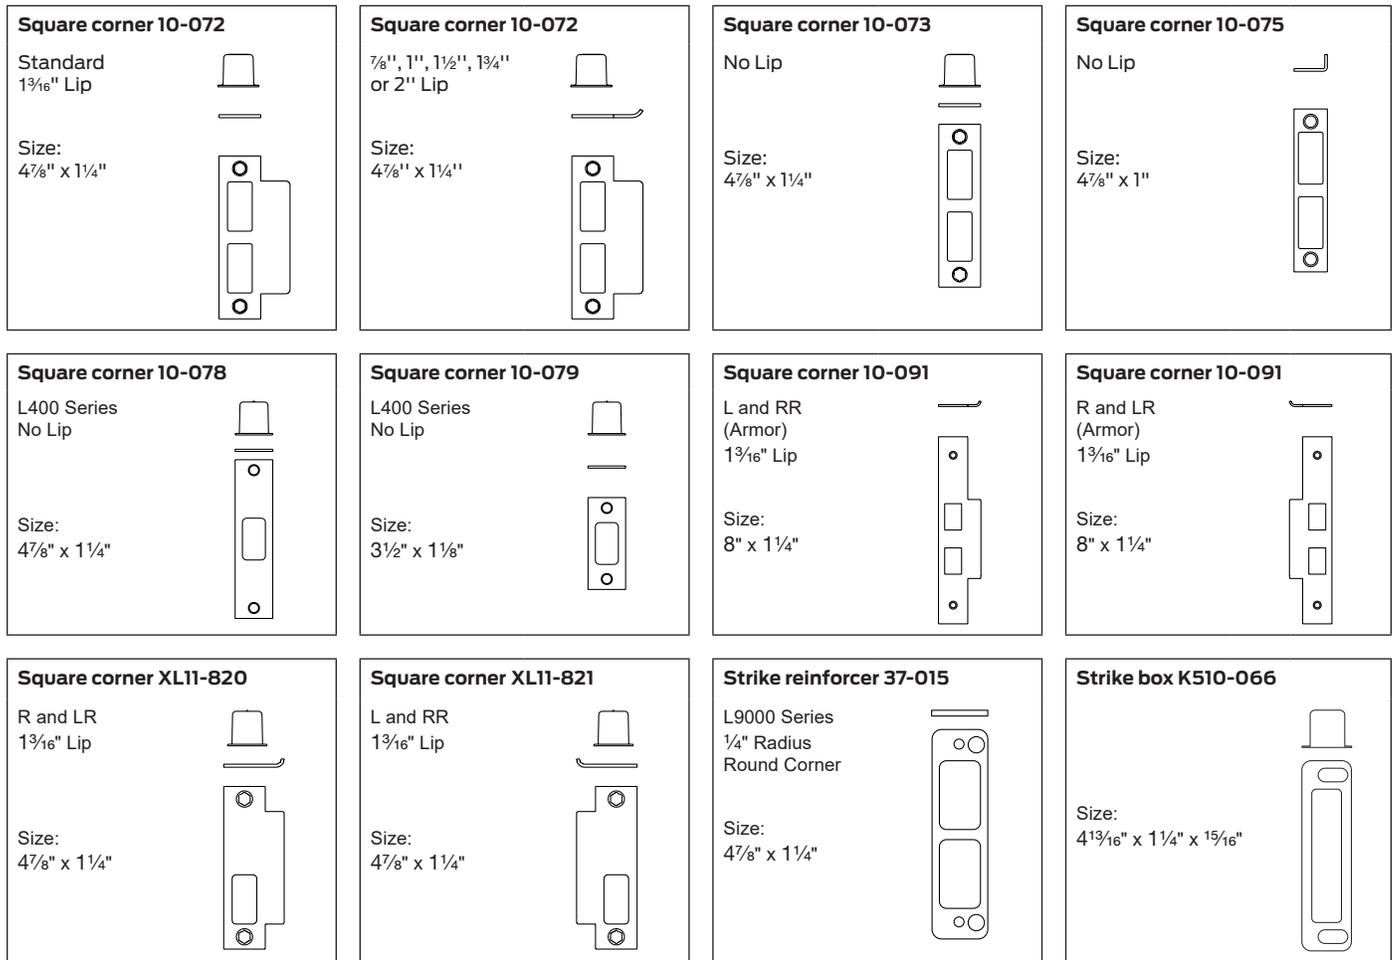

## Strike dimensions and components

Part number	Lip	Lock series	Door range	Strike box	Screws (2 ea)
10-072*	1"	L9010 to L9496	—	K510-066	C603-256
	1 3/16"		1 3/8"–1 7/8"	K510-066	C603-256
	1 1/2"		1 7/8"–2 1/8"	K510-066	C603-256
	1 3/4"		2 1/8"–2 5/8"	K510-066	C603-256
	2"		2 5/8"–3 1/8"	K510-066	C603-256
	7/8"		—	K510-066	C603-256
10-073	—	—	—	K510-066	C603-256
10-075***	—	L9000 Series	—	—	C603-256
10-078	—	L400 Series	—	K510-066	C603-256
10-079	—	—	—	K510-053	C603-256
10-091**	1 3/16"	L9175, L9176	1 3/8"–1 7/8"	—	K510-210
XL11-820**, XL11-821**	1 3/16"	L9000 non-deadbolt functions	1 3/8"–1 7/8"	K510-066	C603-256
37-015	—	L9000	—	—	—

\* Specify lip length.

\*\* Specify lip length and hand of inactive door.

\*\*\* For 1 3/8" thick doors use 1 1/16" wide armor fronts. For 1 3/4" thick and up doors, use 1 1/4" wide armor fronts.


Note: Strike boxes and screws can be ordered as parts.

## Cylinders


# Cylinders

## How to measure cylinder lengths

Full face and interchangeable core

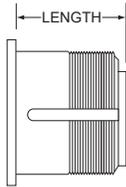

Concealed

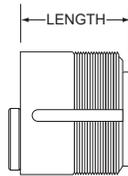

Cylinder length	Dimension
1½"	118
1¼"	114
1⅜"	138
1½"	112
1⅝"	158
1¾"	134

## L-Series, LV-Series cylinder and length requirements


Includes 180° indicators with escutcheon trim. For 180° indicators with sectional trim, see page 178.

Function	Trim	Cylinder	Door Thickness			
			1⅜"	1¼"	2"	2¼"
			Dimension			
L9026, L9050, L9056, L9070, L9076, L9080, L9453, L9456, L9460 per XL11-635/886, L9464 per XL11-886, L9465, L9473, L9480	Rose	30-001	118	118	118	118
	Escutcheon	30-021	118	114	138	112
	Concealed	30-004	118	114	138	112
LM9280, LM9380	Rose	30-000	118	114	—	—
	Escutcheon	30-019	118	114	—	—
L9485	Rose	30-002	—	118	118	118
	Escutcheon	30-022	—	114	138	112
	Concealed	30-005	—	114	138	112
L9486	Rose	30-002	114	138	112	158
	Escutcheon	30-022	118	114	138	112
	Concealed	30-005	118	114	138	112
L9496	Rose	30-001	114	138	112	158
	Escutcheon	30-021	118	114	138	112
	Concealed	30-004	118	114	138	112
L9060 inside, L9071, L9077, L9082, L9082EL/EU, L9457, L9458, L9462 per XL11-886, L9464, L9466, L9482	Rose	30-001	118	118	118	118
	Escutcheon	30-001	114	—	—	—
		30-021	—	118	114	138
Concealed	30-004	—	118	114	118	
L9060 outside	Rose	20-001	118	118	118	118
	Escutcheon	20-001	114	—	—	—
		26-021	—	118	114	138
Concealed	26-023	—	118	114	138	
L460, L462, L463, L464, L496, L9460, L9462, L9463, L9464	Rose trim only	30-001	118	118	118	118

Note: Blocking ring and/or compression rings may be required and must be ordered separately. See page 179 for details.

## Cylinders

### Full face cylinders

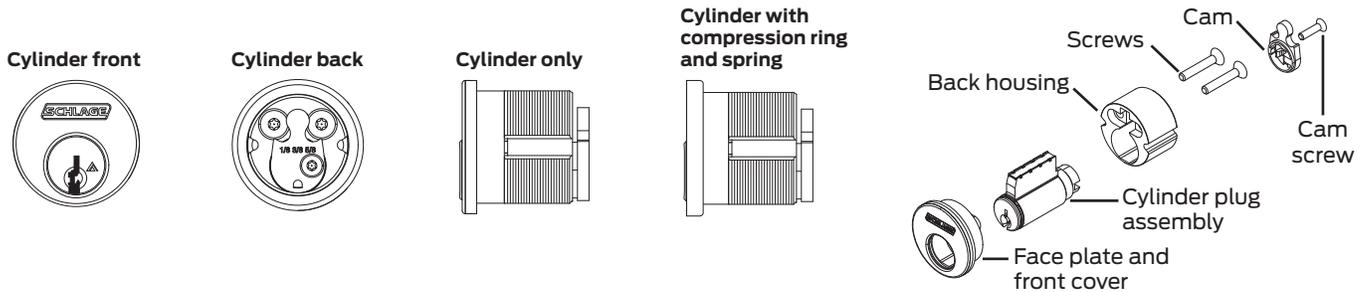

#### L-Series, LV-Series (except L9060/LV9060 outside and LM9280, LM9380/LMV9380)

Description	Cylinder mechanism	Complete cylinder
Cylinder only: L and N escutcheons	Conventional	30-021
	Primus® controlled access	20-793
	Primus XP controlled access	20-793-XP
	Primus UL437	20-593
	Primus XP UL437	20-593-XP
	Hotel function	30-022*
Cylinder with compression ring and spring: Rose trim	Conventional	30-001
	Primus controlled access	20-787
	Primus XP controlled access	20-787-XP
	Primus UL437	20-587
	Primus XP UL437	20-587-XP
	Primus lockout	20-717
	Primus XP lockout	20-717-XP
	Primus UL437 lockout	20-517
	Primus XP UL437 lockout	20-517-XP
	Hotel function	30-002*
	Everest 29 SL	91-062
	Everest 29 SL Primus XP	91-757-XP

Traditional cams	Modular cams	
L583-254 Classic conventional	L583-474	L583-800 Everest 29 SL 1½" length
		
L583-153 Everest® and Primus®	L583-475	L583-801 Everest 29 SL 1¼" length
		

#### L9060/LV9060 outside

Description	Cylinder mechanism	Complete cylinder
Cylinder only: L and N escutcheons	Conventional	26-021
	Primus controlled access	20-701
	Primus XP controlled access	20-701-XP
	Primus UL437	20-501
	Primus XP UL437	20-501-XP
Cylinder with compression ring and spring: Rose trim	Conventional	20-001
	Primus controlled access	20-700
	Primus XP controlled access	20-700-XP
	Primus UL437	20-500
	Primus XP UL437	20-500-XP
	Primus lockout	20-715
	Primus XP lockout	20-715-XP
	Primus UL437 lockout	20-515
	Primus XP UL437 lockout	20-515-XP
	Everest 29 SL	91-051
Everest 29 SL Primus XP	91-751-XP	
Cylinder with compression ring and ½" blocking ring	Conventional (available in 1½" only)	20-002

Traditional cams	Modular cams	
B502-191 Conventional	L583-476	L583-800 Everest 29 SL 1½" length
		
B502-948 Everest and Primus	L583-477	L583-801 Everest 29 SL 1¼" length
		

#### LM9280 and LM9380/LMV9380

Description	Cylinder mechanism	Complete cylinder	Modular Cams
Cylinder only: L and N escutcheons	Conventional (specify handing)	30-019	L583-474, L583-475
Cylinder only: Rose	Conventional (specify handing)	30-000	(see illustrations above)


\* Specify hand for hotel function cylinders. Not available in Primus. Furnished 0-bitted; emergency keys must be ordered separately.

Note: Lockout keys are not furnished with cylinders and must be ordered separately. Lockout cylinders will not be master-keyed by Schlage.

## Cylinders

### Concealed cylinders



Cylinder front

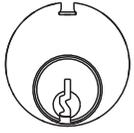

Cylinder back




Cylinder only

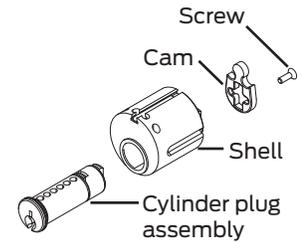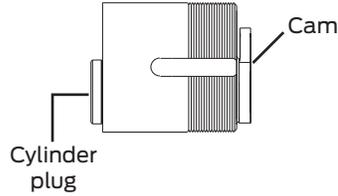

#### L-Series, LV-Series (except L9060/LV9060 outside)

Description	Cylinder mechanism	Complete cylinder	Cams	
Cylinder only: L escutcheon	Conventional	30-004	L583-254 Conventional 	L583-153 Everest® and Primus® 
	Primus® controlled access	20-789		
	Primus XP controlled access	20-789-XP		
	Primus UL437	20-589		
	Primus XP UL437	20-589-XP		
	Hotel function	30-005*		
 
#### L-Series, LV-Series L9060/LV9060 outside

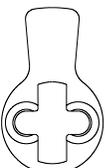
Description	Cylinder mechanism	Complete cylinder	Cams	
Cylinder only: L escutcheon	Conventional	26-023	B502-191 Conventional 	B502-948 Everest and Primus 
	Primus controlled access	24-767		
	Primus XP controlled access	24-767-XP		
	Primus UL437	24-567		
	Primus XP UL437	24-567-XP		

\* Specify hand for hotel function cylinders. Not available in Primus®. Emergency keys must be ordered separately.

- Notes:
- 1) Everest hotel function cylinders are available in 1½", 1¼", and 1⅜" only.
  - 2) 1⅜" (Dim=118) cylinders are furnished unless otherwise specified. Cylinder length depends on function, trim and door thickness.
  - 3) Finishes: 606 and 626.
  - 4) Specify LKB if 0-bitted Primus cylinders are required less key blanks.
  - 5) Extended lengths are available.

## Cylinders

### Full size interchangeable core cylinders

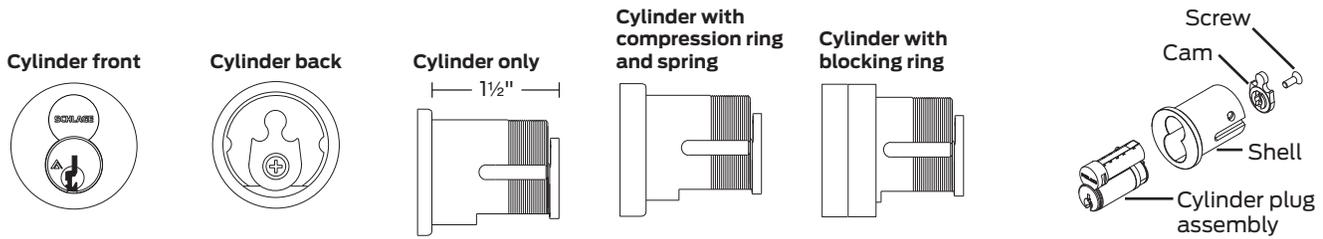

#### L/LV/LM/LMV-Series (except L9060/LV9060 outside and LM9280, LM9380/LMV9380)

Description	Cylinder mechanism	Complete cylinder	Cam
Cylinder only: L and N escutcheons	Housing less core	30-016	L583-255
Cylinder with compression ring and spring: L and N escutcheons	Conventional core	30-008*	
	Primus® core	20-798	
	Primus XP core	20-798-XP	
	Hotel function	30-010**	
	Housing less core	30-007	
Cylinder with compression ring, compression spring and 3/8" blocking ring: rose trim	Conventional core	30-138*	
	Primus core	20-776	
	Primus XP core	20-776-XP	
	Hotel function core	30-140**	
	Housing less core	30-137	

#### L, LV-Series L9060/LV9060 outside

Description	Cylinder mechanism	Complete cylinder	Cam
Cylinder only: L and N escutcheons	Housing less core	30-032	
Cylinder with compression ring and spring: L and N escutcheons	Conventional core	30-030*	
	Primus core	20-782	
	Primus XP core	20-782-XP	
Cylinder with compression ring, compression spring and 1/2" blocking ring: rose trim***	Primus core	20-783	
	Primus XP core	20-783-XP	

#### LM, LMV-Series LM9280 and LM9380/LMV9380

Description	Cylinder mechanism	Complete cylinder	Cam	
Cylinder with compression ring and spring	FSIC housing and core (specify handing)	26-101*		
	FSIC housing less core (specify handing)	26-102		
	FSIC housing less logo core (specify handing)	26-103		


\* Can be ordered with construction core.

\*\* Specify hand for hotel function cylinders. Not available in Primus®. Emergency key must be ordered separately.

\*\*\* For this configuration with conventional core, order 30-030 cylinder and 36-082-050 blocking ring.

## Cylinders

### Assembled full size interchangeable cores

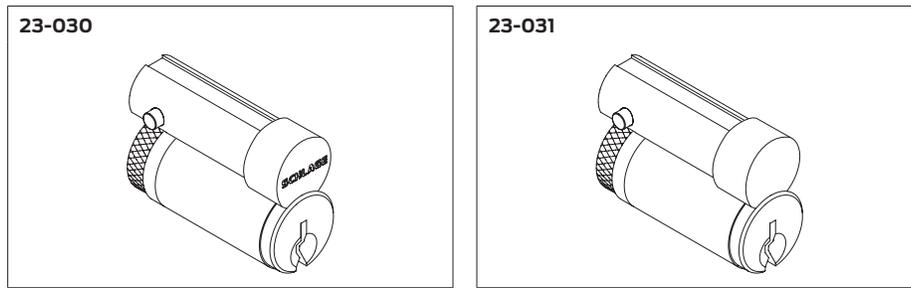

Part number	Description
23-030	Conventional core
23-031	Conventional core less logo
20-740	Primus® core
20-740-XP	Primus XP core
20-741	Primus core less logo
20-741-XP	Primus XP core less logo
30-120*	Hotel function conventional core for L9485 and L9486
30-121*	Hotel function conventional core, less logo, for L9485 and L9486

### Full size core parts

Part number	Description
C503-115	Cap pin spring (order in multiples of 100)
C503-118	Retainer cap (order in multiples of 25)
C603-347**	Cap pin (order in multiples of 100)
C603-827	Cap pin (order in multiples of 100)
C603-956	Actuating ring
C640-470	Actuating pin (control top pin)
C603-967	Control bottom pin (order in multiples of 100)


\* Specify hand for hotel function cores. Emergency keys must be ordered separately.

\*\* For cores manufactured before November 1997.

- Notes:
- 1) Control keys must be ordered separately.
  - 2) Finishes: 606 and 626.
  - 3) Full size cores, conventional and Primus®, can be integrated into any Schlage key system with compatible Everest® or Classic keyways.
  - 4) Primus® cores can be integrated into any Schlage 6-pin key system with compatible Primus keyways.
  - 5) Primus® cores are Controlled Access. Specify LKB if 0-bitted Primus cores are required less key blanks.

## Cylinders

### Small format interchangeable core cylinders

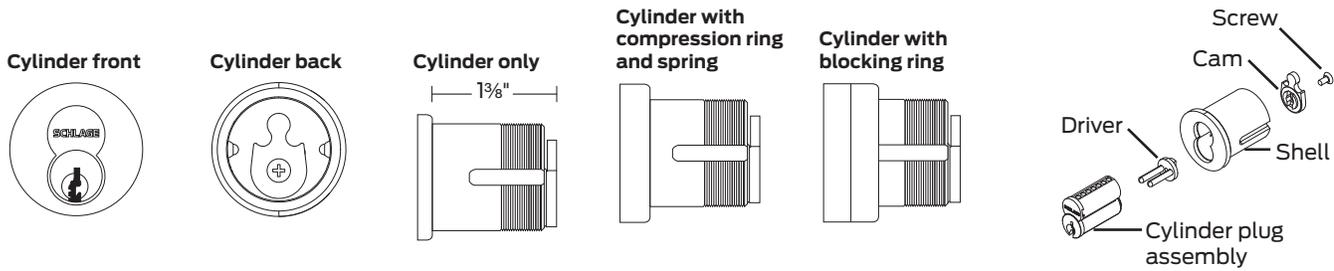

#### L/LV/LM/LMV-Series (except L9060 /LV9060 outside and LM9280, LM9380/LMV9380)

Description	Cylinder mechanism	Complete cylinder	Cam	
Cylinder with compression ring and spring; L and N escutcheons	Everest® and Everest 29 restricted combined core	80-308		
	Construction core	Disposable		80-115
		Keyed		80-138
Housing less core		80-108		
Cylinder with compression ring, compression spring and 1/4" blocking ring; rose trim	Everest restricted combined core	80-301		
	Construction core	Disposable	80-109	
		Keyed	80-131	
Housing less core		80-101		

#### L, LV-Series L9060 /LV9060 outside

Description	Cylinder Mechanism	Complete Cylinder	Cam	
Cylinder with compression ring and spring; L and N escutcheons*	Everest and Everest 29 restricted combined core	80-304		
	Construction core	Disposable		80-112
		Keyed		80-134
Housing less core		80-104		

#### LM, LMV-Series LM9280 and LM9380/LMV9380

Description	Cylinder Mechanism	Complete Cylinder	Cams	
Cylinder with compression ring and spring	SFIC housing (specify handing)	26-104	L583-509 (RH)	L583-589 (LH)
	SFIC housing and temporary core (specify handing)	26-105		
	SFIC housing and core (specify handing)	26-106		


#### Other straight cam applications

Description	Cylinder mechanism	Complete cylinder	Cam	
Cylinder with compression ring, compression spring and 1/4" blocking ring.	Everest restricted combined core	80-302		
	Construction core	Disposable		80-110
		Keyed		80-132
Housing less core		80-102		

\* For rose trim also order 36-082-050 blocking ring.

## Cylinders

### Everest® and Everest 29 patented keyway cores

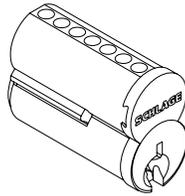Part number	Description	80-036, 80-037
80-037	Everest combined core, includes master keying	
80-036	Everest uncombined core (does not include keys, pins or springs)	

- Notes:
- 1) Finishes: 606, 613, and 626.
  - 2) Everest® B-family keyways are restricted.
  - 3) Key symbol must be specified for combined cores.
  - 4) Control keys must be ordered separately.
  - 5) Specify 80-035 for construction cores.

## Indicator cylinders

# Indicator cylinders

These tables apply to 180° indicator locks with sectional trim only. Escutcheon indicator cylinders are the same as non-indicator applications. For escutcheon trim indicator cylinders, refer to page 171.

### INSIDE INDICATOR, sectional, double cylinder

Cylinder type	Door Thickness			
	1 $\frac{3}{8}$ "	1 $\frac{3}{4}$ "	2"	2 $\frac{1}{4}$ "
	Cylinder/Dimension			
Sectional	30-001 114	30-021 118	30-021 114	30-021 138
RD, JD	N/A	See "Blocking rings, FSIC"		
BD, BDC, GD, HD	N/A	See "Blocking rings, SFIC"		
Cylinder turn (L463, L9463)*	N/A	09-900 118	09-900 114	09-900 138
Blocking rings, FSIC	N/A	36-082 012	N/R	N/R
Blocking rings, SFIC	N/A	N/R	N/R	N/R

\*Use cylinder spring, L583-195

N/A = not applicable

N/R = not required

Note: Substitute inside cylinder/cylinder turn or inside blocking ring only. Applies to sectional, double cylinder functions only.

### OUTSIDE INDICATOR, sectional, single cylinder

Cylinder type	Door Thickness			
	1 $\frac{3}{8}$ "	1 $\frac{3}{4}$ "	2"	2 $\frac{1}{4}$ "
	Cylinder/Dimension			
Sectional	30-021 118	30-021 114	30-021 138	30-021 112
RD, JD	See "Blocking rings, FSIC"			
BD, BDC, GD, HD	See "Blocking rings, SFIC"			
Blocking rings, FSIC	36-082 025	36-082 012	N/R	N/R
Blocking rings, SFIC	N/R	N/R	N/R	N/R

N/R = not required

Note: Substitute outside cylinder or outside blocking ring only. Applies to sectional, single cylinder functions only.

### OUTSIDE INDICATOR, sectional, double cylinder

Cylinder type	Door Thickness			
	1 $\frac{3}{8}$ "	1 $\frac{3}{4}$ "	2"	2 $\frac{1}{4}$ "
	Cylinder/Dimension			
Sectional except L9060	30-001 114	30-021 118	30-021 114	30-021 138
Sectional L9060	20-001 114	26-021 118	26-021 114	26-021 138
RD, JD	N/A	See "Blocking rings, FSIC"		
BD, BDC, GD, HD	N/A	See "Blocking rings, SFIC"		
Blocking rings, FSIC	N/A	36-082 012	N/R	N/R
Blocking rings, SFIC	N/A	N/R	N/R	N/R


N/A = not applicable

N/R = not required

Note: Substitute outside cylinder or outside blocking ring only. Applies to sectional, double cylinder functions only.

## Blocking and compression rings

# Blocking and compression rings

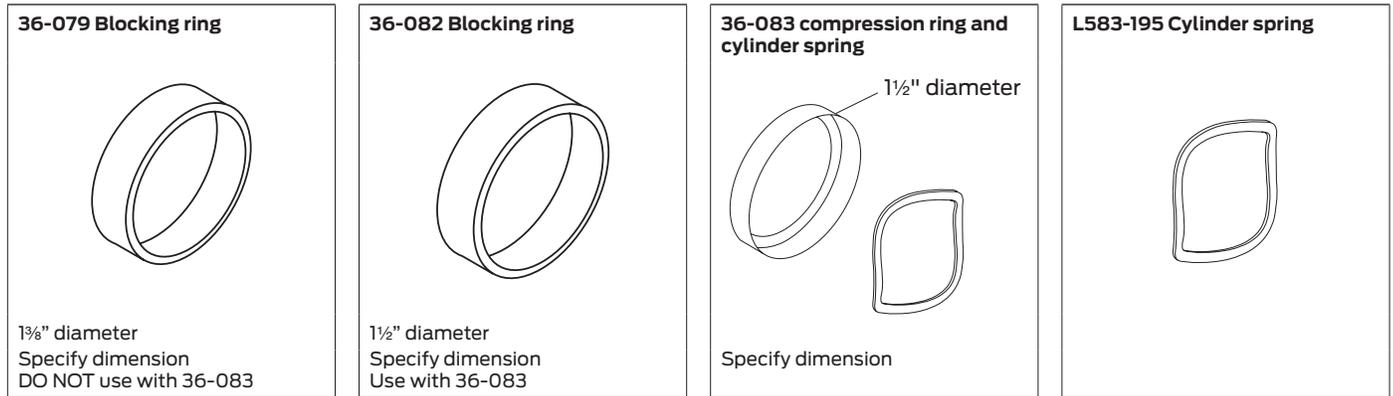

### Dimensions for blocking rings

Blocking ring length	Dimension
1/8"	012
3/16"	018
1/4"	025
5/16"	031

Blocking ring length	Dimension
3/8"	037
7/16"	043
1/2"	050

### Full size core blocking ring requirements, L-Series, LV-Series


Function	Trim	Door Thickness			
		1 3/8"	1 1/4"	2"	2 1/4"
		Dimension			
L9026, L9050, L9056, L9070, L9076, L9080, L9080EL/EU, L9453, L9456, L9460 per XL11-635 or XL11-886, L9464 per XL11-886, L9465, L9473, L9480	Rose	050	037	025	025
	Escutcheon	025	012	N/R	N/R
L9485	Rose	—	037	025	025
	Escutcheon	—	012	N/R	N/R
L9486, L9496	Rose	012	N/R	N/R	N/R
	Escutcheon	025	012	N/R	N/R
L9060, L9071, L9077, L9082, L9457, L9458, L9462 per XL11-886, L9466, L9482 (Two (2) blocking rings required)	Rose	—	050	043	031
	Escutcheon	025	012	N/R	N/R
L460, L464, L496, L9460, L9464	Rose	050	037	025	025
	Rose	—	050	043	031

### SFIC blocking ring requirements, L-Series, LV-Series


Function	Trim	Door Thickness			
		1 3/8"	1 1/4"	2"	2 1/4"
		Dimension			
L9026, L9050, L9056, L9070, L9076, L9080, L9080EL/EU, L9453, L9456, L9460 per XL11-886 or XL11-635, L9464 per XL11-886, L9465, L9473, L9480, L9485, L9485 per XL11-557	Rose	037	025	012	N/R
	Escutcheon	N/R	N/R	N/R	N/R
L9060, L9071, L9077, L9082, L9082EL/EU, L9457, L9458, L9462 per XL11-886, L9464, L9466, L9482 (Two (2) blocking rings required)	Rose	—	050	037	025
	Escutcheon	018	N/R	N/R	N/R
L9496	Rose	025	012	N/R	N/R
	Escutcheon	N/R	N/R	N/R	N/R
L460, L464, L496, L9460, L9464	Rose	037	025	012	N/R
L462, L463, L9462, L9463 (Two (2) blocking rings required)	Rose	—	050	037	025

N/R = none required


# Special trim options

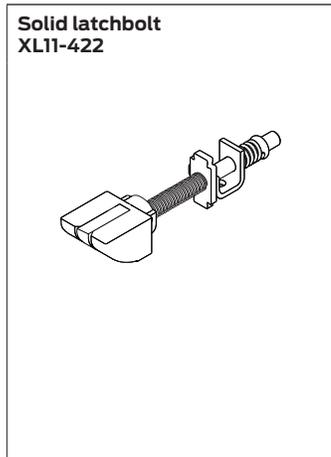


For use with electric strikes. The anti-friction tongue is replaced by a nylon insert to prevent interference with the strike gate.

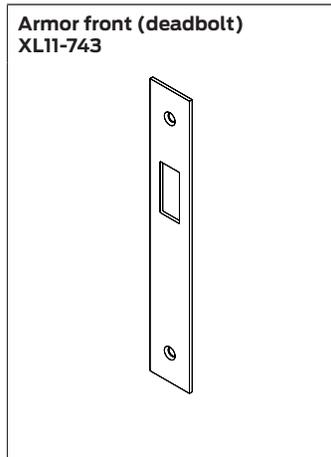

Armor front with deadbolt hole for use with dummy functions or inactive doors. Specify dummy function per XL11-743.

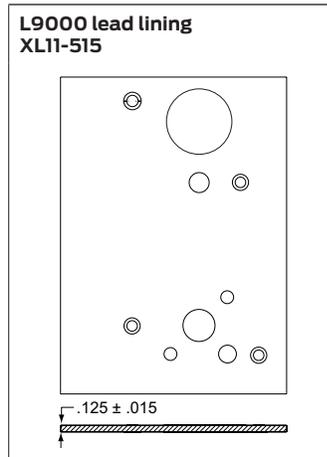

Lead plate installed on case cover. Buyer should verify that the preparation meets local installation requirements or regulations. Specify door hand.

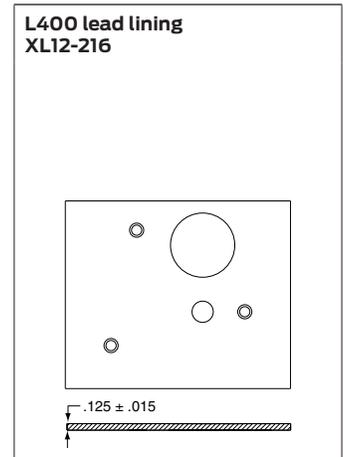


## Special cylinder applications

"X" Number	Description
XB03-418	Extended mortise cylinder (20-001, 30-001 or 30-004), 1 $\frac{1}{8}$ "–5" long, Classic or Everest®
XB11-475*	Full size IC extended mortise cylinder (26-091 or 30-008), 2 $\frac{1}{4}$ "–5" long, Classic or Everest®
	Primus® full size IC extended mortise cylinder (20-763 or 20-798), 2 $\frac{1}{4}$ "–5" long
	Full size IC mortise cylinder housing less core (20-059 or 30-007) 2 $\frac{1}{4}$ "–5" long
XB11-638	Primus® mortise cylinder (20-700, 20-787, or 20-789), 1 $\frac{1}{8}$ "–5" long

\* Available in 1/4" increments. Order collars or blocking rings separately to fill gaps.

- Notes:
- 1) Specify complete cylinder as required, then "X" number (e.g. 20-001-118-P per XB11-475).
  - 2) Primus cylinders are Controlled Access. Specify LKB if 0-bitted Primus® cylinders are required less key blanks.
  - 3) Specify finish and dim code.

## Special trim options

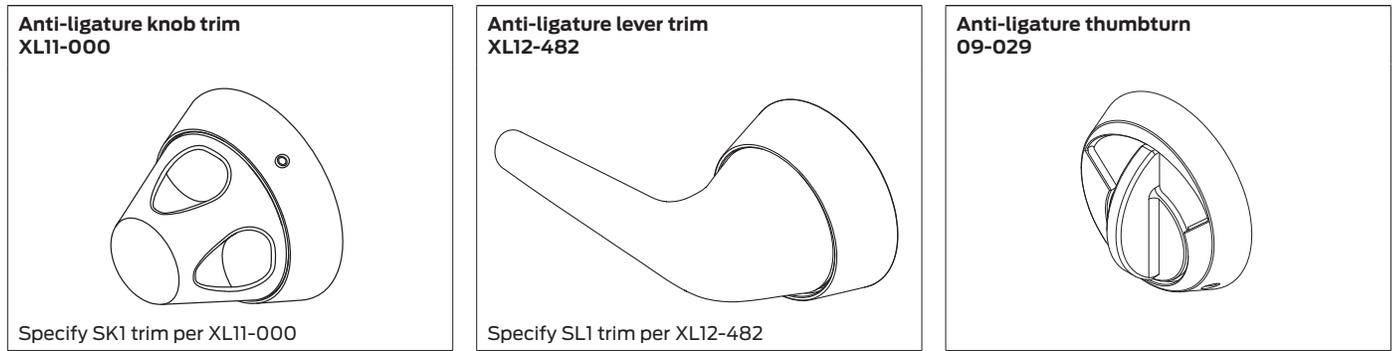

## Anti-ligature conversion kits


Knob	Lever	Kit contents	Knob or lever functions
09-155	09-138	(2) anti-ligature knob or lever assembly (2) anti-ligature blocking ring (2) trim ferrules (lever kit only)	L9010, L9176, L9070, L9076, L9080, L9080EL, L9080EU, L9465, L9060, L9071, L9077, L9082, L9082EL, L9082EU, L9482, L9457, L9458, L9466
09-156	09-139	(2) anti-ligature knob or lever assembly (2) anti-ligature blocking ring	L9412, L9050, L9056, L9453, L9456, L9473, L9480, L9485, L9460 with pull
09-159	09-189	(2) anti-ligature knob or lever assembly (1) anti-ligature thumbturn assembly (1) emergency ADA turn and emergency button (2) trim ferrules (lever kit only)	L9040, L9440

Deadbolt	Kit contents	Deadbolt functions
09-157	(2) anti-ligature blocking ring	L462, L464, L9462, L9464
09-158	(1) anti-ligature blocking ring (1) anti-ligature thumbturn assembly	L460, L480, L9460

- Notes:
- 1) For 1¾" doors only.
  - 2) For sectional trim only.
  - 3) Available finishes: 630 (satin stainless steel) or 630AM (Satin stainless steel with anti-microbial coating).
  - 4) Specify cylinder type: "P" for (P) type, "R" for (R, J, F, T) types, and "BD" for (BD, BDC, GD, HD) types, following the part number.
  - 5) Not available with "L" (lock less cylinder) option.

# Installation tools and kits

## 40-054 Maintenance kit




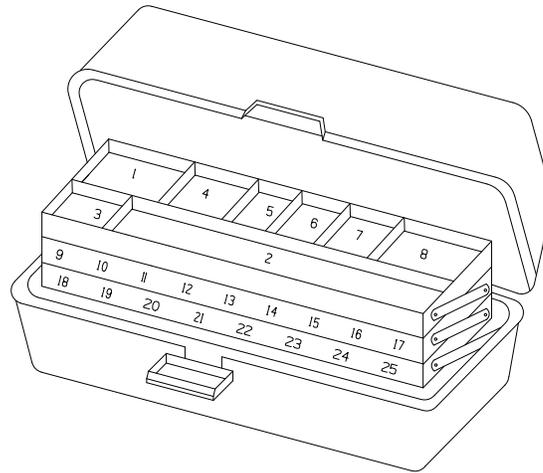


Maintenance kit contents:

#	Part No.	Desc.	Qty
Top	P509-491	Sheet, Parts	1
1	C603-256-455	Screws, Mounting	6
	L583-035-STL	Spring, Turn Hub	6
	L583-053-604	Retractor, Simultaneous	3
	L283-040-604	Spring, Cage	6
2	L583-321-428	Plate, Mounting, IS, Knob	3
	L283-031-604	Plate, Mounting, IS, Lever	3
3	L583-454-604	Screw, Case	12
4	L583-049-604	Link, Entrance	2
	L583-051-604	Lever, Transfer	3
5	L583-056-604	Pin, Catch	3
6	L583-050-604	Pin, Link	3
	36-080	O-ring (L9080EL/EU, L9082EL/EU)	5
7	K110-020-455	Screw Pack	1
	K110-020-637	Screw Pack	1
	K110-020-640	Screw Pack	1
8	L583-144-PLA	Washer, Lever	25
9	L583-066-604	Screws, Mounting Post	6
	L583-212-604	Mounting Post 134 Door	6
10	L583-029-604	Hub, Turn	3
11	L283-030-604	Truarc® Ring	1
12	L583-214-604	Mounting Post	6
13	L583-020-604	Spacer	3
	L583-021-604	Lever, Retractor	3
	L583-022-604	Rocker, Retractor	3
	L583-023-604	Plate, Blocking	3
	L583-748-604	Hub, Retractor	6
14	L583-748-604	Hub, Retractor	6
	L283-101-639	Bolts, Esc.	1
	L283-101-640	Bolts, Esc.	1
15	L283-101-652	Bolts, Esc.	1
	L583-196-604	Stop, Deadlatch	3
16	L583-044-STL	Spring, Stop	3

#	Part No.	Desc.	Qty
17	L583-481-603	Screw, Retainer	3
	L583-492-604	Plate, Screw	2
	L583-490-604	Retainer	2
18	L583-485-604	Screw, Catch	6
	L583-047-MW	Spring, Catch	2
19	L583-038-604	Guide, Aux. Bar	3
	L283-006-455	Latch, Aux.	3
20	L583-026-MW	Spring, Hub	3
	L583-027-PLA	Fuse, Fire Door	3
	L583-028-604	Catch, Fire Door	3
21	L583-024-604	Link, Retractor	3
	L583-025-604	Crank, Retractor	3
22	L583-030-604	Hub, Entrance	2
	L583-031-604	Cam, Follower	2
23	K110-953-455	Screw Pack, Mounting, Esc.	3
	K110-953-498	Screw Pack, Mounting, Esc.	3
	K110-953-613	Screw Pack, Mounting, Esc.	3
24	K510-310-STL	Truarc Ring, Knob	25
	K510-239-PLA	Washer, Thrust	50
25	K110-550-STL	Truarc Ring and Spacer	12
Bottom	L583-322-428	Spacer, Lever	6
	L583-032-455	Deadbolt	3
	L583-033-604	Bar, Deadbolt	1
	L583-034-604	Bar, Entrance	1
	L583-146-604	Bar, Deadbolt	1
	L583-426-604	Faceplate, Tab 1¼"	2
	L583-427-604	Faceplate, Tab 1½"	2
	L583-048-604	Link, Locking	2
	L583-045-604	Catch, Locking	3
	L283-060-604	Spindles	6
	40-053	Kit, Trim, Replacement	4
	40-127	Truarc Plier	1
 
## Installation tools and kits

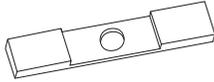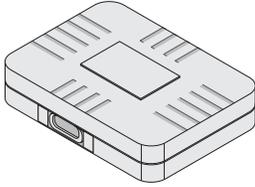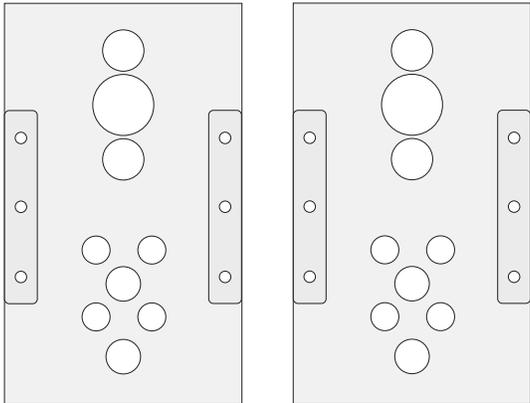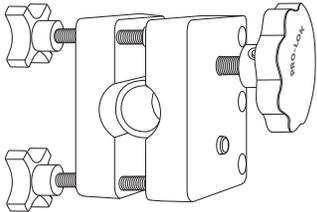Part number	Description	
40-158	Mortise pocket filler (edge)	
40-160	Mortise lock jig Includes 1 each: Case, jig, long boring shaft, 7/8" wood cutter bit, 1" wood cutter bit, 1 1/4" wood cutter bit, instruction booklet	
40-227	L-Series installation templates	
40-286	Universal clamp	

Part Number	Description
40-161	5/8" Wood cutter bit
40-162	1 1/16" Wood cutter bit
40-163	3/4" Wood cutter bit
40-164	13/16" Wood cutter bit
40-165	7/8" Wood cutter bit
40-166	15/16" Wood cutter bit
40-167	1" Wood cutter bit
40-168	1 1/16" Wood cutter bit
40-169	1 1/4" Wood cutter bit
40-170	Long boring shaft (for locks up to 6")

## Electrified locks

# Electrified locks

### L-Series and LM-Series EL, electrically locked (fail safe)

Outside knob/lever or both outside and inside knobs/levers (depending on function) will lock when power is applied. In the event of power failure, the opening will be unlocked.

### L-Series and LM-Series EU, electrically unlocked (fail secure)

Outside knob/lever or both outside and inside knobs/levers (depending on function) will unlock when power is applied. In the event of power failure, the opening will be locked.

## Cylinders

Specify locks with the required cylinder code, e.g. L9090PEL (code P) for classic and full size Everest cylinders. For a complete list of order codes, see "Ordering procedures" on page 191.

## Electrical requirements


The L909X, L949X and LM929X-Series electrified locks are powered by DC power only. **Do not use AC power.**

**Voltage:** 12 or 24V DC (max. 26.4V, min. 10.8V)      **Operating temperature:** -22°F to 140°F (-30°C to 60°C)

**Peak current:** 0.4 amps      **Holding current:** 0.010 amps

## Typical installation

All installations should be in accordance with local electrical codes and National Electrical Code NFPA 70. Damage to locks may occur if connected to a supply circuit that also contains electromagnetic devices. The transient voltage must be suppressed at the equipment producing it before connecting the locks to a circuit.

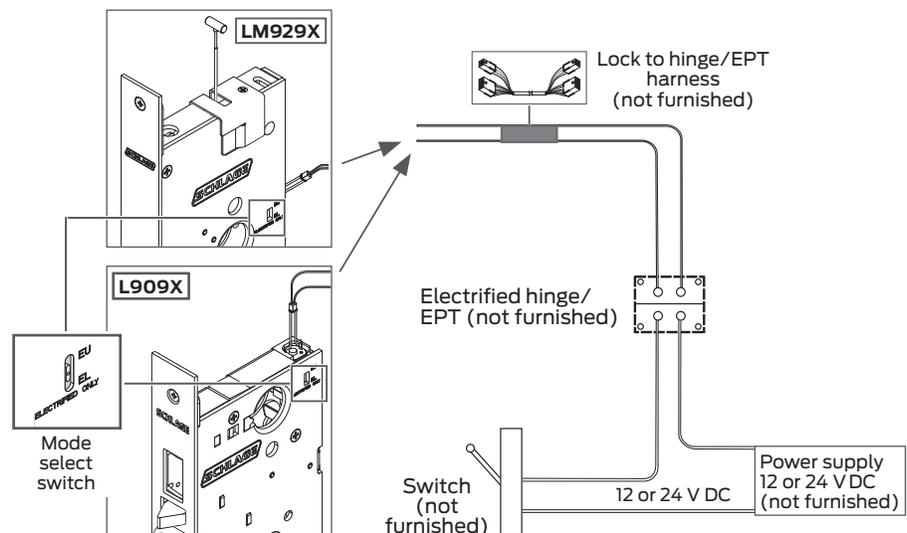

## Electrified L-Series functions

No cylinder:

L9090 – outside knob/lever electrically locked/unlocked; L9091 – both knobs/levers electrically locked/unlocked

Outside cylinder:

L9092 – outside knob/lever electrically locked/unlocked\*; L9093 – both knobs/levers electrically locked/unlocked

Outside and inside cylinders:

L9094 – outside knob/lever electrically locked/unlocked; L9095 – both knobs/levers electrically locked/unlocked\*\*

Outside cylinder with deadbolt, inside thumbturn, simultaneous retraction:

L9492 – outside knob/lever electrically locked/unlocked; L9493 – both knobs/levers electrically locked/unlocked

Outside and inside cylinders with deadbolt, simultaneous retraction:

L9494 – outside knob/lever electrically locked/unlocked; L9495 – both knobs/levers electrically locked/unlocked

\* Replaces L9080 EL/EU

\*\* Replaces L9082 EL/EU

## Electrified locks

### Electrified LM-Series functions

No cylinder:

LM9290 – outside lever electrically locked/unlocked; LM9291 – both levers electrically locked/unlocked

Outside cylinder:

LM9292 – outside lever electrically locked/unlocked; LM9293 – both levers electrically locked/unlocked

Outside and inside cylinders:

LM9294 – outside lever electrically locked/unlocked; LM9295 – both levers electrically locked/unlocked

### Request-to-exit (RX)

#### Non-electrified locks:

Effective January 2017, request-to-exit feature is available with select non-electrified functions: L9010, L9050, L9056, L9070, L9071, L9080, L9082, L9453, L9456, L9458, L9465, L9466, L9480 and L9485.

#### Electrified locks:

##### L909x and L949x Series electrified locks:

A microswitch inside the lock case to detect rotation of the inside knob/lever. The switch then signals the use of the opening to the security system. The RX is a removable module located on the bottom edge of the lock chassis. The module must be properly positioned to detect inside knob/lever rotation. If not properly positioned, the lock and/or microswitch may be damaged. Electrical rating: 3 A, 125 V AC; 2 A, 30 V DC. Order RX switch assembly by **L283-452**.

##### L908x Series electrified locks:

Locks shipped prior to mid-2010 are configured with two-wire switches. L-Series locks: **L283-059** for normally closed or **L283-125** for normally open. LV-Series locks: **L283-197** for normally closed or **L283-196** for normally open LV-Series.

**Note:** RX is not applicable for LM929X-Series locks.

### Deadbolt monitoring

Deadbolt Monitor (DM) identifies the status of the deadbolt (extended or retracted). Normally open, normally closed, and common connections are provided. Electrical rating: 3 A, 125 V AC; 2 A, 30 V DC.

Deadbolt monitor is available with electrified deadbolt functions: L9492 EL/EU, L9493 EL/EU, L9494 EL/EU and L9495 EL/EU.

Effective January 2017, deadbolt monitor feature is available with select non-electrified functions: L9453, L9456, L9458, L9480 and L9485.

### Latchbolt monitoring

Latchbolt Monitor (LX) identifies the status of the latchbolt (extended or retracted). Normally open, normally closed, and common connections are provided. Electrical rating: 3 A, 125 V AC; 2 A, 30 V DC.

Latchbolt monitor is available with L909X and L949X electrified functions.

Effective January 2017, latchbolt monitor is available with select non-electrified functions: L9010, L9050, L9056, L9070, L9071, L9080, L9082, L9453, L9456, L9465, L9466, L9480 and L9485.

Latchbolt monitor function is available for discontinued functions L9080 EL-RX, L9080 EU. Specify XL12-245 for L9080PEL, or XL12-246 for L9080PEU.

### Door position switch

Door Position Sensor (DPS) detects the position of the door, open or closed, by utilizing a sensor in the mortise lock to detect a magnet located in the door strike. Normally open, normally closed, and common connections are provided. Maximum voltage 175 VDC, max current 0.250 A.

DPS is available on electrified non-deadbolt models.

Effective January 2017, door position sensor is available with select non-electrified functions: L9010, L9050, L9056, L9070, L9071, L9080 and L9082.

## LM9200 Series two point lock

# LM9200 Series two point lock


The Schlage LM9200 Series is a one or two point latch solution for pairs of doors where both leaves are active. The LM9200 utilizes concealed vertical cables for simple installation and maintenance. The LM9200 is compatible with sectional trim as well as escutcheon trim, and offers 13 functions (mechanical and electrical). 180° indicator trim for sectional (rose) and N escutcheon is available on inside trim for LM9250, LM9256 and LM9271, and on outside trim for LM9250, LM9256, LM9270 and LM9271

All lever designs suite with the L mortise lock, LT tubular lock, and Von Duprin exit devices. The lock is compatible with non fire rated doors from 6'8" to 10'0" (203 –305 cm) and fire rated doors from 6'8" to 8'0" (203 –244 cm).

Available 45 minute UL fire rating (two-point latch) or 20 minute UL fire rating (one-point latch). Note: requires fire rated wood doors. Available 90 minute UL fire rating with fire rated hollow metal doors.


Automatically deadlatching top and bottom latches, and a top latch with greater than 90 degree strike engagement, work together to ensure the opening is robust and secure. The LM9200 Series is also available without the bottom latch (LBL) for top latch only applications.

### Armor fronts

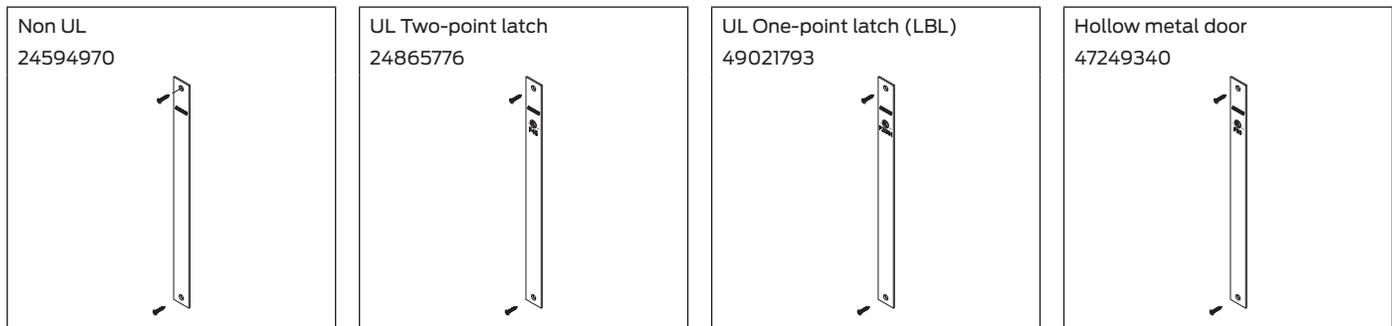

### Strikes

Strike kits include strike assembly, shims and screwpack.

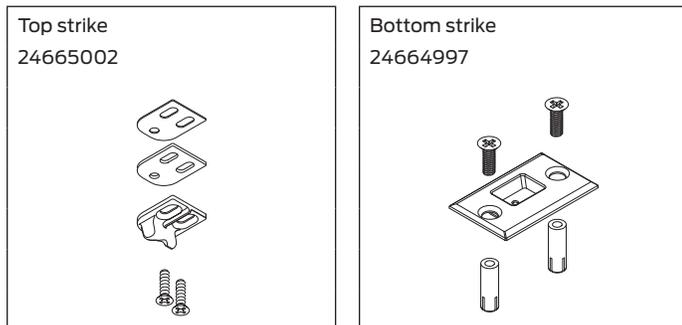

### Cables

Specify top cable length.

Part Number	Description
24647265	Bottom cable
24691750	Top cable, 6' 8" –7' 0" doors (203 –213 cm)
24691768	Top cable, 7' 1" –8' 0" doors (216 –244 cm)
24691776	Top cable, 8' 1" –9' 0" doors (246 –274 cm)
24691784	Top cable, 9' 1" –10' 0" doors (277 –305 cm)

### Fire-rated components

Part Number	Description
24750408	Fire barrier
24756504	Intumescent for fire barrier
24792558	Intumescent for armor front
48968887	Fire pin kit –includes fire pin, fire pin sleeve, fire pin strike, and screws

# LM9300 Series multipoint lock

The LM9300 three-point locking chassis is a component in the Schlage Multipoint Lock product. The Multipoint Lock is an integrated assembly which includes the LM9300 three point locking chassis, a specialized Steelcraft door with a concealed vertical rod assembly, and a specialized Steelcraft frame. The LM9300 chassis interfaces with the concealed vertical rod assembly and provides control of all three latches.

The Multipoint lock is a solution-specific product, with tornado-shelter and high-security options available. When paired with the appropriate Steelcraft Paladin door the product meets the ICC500 standard, and FEMA 320/361 guidelines for protection in tornadoes. Alternately, the product can be used in high-security applications (non-tornado) when paired with a Steelcraft L or B door.

The LM9300 series chassis is a direct replacement for the LM9000 series. However, the latches (sold separately when ordered as replacement parts) are different between the two series. Please note the original installation and order only the appropriate replacement top/bottom latch components.

Multipoint is available with the following functions: Passage, Exit, Office/Entry, Office/Entry with Automatic Unlock, Classroom, Classroom Security, and Storeroom.



 


## Multipoint lock top/bottom latch components

LM9000 parts	Description	Package contents
900264-XX	LM9000 aux package (specify finish)	304L bottom strike, 114141, top soffit latch package, screws, 900262-XX, ratchet release, screws
114313-XX	LM9000 rodset	LM9000 rodset and latches for 6' 8" - 8' 0" doors

LM9300 parts	Description	Package contents
24353625	LM9300 strike package	Top and bottom strikes, floor anchors, screws
24358830	LM9300 rodset 6' 8" - 8' 0" doors	LM9300 rodset and latches for 6' 8" - 8' 0" doors, 39 <sup>15</sup> / <sub>16</sub> " centerline
24457715	LM9300 rodset 4' 0" - 5' 11" doors	LM9300 rodset and latches for 4' 0" - 5' 11" doors, 26" centerline
24457723	LM9300 rodset 3' 1" - 3' 11" doors	LM9300 rodset and latches for 3' 1" - 3' 11" doors, 15" centerline









# Lubrication specifications

L9000, LM9300 Series

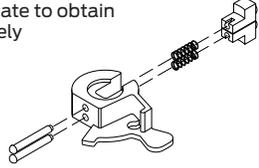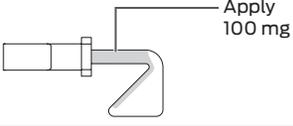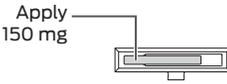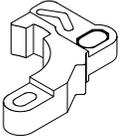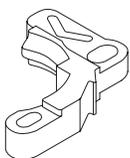Lock Function	Lock case lubrication areas	Subassembly and component lubrication
L9010, L9025, L9026, LM9310, LM9325, L9080, LV9080, L9082, LV9082	A	<p>Lock case and case cover: Apply 150 mg minimum at each applicable area.</p>
L460, L462, L463, L480, L496, L9460, L9462, L9463, L9464	B	<p>Latchbolt: Apply 50 mg minimum</p> 
L9465, L9466, L9473	A, B	<p>Apply 100 mg minimum</p> 
L9040, LV9040, L9050, LV9050, LM9350, LMV9350, L9060, LV9060, L9066 (XL11-897), L9071, LV9071, LM9371, LMV9371, L9076, LV9076, L9077, LV9077, L9080, LV9080, L9080EL/EU, LV9080EL/EU, LM9380, LMV9380, L9082EL/EU, LV9082EL/EU, L9090EL/EU, L9091EL/EU, L9092EL/EU, L9492EL/EU, L9093EL/EU, L9493EL/EU, L9094EL/EU, L9494EL/EU, L9095EL/EU, L9495EL/EU	A, C	<p>Components shown below must be barrel lubricated to obtain approximately 3 mm film</p> <p>L583-748</p> 
		<p>L583-020</p> 
		<p>Lever retractor assembly: Barrel lubricate to obtain approximately 3 mm film</p> 
		<p>L583-024</p> 
		<p>L583-025</p> 
		<p>Auxiliary latchbolt: Apply 100 mg</p> 
		<p>L583-029</p> 
		<p>Holdback dog (L/LV9076, L/LV9077 only) bottom view: Apply 150 mg</p> 
		<p>L583-030</p> 
		<p>Components shown below must be barrel lubricated to obtain approximately 3 mm film</p> <p>L583-346</p> 
		<p>L583-031</p> 
		<p>L583-383</p> 
		<p>L583-045</p> 
		<p>L583-386</p> 
		<p>L583-387</p> 
		<p>L583-051</p> 
		<p>L583-345</p> 

# Lubrication specifications

## LM9200 Series

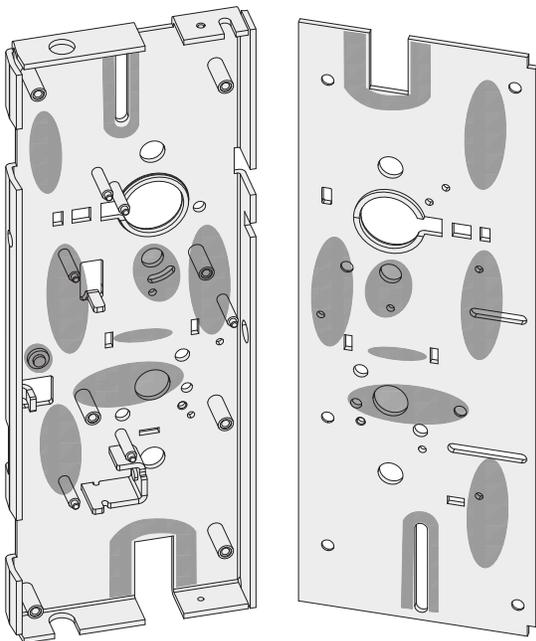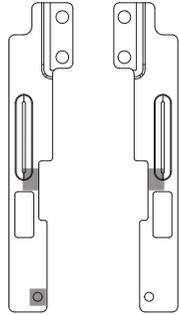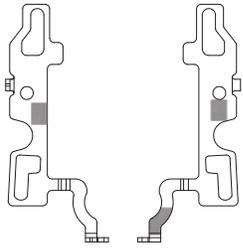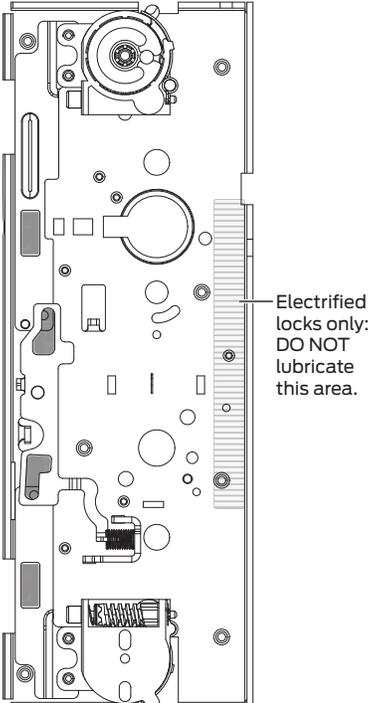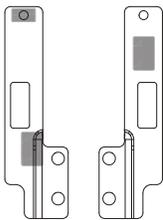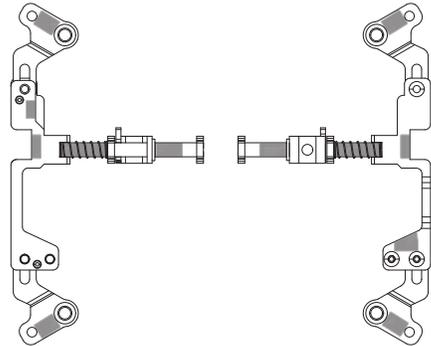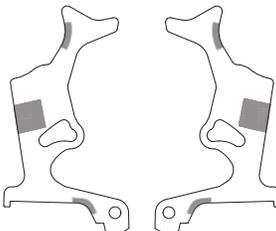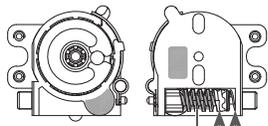Lock case lubrication areas	Subassembly and component lubrication	
<p>Lock case and case cover: Apply lubrication at shaded areas.</p> 	<p><b>Top link:</b> Apply lubricant at shaded areas indicated.</p> 	<p><b>Tilting link:</b> Apply lubricant at shaded areas indicated.</p> 
<p>After assembly of top link, bottom link and tilting link in the lock case, brush lubricant to fill slots as shown.</p>  <p>Electrified locks only: DO NOT lubricate this area.</p>	<p><b>Bottom link:</b> Apply lubricant at shaded areas indicated.</p> 	<p><b>Link subassembly:</b> Apply lubricant at shaded areas indicated.</p> 
	<p><b>Retractor (LM9256 only):</b> Apply lubricant at shaded areas indicated.</p> 	<p><b>Spool subassemblies:</b> Apply lubricant at shaded areas indicated. Apply lubricant to lobes as specified.</p>  <p>Lubricate lobes. Use 5/32" hex key to rotate part 180°. Then, lubricate the opposite side.</p> <p>DO NOT lubricate this area.</p>

## Door handing

# Door handing

The hand of a door refers to the position of the lock relative to the side and direction of the door hinge.

There are four possible 'handings' based on whether the hinge is on the right or left side of the door and whether it swings to the inside or outside (see diagram).




## Changing the lock hand

There are two steps to changing the hand of any L-Series lock:

1. Pull and rotate latchbolt. With the lock case removed from the door, pull the latchbolt away from the lockcase and rotate 180°.
2. Change lock handing screw. Remove the lock handing screw from one side of the chassis and install it on the opposite side. The lock handing screw should always be on the interior side of the door for L-Series locks, and on the exterior side of the door for LV-Series locks.

## Changing cylinder turn hand

1. Remove cam.
2. Move ball and spring to appropriate hole.

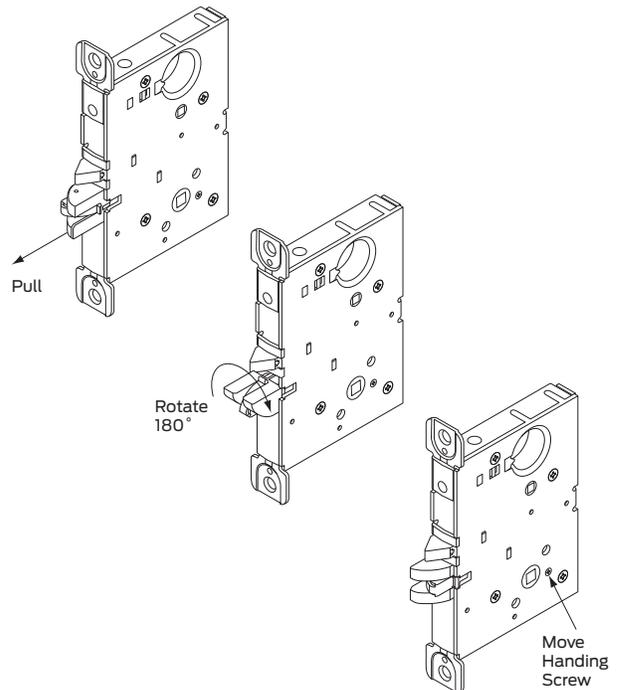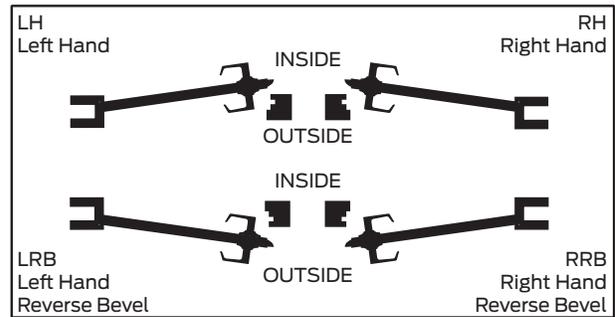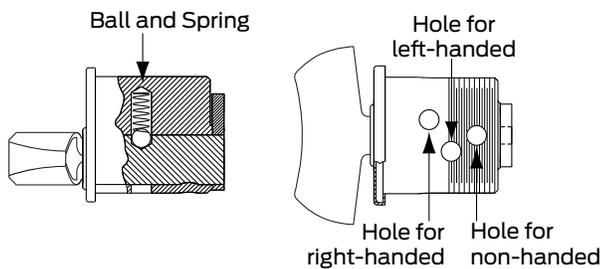

# Ordering procedures

To order Schlage products, descriptive data should be in the same sequence as shown:

Line Item	Qty	Product	Outside		Inside		Hand	Latch	Strike	DR THK	EXT	DIM	Additional Details
			DES	FIN	DES	FIN							
1	2	3	4	5	6	7	8	9	10	11	12	13	14

- Line Item: Line item number
- Qty: Quantity
- Product: Complete lock product or part number
- Outside DES: Outside design code
- Outside FIN: Outside finish code
- Inside DES: Inside design code: Leave blank if same as outside design code.
- Inside FIN: Inside finish code: Leave blank if same as outside finish code.
- Hand: Hand of door: Only one hand allowed per line item. Example: RH=Right Hand, LH=Left Hand, RR=Right Reverse, LR=Left Reverse
- Latch: Latch: Leave blank for standard or specify part number if non-standard latch is required. LLL=Less Latch.
- Strike: Strike: Leave blank for standard or specify part number if non-standard strike is required. LLL=Less Strike.
- DR THK: Door thickness: Enter door thickness if non-standard. Example: 138=1<sup>3</sup>/<sub>8</sub>", 214=2<sup>1</sup>/<sub>4</sub>", 212=2<sup>1</sup>/<sub>2</sub>".
- EXT: Extension: Enter one of the following when doors 2" thick or greater are specified: EE=Extended Equally, EI=Extended Inside, EO=Extended Outside, ED=Extended Differently. EI or EO assumes the latch will be centered on a 1<sup>3</sup>/<sub>4</sub>" door, to which material has been added.
- DIM: Dimension: Enter dimension for non-standard strike lip length and mortise cylinder or blocking ring length.

012 = 1/8"	037 = 3/8"	118 = 1 1/8"	158 = 1 5/8"
018 = 3/16"	050 = 1/2"	114 = 1 1/4"	134 = 1 3/4"
025 = 1/4"	078 = 7/8"	138 = 1 3/8"	200 = 2"
031 = 5/16"	100 = 1"	112 = 1 1/2"	400 = 4"

- Additional Details: Enter detail for keying information and for special requirements.

15. Examples:

Line Item	Qty	Product	Outside		Inside		Hand	Latch	Strike	DR THK	EXT	DIM	Additional Details
			DES	FIN	DES	FIN							
One mortise cylinder, 1 1/4" long, which will operate a Von Duprin exit device.													
17	1	20-001		626								114	
One hotel function L-Series lock with 17B trim in 625 for left hand door.													
18	1	L9485P	17B	625			LH					114	
Five replacement inside L escutcheons with "EZ" turn, in satin stainless steel, to be used with O6 lever on 1 3/4" doors.													
19	5	09-633			O6L	630				134			with EZ turn per L583-363

## Finishes

# Finishes

Schlage Lock products are available in a range of durable, top quality finishes. Most are available with a clear coating that protects against damaging environmental factors, including sea air, high humidity, or corrosive vapors.

The anti-microbial coating on Schlage lock hardware works to protect the hardware's surface by inhibiting the growth of bacteria, mold and mildew. The coating is made using ionic silver (AG+), a single atom that is missing one orbital electron that interacts with the bonding sites on the microbe surface. The result is that silver ions surround bacterial cells, blocking food and respiration supply, and slowing bacterial growth.

Cleaning and care varies by finish. Clear-coated or oil rubbed finishes can be cleaned periodically with a mild non-abrasive soap and buffed lightly with a clean cloth. Non-clear coated finishes should not be cleaned with soaps or solvents. They require cleaning with a clean, soft, damp cloth.

Finishes are coded according to the Builders Hardware Manufacturers Association (BHMA). The nearest old U.S. equivalent code designations are shown in parentheses.

### Finish Codes and Descriptions

Code		Description
605	(US 3)	Bright brass, clear coated
606	(US 4)	Satin brass, clear coated
609	(US 5)	Antique brass, clear coated
612	(US 10)	Satin bronze, clear coated
613	(US 10B)	Oil rubbed bronze, no coating
619	(US 15)	Satin nickel, clear coated
622	(US 19)	Matte black (available January 2017)

Code		Description
625	(US 26)	Bright chromium plated, no coating
626	(US 26D)	Satin chromium plated, no coating
626AM		Satin chromium plated, anti-microbial coating
629	(US 32)	Bright stainless steel, no coating
630	(US 32D)	Satin stainless steel, no coating
630AM		Satin stainless steel, anti-microbial coating
643e	(US 11)	Commercial aged bronze

For finish availability refer to Schlage Commercial Price Book.

# Limited warranty

## Commercial application

### 3-Year Limited Warranty

Schlage Lock Company (the "Company") extends a three-year limited warranty from the original date of purchase to the Original User of the products manufactured by the Company (the "Product") against defects in material and workmanship. Certain Products contain restrictions to this limited warranty, additional warranties or different warranty periods. Please see below for specific Product warranty information.

#### **The provisions of this warranty do not apply to Products:**

(i) used for purposes for which they are not designed or intended; (ii) which have been subjected to alteration, abuse, misuse, negligence or accident; (iii) which have been improperly stored, installed, maintained or operated; (iv) which have been used in violation of written instructions provided by Schlage; (v) which have been subjected to improper temperature, humidity or other environmental conditions (i.e., corrosion); or (vi) which, based on Schlage's examination, do not disclose to Schlage's satisfaction non-conformance to the warranty. Additionally, Schlage will not warrant ANSI A 156.2 Grade 2 lever Product installed in educational and student housing.

## Specific product warranty restrictions/additional warranties

**Portable security products warranty:** A limited lifetime warranty is provided to the Original User, subject to the restrictions of this limited warranty, except that the Company's sole obligation under this warranty is to replace the Product.

**ND-Series levers 10-year mechanical warranty:** A limited warranty is provided to the Original User for ten (10) years from the original date of purchase, subject to the restrictions of this limited warranty.

**Small Format Interchangeable Core (SFIC) warranty:** This limited warranty also applies to Schlage locks and housings when used with another manufacturer's cores, or to Schlage cores (i.e., SFIC) when used in another manufacturer's locks and housings. The use of unauthorized cylinder cams or other components with the Products shall void this warranty.


**Everest®, Primus® limited lifetime key breakage warranty:** A limited lifetime warranty is provided to the Original User against key breakage, subject to the restrictions of this limited warranty.

**AD-Series 1-Year warranty for electronic locks, reader modules, PIM400 and PIB300:** A limited warranty is provided to the Original User for one (1) year from date of installation, not to exceed two (2) years from the date of shipment from the factory, subject to the restrictions of this limited warranty.

# L9000-Series installation instructions


## Lever and Rose

- A Lockcase and mounting screws
- B Spindle and spring
- C Outside lever and rose
- D Mounting posts
- E Spring cage or spacer
- F Occupancy indicator
- G Inside mounting plate & screws
- H Inside lever
- J Inside thumbturn
- K Cylinder, compression ring and spring
- L Inside rose
- N Emergency turn and button
- P Coin turn
- Q Armor front and screws
- Z Blocking ring

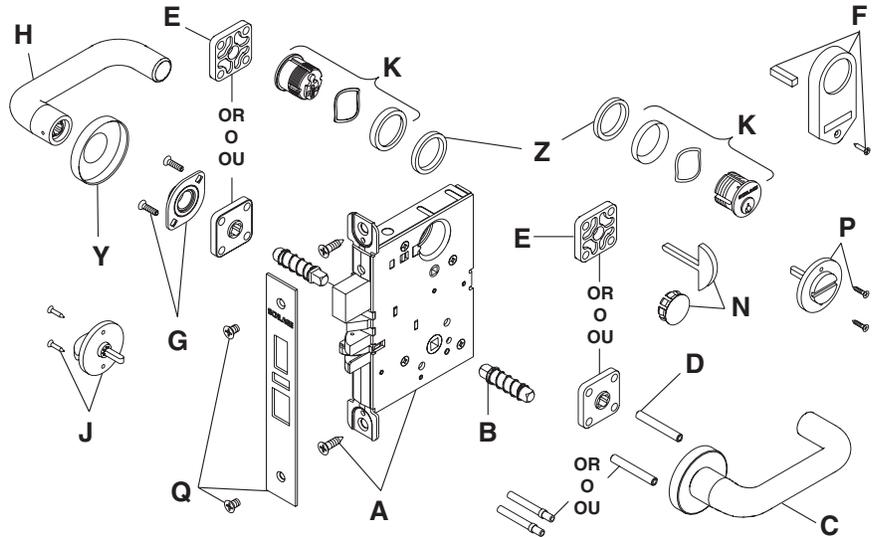


**IMPORTANT:** Before installation of any L/LV Series lock, check lock handing. (See door handing section.)

### 1 All functions

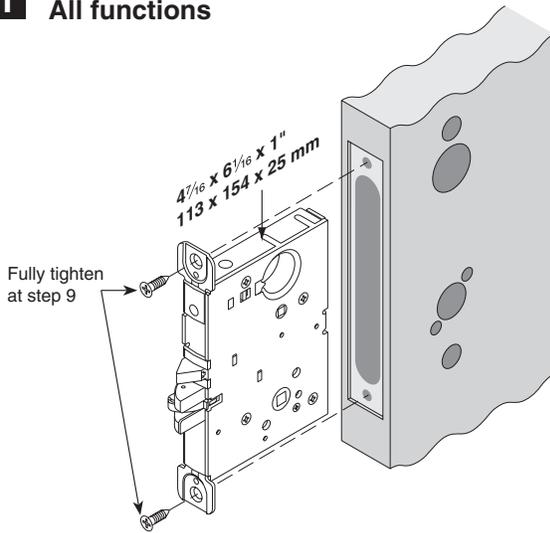


### 2 All functions

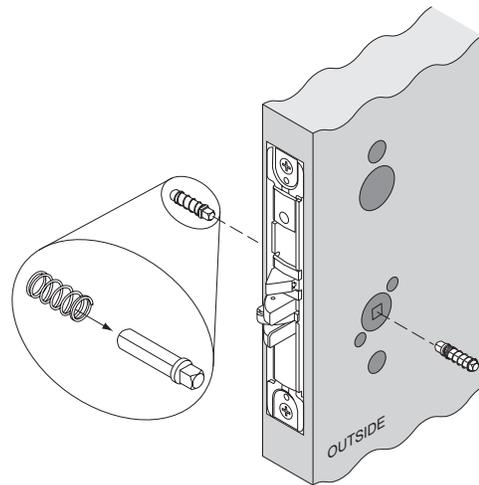


### 3 All functions


**IMPORTANT:** If spacer is supplied, install now.

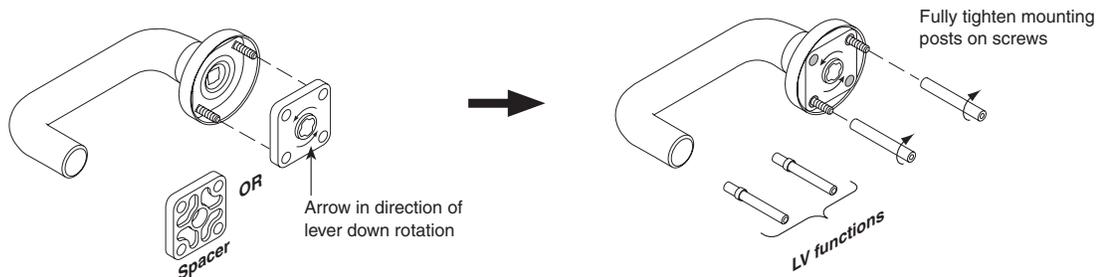


**4 All functions**

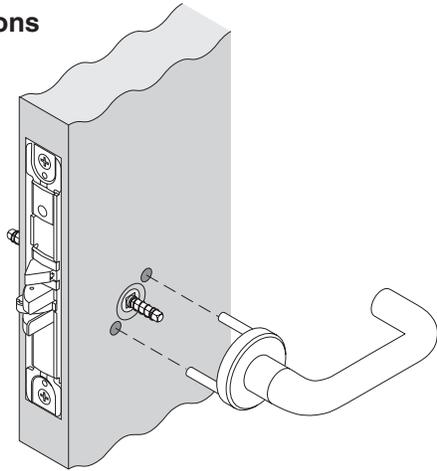

**OR For Functions:  
9486  
9496**

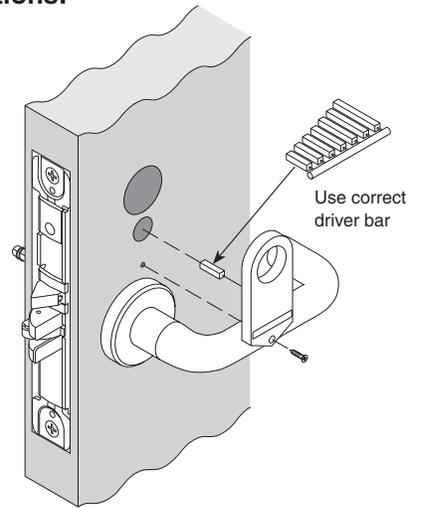


**5 For Functions:  
9040  
9440**


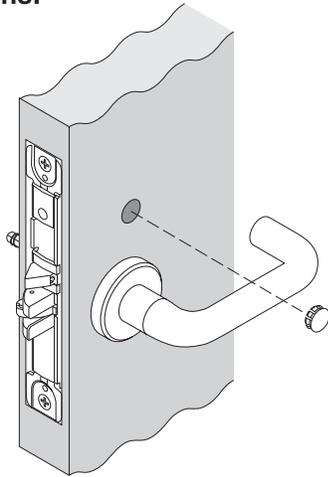


**OR For Functions:**


- 9050
- 9056
- 9060
- 9070
- 9071
- 9076
- 9077
- 9080
- 9082
- 9453
- 9456
- 9457
- 9465
- 9466
- 9473
- 9480
- 9485
- 9486
- 9496

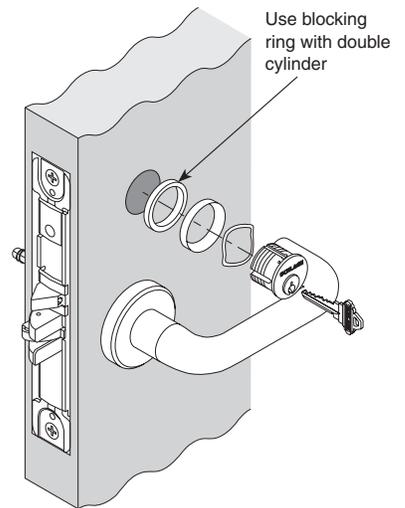


**OR For Functions:  
9044  
9444**

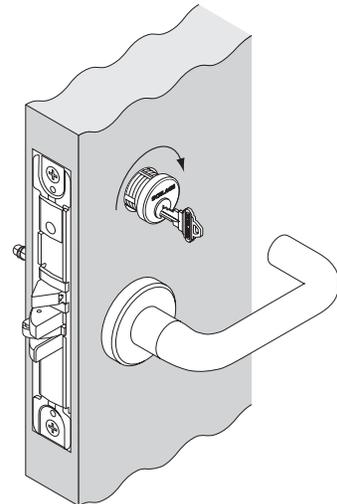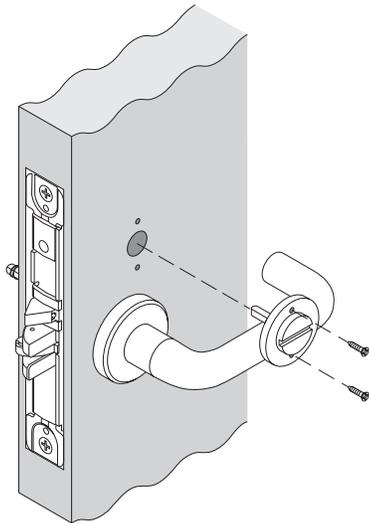

**6 All functions**

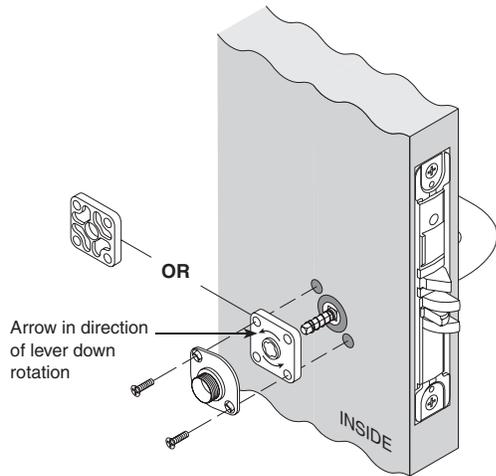


**7 All functions**

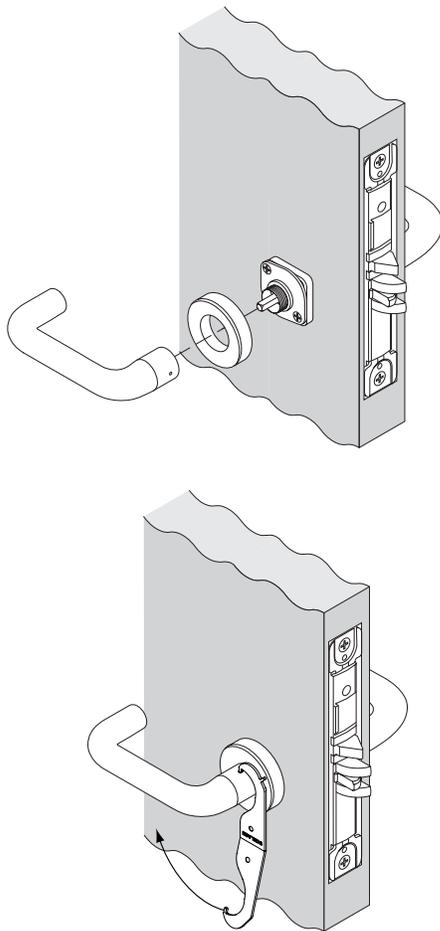


**8 For Functions:**

- 9040
- 9050
- 9056
- 9440
- 9453
- 9456
- 9473
- 9480
- 9485
- 9486

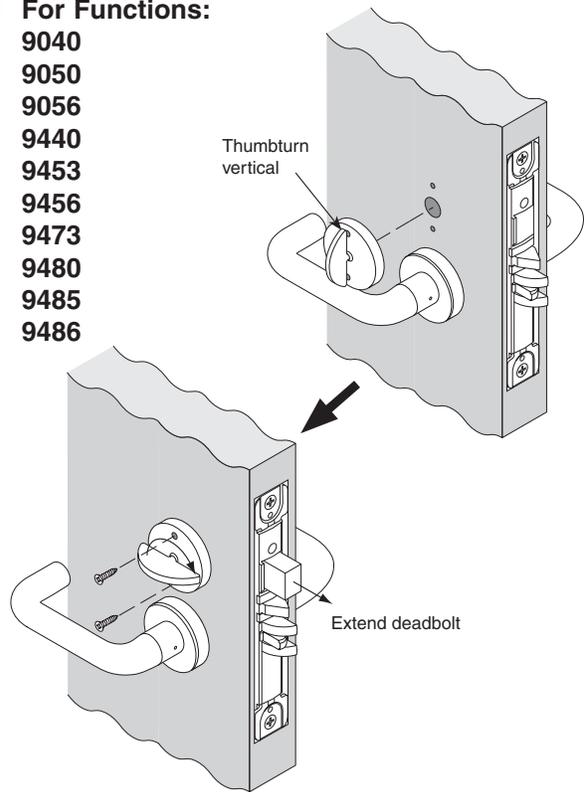


**OR For Functions:**


- 9060
- 9071
- 9077
- 9082
- 9457
- 9466

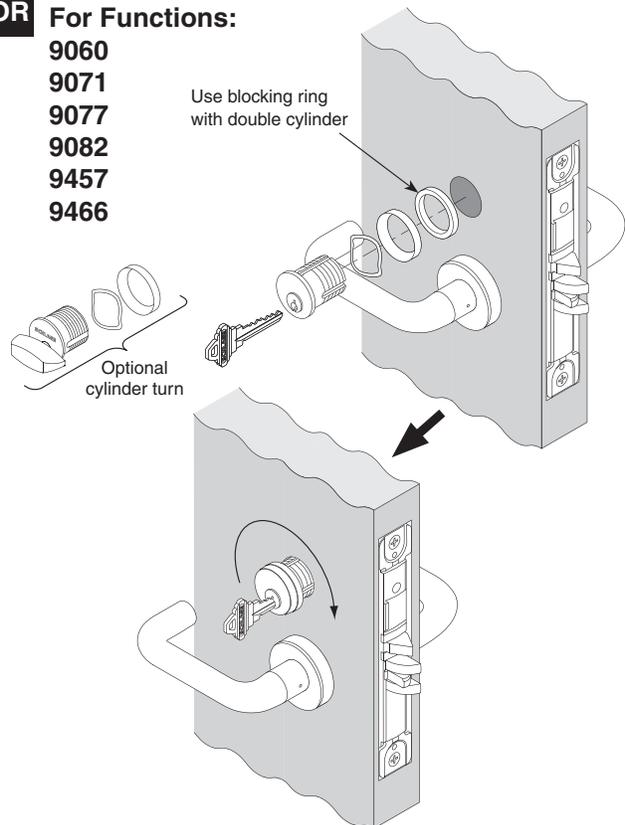

**9 All functions**

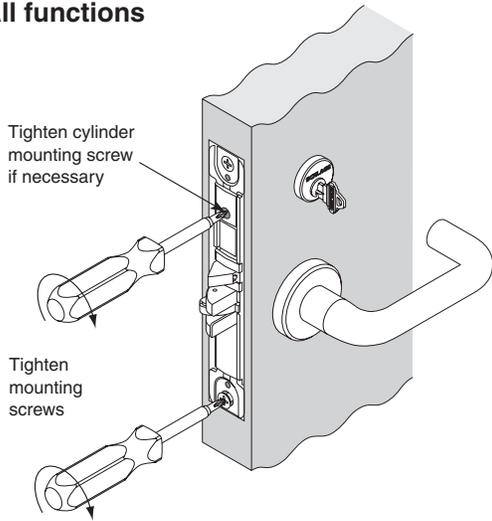


**10 All functions**

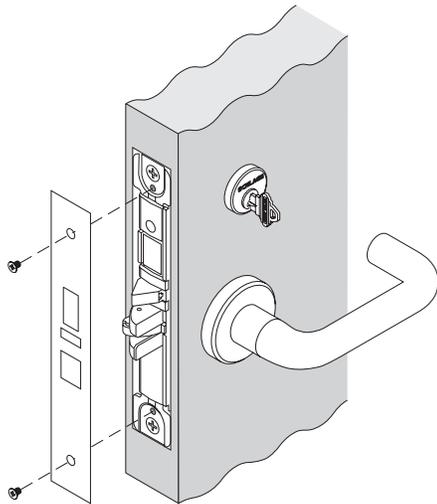

**Door Handing**


**IMPORTANT:** Move handing screw to inside of door for L locks and outside of door for LV locks.

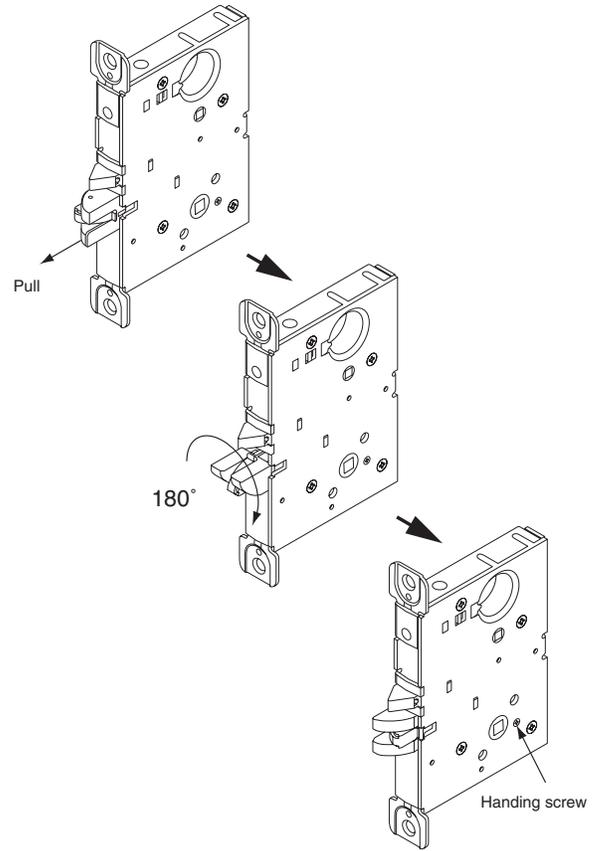


**Lever and Escutcheon**

- A** Lockcase and mounting screws
- B** Spindle and spring
- D** Mounting posts
- E** Spring cage or spacer
- G** Inside mounting plate and screws
- H** Inside lever
- K** Cylinder and spring
- N** Emergency button and turn
- Q** Armor front and screws
- R** Outside lever and escutcheon
- T** Inside escutcheon and screws


IMPORTANT: Before installation of any L/LV Series lock, check lock handing. (See door handing section.)

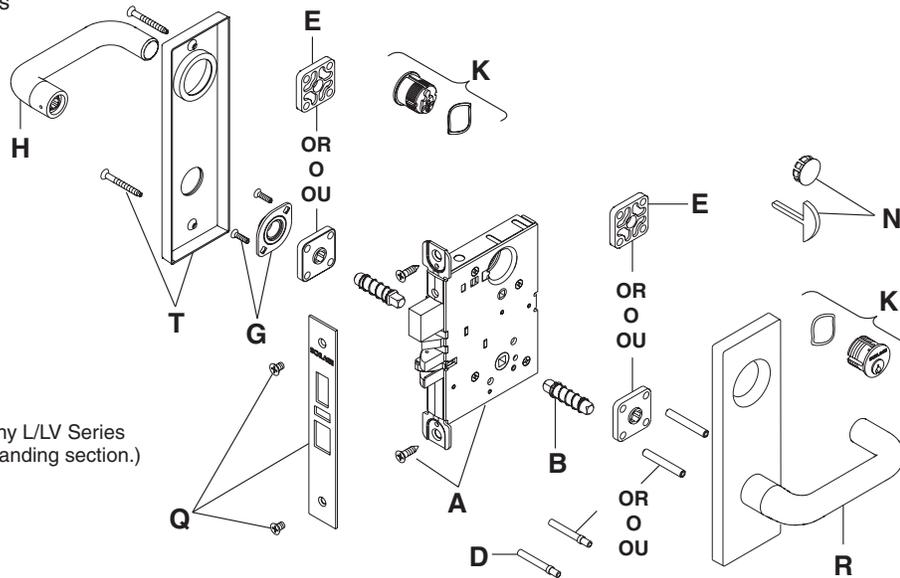


**1 All functions**

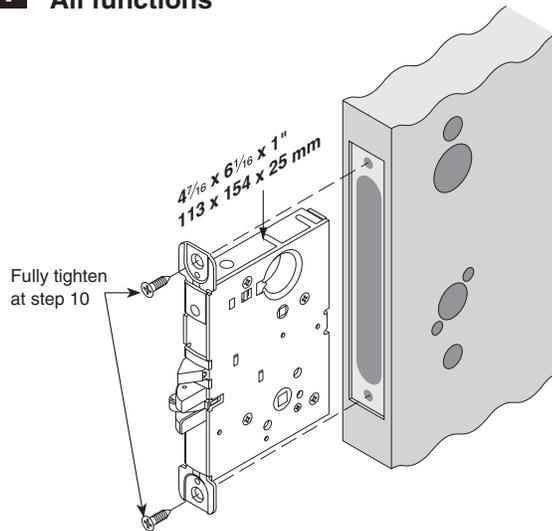


**2 All functions**

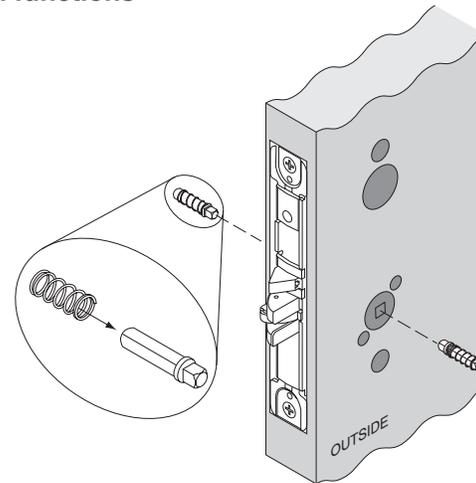


**3 All functions** IMPORTANT: If spacer is supplied, install now.

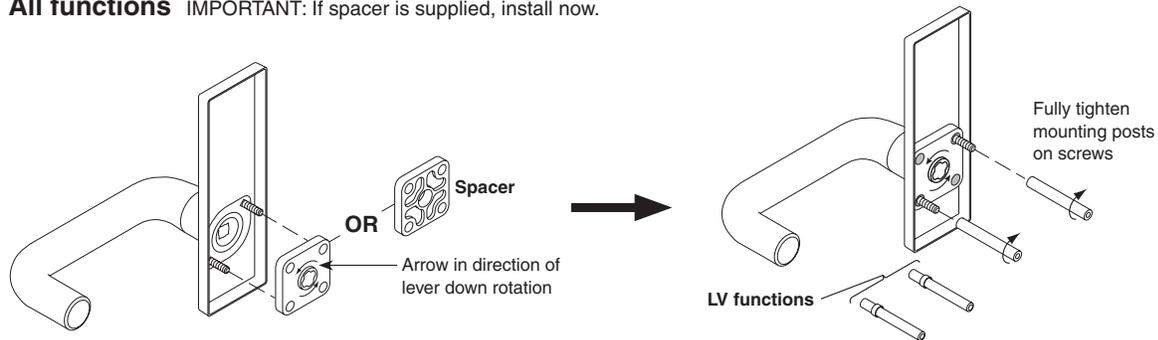


**4** IMPORTANT: For concealed cylinder option, install cylinder(s) BEFORE installing escutcheon(s).

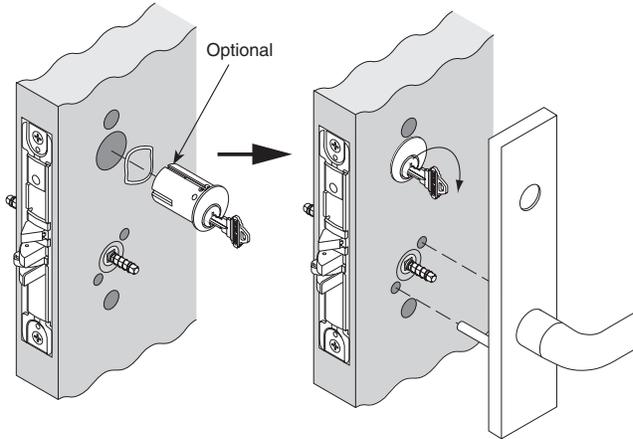


**OR** For Functions:  
9486  
9496

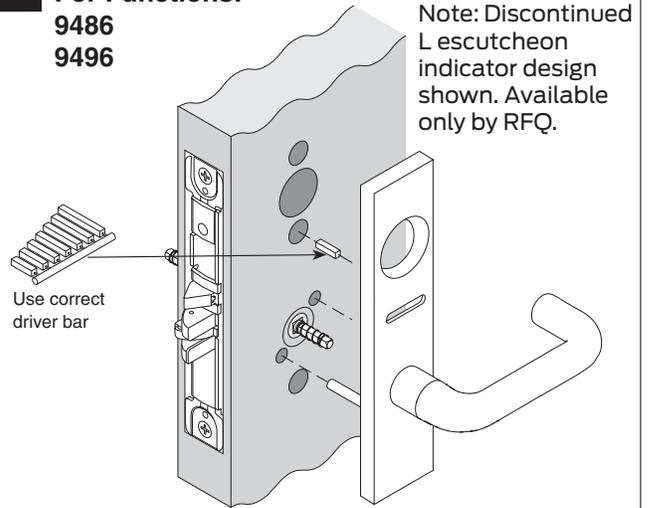


**5** For Functions:  
9010  
9176

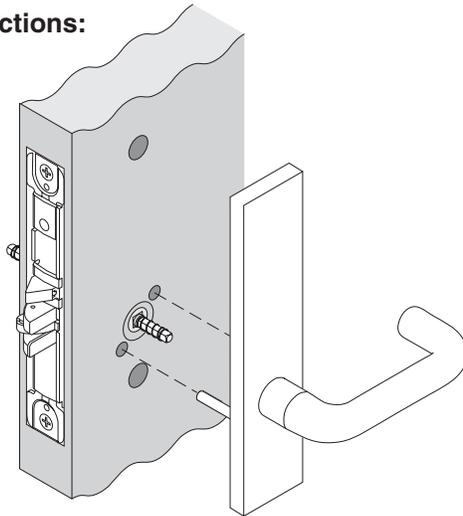


**OR** For Functions:  
9050 9485  
9056 9486  
9060 9496  
9070  
9071  
9076  
9077  
9080  
9082  
9453  
9456  
9457  
9465  
9466  
9473  
9480

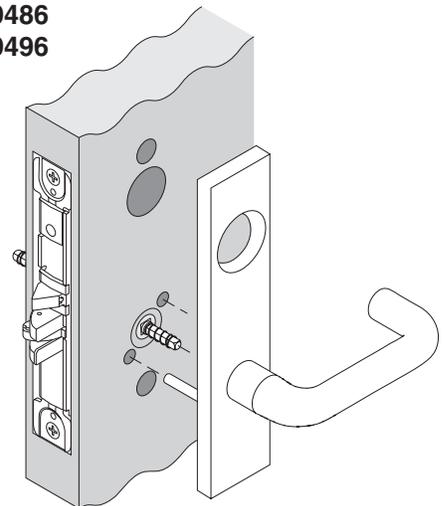


**OR** For Functions:  
9040  
9440

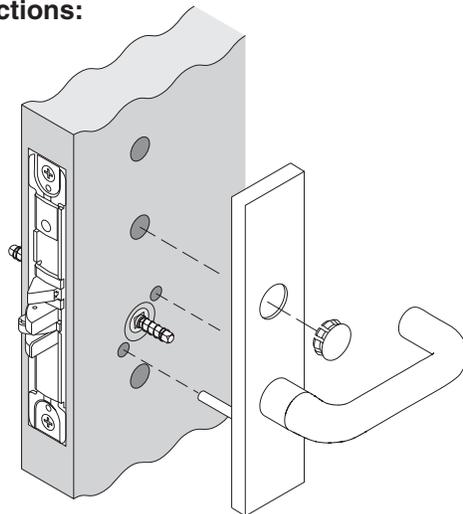


**6** All functions

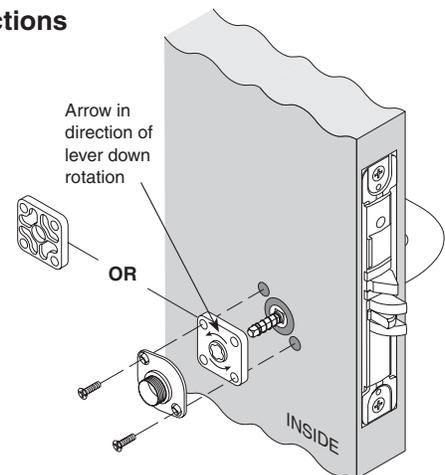

**7** For Functions:  
 9010 9080  
 9060 9082  
 9070 9457  
 9071 9465  
 9076 9466  
 9077

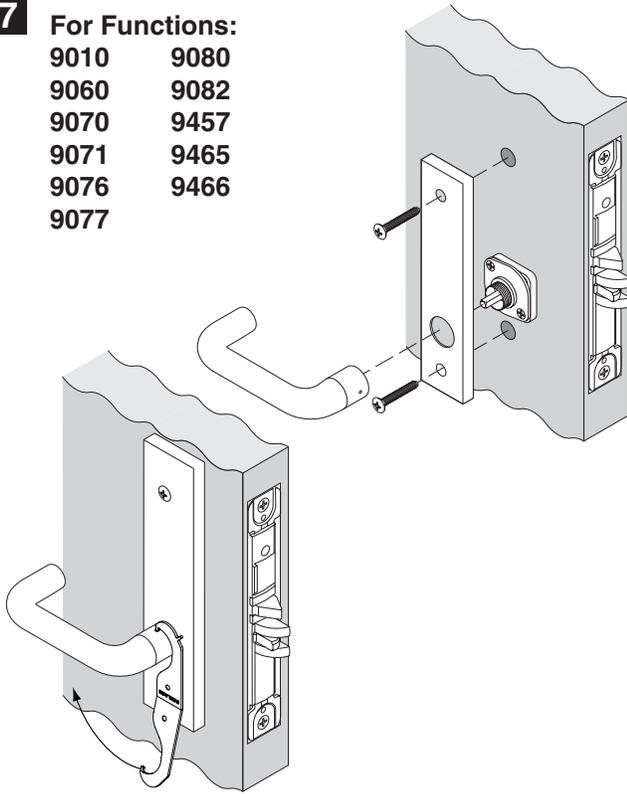


**8** For Functions:  
 9050 9071 9082 9465 9485  
 9056 9076 9453 9466 9486  
 9060 9077 9456 9473 9496  
 9070 9080 9457 9480

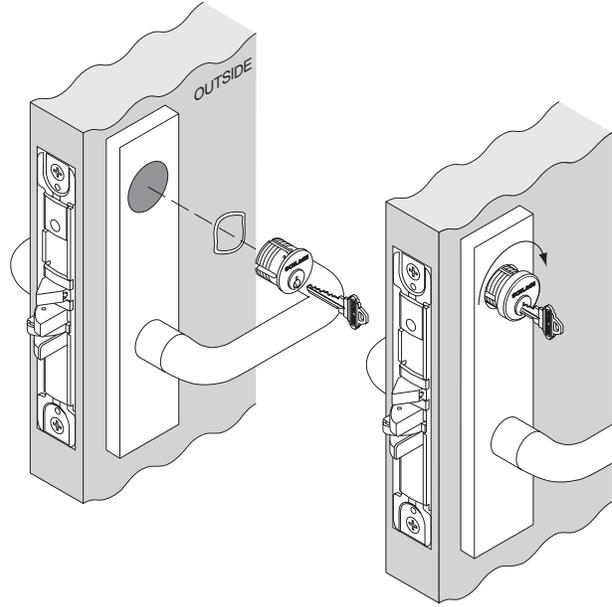


OR


For Functions:  
 9040 9456  
 9050 9473  
 9056 9480  
 9440 9485  
 9453 9486

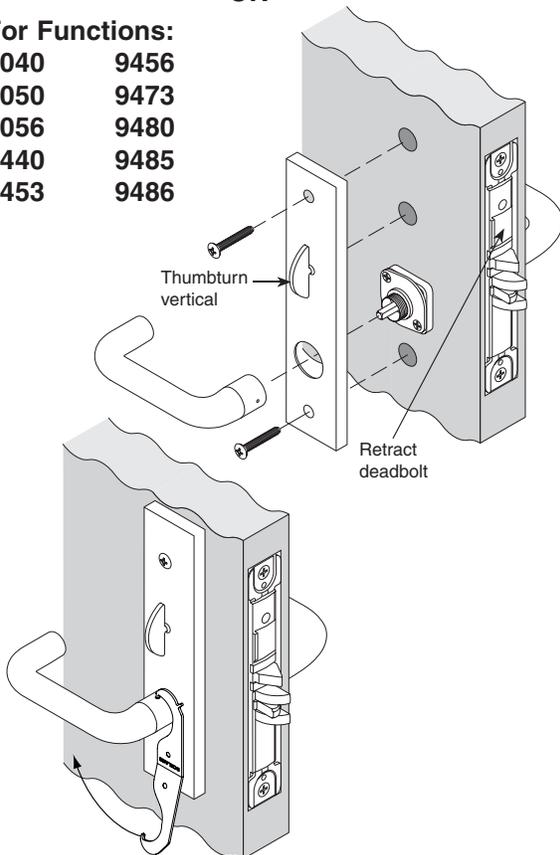

**9** For Functions:  
 9060  
 9071  
 9077  
 9082  
 9457  
 9466

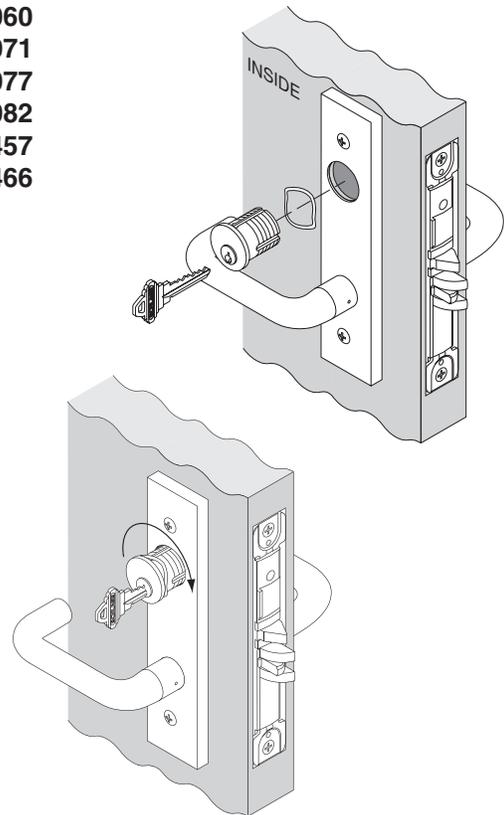


**10** All functions

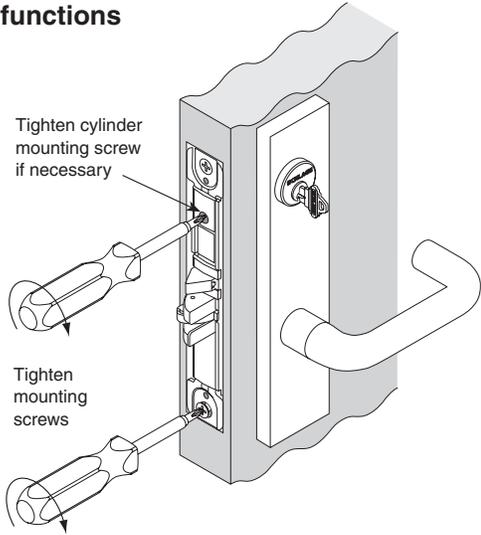


**Door Handing**

**IMPORTANT:** Move handing screw to inside of door for L locks and outside of door for LV locks.

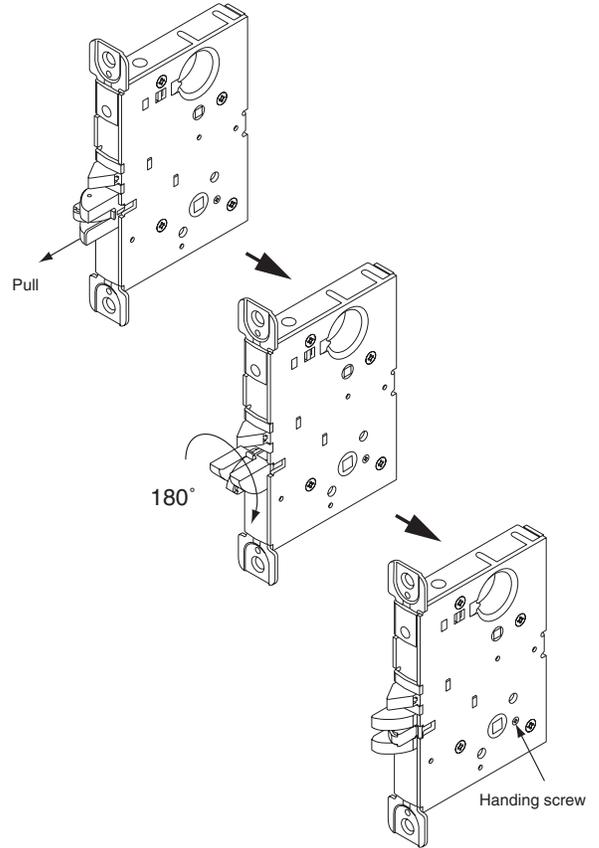


**11** All functions

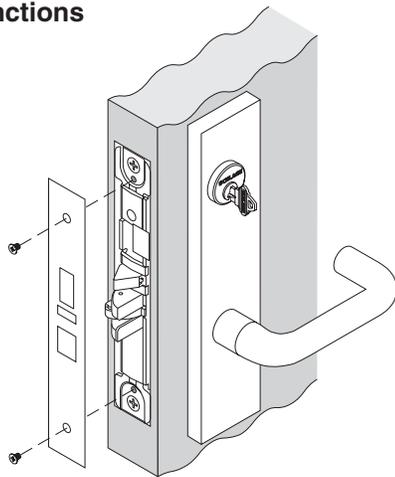


**Knob and Rose**

- A Lockcase and mounting screws
- B Spindle and spring
- D Mounting posts
- F Occupancy indicator
- J Inside thumbturn
- K Cylinder, compression ring and spring
- L Inside rose
- M Outside knob and rose
- N Emergency turn and button
- P Coin turn
- Q Armor front and screws
- V Knob mounting plate
- W Inside knob
- Z Blocking ring

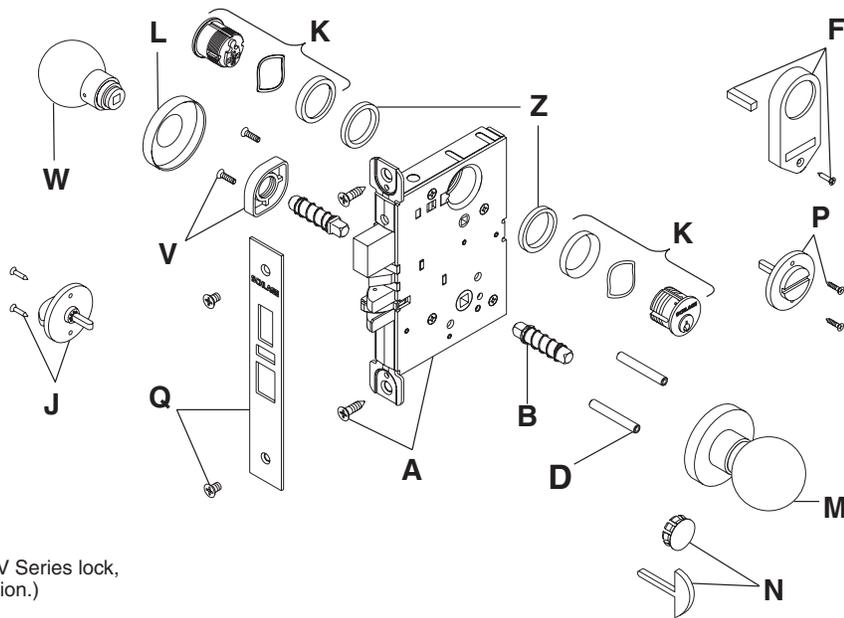


**IMPORTANT:** Before installation of any L/LV Series lock, check lock handing. (See door handing section.)


**1 All functions**

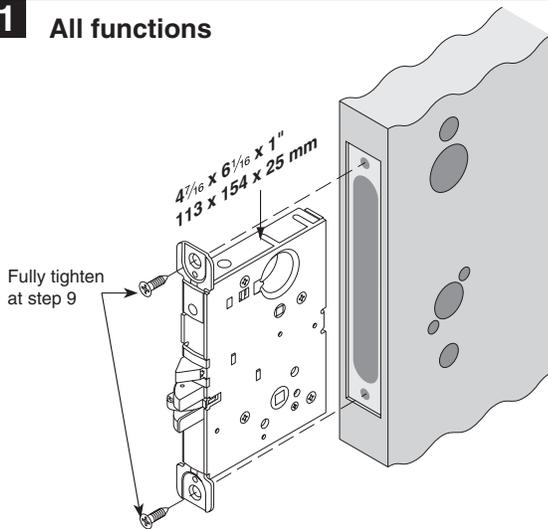


**3 All functions**

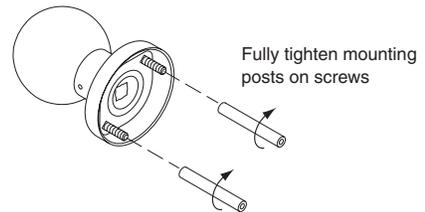


**2 All functions**

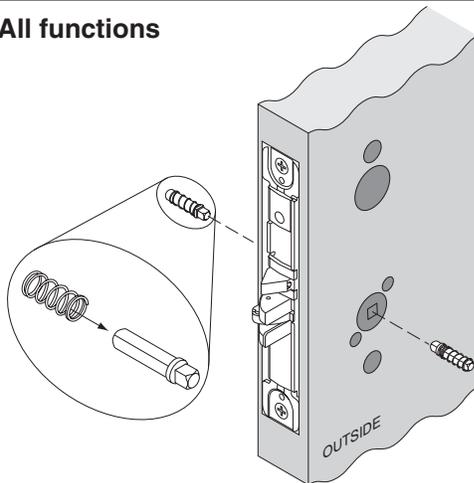

**4 All functions**

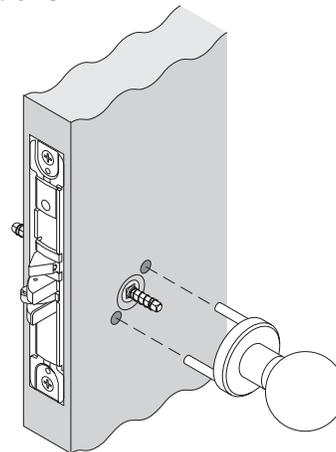


**5** For Functions:  
9040  
9440


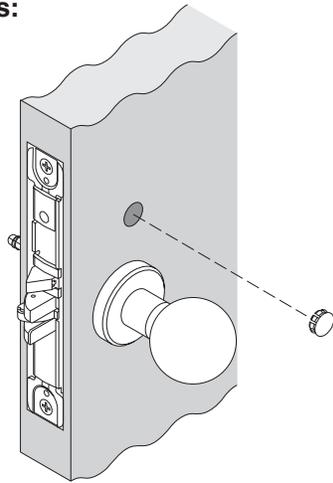


**OR** For Functions:


9050  
9056  
9060  
9070  
9071  
9076  
9077  
9080  
9082  
9453  
9456  
9457  
9465  
9466  
9473  
9480  
9485  
9486  
9496

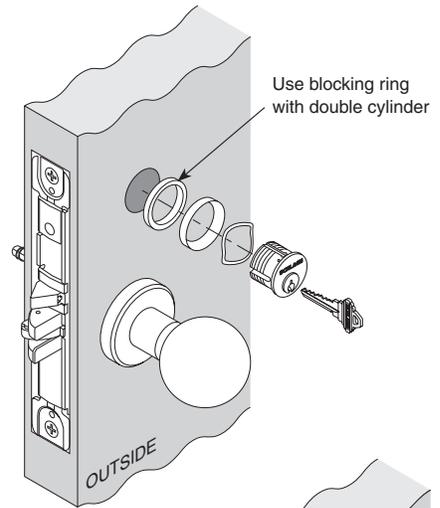


**OR** For Functions:  
9044  
9444

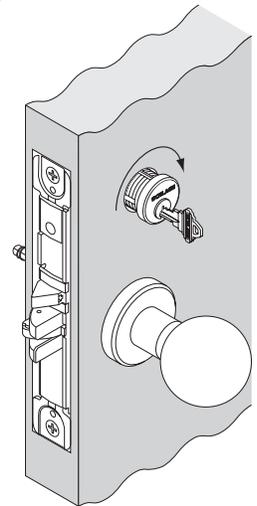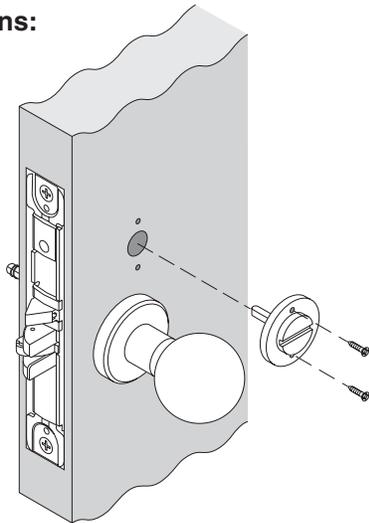


**OR** For Functions:  
9486  
9496

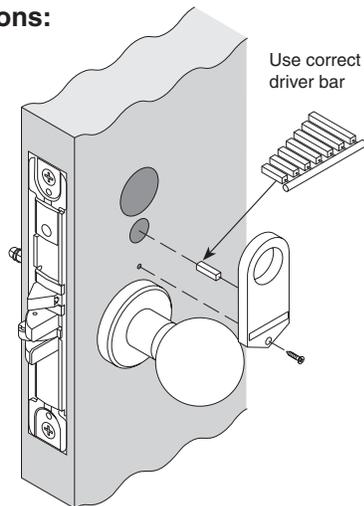

**6** All functions

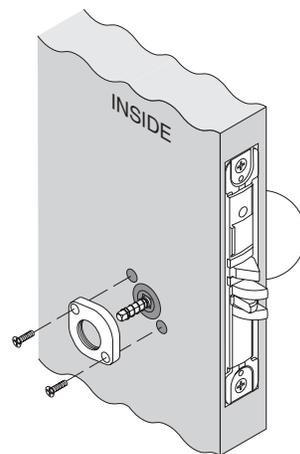


**7 All functions**

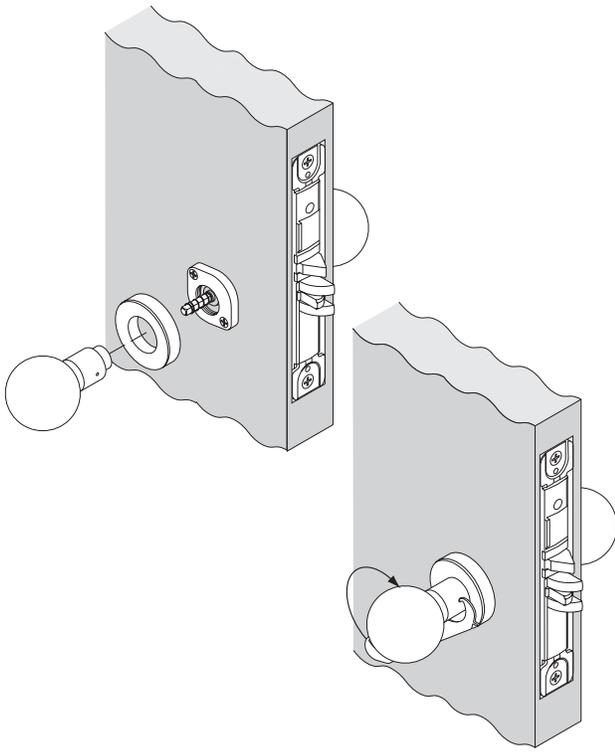


**OR For Functions:**

- 9060
- 9071
- 9077
- 9082
- 9457
- 9466

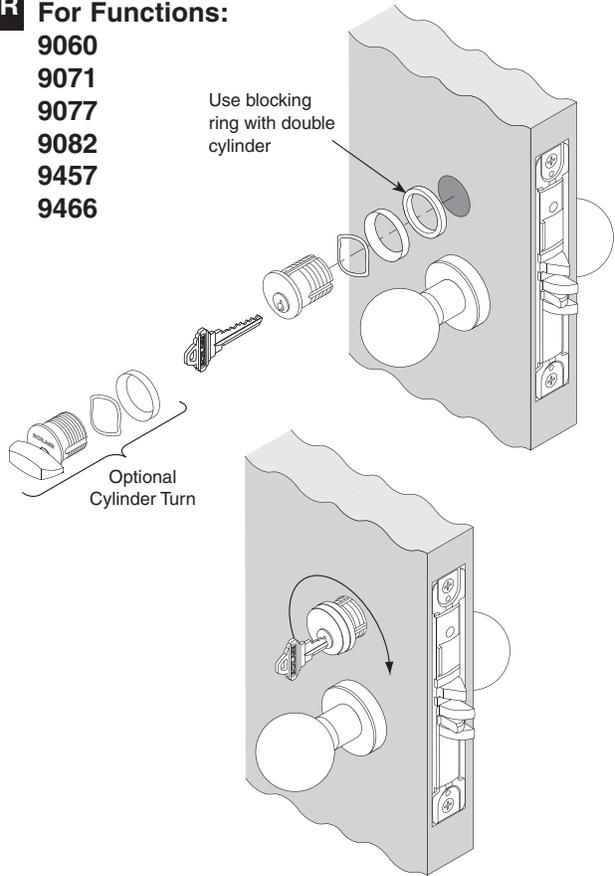


**8 For Functions:**


- 9040
- 9044
- 9050
- 9056
- 9440
- 9444
- 9453
- 9456
- 9473
- 9480
- 9485
- 9486
- 9496

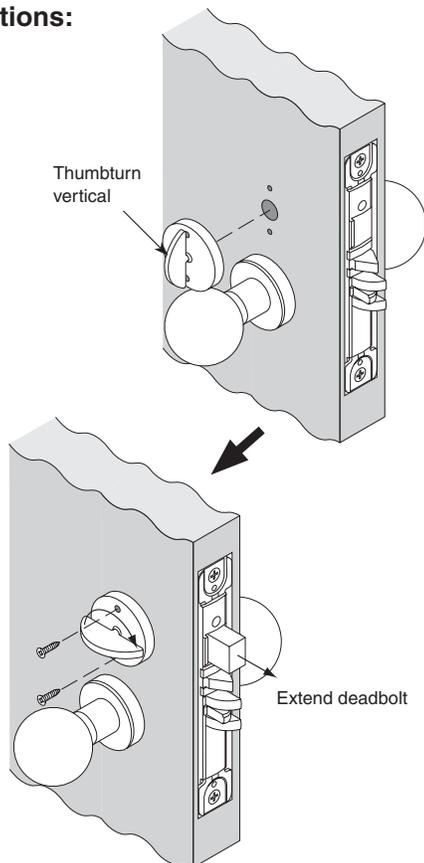

**9 All functions**

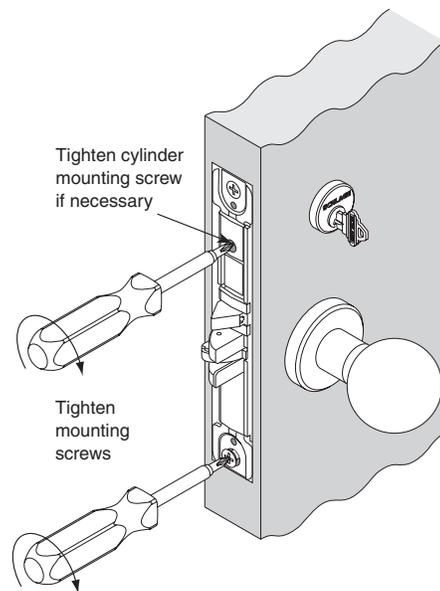


**10 All functions**

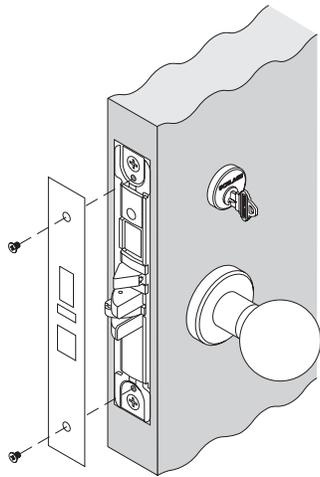

**Door Handing**


IMPORTANT: Move handing screw to inside of door.

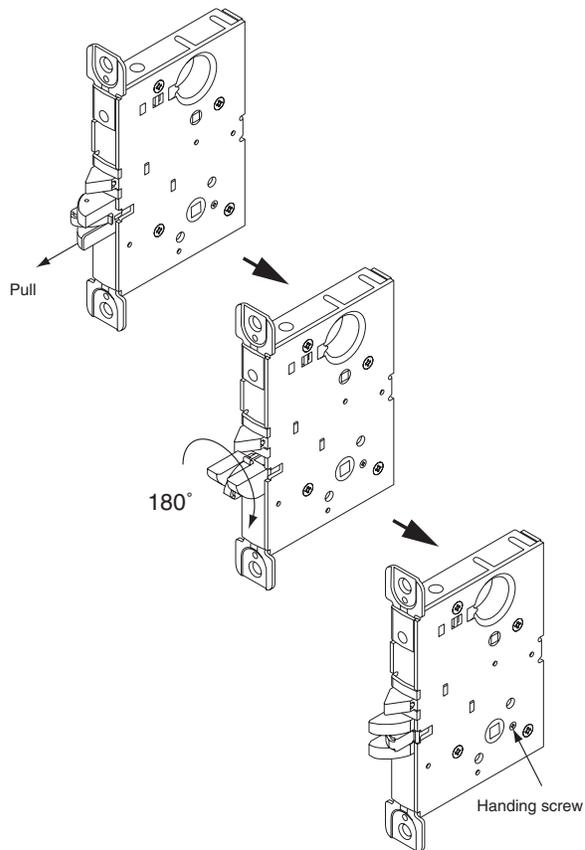


### Knob and Escutcheon

- A Lockcase and mounting screws
- B Spindle and spring
- D Mounting posts
- K Cylinder and spring
- N Emergency button and turn
- Q Armor front and screws
- S Outside knob and escutcheon
- T Inside escutcheon and screws
- V Knob mounting plate
- W Inside knob


**IMPORTANT:** Before installation of any L/LV Series lock, check lock handing. (See door handing section.)

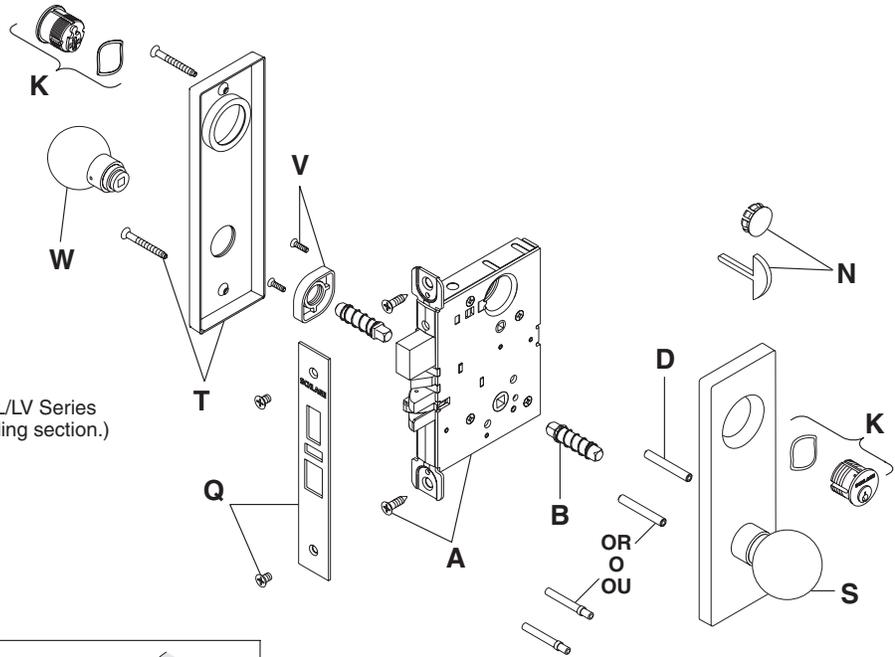


#### 1 All functions

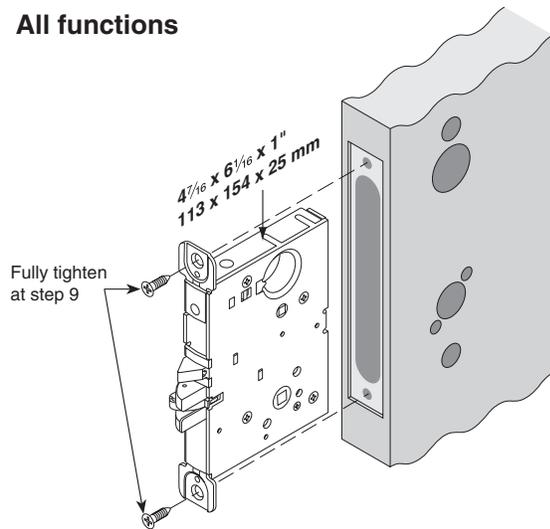


#### 3 All functions

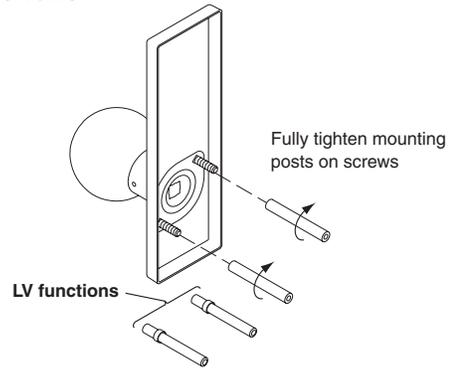


#### 2 All functions

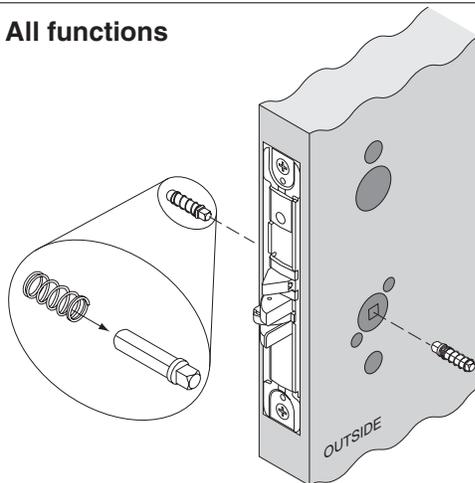


#### 4 IMPORTANT: For concealed cylinder option, install cylinder(s) BEFORE installing escutcheon(s).

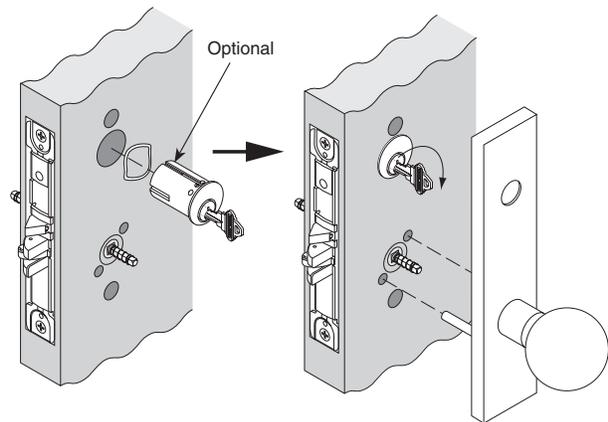


**5** For Functions:  
9010  
9110  
9176

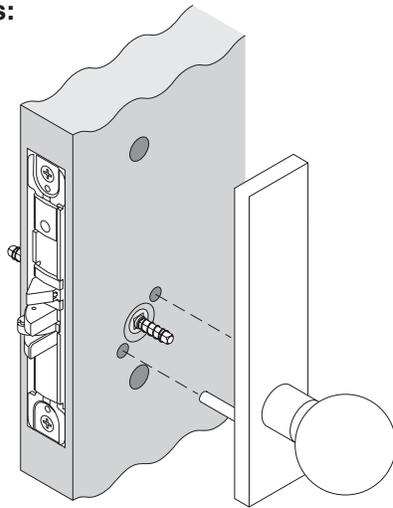


**OR** For Functions:  
9050  
9056  
9060  
9070  
9071  
9076  
9077  
9080  
9082  
9453  
9456  
9457  
9465  
9466  
9473  
9480  
9485  
9486  
9496

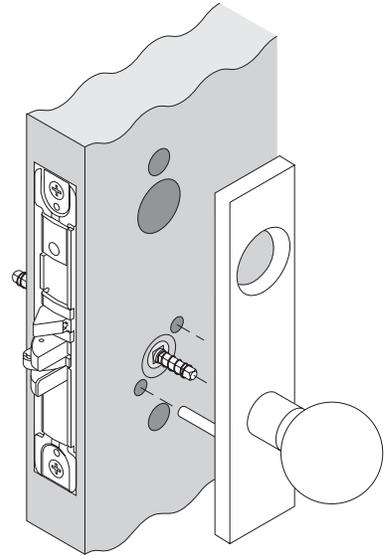


**OR** For Functions:  
9040  
9440

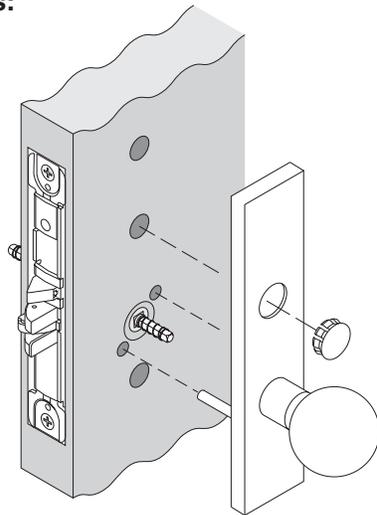

**6** All functions

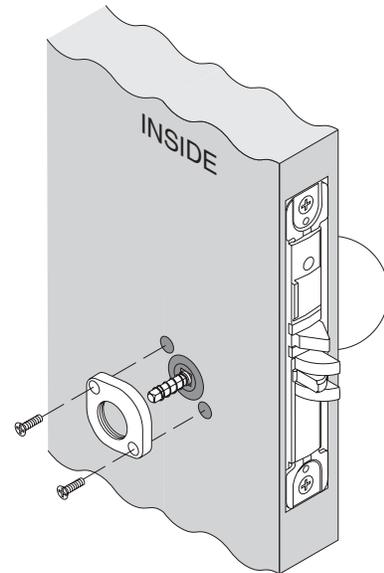

**OR** For Functions:  
9486  
9496

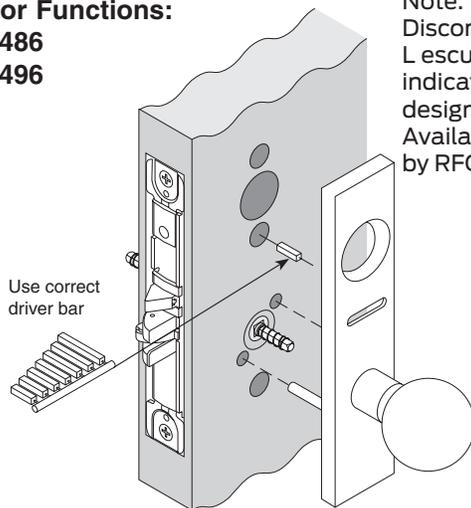


Note:  
Discontinued  
L escutcheon  
indicator  
design shown.  
Available only  
by RFQ.

Use correct  
driver bar

**7**

**For Functions:**


9010	9071	9080	9175	9465
9060	9076	9082	9176	9466
9070	9077	9110	9457	

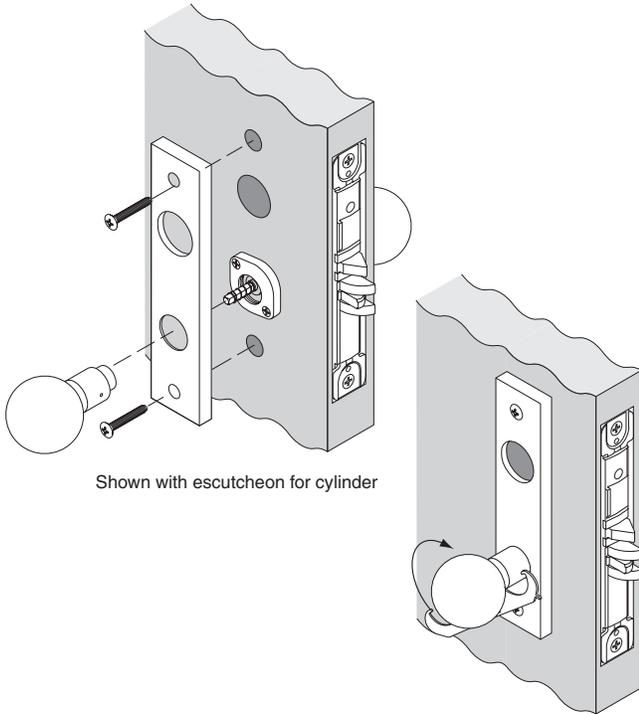

**8**

**For Functions:**


9050	9071	9082	9465	9485
9056	9076	9453	9466	9486
9060	9077	9456	9473	9496
9070	9080	9457	9480	

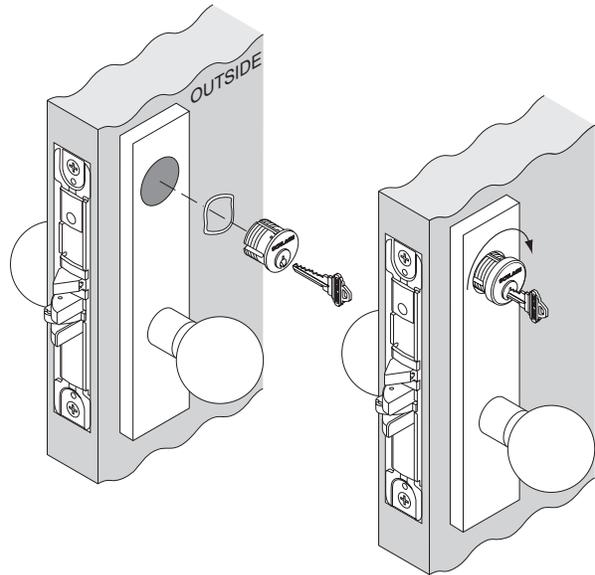

**OR**

**For Functions:**


9040	9453	9485
9050	9456	9486
9056	9473	9496
9440	9480	

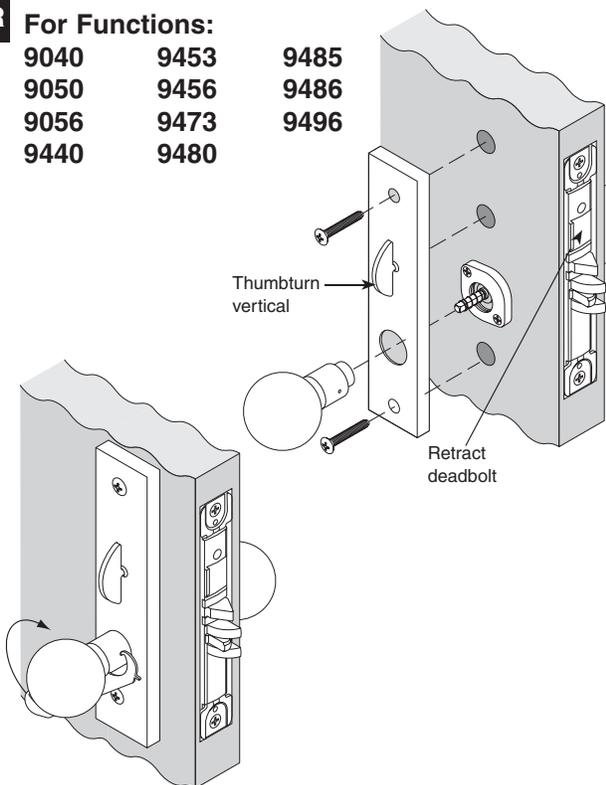


**9**

**For Functions:**

9060
9071
9077
9082
9457
9466

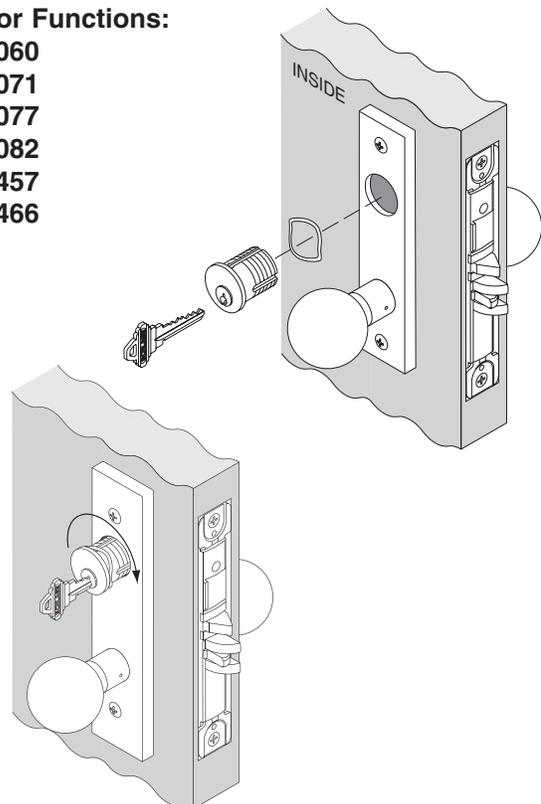


**10** All functions

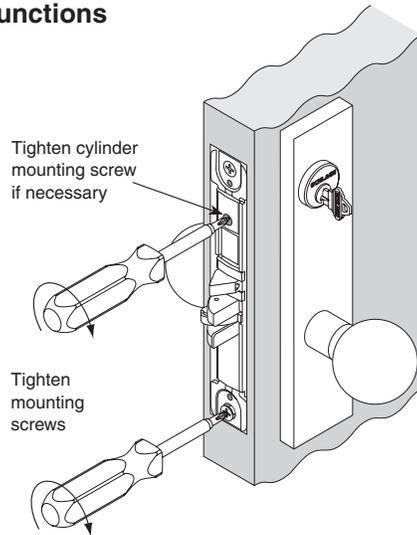


**Door Handing**

IMPORTANT: Move handing screw to inside of door.

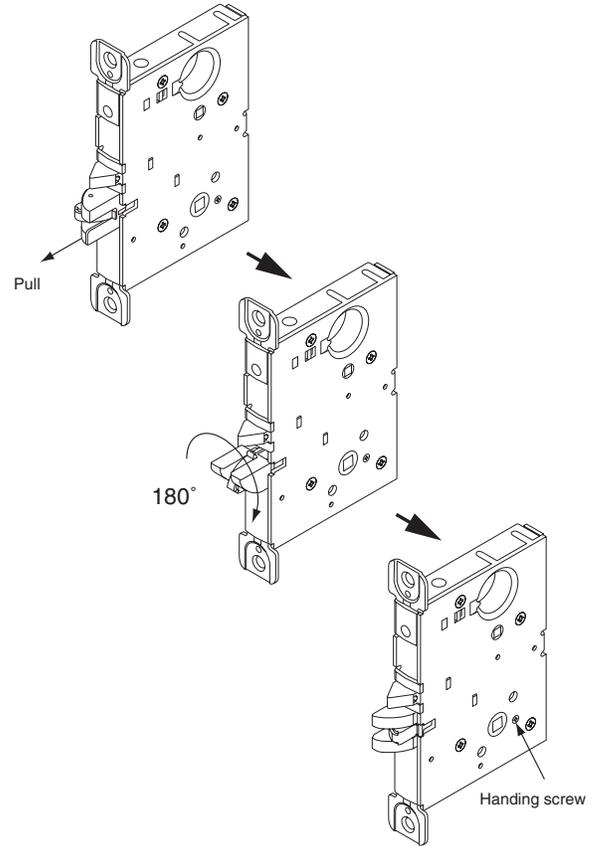


**11** All functions

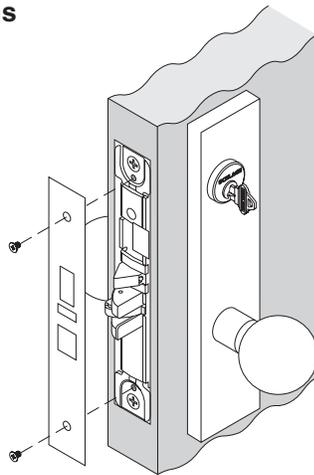


# L400-Series installation instructions

## Small Case Mortise Locks

- A** Lockcase and mounting screws
- B** Occupancy indicator
- C** Cylinder compression ring and spring
- D** Inside thumbturn
- E** Blocking ring
- F** Armor front and screws

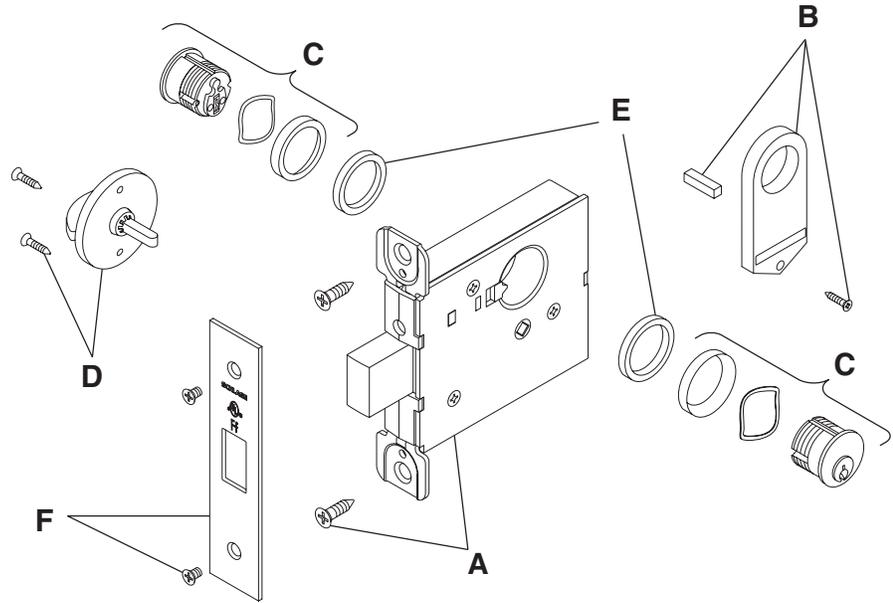


### 1 All functions


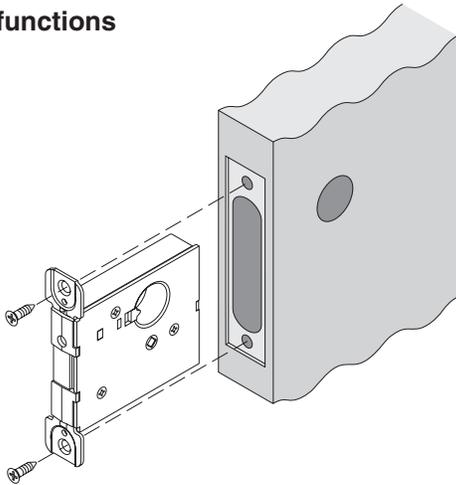


### OR For Functions:

- L460
- L462
- L463
- L464
- L496

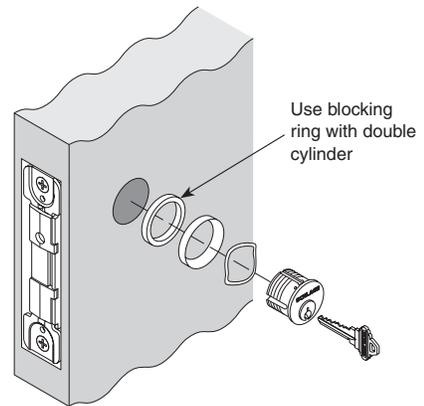


### 2 For Function: L496

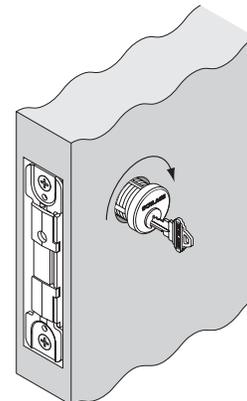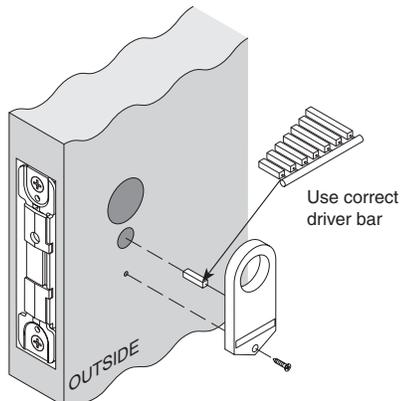


**Small Case Mortise Locks**

- A** Lockcase and mounting screws
- B** Occupancy indicator
- C** Cylinder compression ring and spring
- D** Inside thumbturn
- E** Blocking ring
- F** Armor front and screws

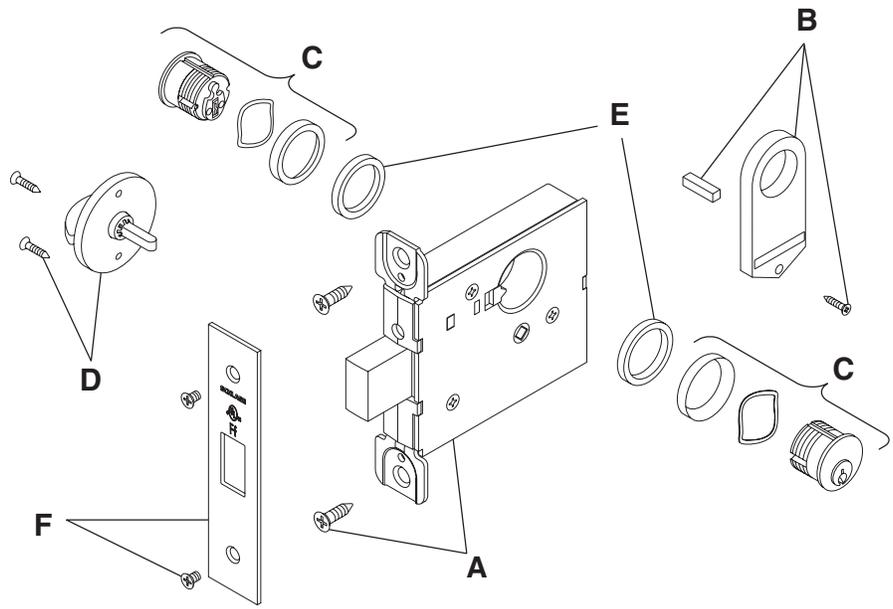


**1 All functions**


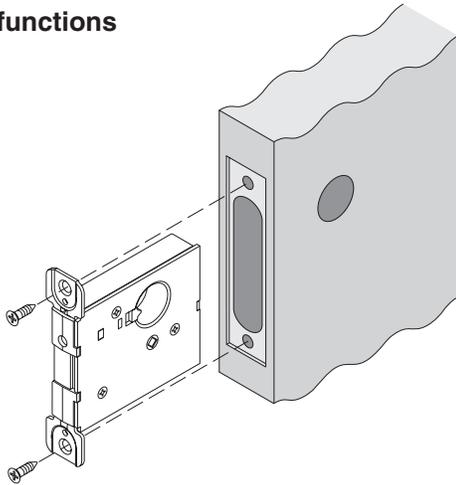


**OR For Functions:**

- L460**
- L462**
- L463**
- L464**
- L496**

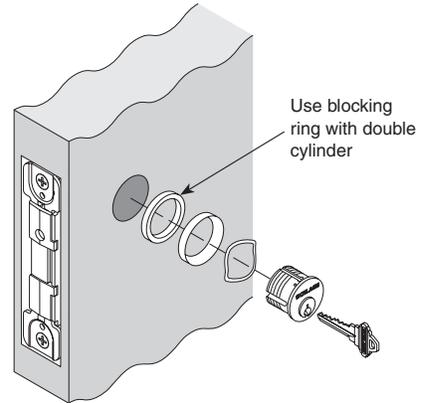

**2 For Function: L496**

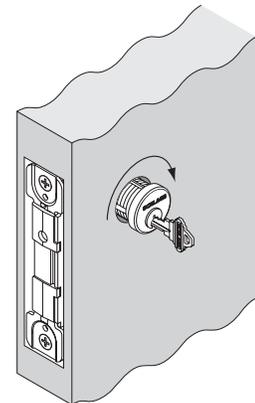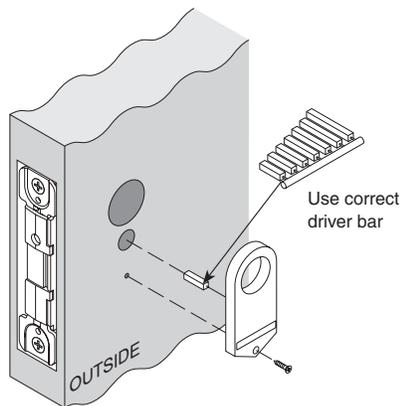

# L9000-Series 180 degree indicator installation instructions – escutcheon trim

## L9000 Series Lock with Indicator Escutcheon Trim


Indicator trim is available for either the inside or outside of the door on allowable functions. Non-indicator trim is furnished on the opposite side of the door.

**▲ Confirm desired placement (inside or outside) before installation.**


**The L9000 lock with indicator is not intended for exterior door applications.**

Installation Instructions  
For retrofit, see page 9.

### Indicator options:

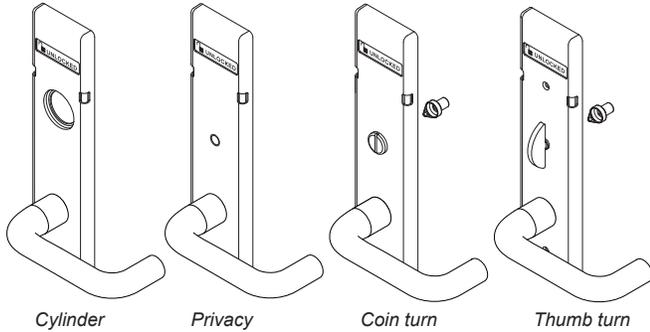

**▲ Check the door preparation dimensions with the template included in the package.**

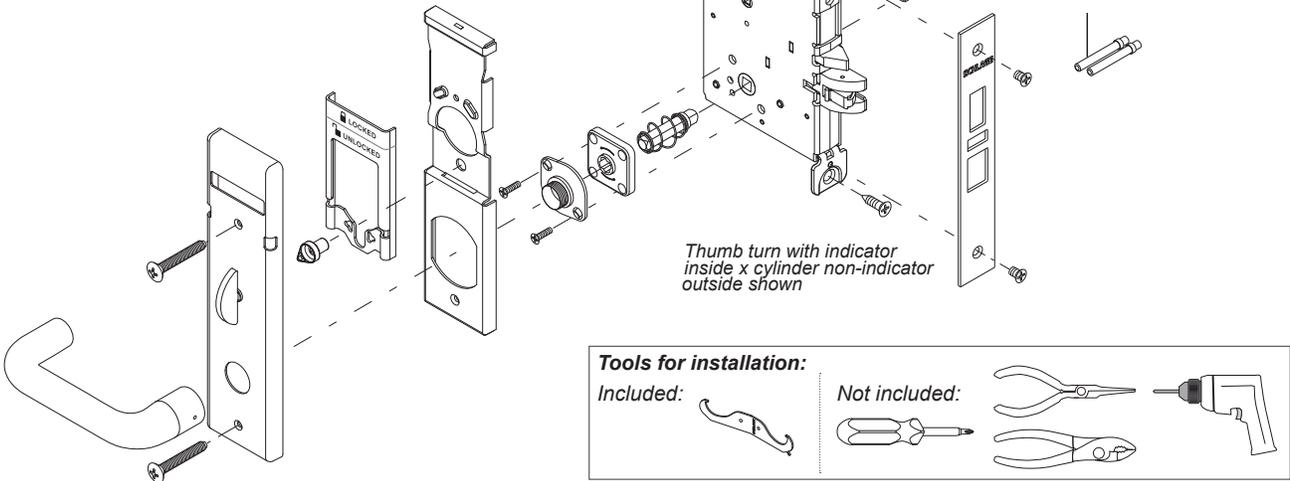

### Tools for installation:

Included:




Not included:




## 1 IMPORTANT! Check lock handing before installation.

### To change handing:


1. Pull out the latch and rotate 180°.
2. Remove the lock handing screw from one side of the chassis and install it on the opposite side. The lock handing screw should always be on the interior side of the door.

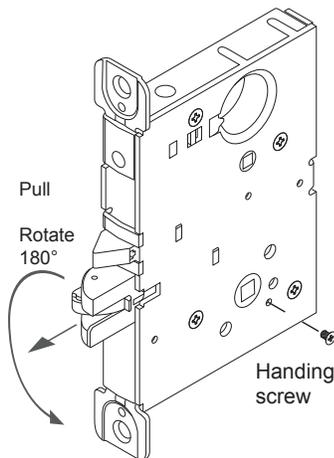

## 2 Install lock chassis.

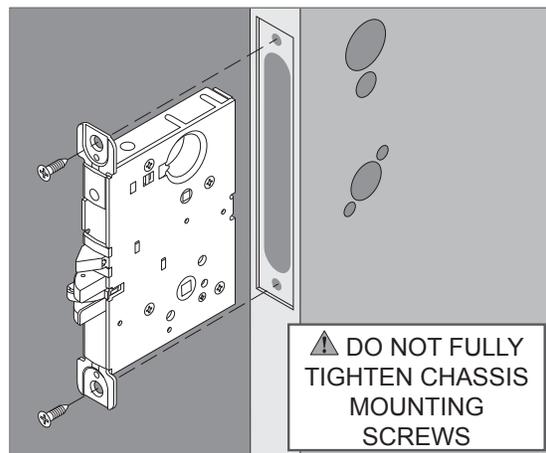


**3** Install springs and spindles.

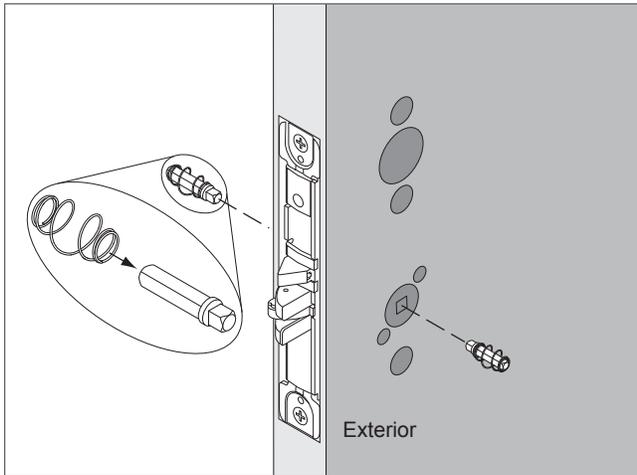


**4** Prepare outside lever assembly for installation.

**4a** Install outside mounting posts.

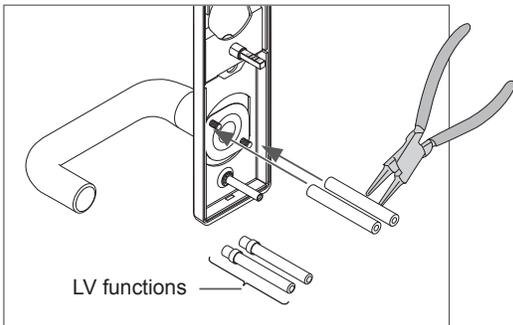

**⚠ FULLY TIGHTEN MOUNTING POSTS ON SCREWS.**

**4b** Install outside spring cage or spacer.

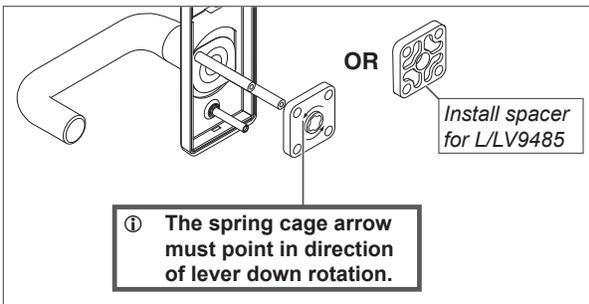


**⚠ STEP 5 for OUTSIDE NON-INDICATOR TRIM ONLY.**  
For OUTSIDE INDICATOR trim, skip to STEP 6.

**5** Install outside trim.


**Cylinder Functions**

**5a** Install escutcheon assembly.

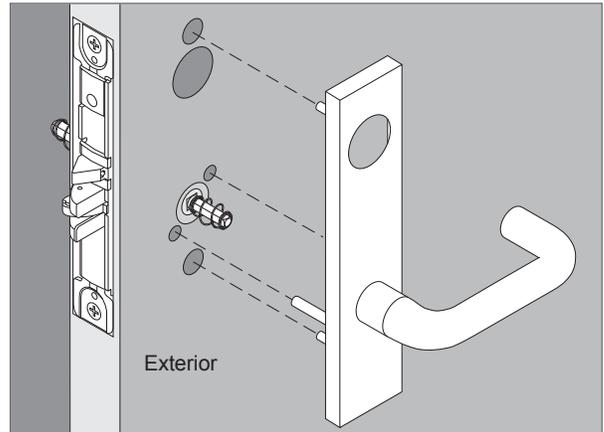


**5b** Insert key halfway into the cylinder, and install the cylinder with cylinder spring as shown.

**5c** Rotate cylinder clockwise.

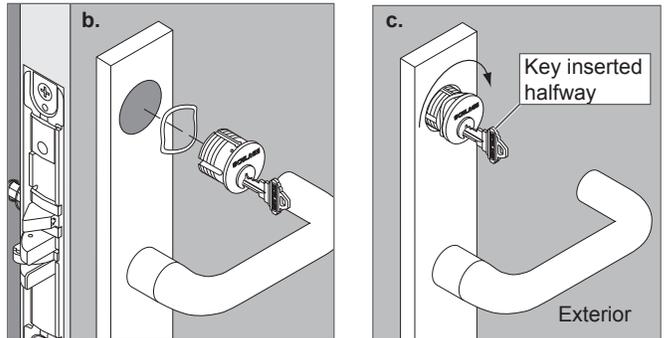


**Privacy Functions**

**5a** Install escutcheon assembly.

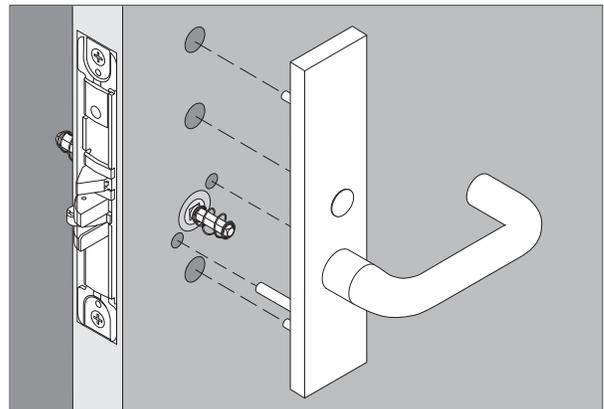

**Coin Turn Functions**

5a Install escutcheon assembly.

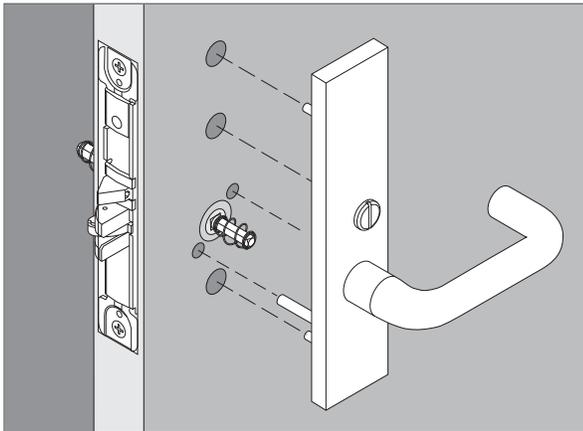


For INSIDE INDICATOR trim, skip to step 7.

**6** ⚠ For Outside Indicator Trim ONLY – Install outside indicator.


**A. Trim the cam spindle if necessary (cylinder and privacy functions only).**

Break the spindle at the appropriate mark according to door thickness. (If necessary, remove clip.)

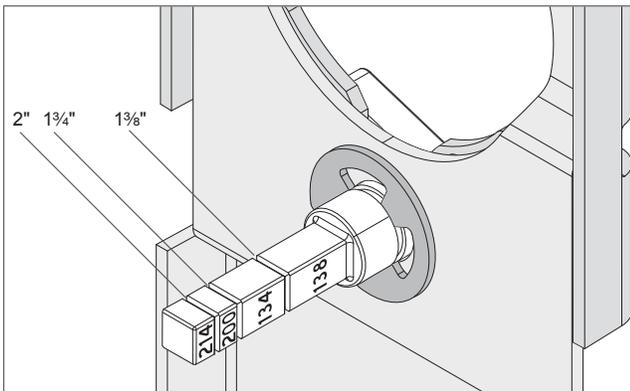

**B. IMPORTANT! Check indicator handing with indicator positioned against top rim of reinforcement plate.**

**OUTSIDE INDICATOR**

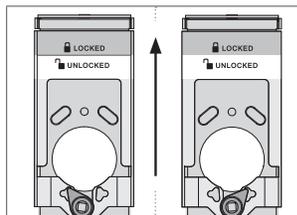

Non-deadbolt functions*	RH/RR	LH/LR
Deadbolt functions and L9040, L9044, L9056	LH/LR	RH/RR


\* Except L9040, L9044, L9056

If necessary to change indicator handing, refer to steps on page 8.


**Cylinder Functions with Indicator**

6a Unlock the door.


6b Install the indicator/escutcheon assembly.

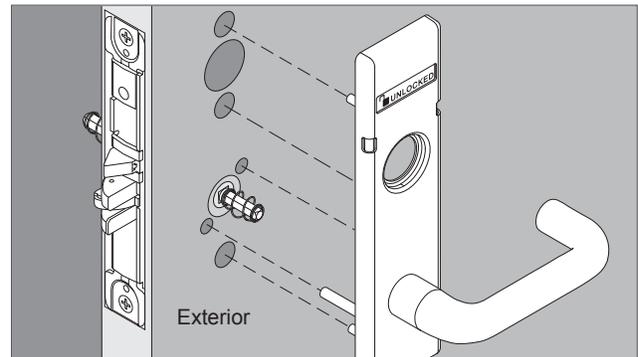

6c Install the cylinder with cylinder spring as shown.

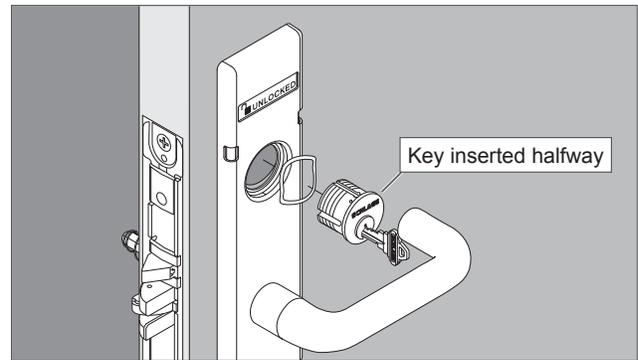

6d Rotate cylinder clockwise.

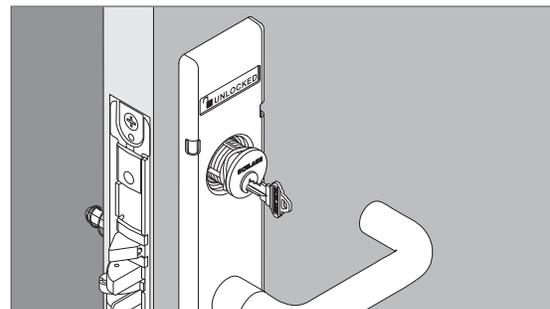


① Additional outside indicator functions are shown on the following page.


**Privacy Functions with Indicator**

6a Unlock the door.

6b Install the indicator/escutcheon assembly.

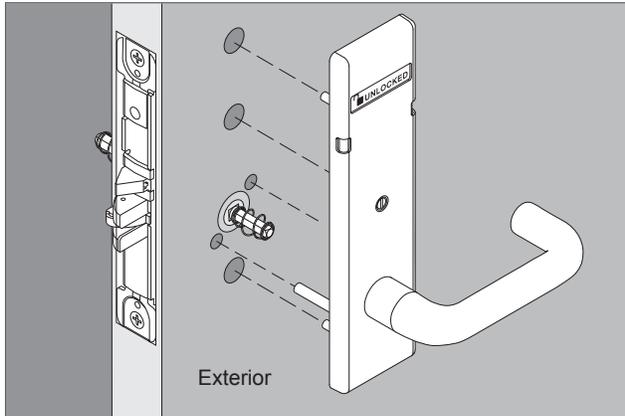


6d Install the indicator/escutcheon assembly.

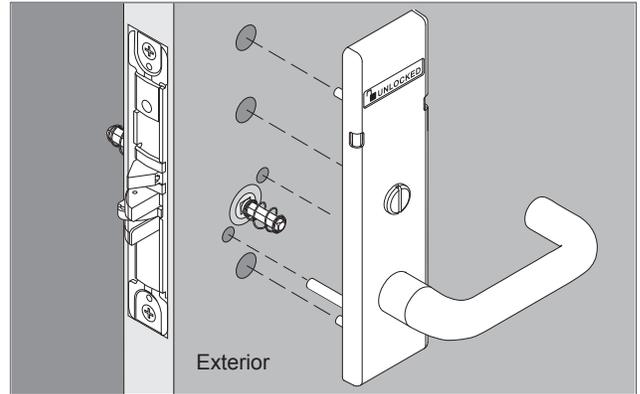


**Coin Turn Functions with Indicator**

6a Unlock the door.


6b Assemble the coin turn faceplate and cam.

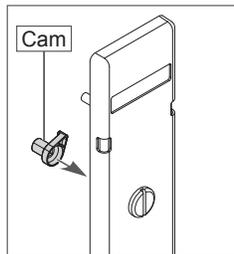

6c Place indicator and reinforcement plate on faceplate assembly.

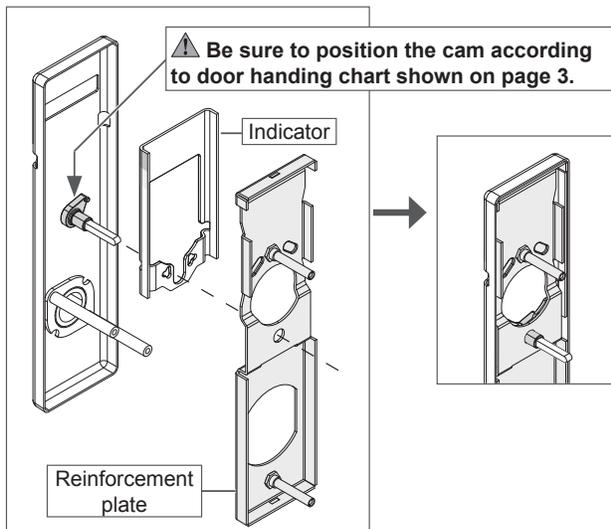

**7** Install inside spring cage and mounting plate.

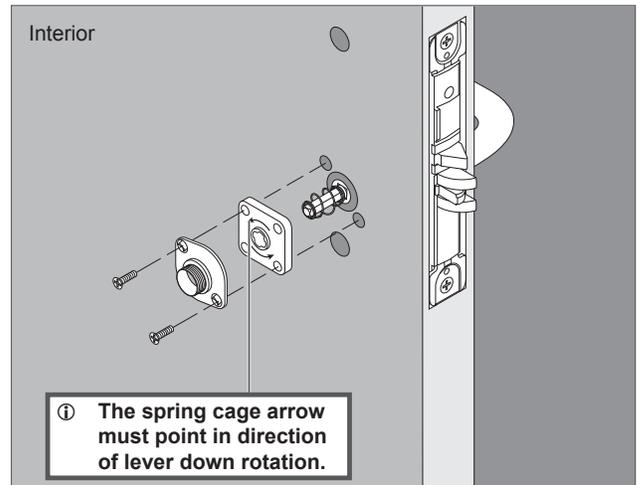


**⚠ STEP 8 for INSIDE NON-INDICATOR TRIM ONLY.**  
**For INSIDE INDICATOR TRIM, skip to STEP 9.**


**8** Install inside cylinder or thumb turn trim.

**Cylinder Functions**


8a Install the escutcheon/lever assembly.

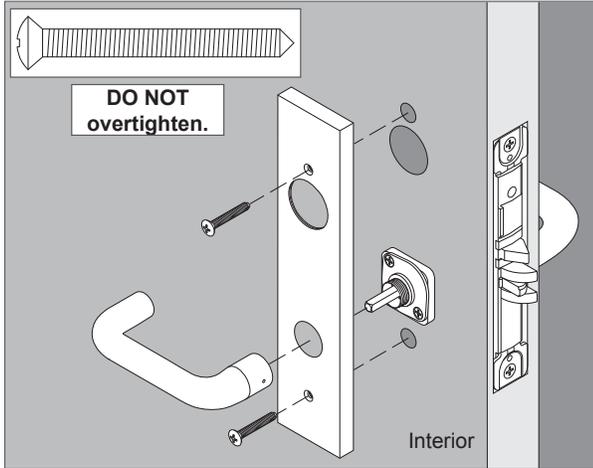

8b Install the cylinder with cylinder spring as shown.

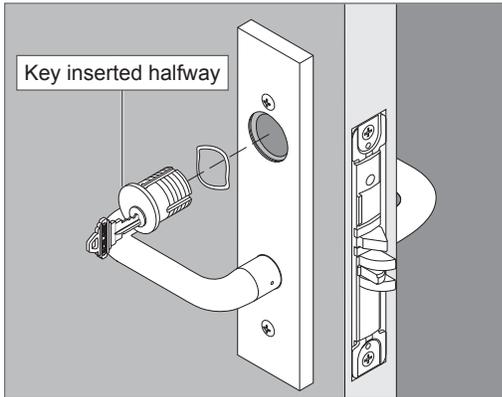


8c Rotate cylinder clockwise and tighten bushing with spanner wrench.

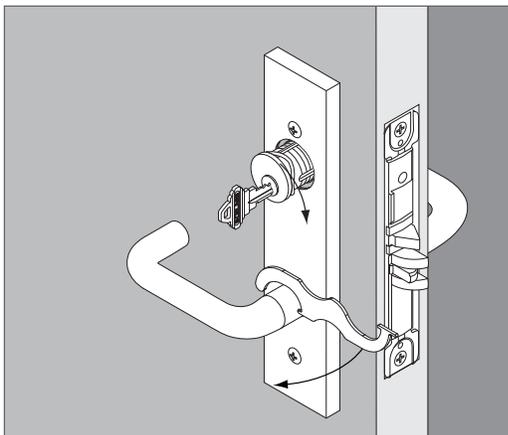


**Thumb Turn Functions**

8a Install the escutcheon/lever assembly.

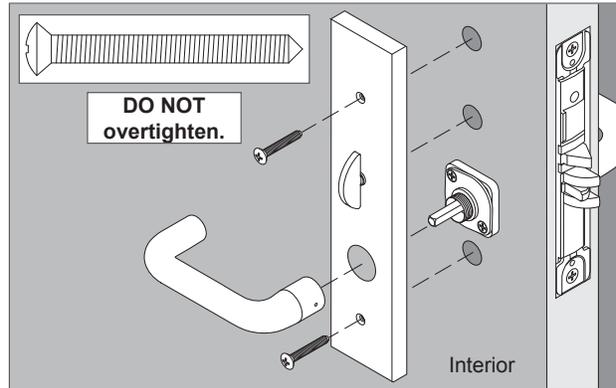


8b Tighten bushing with spanner wrench.

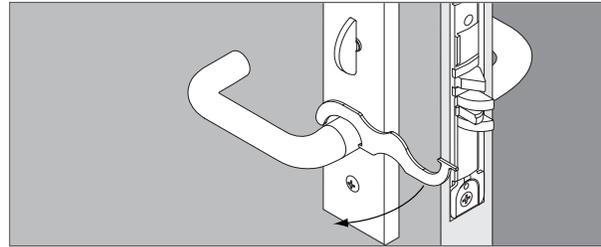


**Lever Only Functions**

8a Install the escutcheon/lever assembly.

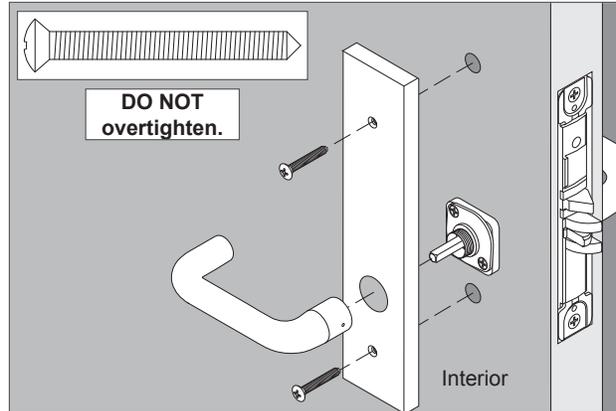

8b Tighten bushing with spanner wrench.

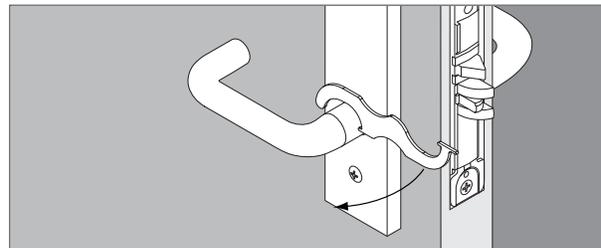


If both inside and outside of lock are now installed, skip to step 10.

**9** ⚠ For Inside Indicator Trim ONLY – Install inside indicator.


**A. Trim the cam spindle if necessary (cylinder and privacy functions only).**

Break the spindle at the appropriate mark according to door thickness. (If necessary, remove clip.)

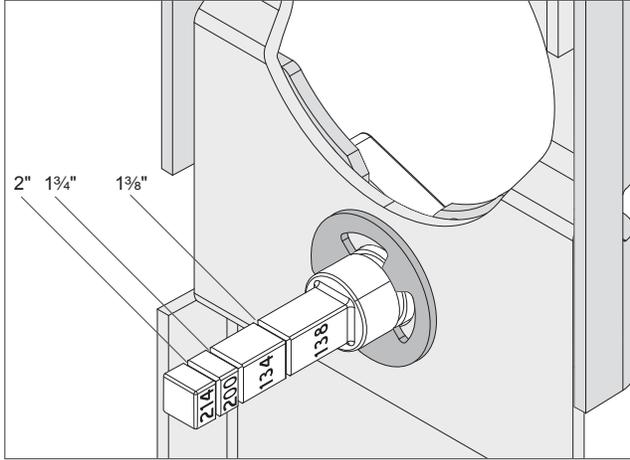

**B. IMPORTANT! Check indicator handing with indicator positioned against top rim of reinforcement plate.**

**INSIDE INDICATOR**

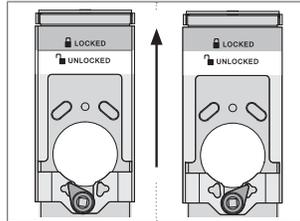

Non-deadbolt functions*	LH/LR	RH/RR
Deadbolt functions and L9040, L9044, L9056	RH/RR	LH/LR


\* Except L9040, L9044, L9056

If necessary to change indicator handing, refer to steps on page 8.


**Cylinder Functions with Indicator**

9a Unlock the door.


9b Install the indicator/escutcheon assembly.

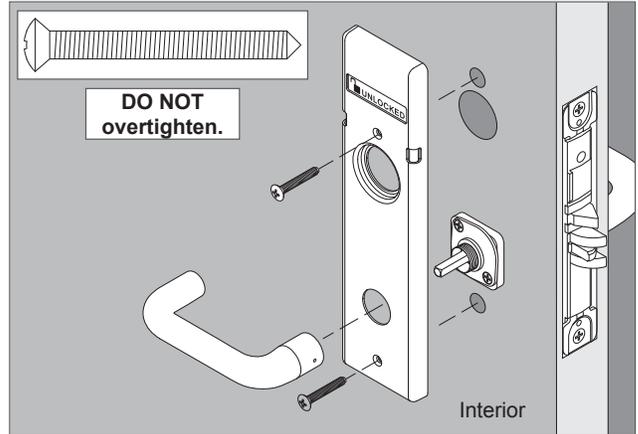

9c Install the cylinder with cylinder spring as shown.

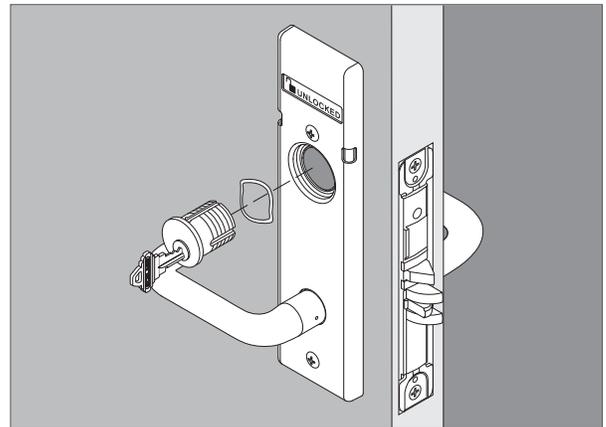


9d Rotate cylinder clockwise and tighten bushing with spanner wrench.

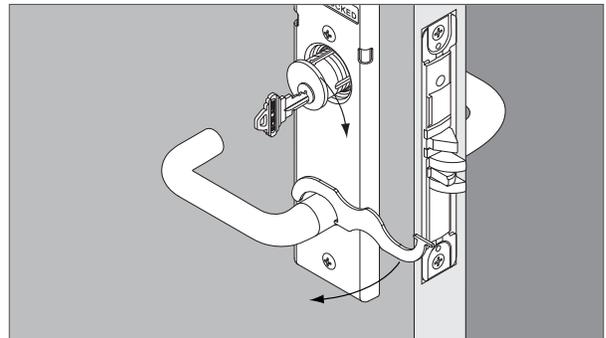


**Thumb Turn Functions with Indicator**

9a Unlock the door.


9b Assemble the thumb turn faceplate and cam.

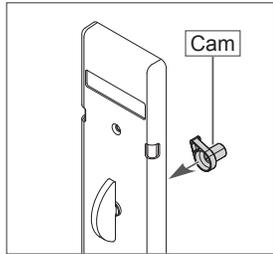


9c Place indicator and reinforcement plate on faceplate assembly.

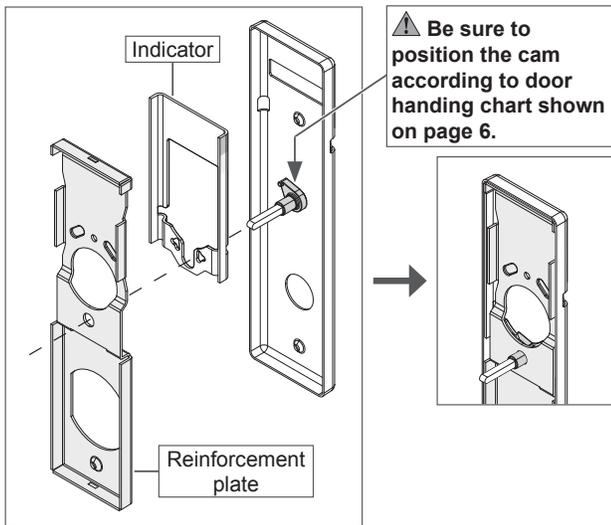


9d Install the indicator/escutcheon assembly.

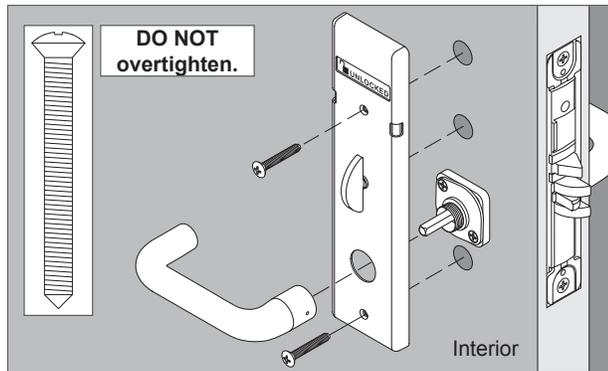


9e Tighten bushing with spanner wrench.

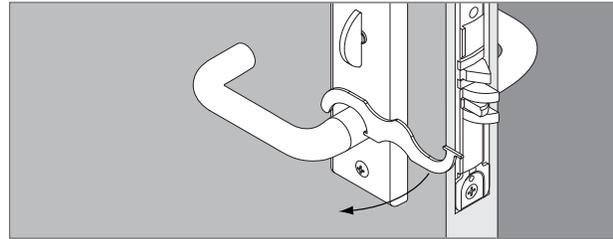


**10** Tighten cylinder mounting screw (if applicable).

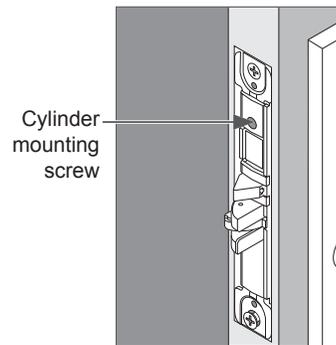


**11** Tighten top and bottom chassis mounting screws.

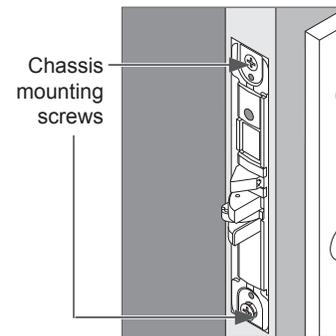

**12** Install armor front.

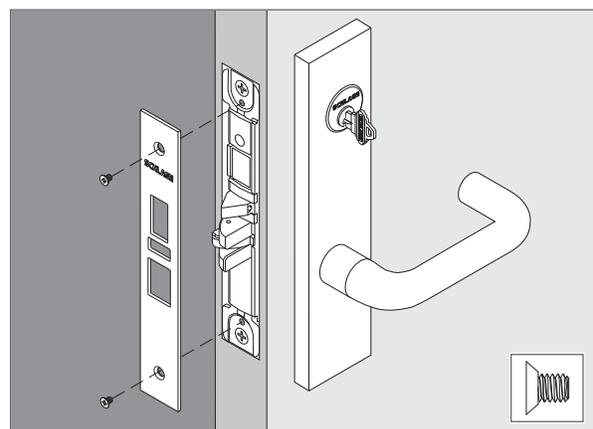

### INDICATOR HANDING

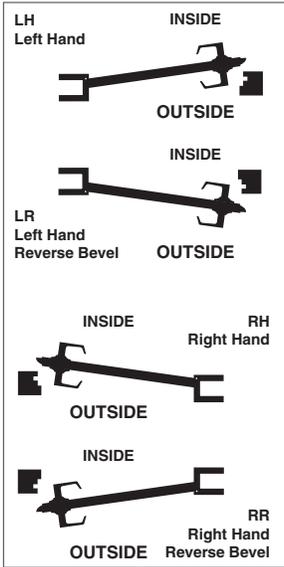

**A. Determine the door's handing from outside.**

**B. Check indicator handing with indicator positioned against top rim of reinforcement plate.**

	Outside	
Non-deadbolt functions*	RH/RR	LH/LR
Deadbolt functions and L9040, L9044, L9056	LH/LR	RH/RR


\*Except L9040, L9044, L9056

	Inside	
Non-deadbolt functions*	LH/LR	RH/RR
Deadbolt functions and L9040, L9044, L9056	RH/RR	LH/LR


\*Except L9040, L9044, L9056

#### To rehand the indicator:

**A. Remove the E-Clip (cylinder and privacy functions only).**

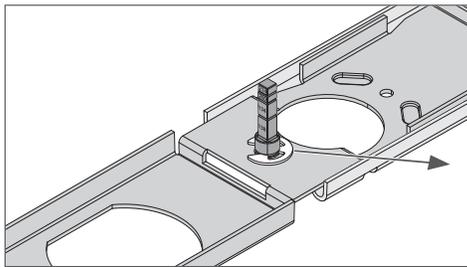


**B. Disassemble the indicator.**

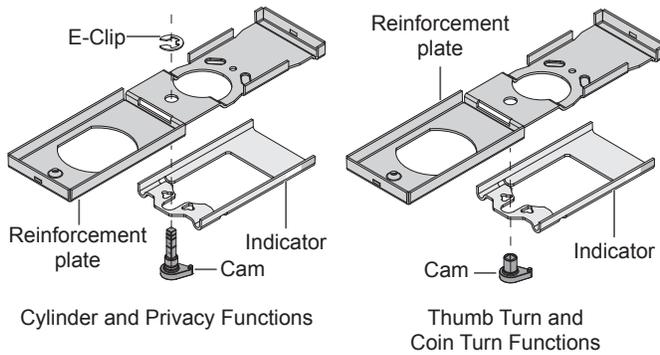


**C. Reorient the cam.**

- Unlock the door.
- Position the indicator against the top rim of the reinforcement plate (unlocked position).
- Position the cam as shown on charts above.

① Use **OUTSIDE** or **INSIDE** chart according to indicator side.

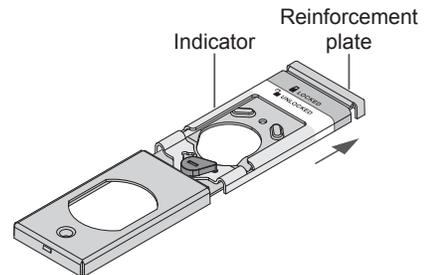


**D. Replace the E-Clip (cylinder and privacy functions only).**

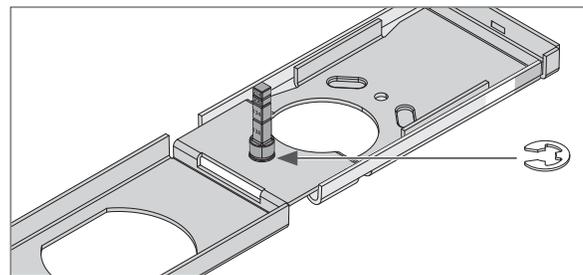


**INDICATOR LOCK RETROFIT INSTRUCTIONS**

**Indicator options:**

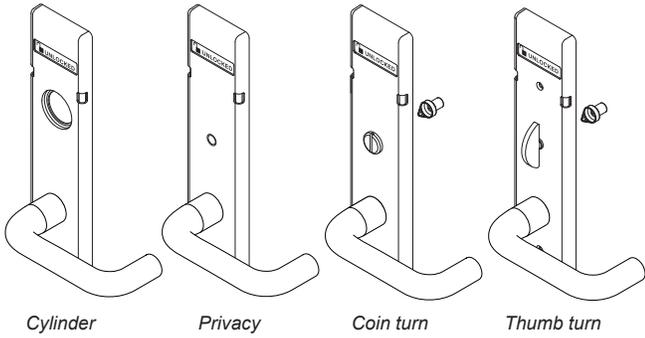


**1** Remove armor front.

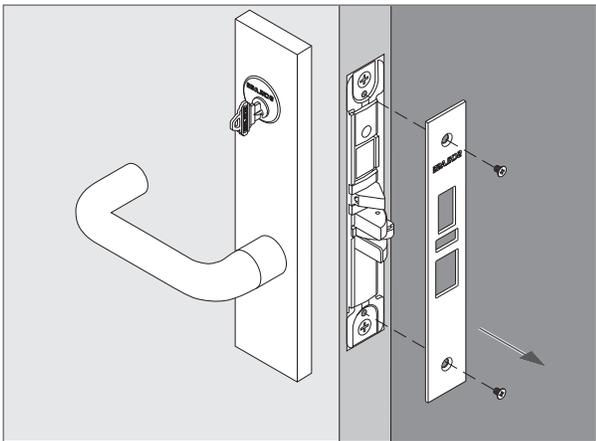


**2** Remove cylinder(s) if applicable.

**2a** Loosen the cylinder mounting screw.

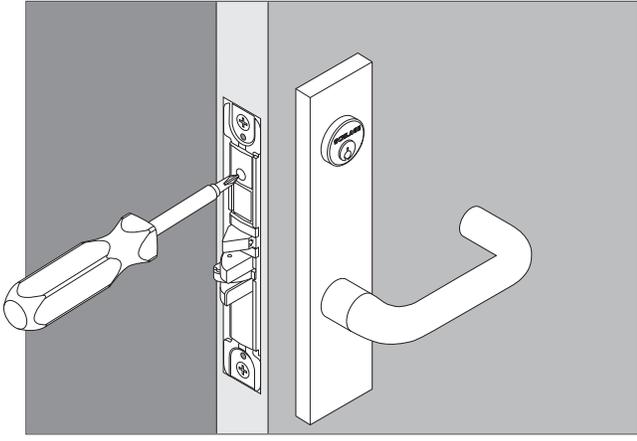


**2b** Remove the outside cylinder.

Insert the key halfway into the cylinder and rotate cylinder counterclockwise to remove.

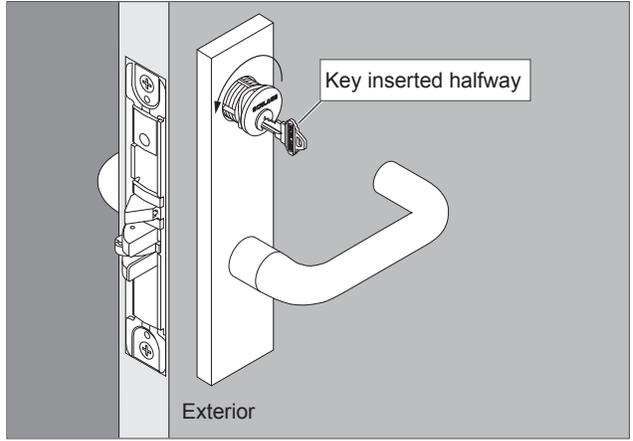


**2c** Remove the inside cylinder (if applicable).

Insert the key halfway into the cylinder and rotate cylinder counterclockwise to remove.

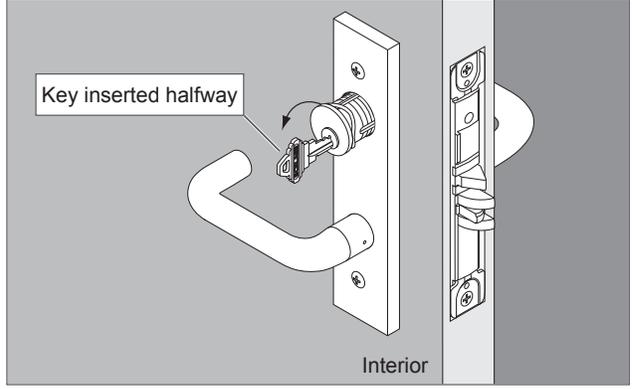


**3**

3a Remove the inside lever.


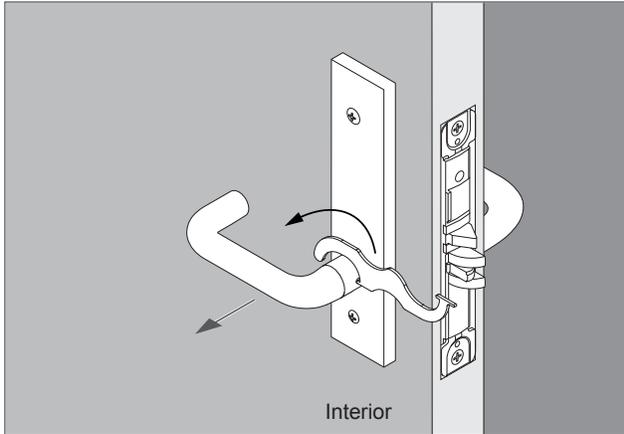


3b Remove the inside escutcheon.

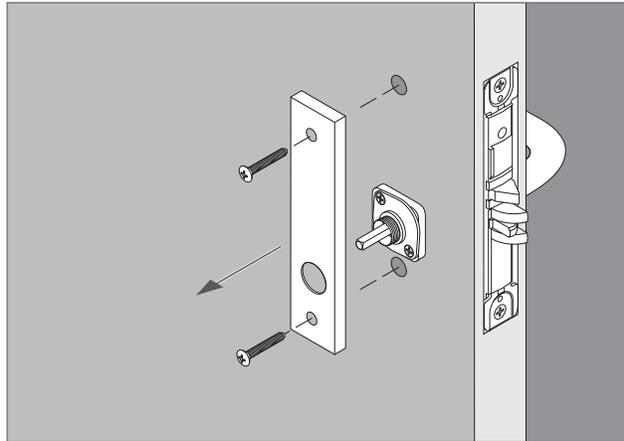

**4**

For indicator trim on outside of door, remove the inside mounting plate and spring cage. Then, remove the outside trim.

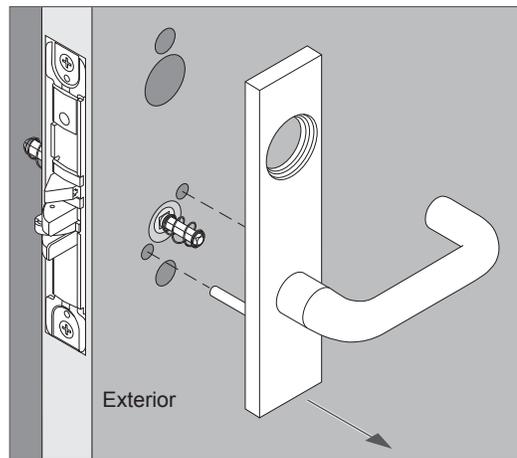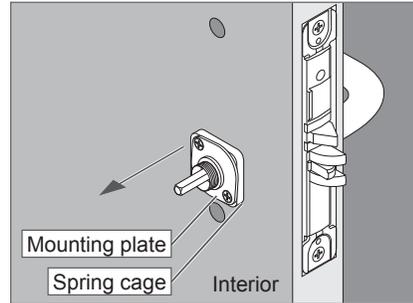

**5** Complete installation of indicator trim.

Go to STEP 5 ON PAGE 2 and follow the instructions to complete the installation of the indicator trim.

**Customer Service**  
1-877-671-7011    [www.allegion.com/us](http://www.allegion.com/us)



# L9000-Series 180 degree indicator installation instructions – sectional trim

## L9000 Series Lock with Indicator Sectional Trim


Indicator trim is available for either the inside or outside of the door on allowable functions. Non-indicator trim is furnished on the opposite side of the door.

▲ **Confirm desired placement (inside or outside) before installation.**


▲ **The L9000 lock with indicator is not intended for exterior door applications.**

Installation Instructions  
For retrofit, see page 9.


**Indicator options:**

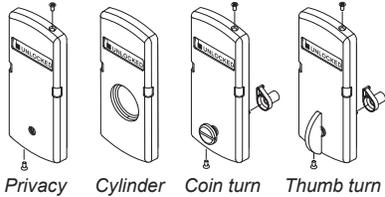

**Non-indicator options:**

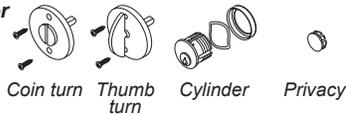 


▲ **Check the door preparation dimensions with the template included in the package.**

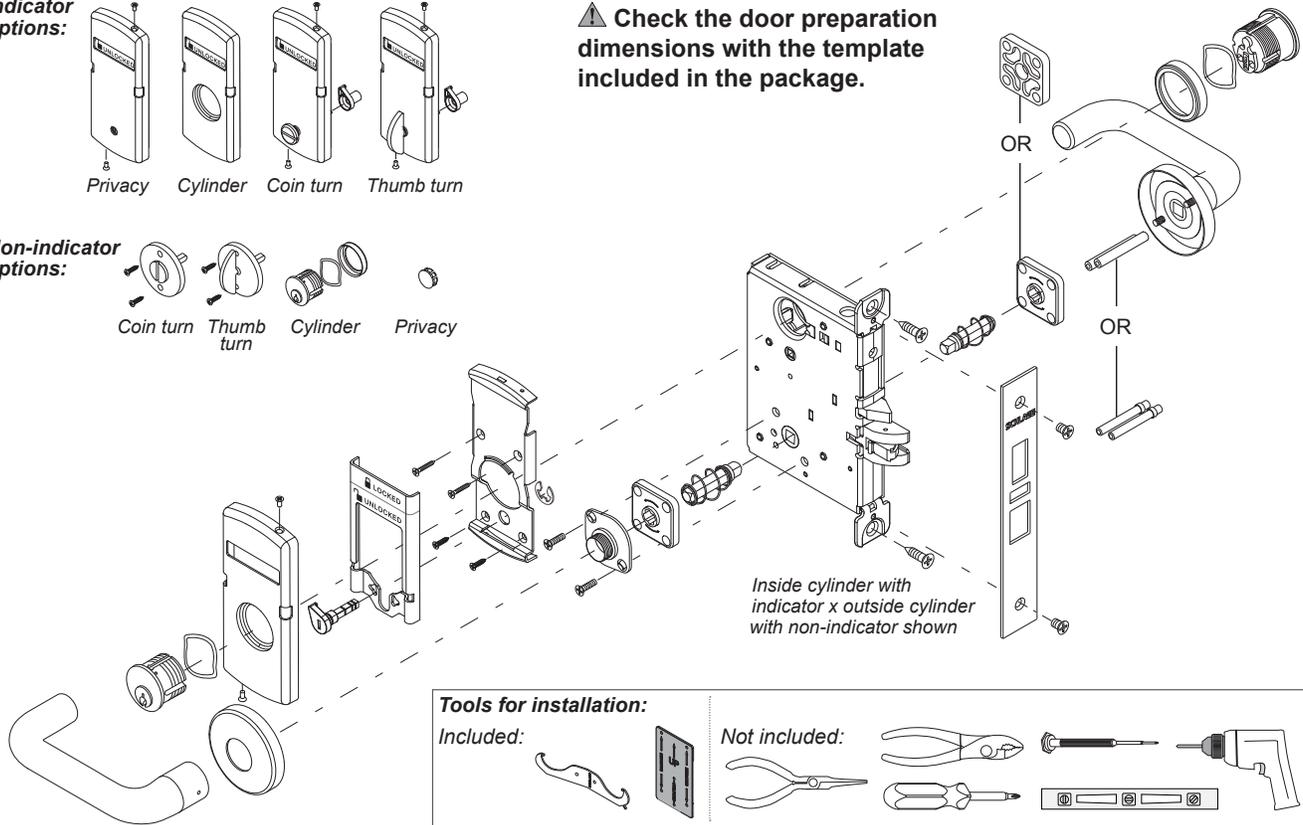


**Tools for installation:**

 Included:

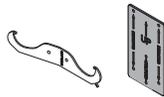


Not included:

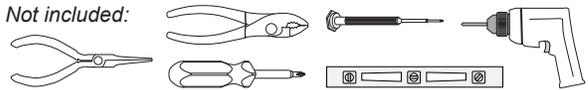 


**1 IMPORTANT! Check lock handing before installation.**

**To change handing:**


1. Pull out the latch and rotate 180°.
2. Remove the lock handing screw from one side of the chassis and install it on the opposite side. The lock handing screw should always be on the interior side of the door.

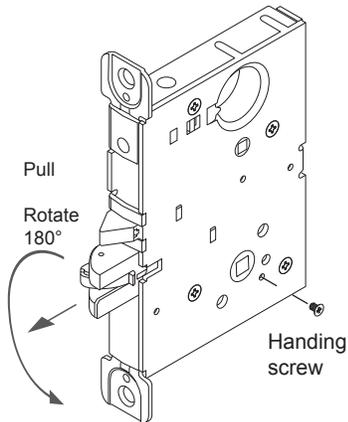


**2 Install lock chassis.**

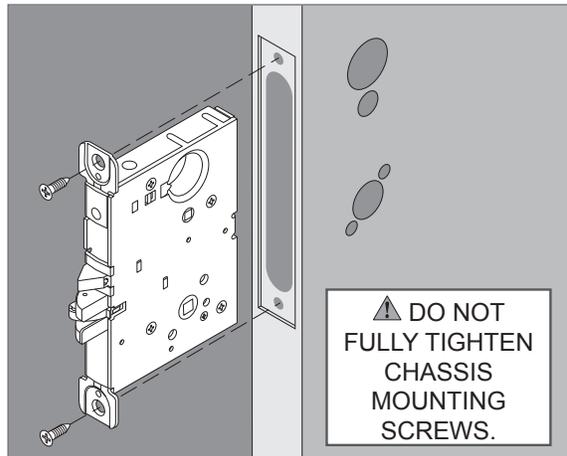

**3** Install springs and spindles.

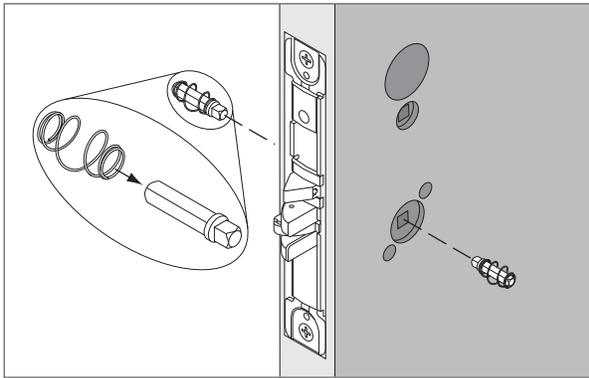


**6** Install inside spring cage and mounting plate.

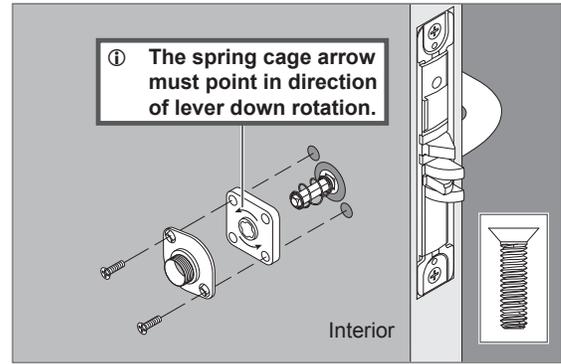


**4** Prepare outside lever assembly for installation.


**4a** Install outside mounting posts.

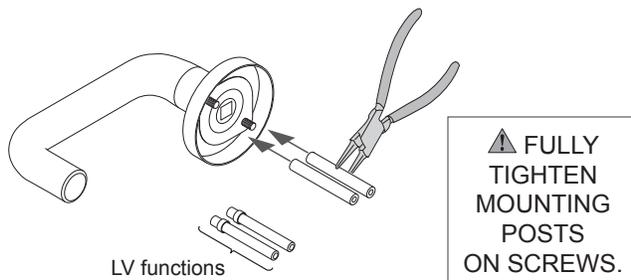


**7** Install inside lever and rose.

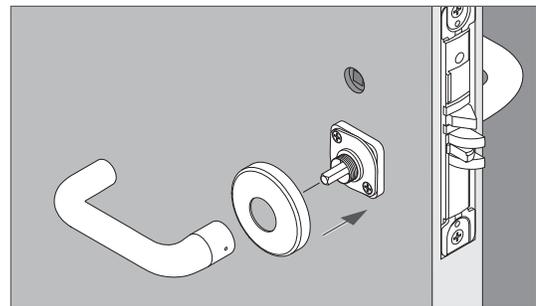


**4b** Install outside spring cage or spacer.

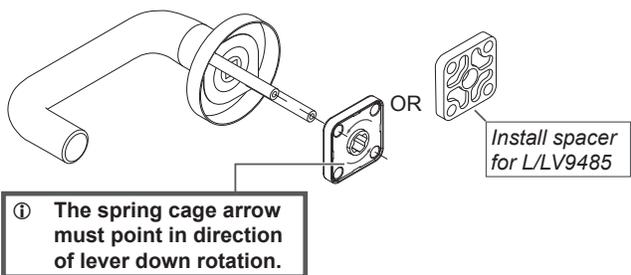

**8** Tighten bushing with spanner wrench.

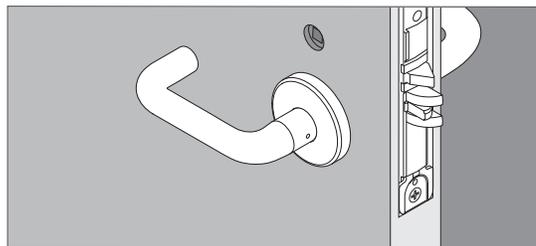



**5** Install outside lever.

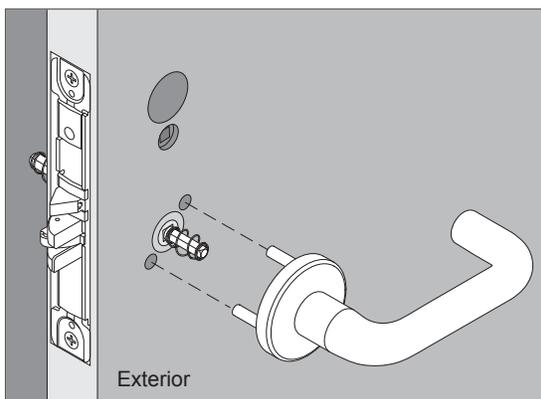

**9** Prepare the indicator side of the door.

Use template to mark and drill four (4) pilot holes.

**⚠ Required for indicator side of door ONLY!**

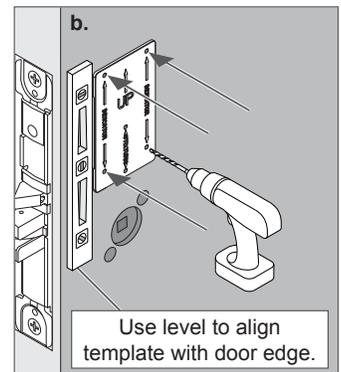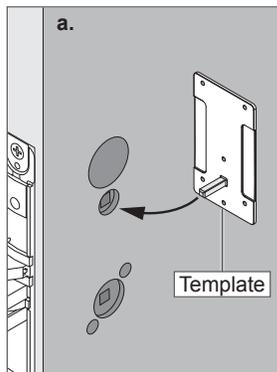


**STEP 10 for OUTSIDE NON-INDICATOR ONLY.**  
**For OUTSIDE INDICATOR, skip to STEP 11.**

**10** Install outside coin turn or cylinder.

**Coin Turn Functions**


10a Use template to mark and drill two (2) pilot holes.

10b Install the coin turn.

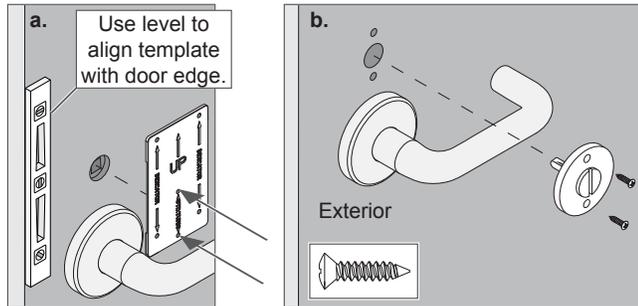


**Cylinder Functions**

10a Insert key halfway into the cylinder, and install the cylinder with ring and cylinder spring as shown.

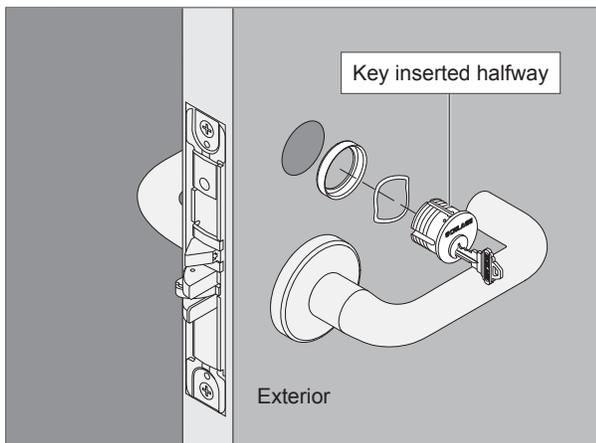

10b Rotate cylinder clockwise.

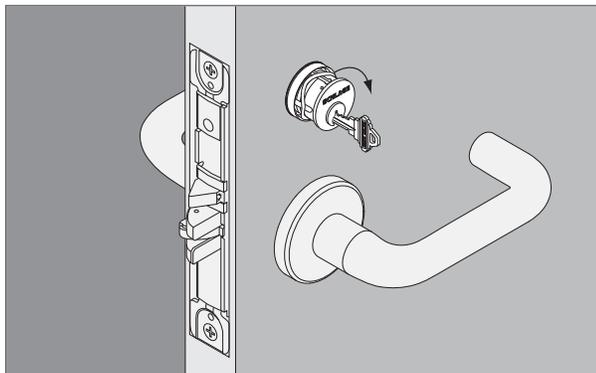


**For INSIDE INDICATOR trim, skip to STEP 13.**

**11** **▲** For Outside Indicator Trim ONLY – Install outside indicator.

**A. Trim the cam spindle if necessary (cylinder and privacy functions).**

Break the spindle at the appropriate mark according to door thickness. (If necessary, remove clip.)

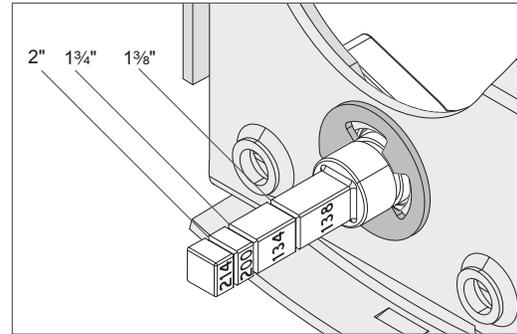

**B. IMPORTANT! Check indicator handing with indicator positioned against top rim of reinforcement plate.**

**OUTSIDE INDICATOR**

Non-deadbolt functions*	RH/RR	LH/LR
Deadbolt functions and L9040, L9044, L9056	LH/LR	RH/RR


\* Except L9040, L9044, L9056

**If necessary to change indicator handing, refer to steps on page 8.**


**Cylinder Functions with Indicator**

11a Unlock the door.


11b Install the indicator assembly.

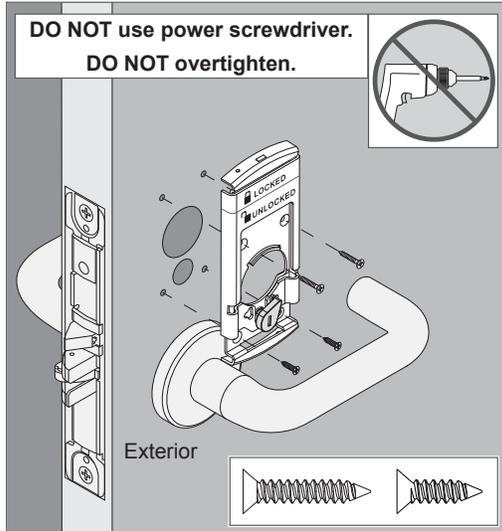

11c Install the indicator faceplate and cylinder with spring.

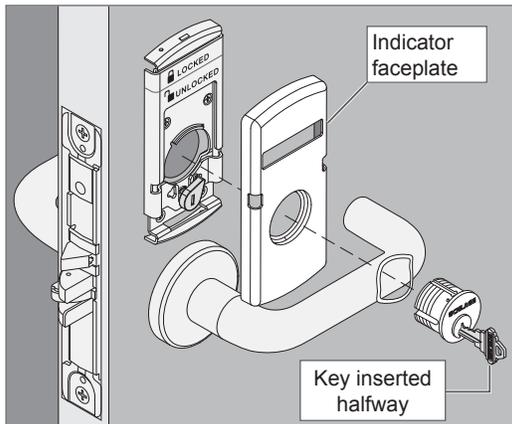


11d Rotate cylinder clockwise.

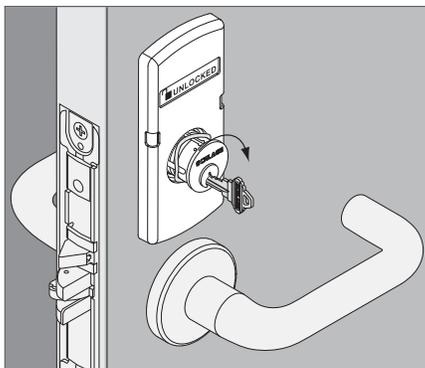


**Privacy Functions with Indicator**

11a Unlock the door.

11b Install the indicator assembly.

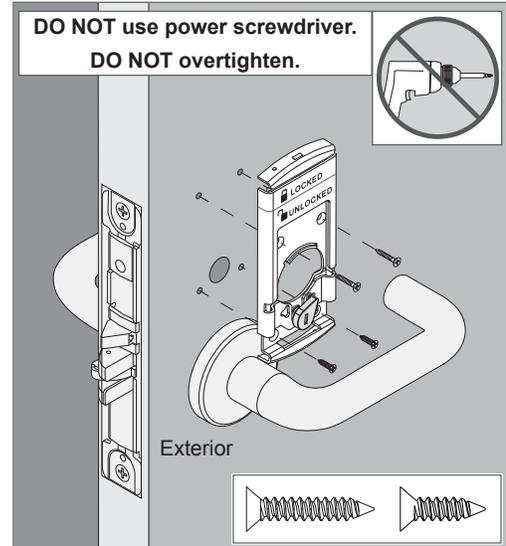


11c Install the indicator faceplate. Secure the indicator faceplate with two set screws.

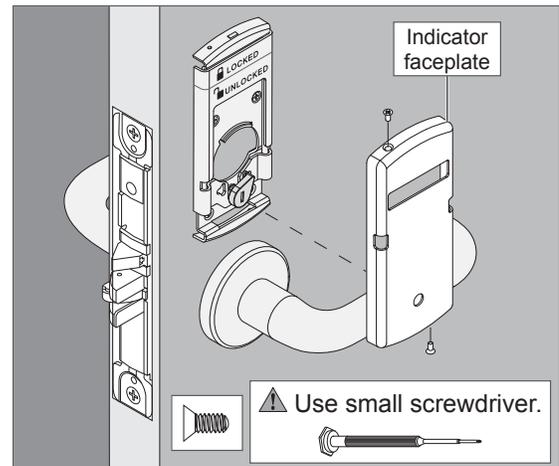


**Coin Turn Functions with Indicator**

11a Unlock the door.


11b Install the reinforcement plate on the door.

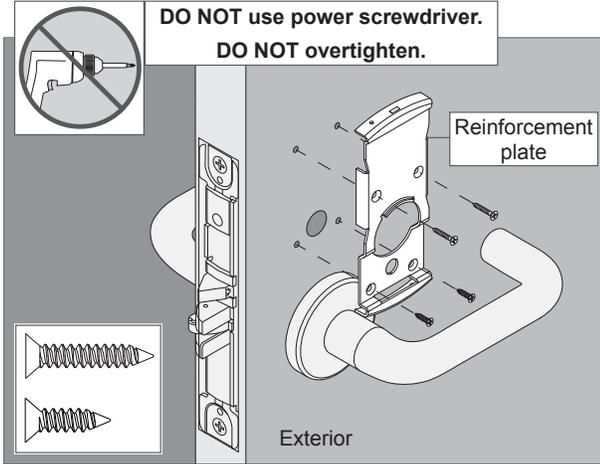


11c Assemble the coin turn faceplate and cam, if necessary.

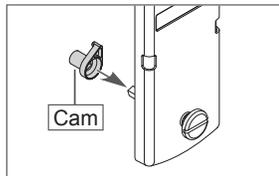

11d Place indicator on faceplate assembly.

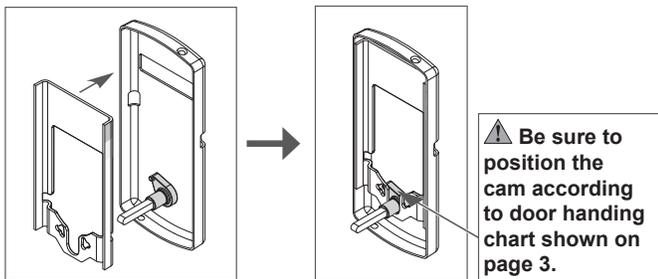

11e Install the indicator faceplate assembly. Secure the faceplate with two set screws.

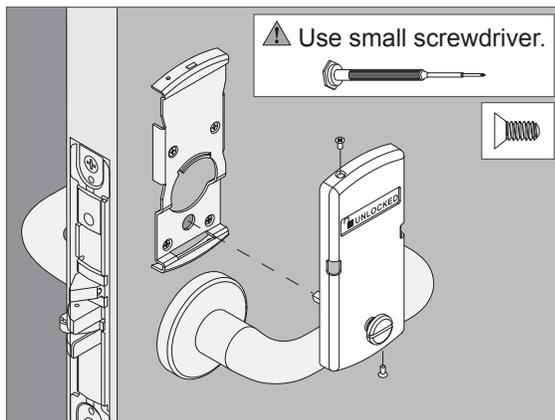


**⚠ STEP 12 for NON-INDICATOR INSIDE TRIM ONLY.**  
For INDICATOR TRIM, skip to STEP 13.


**12** Install inside cylinder or thumb turn.

**Cylinder Functions**

12a Insert key halfway into the cylinder, and install the cylinder with ring and cylinder spring as shown.

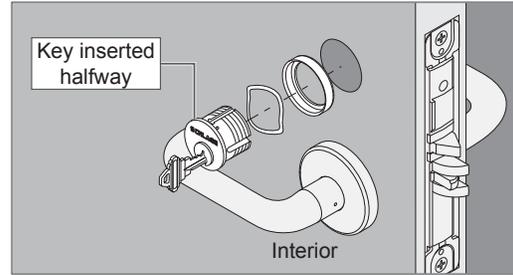


12b Rotate cylinder clockwise.

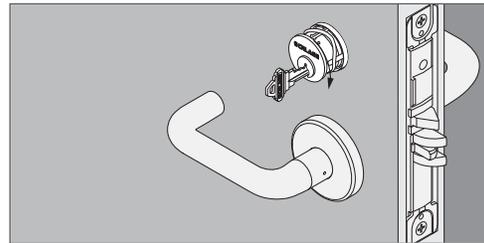


**Thumb Turn Functions**

12a Use template to mark and drill two (2) pilot holes.

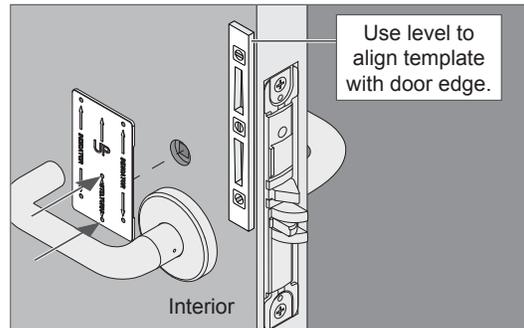

12b Install the thumb turn.

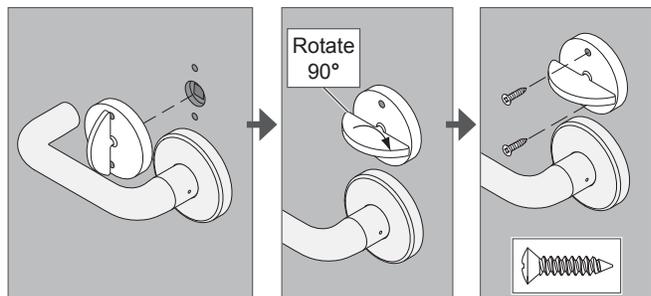


If both inside and outside of lock are now installed, skip to step 14.

**13** ⚠ For Inside Indicator Trim ONLY – Install inside indicator.


**A. Trim the cam spindle if necessary (cylinder and privacy functions).**

Break the spindle at the appropriate mark according to door thickness. (If necessary, remove clip.)

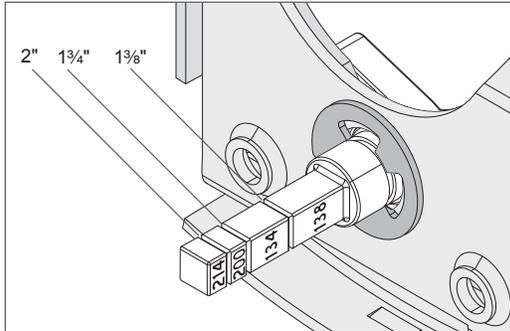

**B. IMPORTANT! Check indicator handing with indicator positioned against top rim of reinforcement plate.**

**INSIDE INDICATOR**

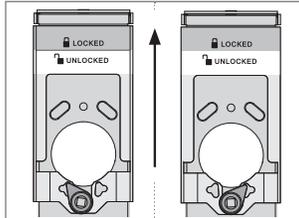

Non-deadbolt functions*	LH/LR	RH/RR
Deadbolt functions and L9040, L9044, L9056	RH/RR	LH/LR


\* Except L9040, L9044, L9056

If necessary to change indicator handing, refer to steps on page 8.


**Cylinder Functions with Indicator**

13a Unlock the door.


13b Install the indicator assembly.

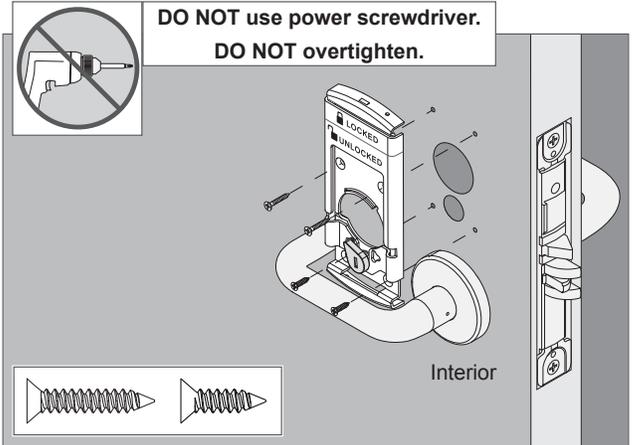

13c Install the indicator faceplate and cylinder with spring.

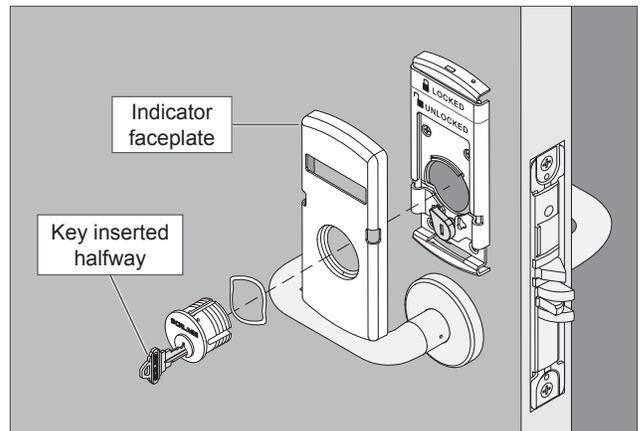


13d Rotate cylinder clockwise.

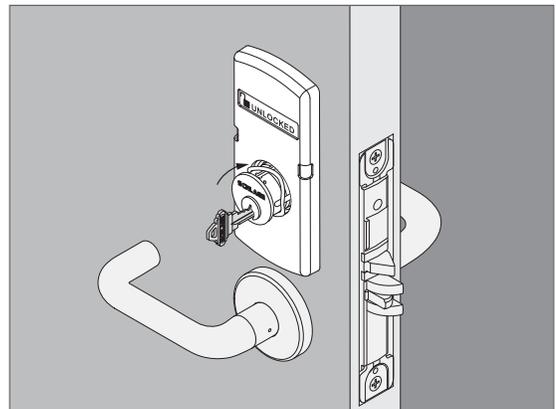


**Thumb Turn Functions with Indicator**

13a Unlock the door.


13b Install the reinforcement plate on the door.

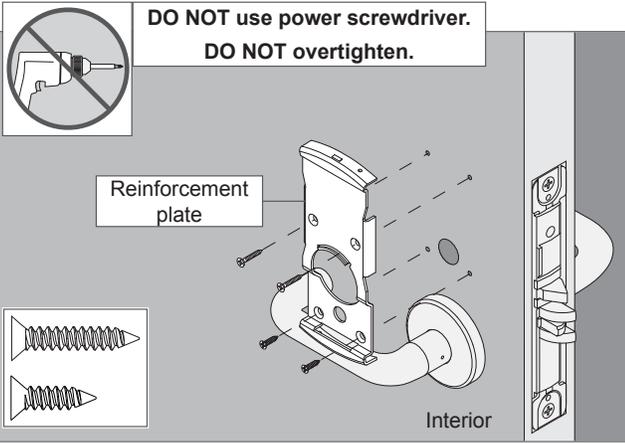


13c Assemble the thumb turn faceplate and cam, if necessary.

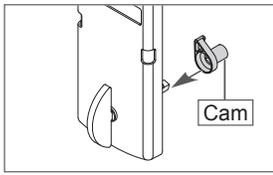


13d Place indicator on faceplate assembly.

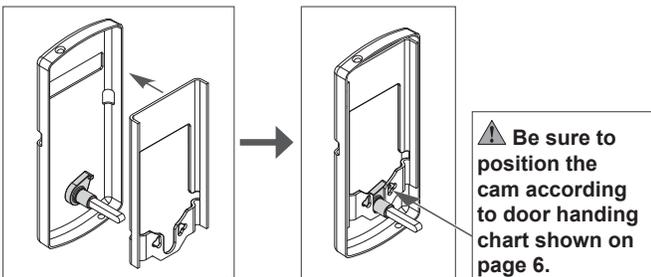


13e Install the indicator faceplate assembly. Secure the indicator faceplate with two set screws.

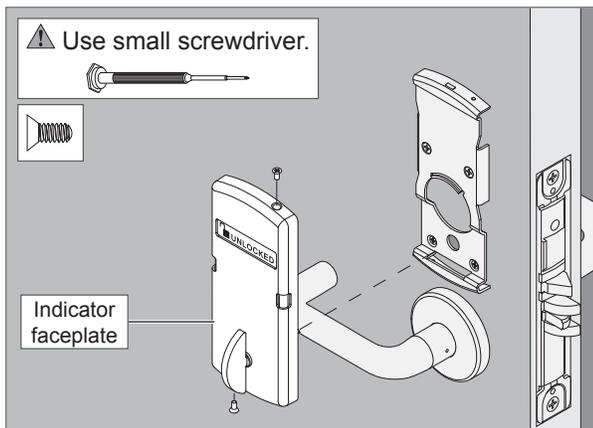


**14** Tighten cylinder mounting screw, if applicable.

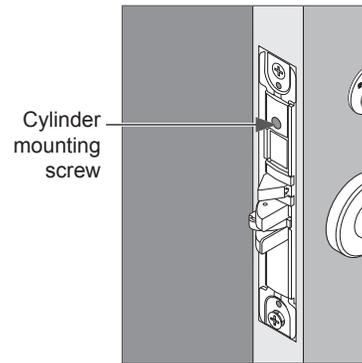


**15** Tighten top and bottom chassis mounting screws.

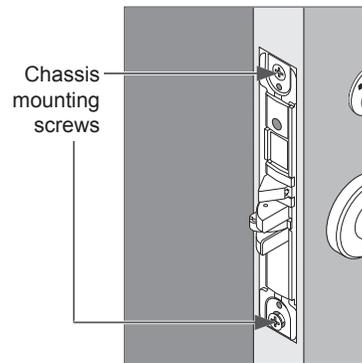


**16** Install armor front.

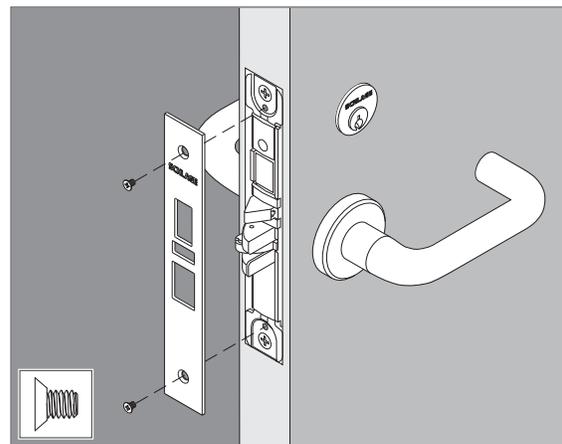


**INDICATOR HANDING**

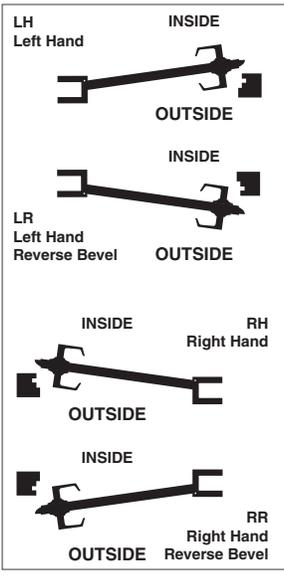

- A. Determine the door's handing from outside.**  
**B. Check indicator handing with indicator positioned against top rim of reinforcement plate.**

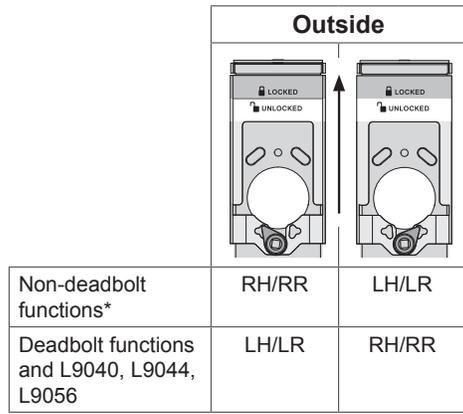


\*Except L9040, L9044, L9056

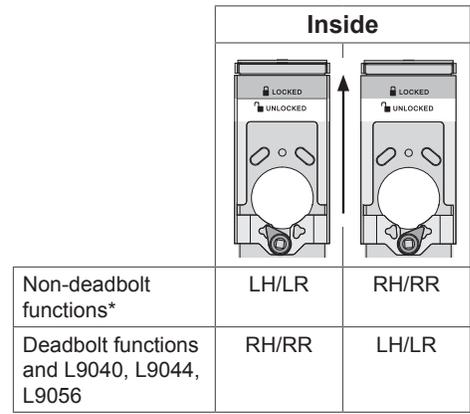

\*Except L9040, L9044, L9056


**To rehand the indicator:**

- A. Remove the E-Clip (cylinder and privacy functions only).**

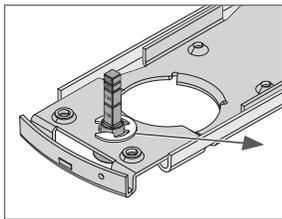


**C. Reorient the cam.**


- Unlock the door.
  - Position the indicator against the top rim of the reinforcement plate (unlocked position).
  - Position the cam as shown on charts above.
- ① **Use OUTSIDE or INSIDE chart according to indicator side.**

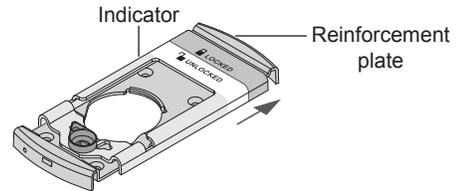

**B. Disassemble the indicator.**

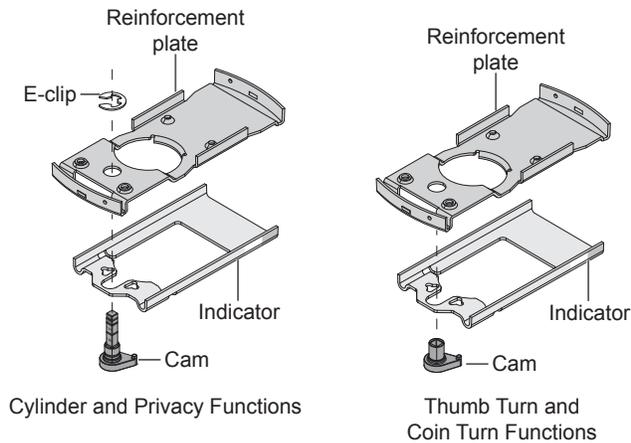


**D. Replace the E-Clip (cylinder and privacy functions only).**

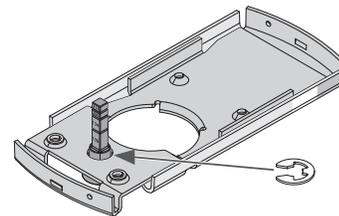


INDICATOR LOCK RETROFIT INSTRUCTIONS

1 Remove armor front.

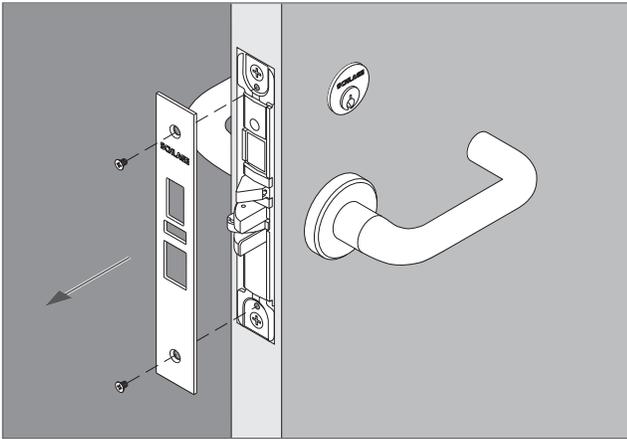


2b Remove the outside cylinder, if applicable.  
Insert the key halfway into the cylinder and rotate cylinder counterclockwise to remove.

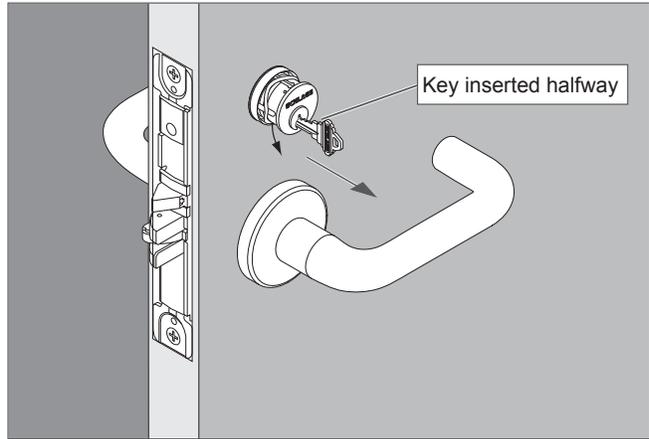


2 Remove cylinder(s) or thumb turn if applicable.

2a Loosen the cylinder mounting screw.

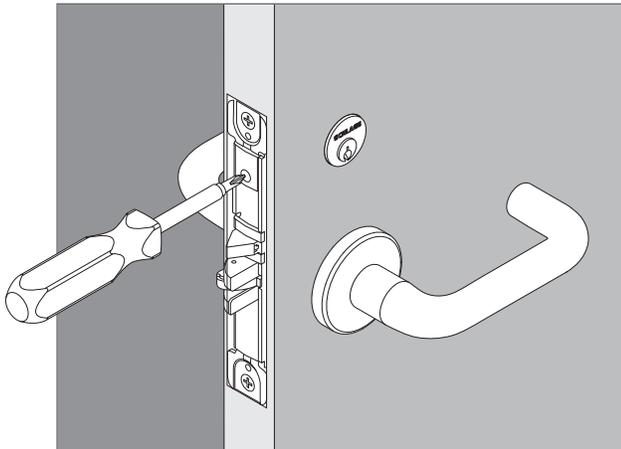

2c Repeat for the inside cylinder, if applicable.

2d Remove inside or outside turns, if applicable.

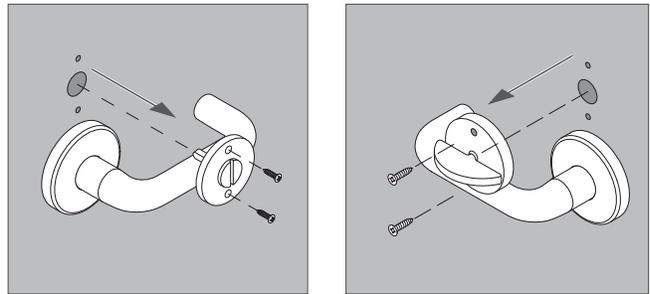

3 Check door preparation.

**IMPORTANT**

- To install the indicator trim, additional door preparation may be required.
- Please refer to the template included in this package.
- Make sure the door is prepared with any necessary holes for the indicator trim.

4 Complete installation of indicator trim.

**Go to page 2, step 9 and follow the instructions to complete the installation of the indicator trim.**

# L400-Series 180 degree indicator installation instructions

L400 Series Lock with Indicator Sectional Trim

Installation Instructions

Indicator trim is available for either the inside or outside of the door on allowable functions.  
Non-indicator trim is furnished on the opposite side of the door.


**Confirm desired placement (inside or outside) before installation.**

**The L400 lock with indicator is not intended for exterior door applications.**


**For retrofit, see page 8.**

**▲ Check the door preparation dimensions with the template included in the package.**

**Indicator options:**

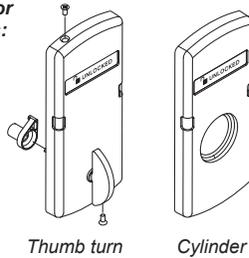



**Non-indicator options:**

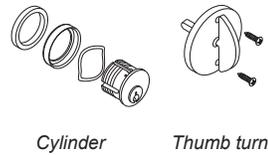

**Tools for installation:**  
**Included:**




**Not included:**

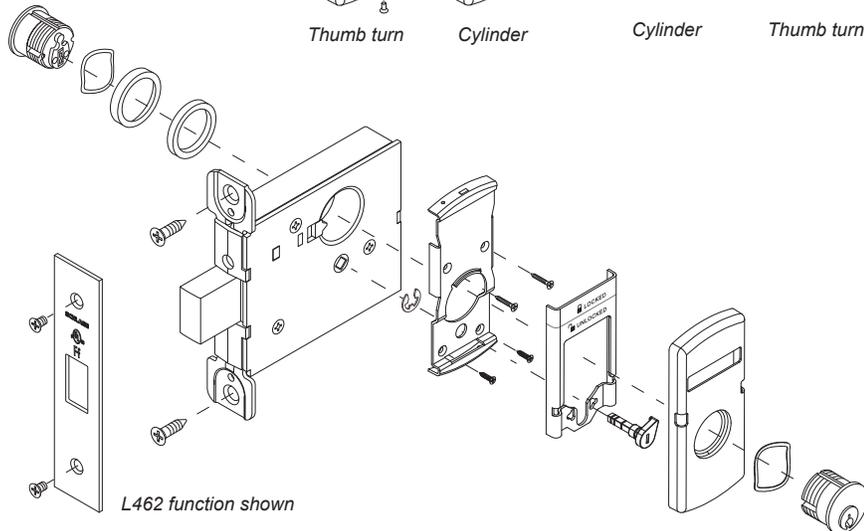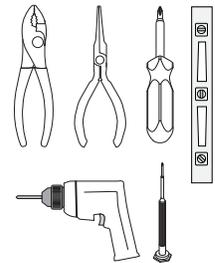

**Cylinder turn, L463 only**

**1** Install lock chassis.

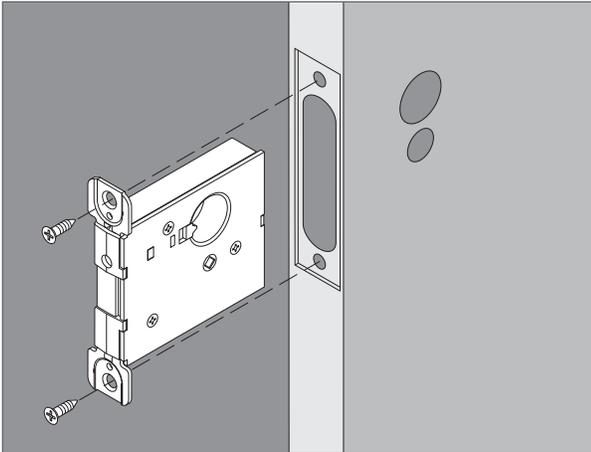


⚠ DO NOT FULLY TIGHTEN CHASSIS MOUNTING SCREWS.

**2** Prepare the indicator side of the door.

2a Use template to mark and drill four (4) pilot holes.


⚠ Required for indicator side of door ONLY!

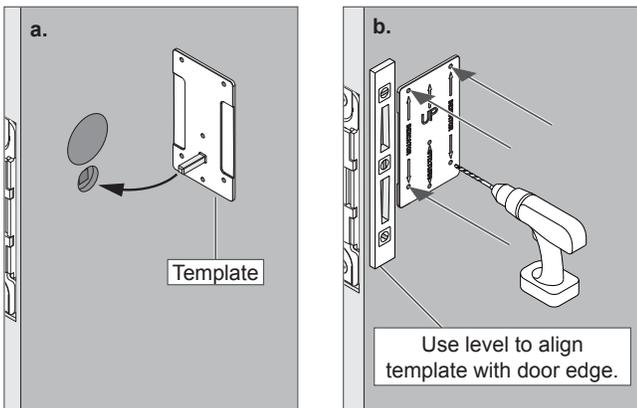


⚠ **STEP 3 for OUTSIDE NON-INDICATOR ONLY.**  
For OUTSIDE INDICATOR, skip to STEP 4.

**3** Install outside cylinder.

3a Insert key halfway into the cylinder.

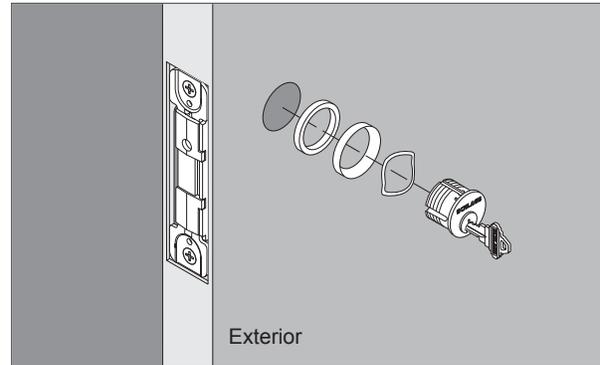

3b Rotate cylinder clockwise.

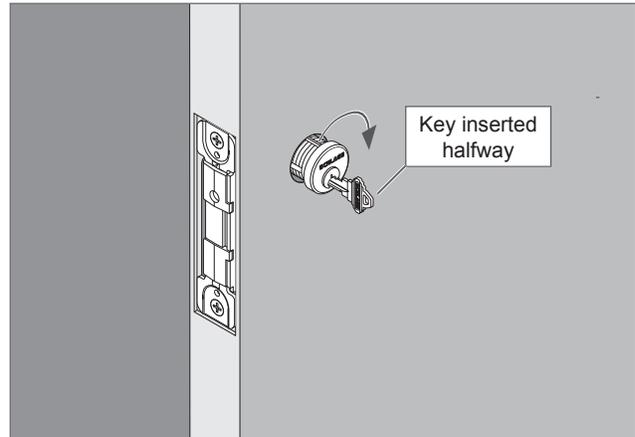


For INSIDE INDICATOR trim, skip to STEP 6.

**4** ⚠ For outside indicator only – Install outside cylinder.


**A. Trim the cam spindle if necessary.**

Break the spindle at the appropriate mark according to door thickness. (If necessary, remove clip.)

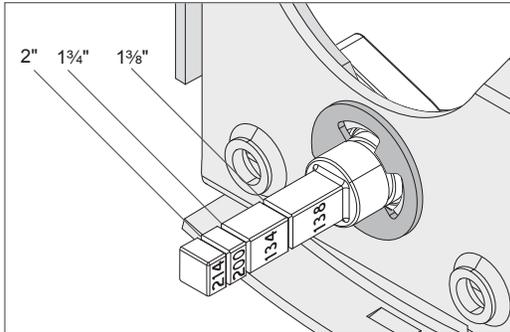

**B. IMPORTANT! Check indicator handing with indicator positioned against top rim of reinforcement plate.**

**OUTSIDE INDICATOR**

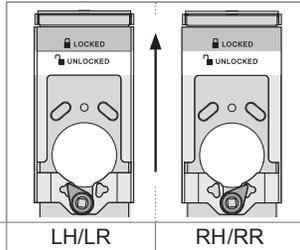


Deadbolt functions

If necessary to change indicator handing, refer to steps on page 7.


**Cylinder Functions with Indicator**

4a Unlock the door.


4b Install the indicator assembly.

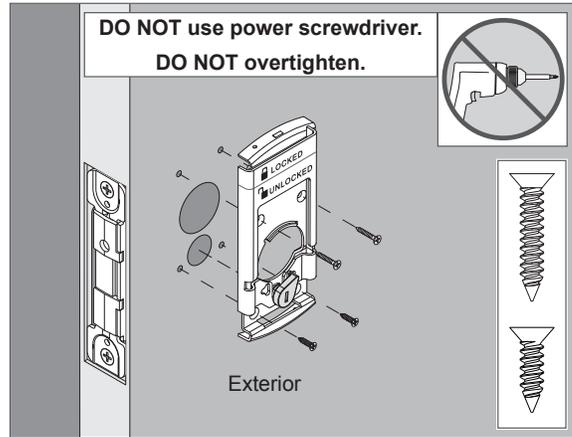

4c Install the indicator faceplate and cylinder with spring.

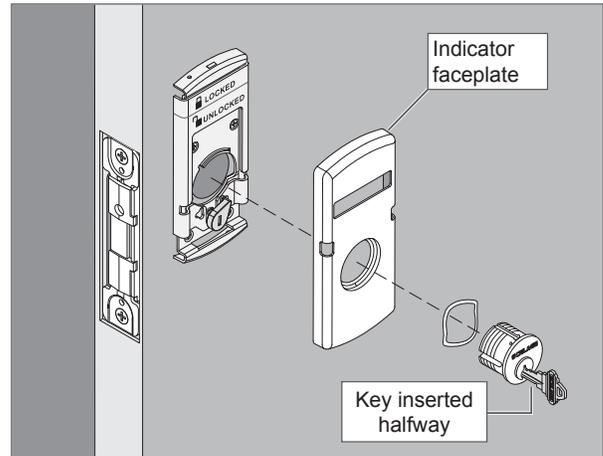

4d Rotate cylinder clockwise.

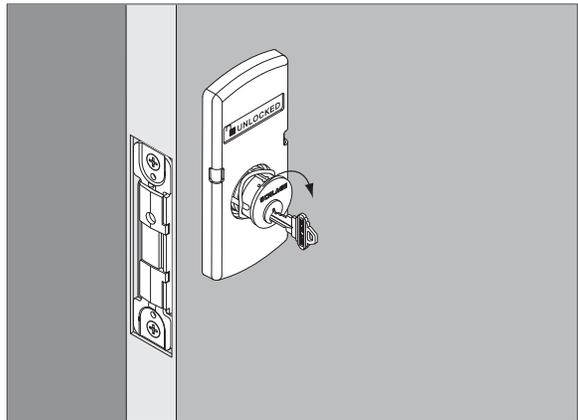


**⚠ STEP 5 for NON-INDICATOR INSIDE TRIM ONLY.**  
**For INDICATOR TRIM, skip to STEP 6.**


**5** Install inside cylinder or thumb turn.

**Cylinder Functions**

5a Insert key halfway into the cylinder, and install the cylinder with ring and cylinder spring as shown.

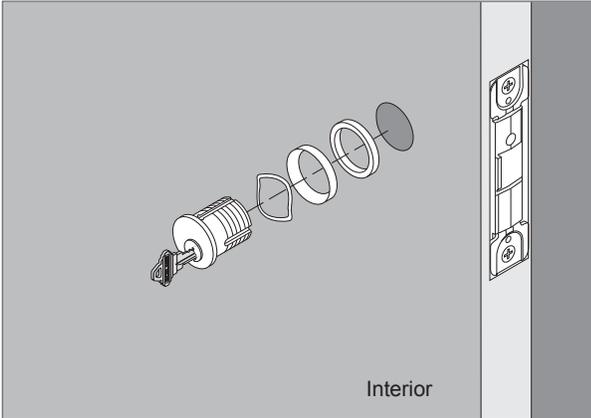


5b Rotate cylinder clockwise.

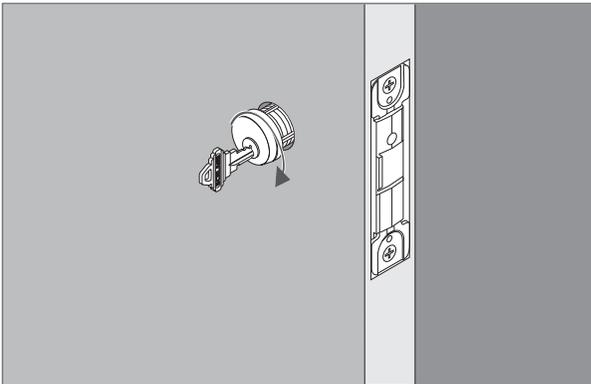


**Thumb Turn Functions**

5a Use template to mark and drill two (2) pilot holes.

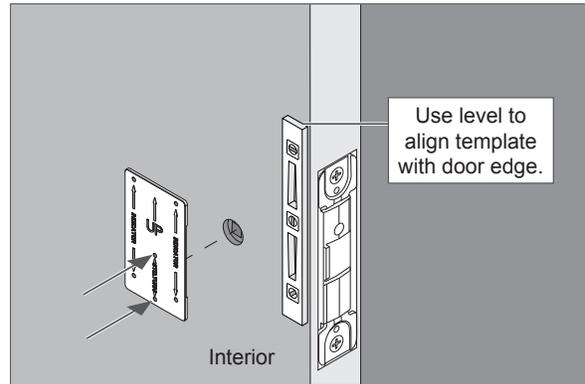

5b Install the thumb turn.

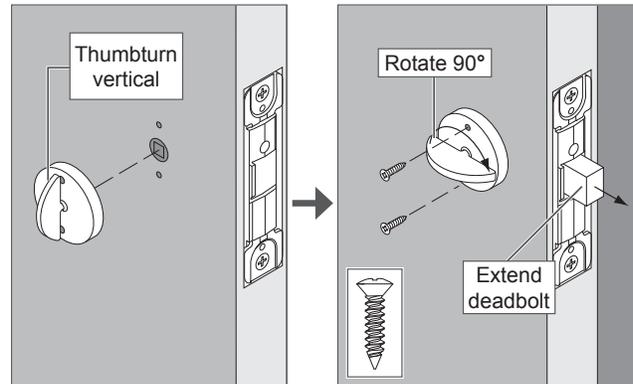


If both inside and outside of lock are now installed, skip to step 7.

**6** ⚠ For Inside Indicator Trim ONLY – Install inside indicator.


**A. Trim the cam spindle if necessary (cylinder functions).**

Break the spindle at the appropriate mark according to door thickness. (If necessary, remove clip.)

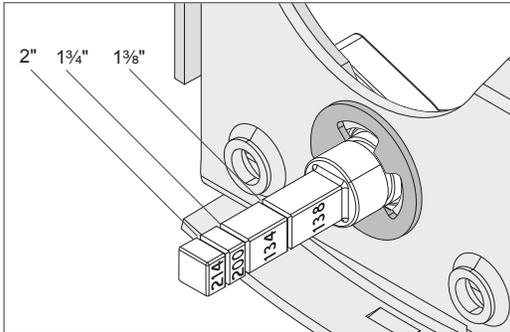

**B. IMPORTANT! Check indicator handing with indicator positioned against top rim of reinforcement plate.**

**INSIDE INDICATOR**

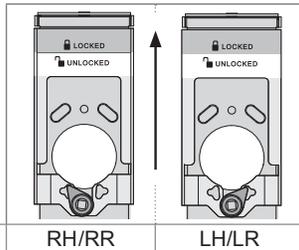

Deadbolt functions

RH/RR


LH/LR

If necessary to change indicator handing, refer to steps on page 7.


**Cylinder Functions with Indicator**

6a Unlock the door.


6b Install the indicator assembly.

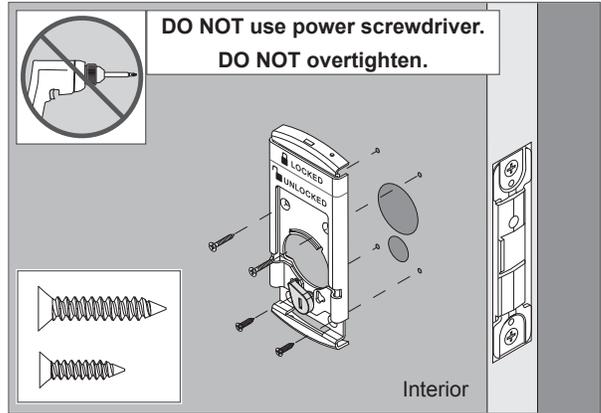

6c Install the indicator faceplate and cylinder with spring.

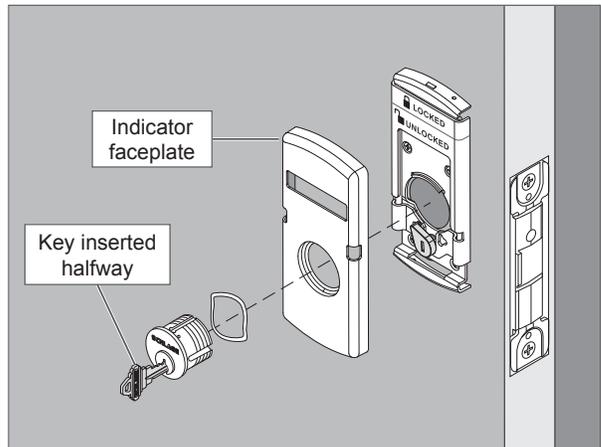

6d Rotate cylinder clockwise.

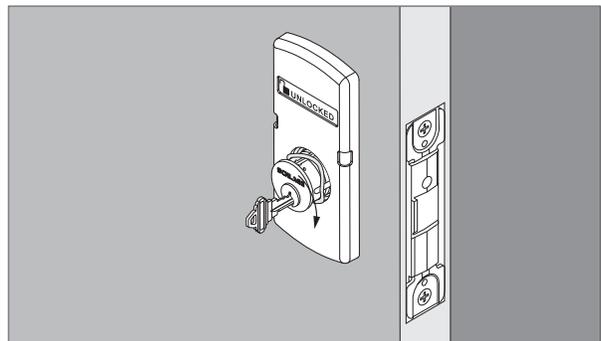


① Additional inside indicator function shown on the following page.


**Thumb Turn Functions with Indicator**

6a Unlock the door.


6b Install the reinforcement plate on the door.

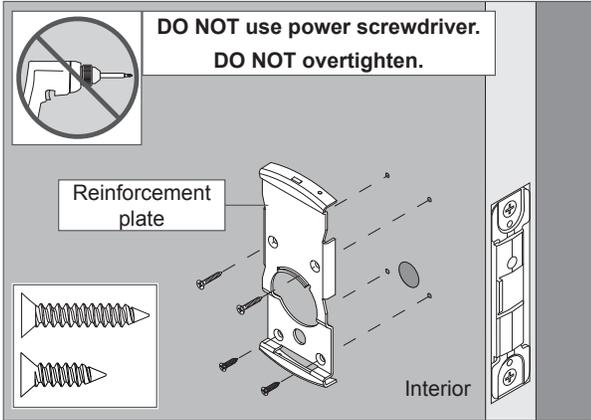


6c Assemble the thumb turn faceplate and cam, if necessary.

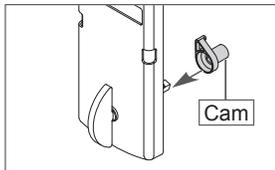

6d Place indicator on faceplate assembly.

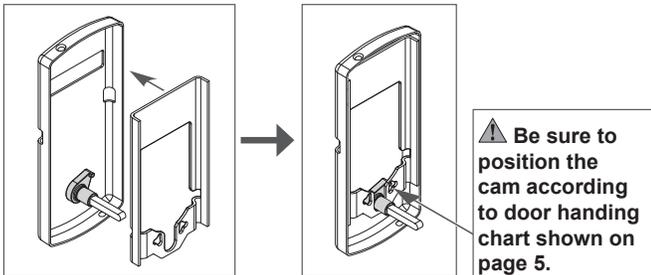


6e Install the indicator faceplate assembly. Secure the indicator faceplate with two set screws.

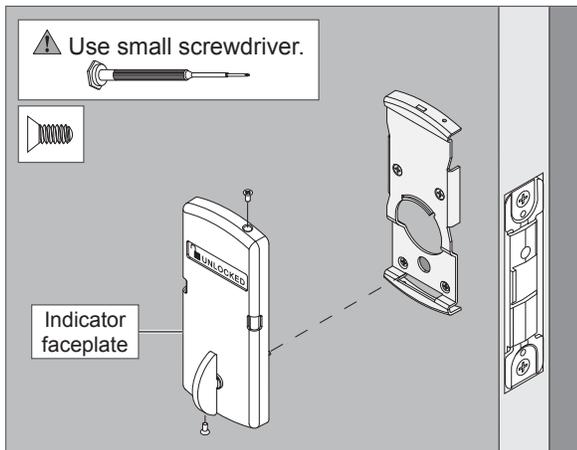


6


**7** Tighten cylinder mounting screw.

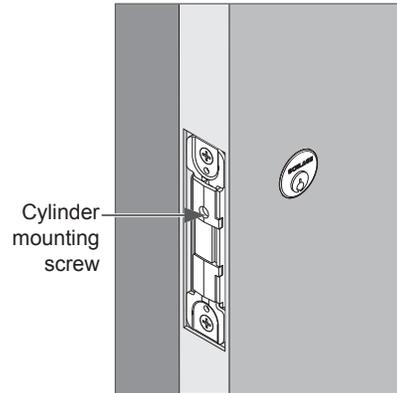

**8** Tighten top and bottom chassis mounting screws.

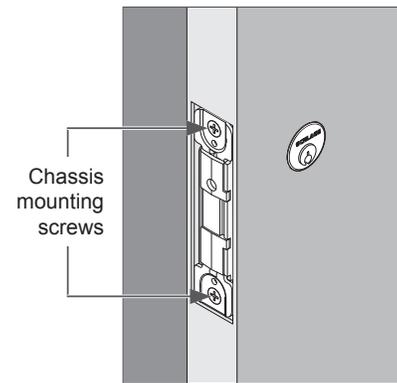


**9** Install armor front.

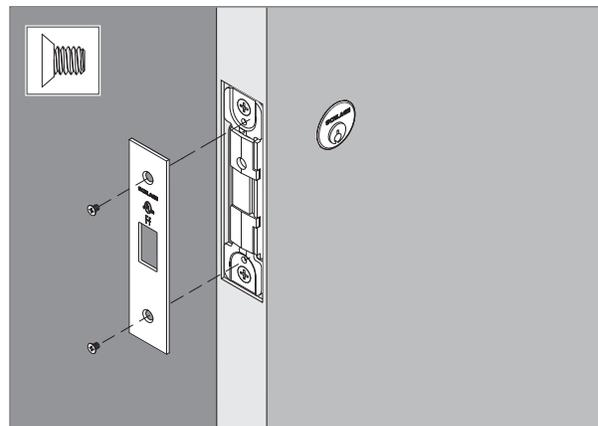


For retrofit instructions, see page 8.

**INDICATOR HANDING**

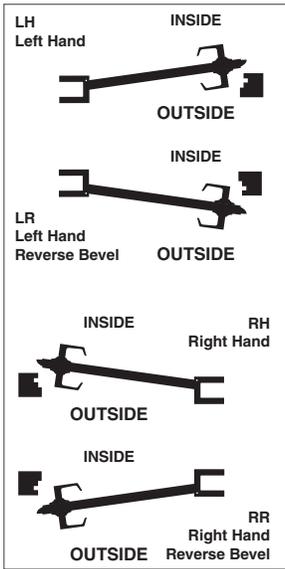


- A. Determine the door's handing from outside.
- B. Check indicator handing with indicator positioned against top rim of reinforcement plate.

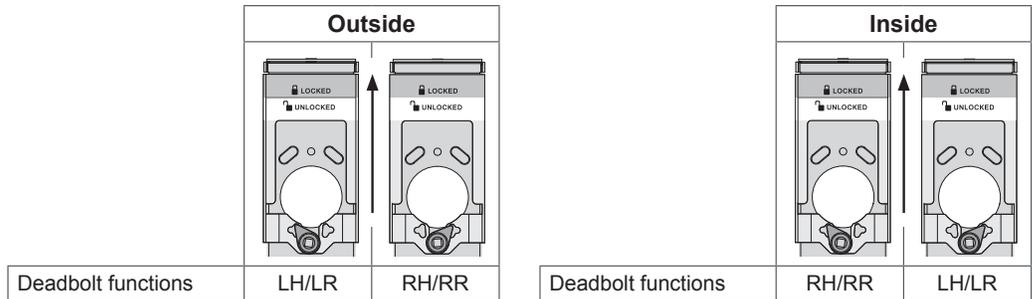

**To rehand the indicator:**


- A. Remove the E-Clip (cylinder and privacy functions only).

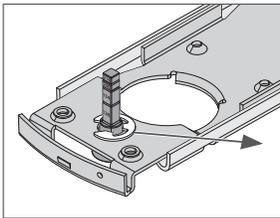


- C. Reorient the cam.

- Unlock the door.
- Position the indicator against the top rim of the reinforcement plate (unlocked position).
- Position the cam as shown on charts above.


- ① Use **OUTSIDE** or **INSIDE** chart according to indicator side.

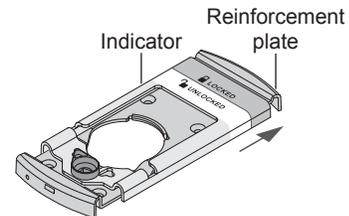

- B. Disassemble the indicator.

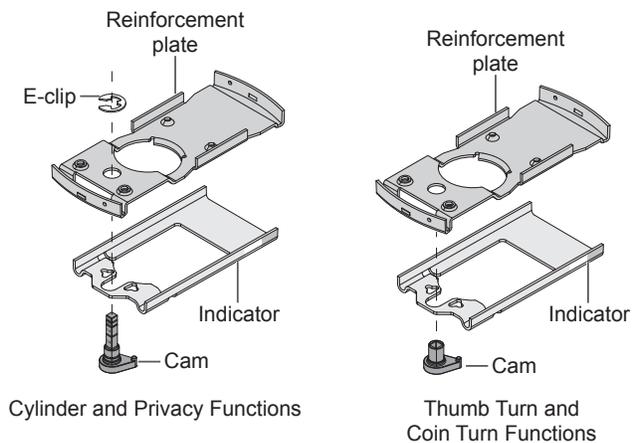


- D. Replace the E-Clip (cylinder and privacy functions only).

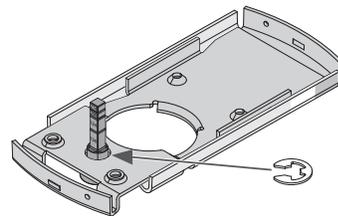

**INDICATOR LOCK RETROFIT INSTRUCTIONS**


**Indicator options:**

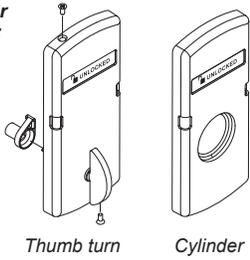

Thumb turn


Cylinder

**1 Remove armor front.**

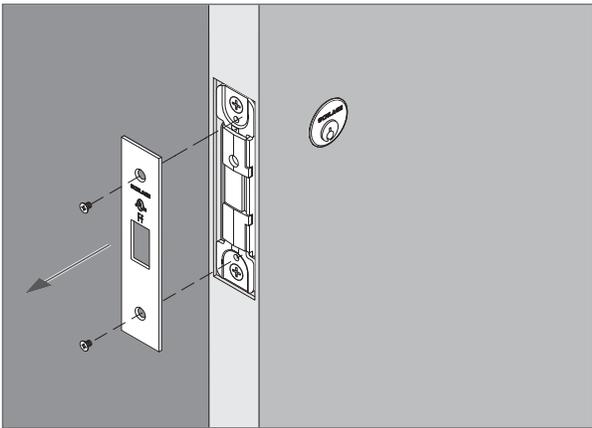


**2 Remove cylinder(s) or thumb turn if applicable.**

**2a Loosen the cylinder mounting screw.**

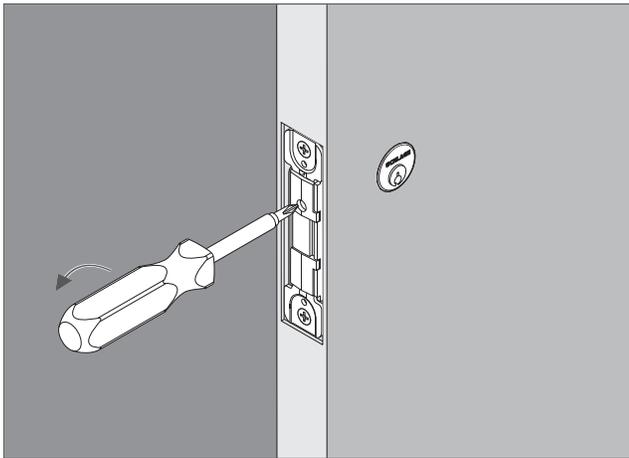


**2b Remove the outside cylinder, if applicable.**

Insert the key halfway into the cylinder and rotate cylinder counterclockwise to remove.

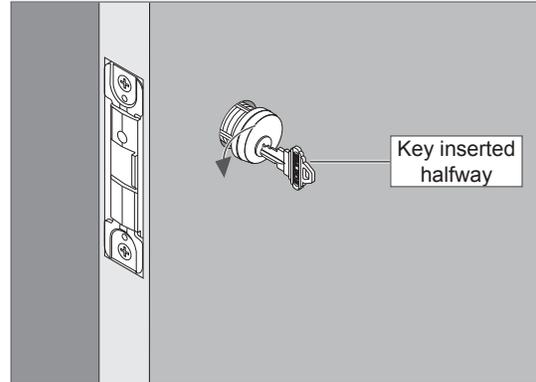

**2c Repeat for the inside cylinder, if applicable.**

**2d Remove inside turn, if applicable.**

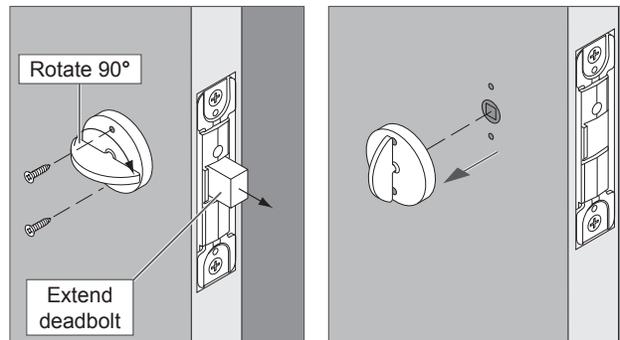

**3 Check door preparation.**

**IMPORTANT**

- To install the indicator trim, additional door preparation may be required. If additional door preparation is required, remove the lock chassis from the door before drilling. Steps for reassembly are included in this instruction sheet.
- Please refer to the template included in this package.
- Make sure the door is prepared with any necessary holes for the indicator trim.

**4 Complete installation of indicator trim.**

Go to STEP 2 ON PAGE 2 and follow the instructions to complete the installation of the indicator trim.

**Customer Service**  
 1-877-671-7011    www.allegion.com/us



© Allegion 2016  
 P516-911 Rev. 10/16-c

# L9000-Series electrified installation instructions

L909X-Series Electrified Mortise Lock,  
LM929X-Series Electrified Two-Point Lock  
Wiring Instructions and Specifications

WARNINGS

**WARNING**  
Warnings indicate potentially hazardous conditions, which if not avoided or corrected, may cause death or serious injury.

## L-Series Electrified Lock

**All installations should be in accordance with local electrical codes and national electrical code, NFPA 70.**

L909X-Series and LM929X-Series electrified locks offer selection between one of two modes, EL or EU.

Select the appropriate mode for the installation using the mode select switch located on the mortise chassis.

**EL, electrically locked (fail safe):**

Outside knob/lever or both outside and inside knobs/levers (depending on function) will lock when power is applied. In the event of power failure, the opening will be unlocked.

**EU, electrically unlocked (fail secure):**

Outside knob/lever or both outside and inside knobs/levers (depending on function) will unlock when power is applied. In the event of power failure, the opening will be locked.


**Note: When mode is switched (from EL to EU or EU to EL) the lock requires a complete lock/unlock power cycle to synchronize to the proper mode.**

**IMPORTANT!** Connection of L-Series electrified mortise locks to a supply circuit containing electromagnetic devices (i.e., solenoid based) is *not recommended*. If used, the resulting transient voltages could damage the lock. The transient voltage must be carefully suppressed at the equipment producing it before connecting the lock to the same circuit. A varistor rated at 35 V (peak recurrent) may be used for transient voltage protection.

**Troubleshooting**

If lock does not operate.

- Ensure the lock is powered with DC power. Do not use AC power.
- Ensure the input voltage is between 10.8 and 26.4 volts DC.

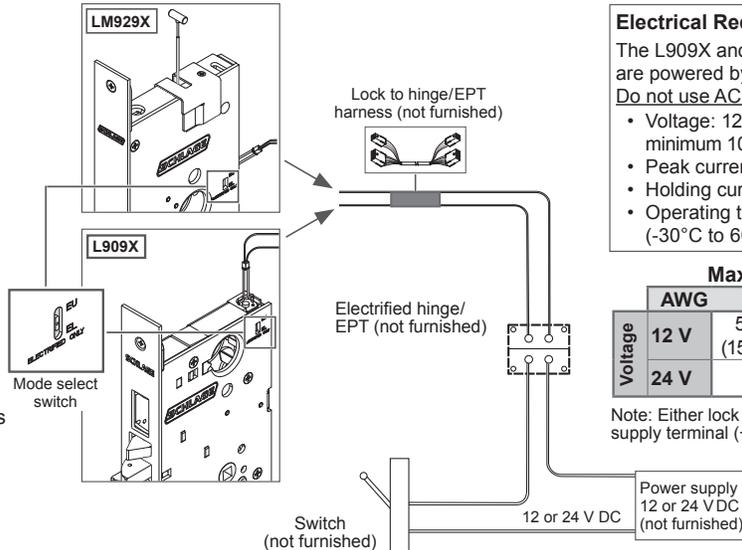

**Electrical Requirements:**

The L909X and LM929X-Series electrified locks are powered by DC power only.

Do not use AC power.

- Voltage: 12 or 24 VDC (maximum 26.4 V, minimum 10.8 V)
- Peak current: 0.4 amps
- Holding current: 0.010 amps
- Operating temperature: -22°F to 140°F (-30°C to 60°C)

**Maximum Total Wire Length**

	AWG 14	16	18	20
Voltage	12 V	500' (152 m)	300' (91 m)	200' (61 m)
	24 V	Up to 1000' 304 m		

Note: Either lock wire may be attached to either power supply terminal (+ or -).

WARNINGS

**WARNING**  
L9091/93/95, L9493/95 and LM9291/93/95 functions lock both inside and outside levers. Locking both levers will prevent normal egress from the inside and will prevent the intended operation of an emergency exit.

## L-Series Request-to-Exit (RX) Lock

RX utilizes a microswitch inside the lock case to detect rotation of the inside knob/lever. The switch then signals the use of the opening to the security system. The RX is a removable module located on the bottom edge of the lock chassis. The module must be properly positioned to detect inside knob/lever rotation. If not properly positioned, the lock and/or microswitch may be damaged. Default status for normally open or normally closed is with door open.

**Note:** RX is not applicable with LM929X-Series locks.


**RX module installation**

1. The microswitch must be on the same side of the door as the handing screw (facing the inside of the door).
2. Install the RX switch module as shown.

**Change lock handing with RX**

1. If the RX module is installed, remove the RX module.
2. Remove the handing screw.
3. Rotate the latch 180° (if necessary).
4. Reinstall the handing screw on the appropriate side.
5. Reinstall the RX module with the microswitch on the same side as the handing screw.

**Electrical rating:** 3 A, 125 V AC; 2 A, 30 V DC

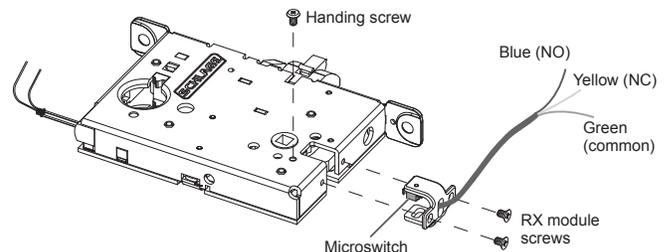

## L9000-Series electrified installation instructions

### Deadbolt Monitor (DM)

Deadbolt Monitor (DM) identifies the status of the deadbolt (extended or retracted). Normally open, normally closed, and common connections are provided. Note: Deadbolt monitor is only available on deadbolt models.

Default status for normally open or normally closed is with the deadbolt retracted. Closing the door or extending the deadbolt reverses the status. Electrical rating: 3 A, 125 V AC; 2 A, 30 V DC.

### Latchbolt Monitor (LX)

Latchbolt Monitor (LX) identifies the status of the latchbolt (extended or retracted). Normally open, normally closed, and common connections are provided.

Default status for normally open or normally closed is with the door open. Electrical rating: 3 A, 125 V AC; 2 A, 30 V DC.


### Door Position Sensor (DPS)

Door Position Sensor (DPS) detects the position of the door, open or closed, by utilizing a sensor in the mortise lock to detect a magnet located in the door strike. Normally open, normally closed, and common connections are provided.

Default status for normally open or normally closed is with the door open.

**Note:** DPS is not available on deadbolt models.


Max voltage 175 VDC, max current 0.250 A

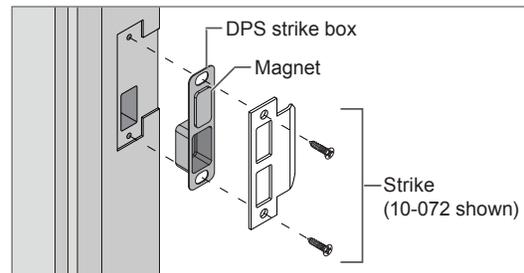

### Allegion Connect

The L909X-Series and LM929X-Series electrified mortise locks are furnished with Allegion Connect, a factory-installed Molex® connector system that provides simplified installation and maintenance. The system utilizes quick-connect harnesses and hinges. As an alternative installation method, the Molex connector may be cut off and the lock installed with traditional wire splicing methods.

Note: The items listed and shown below reflect options that may or may not be included with your specific model.

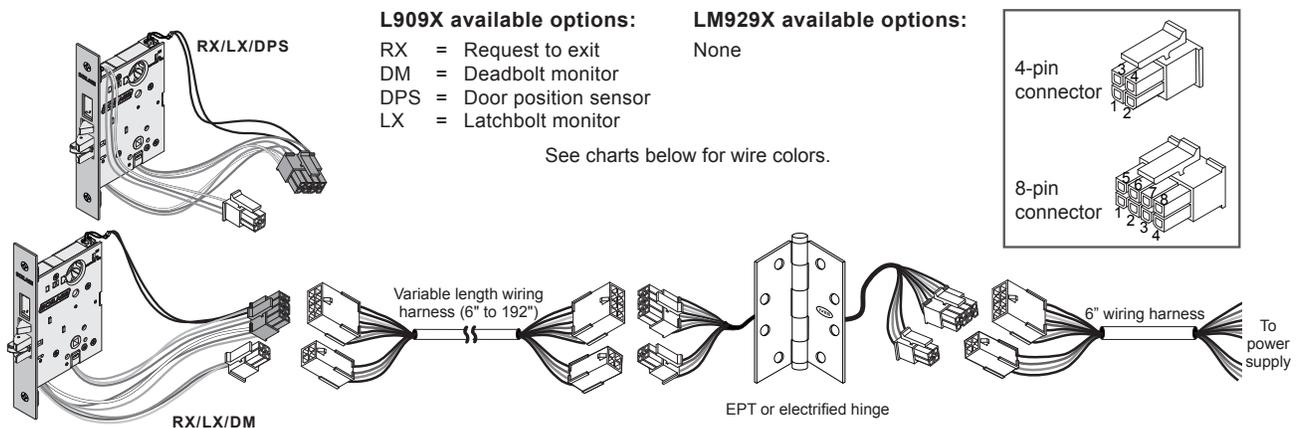

**L909X available options:**  
 RX = Request to exit  
 DM = Deadbolt monitor  
 DPS = Door position sensor  
 LX = Latchbolt monitor

**LM929X available options:**  
 None

See charts below for wire colors.

8-Pin		Lock Connector		Harness Connector	
Purpose	Function	Wire Color	Pin	Pin	Wire Color
EL / EU	Power*	Black	1	1	Red
	Power*	Black	2	2	Black
RX	Normally Open (NO)	Blue	3	3	Blue
	Normally Closed (NC)	Yellow	4	4	Yellow
	Common (C)	Green	5	5	Green
LX	Normally Open (NO)	Gray	6	6	Gray
	Normally Closed (NC)	Violet	7	7	Violet
	Common (C)	White	8	8	White

4-Pin		Lock Connector		Harness Connector	
Purpose	Function	Wire Color	Pin	Pin	Wire Color
DM	Normally Open (NO)	Orange	1	1	Orange
	Normally Closed (NC)	Brown	2	2	Brown
	Common (C)	Pink	3	3	Pink
DPS	not used		4	4	Tan
	Normally Open (NO)	Green/black	1	1	Orange
	Normally Closed (NC)	Red	2	2	Brown
	Common (C)	White/black	3	3	Pink
	not used		4	4	Tan

\* Lock auto-detects GND, +12 or +24 V DC

#### Customer Service

1-877-671-7011

www.allegion.com/us



© Allegion 2016  
 P516-871 Rev. 11/16-f

## About Allegion

Allegion (NYSE: ALLE) creates peace of mind by pioneering safety and security. As a \$2 billion provider of security solutions for homes and businesses, Allegion employs more than 7,800 people and sells products in more than 120 countries across the world. Allegion comprises 23 global brands, including strategic brands CISA®, Interflex®, LCN®, Schlage® and Von Duprin®.

For more, visit [www.allegion.com](http://www.allegion.com).

*aptiQ* ■ LCN ■ **SCHLAGE** ■ STEELCRAFT ■ VON DUPRIN