


HOW TO INSTALL THIS CYLINDRICAL INDICATOR LEVERSET

Leverset is designed for 1 3/4" thick door-backset 2 3/4"
door thickness range must be 1 3/4" ± 0.1"


Important: Do not remove outside trim assembly from lockbody

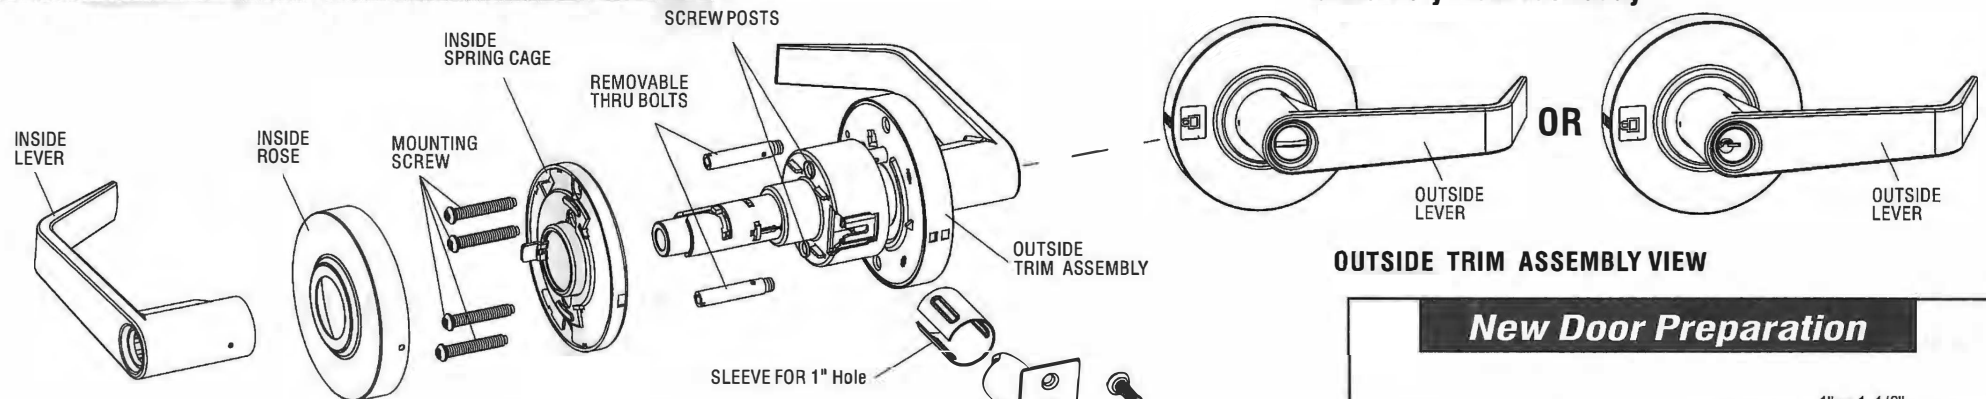


OUTSIDE TRIM ASSEMBLY VIEW

New Door Preparation

1. Fold template over edge of door and mark holes.
2. Drill a 2-1/8" hole.
3. Drill two 3/8" thru bolt holes through face of door (only if the thru bolts are being used).
3. Drill a 1" hole in edge of door.
4. Cut 5/32" notches on 2-1/8" hole on both sides of door. (very important if not using thru bolts)
5. Mortise latch unit front
2-1/4" x 1" x 1/8" for 2-3/8" backset
or 2-1/4" x 1-1/8" x 1/8" for 2-3/4" backset

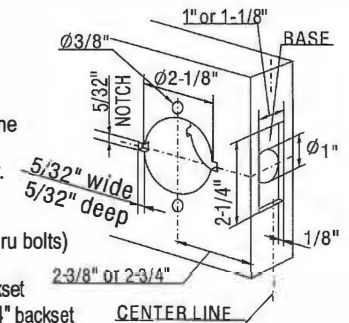


DOOR HANDING

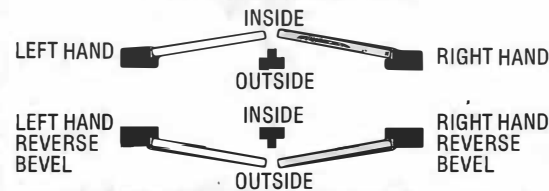


DOOR HANDS DETERMINED FROM OUTSIDE

1 DISASSEMBLE INSIDE LEVER

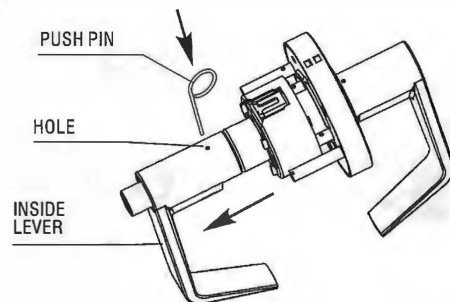


1A: Insert push pin into hole to depress catch and remove the lever.


2 INSTALL LEVERSET TO DOOR

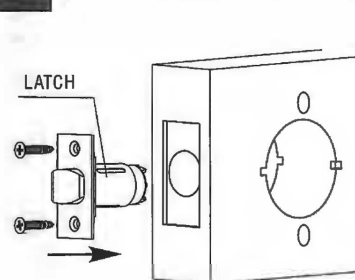


2A: Insert latchbolt and secure with combination screws.

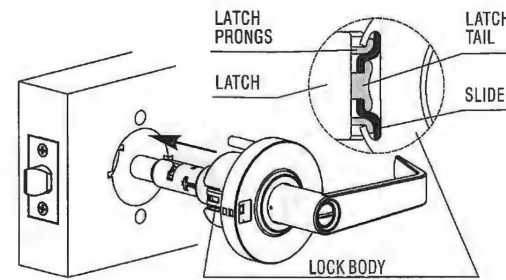


2B: Place lock body into position. Make sure that latch prongs engage chassis in housing, and slide engages latch tail.

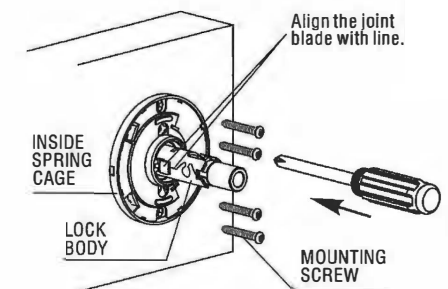


2C: Install inside spring cage, Screws should be hand tightened all the way down with a screwdriver.

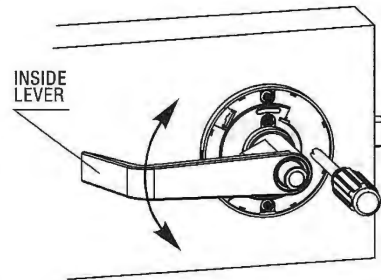



2D: Slide inside lever onto spindle and check to see if the rotation is smooth. Adjust the radial clearance between inside spring cage and inside lever if necessary.

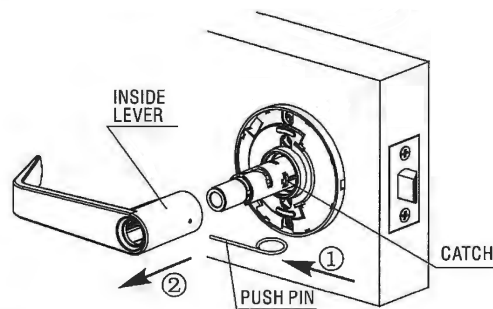

2E: Remove inside lever using push pin.

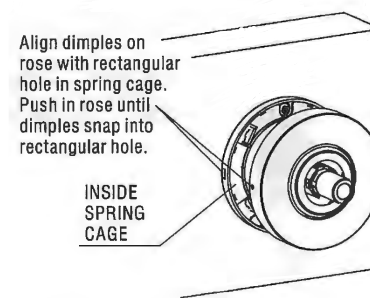


2F: Install inside rose and make sure inside rose and inside spring cage are tightened.

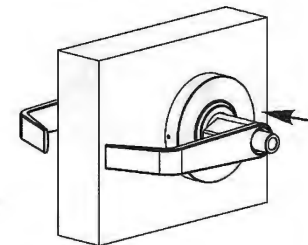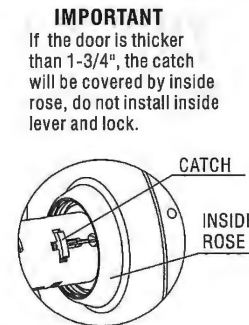


2G: Slide lever onto spindle. Push lever completely into place. (Pull on lever to make sure that catch is fully engaged).


3 INSTALL STRIKE

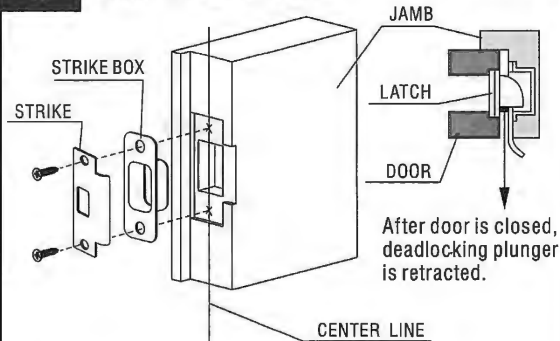


4 INSTRUCTIONS FOR REMOVING AN INSTALLED LOCK FROM THE DOOR

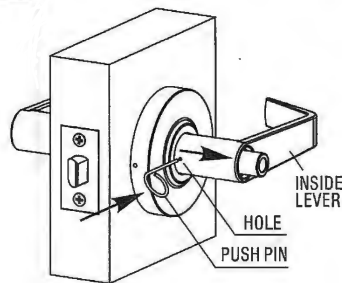

4A: Insert push pin into hole to depress catch and remove the lever.

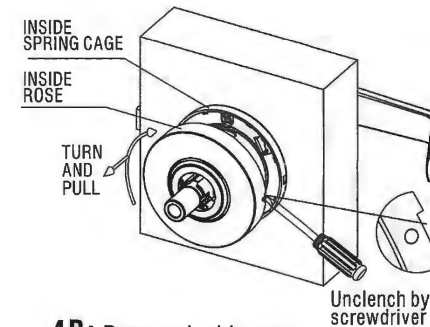


4B: Remove inside rose by turning and pulling off.

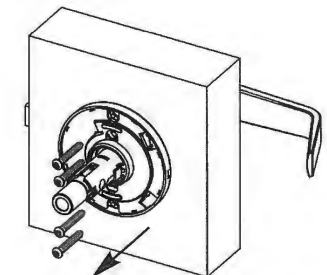


4C: Remove mounting screw with screwdriver and inside spring cage.


5 INSTRUCTIONS FOR CYLINDER REPLACEMENT (If Required)

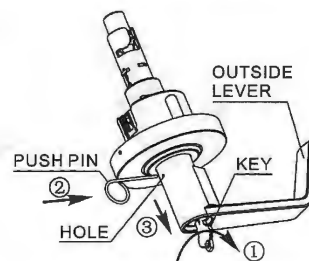

5A: Turn key 75° clockwise, insert push pin into hole in outside lever to depress catch. Remove the outside lever.

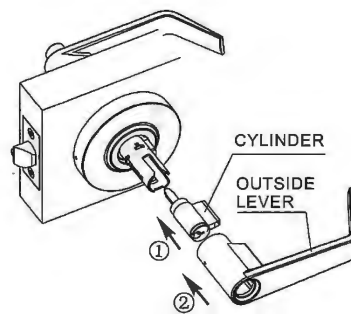

5B: Install cylinder and lever.

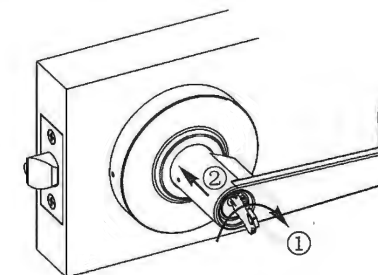

5C: Turn the key approximately 80° clockwise and push the lever all the way onto the spindle and then turn the key back to normal position.

