

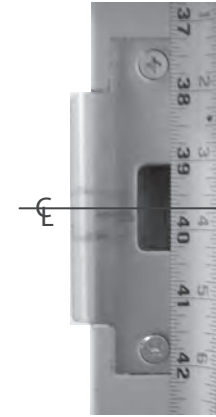


# Standard Hollow Metal Door Frame Hinge Location Chart (1 3/4" Doors)

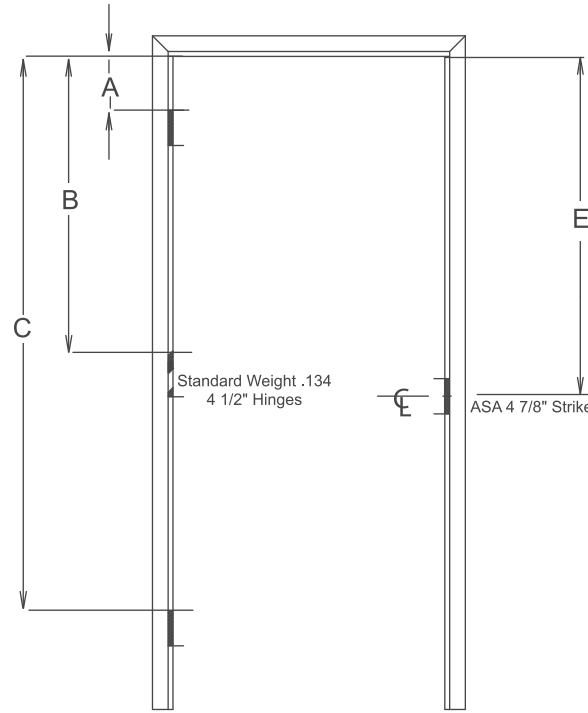

(623) 748-9122  
www.trudoor.com

Measure from the underside of the frame head, to the top of each hinge cut-out

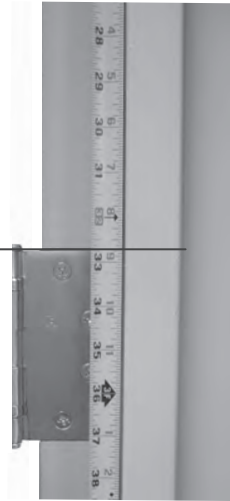

Measure from the underside of the frame head, to the center-line of the strike

Note:  
8'0" frames have a 4th hinge;  
bottom hinge = D  
(not shown in drawing)

MANUFACTURER	6'8"				7'0"				8'0"				
	A	B	C	E	A	B	C	E	A	B	C	D	E
AMWELD	7 1/2"	37 7/16"	67 3/8"	39 11/16"	7 1/2"	39 7/16"	71 3/8"	43 11/16"	7 1/2"	32 13/16"	58 1/8"	83 7/16"	55 11/16"
CECO	6 3/4"	37 3/4"	68 3/4"	38 3/16"	6 3/4"	39 3/4"	72 3/4"	42 3/16"	6 3/4"	32 3/4"	58 3/4"	84 3/4"	54 3/16"
CURRIES	5"	35 1/4"	65 1/2"	40"	5"	37 1/4"	69 1/2"	44"	5"	30 1/2"	56"	81 1/2"	56"
DKS	7 1/2"	37 7/16"	67 3/8"	39 11/16"	7 1/2"	39 7/16"	71 3/8"	43 11/16"	7 1/2"	32 13/16"	58 1/8"	83 7/16"	55 11/16"
FENESTRA	5 1/4"	35 1/4"	65 1/4"	39 11/16"	5 1/4"	37 1/4"	69 1/4"	43 11/16"	5 1/4"	30 5/8"	55 15/16"	81 1/4"	55 11/16"
KEWANEE	7 3/8"	37 7/16"	67 1/2"	39 11/16"	7 3/8"	39 7/16"	71 1/2"	43 11/16"	7 3/8"	32 3/4"	58 1/8"	83 1/2"	55 11/16"
MESKER	5"	35 1/4"	65 1/2"	39 11/16"	5"	37 1/4"	69 1/2"	43 11/16"	5"	30 1/2"	56"	81 1/2"	55 11/16"
PIONEER	5"	35 1/4"	65 1/2"	42"	5"	37 1/4"	69 1/2"	46"	5"	30 1/2"	56"	81 1/2"	58"
REPUBLIC	7 1/2"	37 7/16"	67 3/8"	39 11/16"	9 1/2"	39 7/16"	69 3/8"	43 11/16"	5"	30 1/2"	56"	81 1/2"	55 11/16"
STEELCRAFT	7 1/2"	37 7/16"	67 3/8"	39 11/16"	7 1/2"	39 7/16"	71 3/8"	43 11/16"	7 1/2"	32 25/32"	58 1/16"	83 3/8"	55 11/16"
TIMELY	8 3/8"	37 7/8"	67 3/8"	40 3/32"	8 11/32"	39 27/32"	71 11/32"	44 3/32"					