
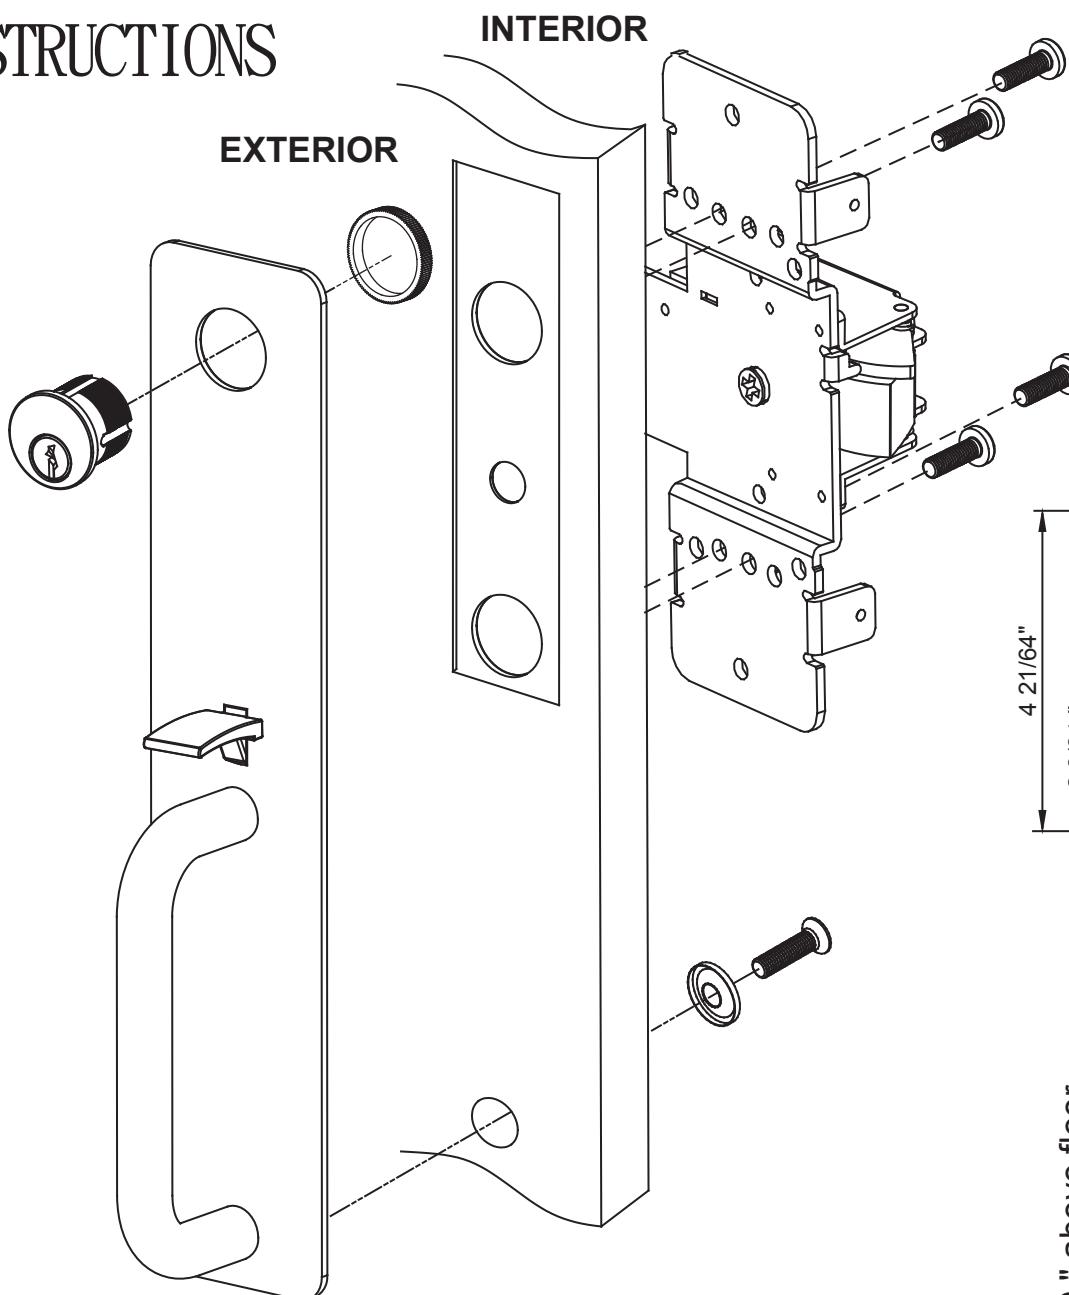


1000 SERIES THUMBPiECE TRIM INSTALLATION INSTRUCTIONS


TP-08, ENTRY

TP-02DT, DUMMY

Exterior Side of Door

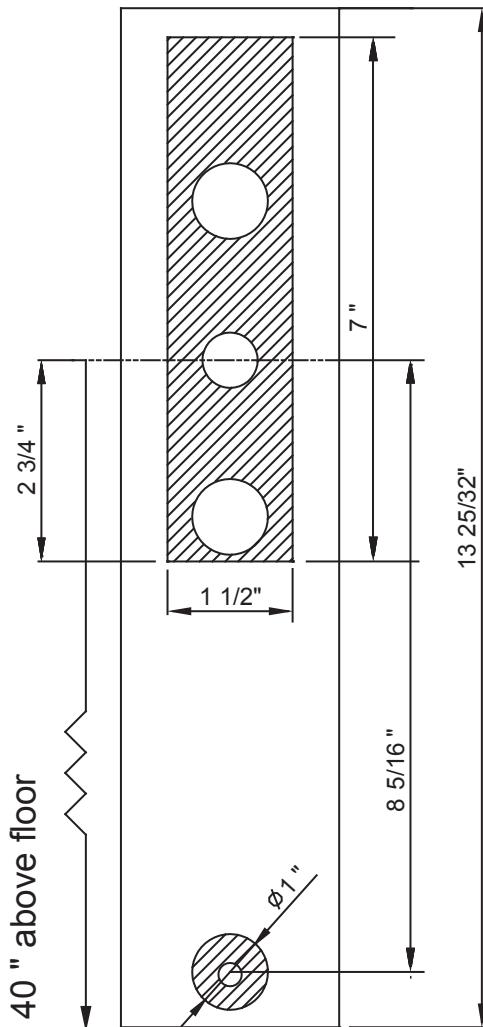

NOTE:
Backset of 2 7/16" from jamb to center or
2 3/4" from door edge to center is acceptable.
Strike shim can be used or not used to make
adjustments to the roller strikes projection to
compensate for doors with different backsets.

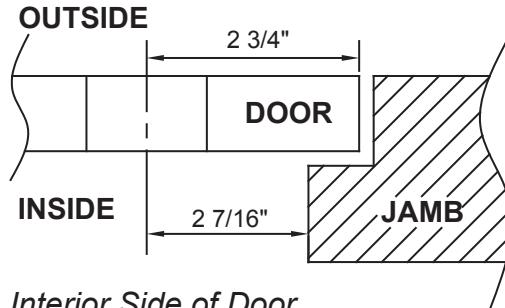

Interior Side of Door

