

MS1 Mullion Stabilizers Installation Instructions

FIG. 1



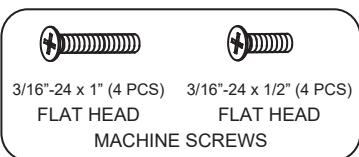


FIG. 2

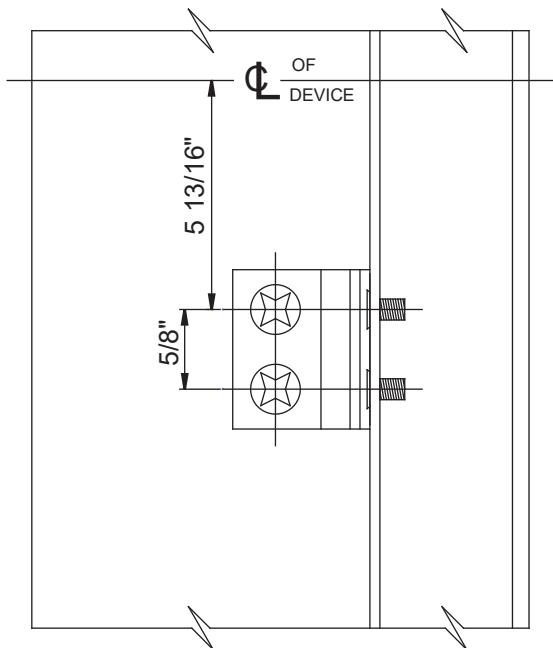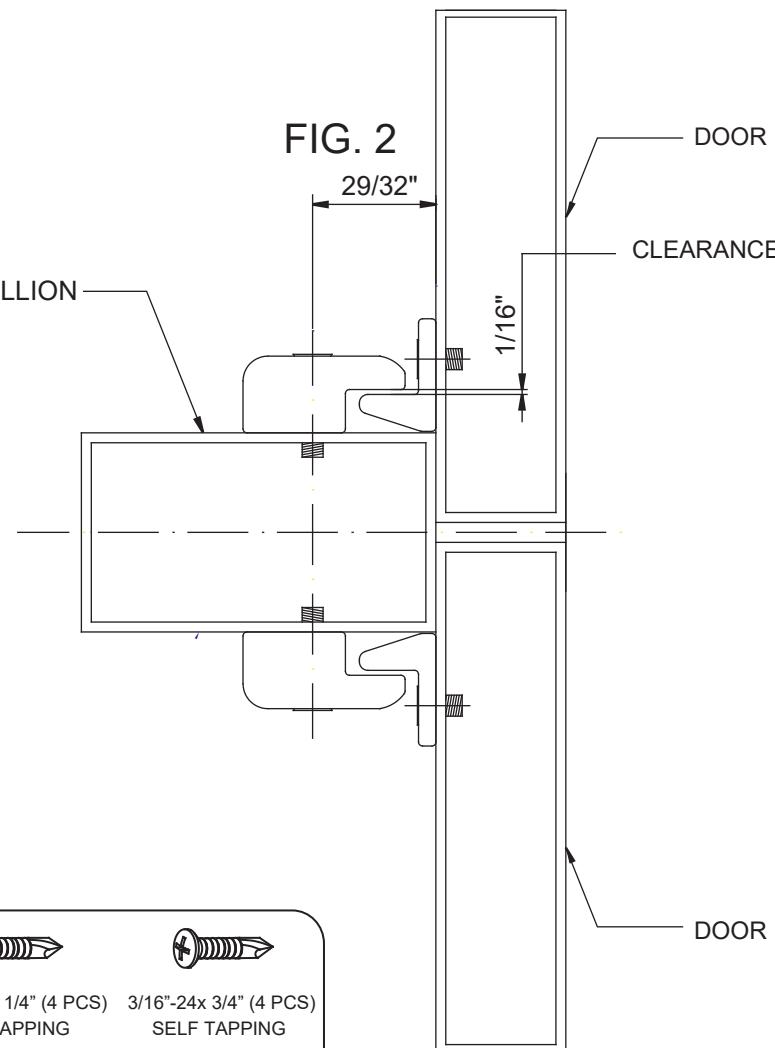

(1)

To locate the top mounting hole for the stabilizers, measure 5 13/16" down from the centerline of the strike or device. Measure down another 5/8" for the lower hole. (FIG. 1)

The vertical centerline can be located by measuring 29/32" back from the front surface of the mullion edging. (FIG. 2). Two 3/16"-24 holes should be tapped in the mullion where the centerlines indicate. Insert stabilizer shim for correct height.

(2)

For locating the centerline on the door, measure down 5 13/16" from the centerline of device. Then, measure down 5/8" for the lower hole. (FIG. 1)

To locate the stabilizer vertically on the door, pull the door closed and hold the stabilizer in position on the door, allowing for the 1/16" clearance. (FIG. 2). The centers can then be marked. Two 3/16"-24 holes should then be tapped in the door at these centerlines.

Not to scale 1:1. Measurements are for reference only. Not a drilling template.