

VERTICAL TYPE PANIC EXIT DEVICE

Installation instructions for changing lever handing


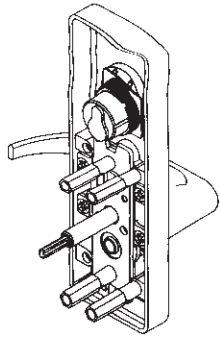



Figure represents
right handed door

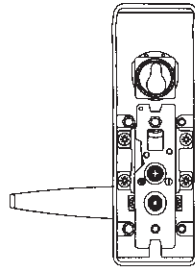


CAUTION:

The preset lever handle is "RIGHT HANDED".
Please follow the steps below if "left handed" is needed.


①

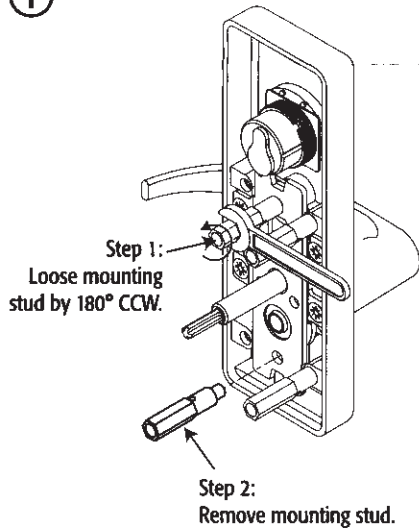


②

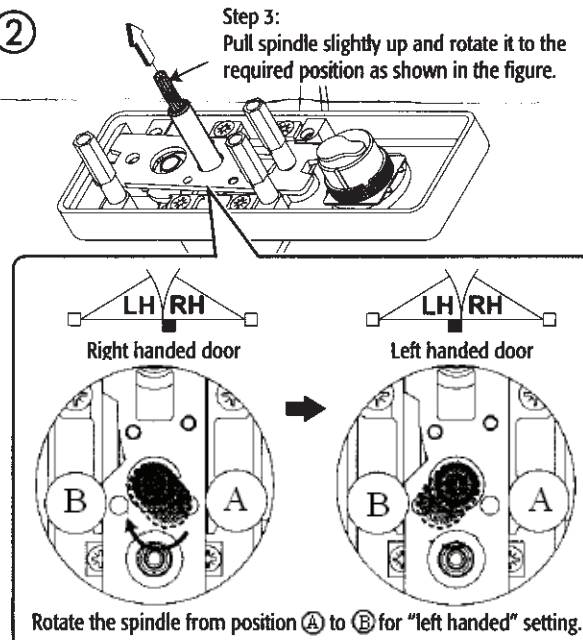


③

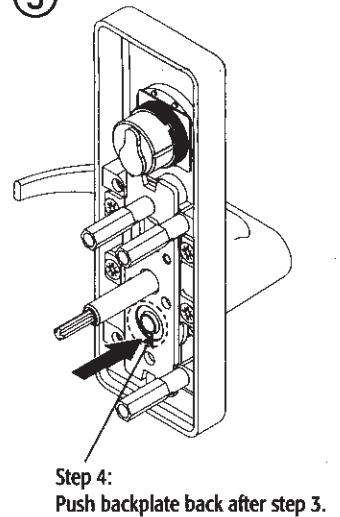


④

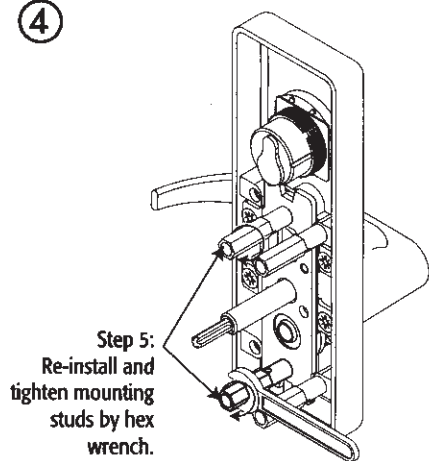


⑤

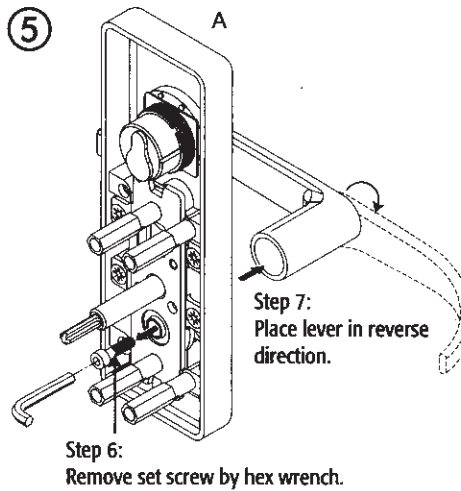

B

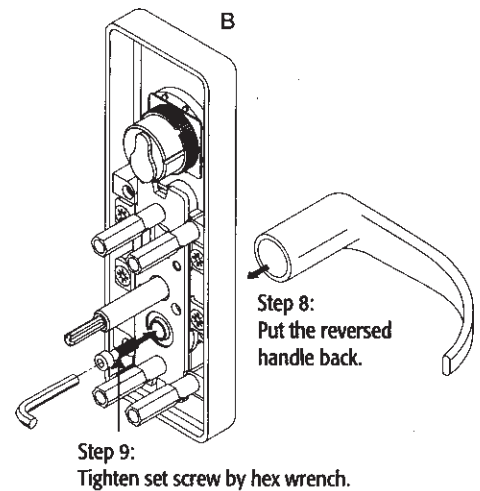


⑥

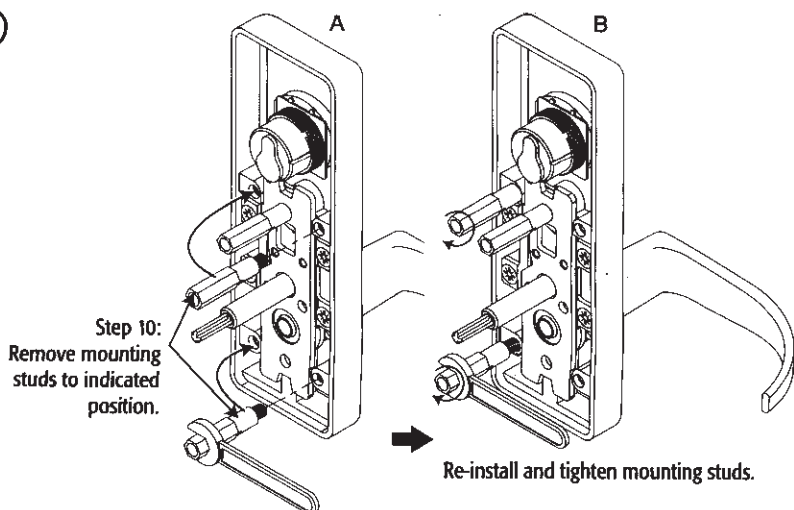



⑦

The setting for switching handle
direction is completed.

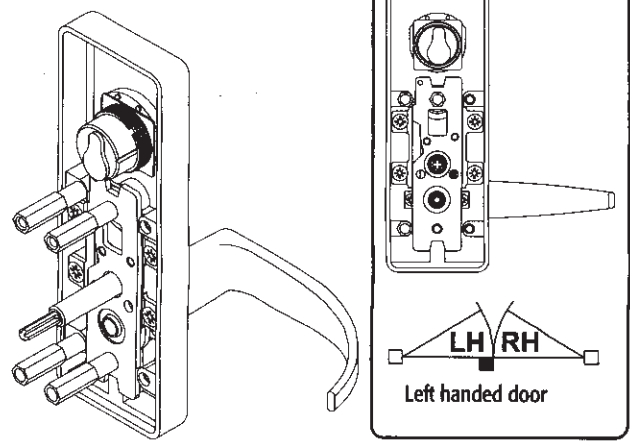


VERTICAL TYPE PANIC EXIT DEVICE

Installation instructions for changing lever handing

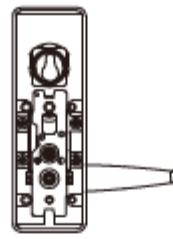
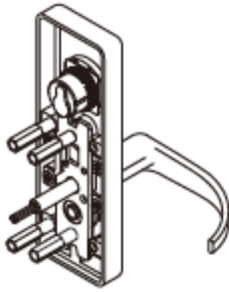


CAUTION:
The preset lever handle is "LHR".
Please follow the steps below if "RHR" is needed.


- ① **REQUIRED:**
Handle must be attached before
loosening mounting studs.

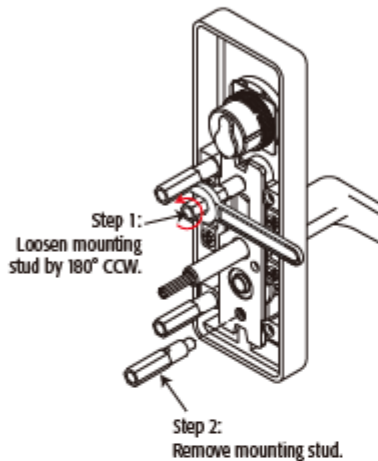


- ② Step 3:
Step 4:
Pull spindle slightly up and rotate it to the
required position as shown in the figure.

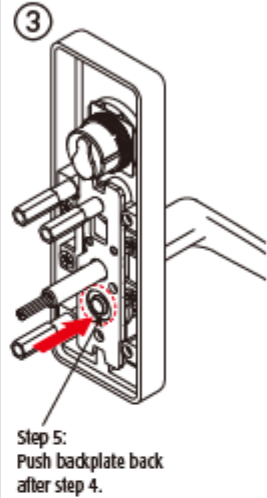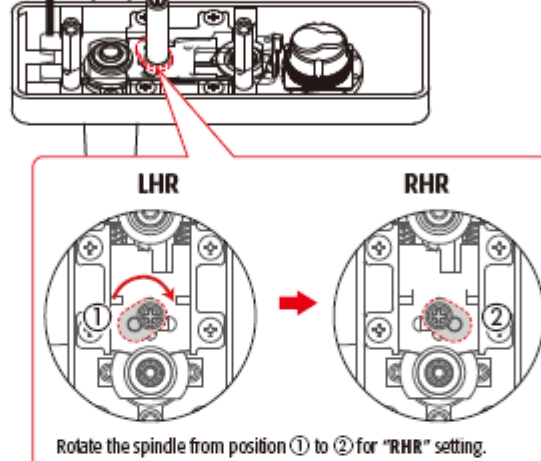


④

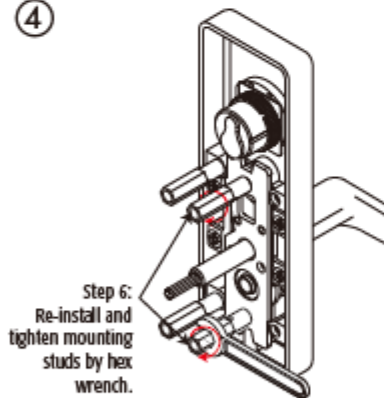


⑤

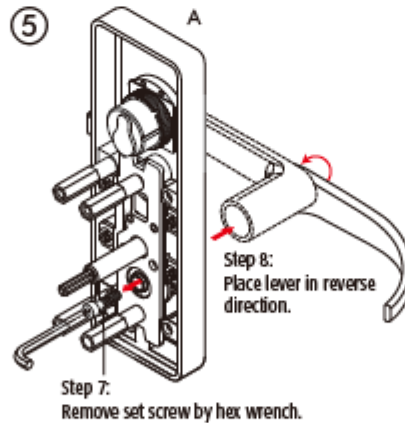

B

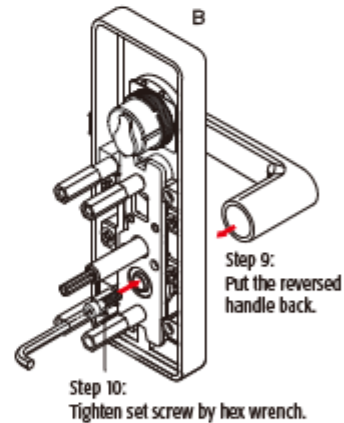

⑥

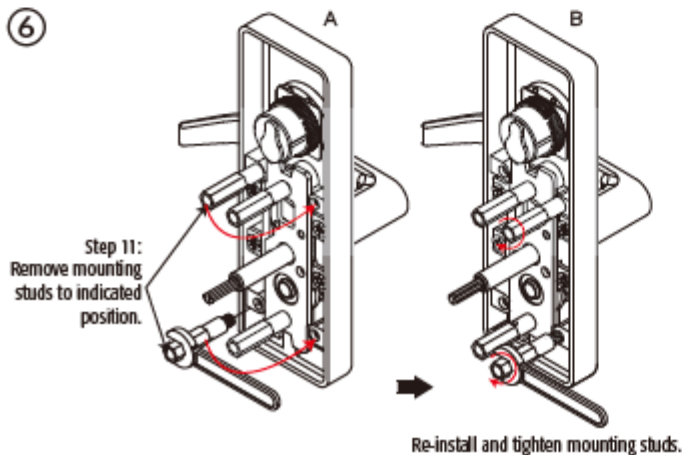

- ⑦ The setting for switching handle
direction is completed.

