



7100R RIM EXIT DEVICE-RERVERSIBLE
INSTALLATION INSTRUCTIONS
LHR door shown , RHR door opposite

For steel prepared doors , drill / tap and use supplied machine screws.
For thin gauge metal , non-prepared doors and wood doors use wood screws.

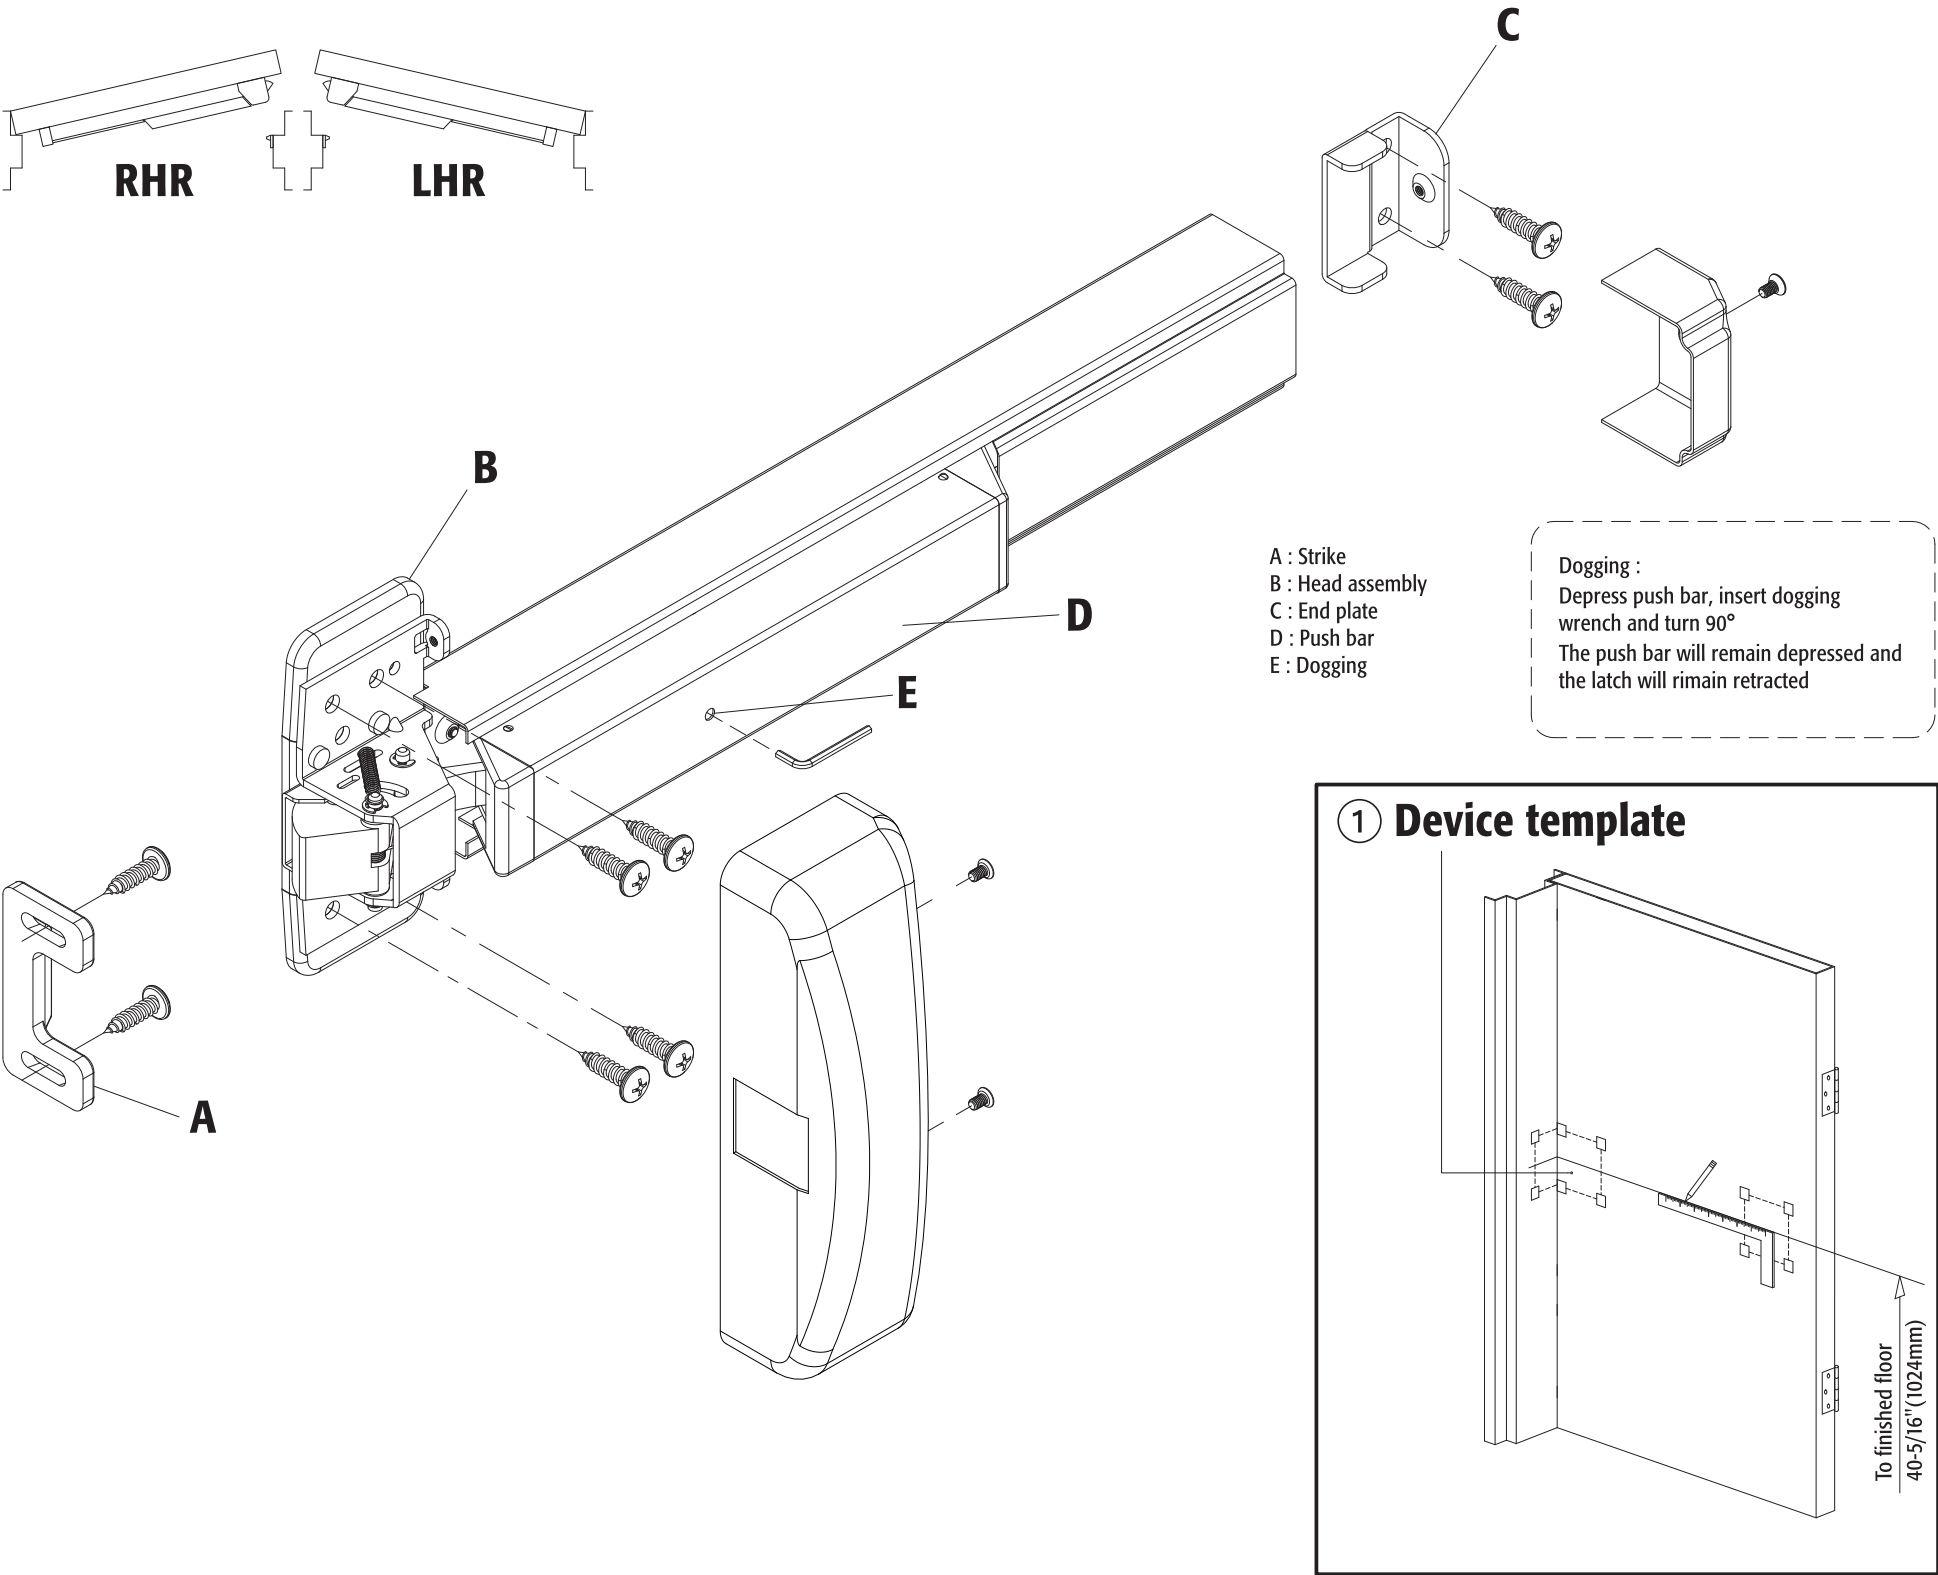


② Strike Install

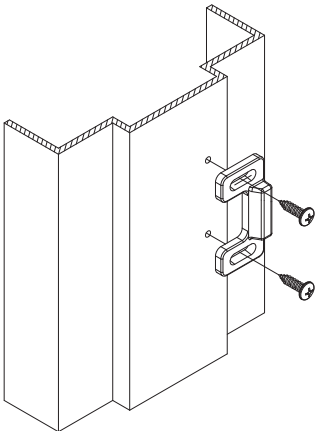


Install the strike to the frame
with 2 screws as shown

③ Head assembly and end plate Install

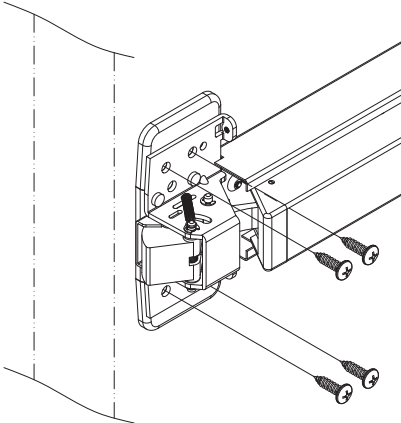


Step 1:
Install the head assembly to the door with 4 screws as shown

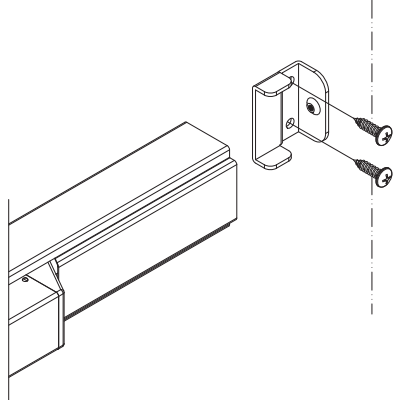

Step 2:
Install the end plate to the door with 2 screws as shown


7100R Rim Safety Rated Panic Device Template

10110 ZINS-R7004-00

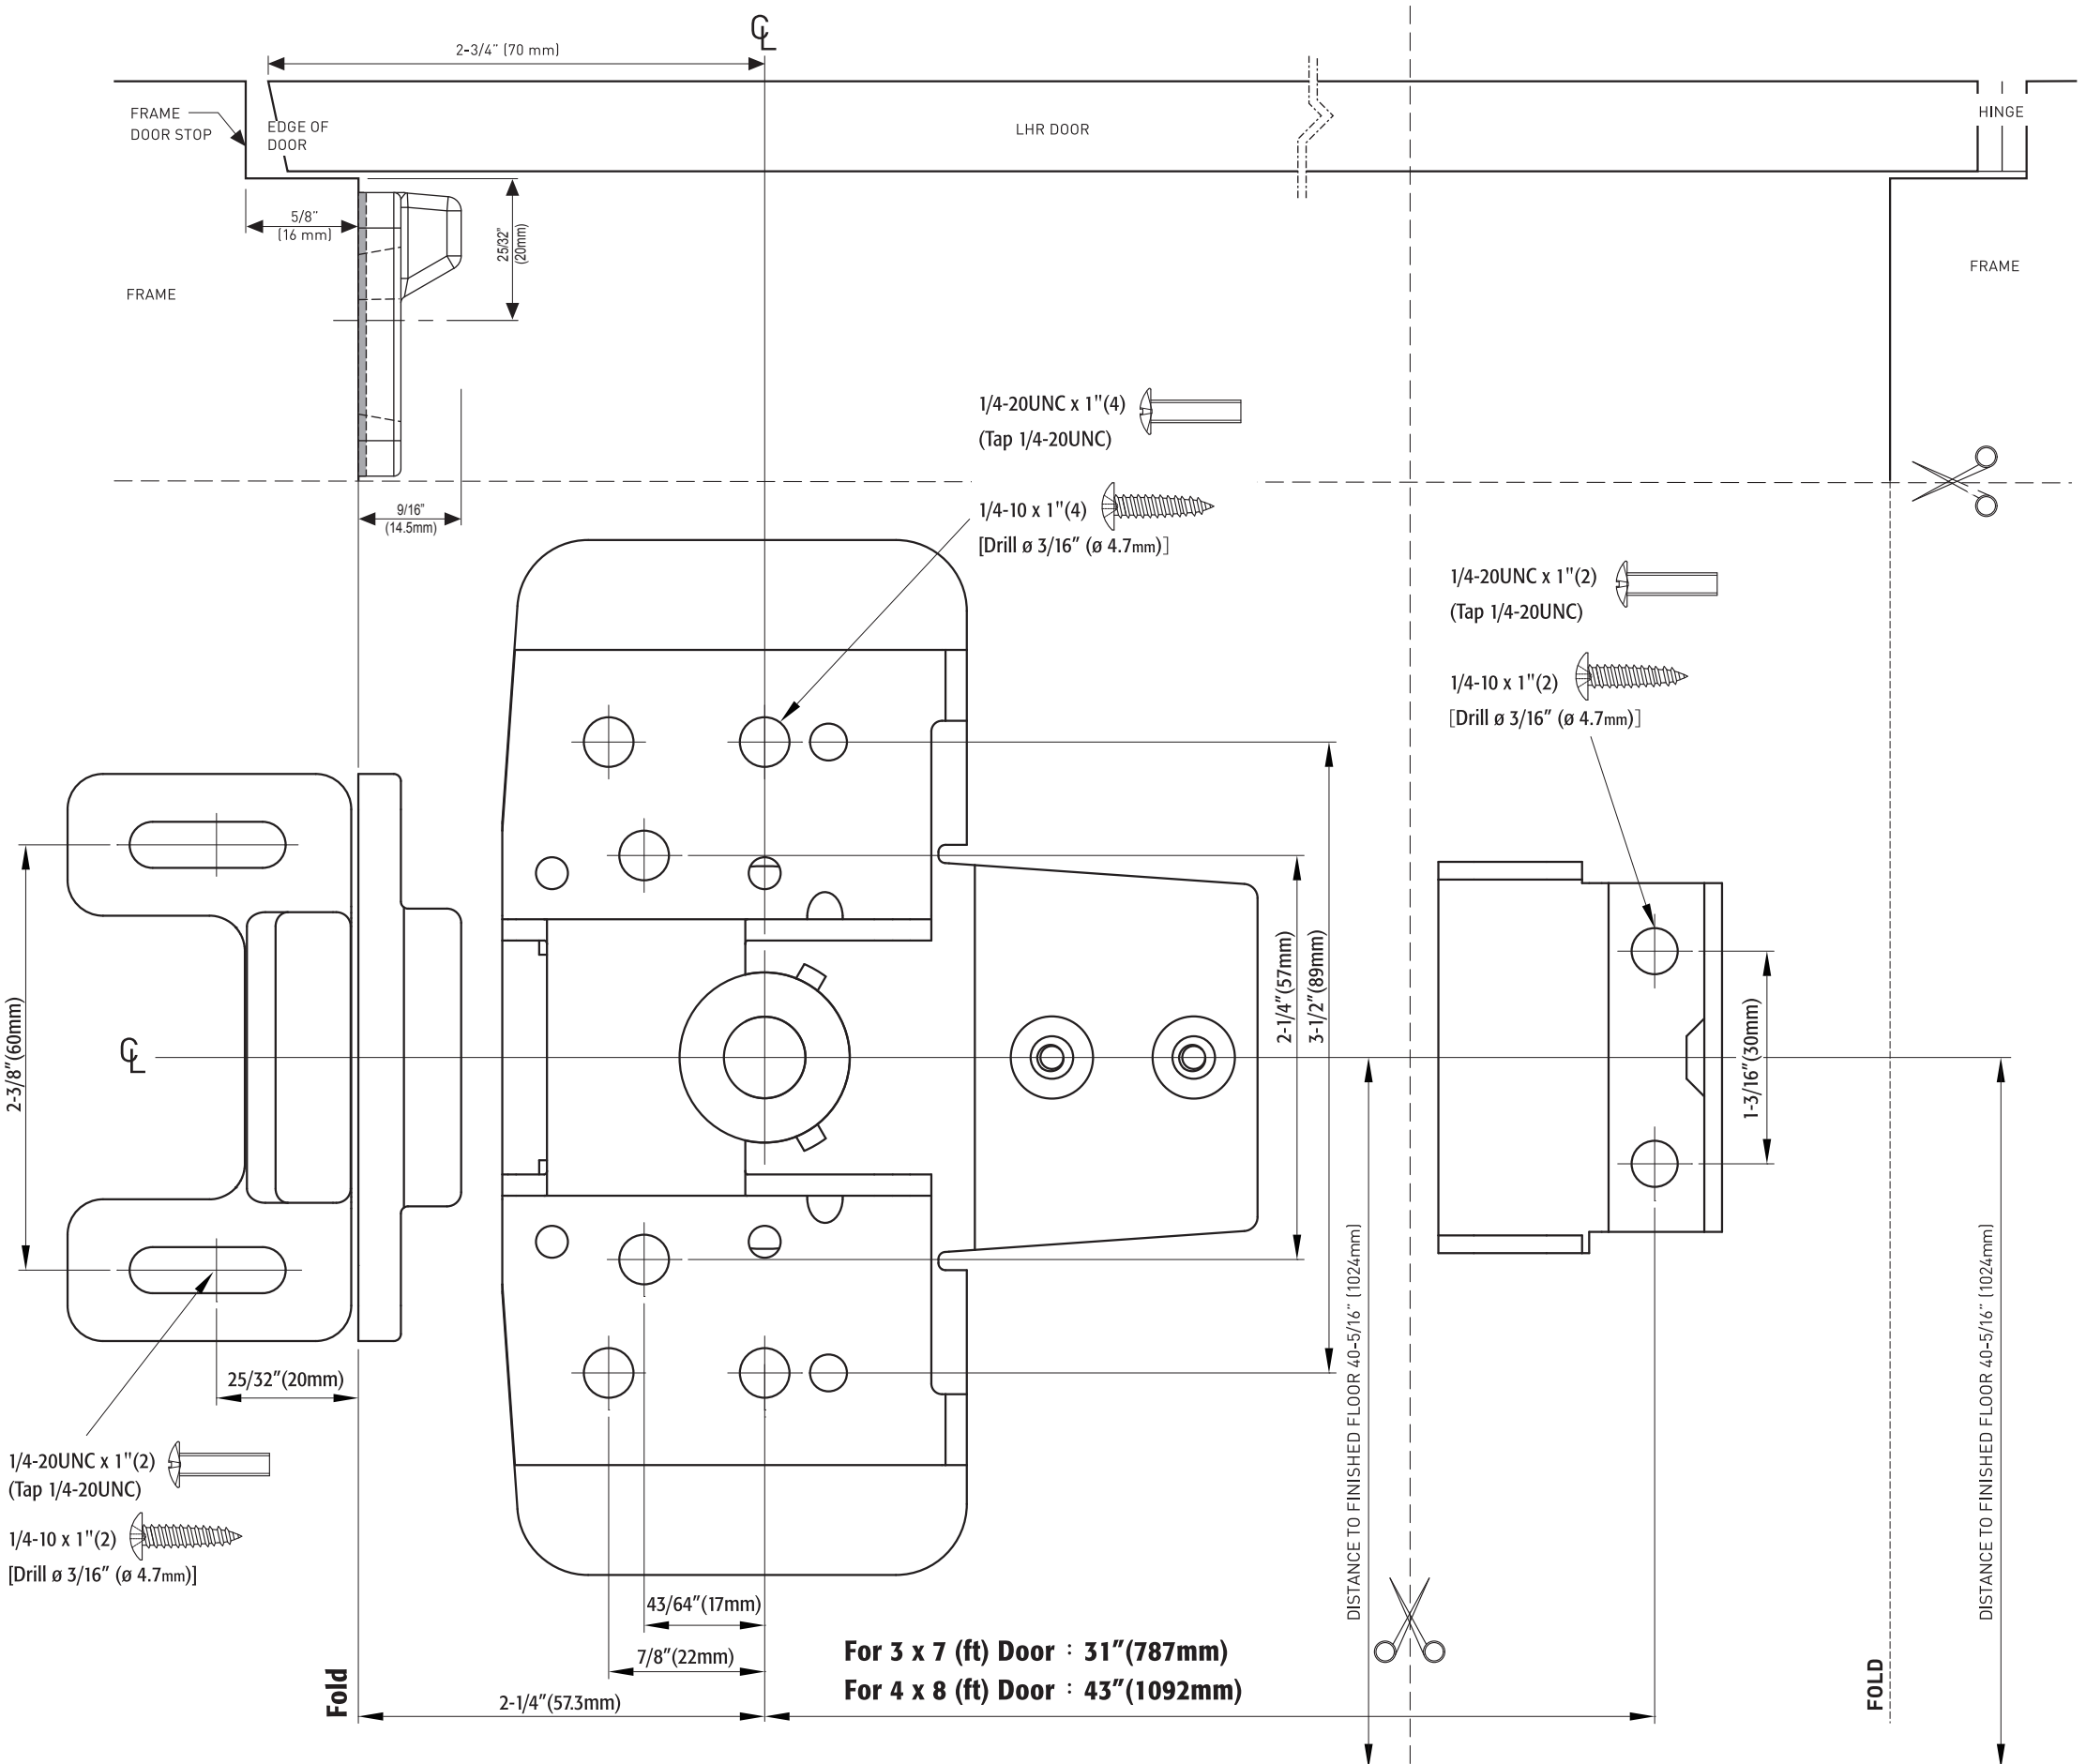


F7100R RIM FIRE RATED EXIT DEVICE-RERVERSIBLE
INSTALLATION INSTRUCTIONS
LHR door shown , RHR door opposite


For steel prepared doors , drill / tap and use supplied machine screws.
For thin gauge metal , non-prepared doors or for labeled wood doors use thru bolts.
See template for details on mounting screws.

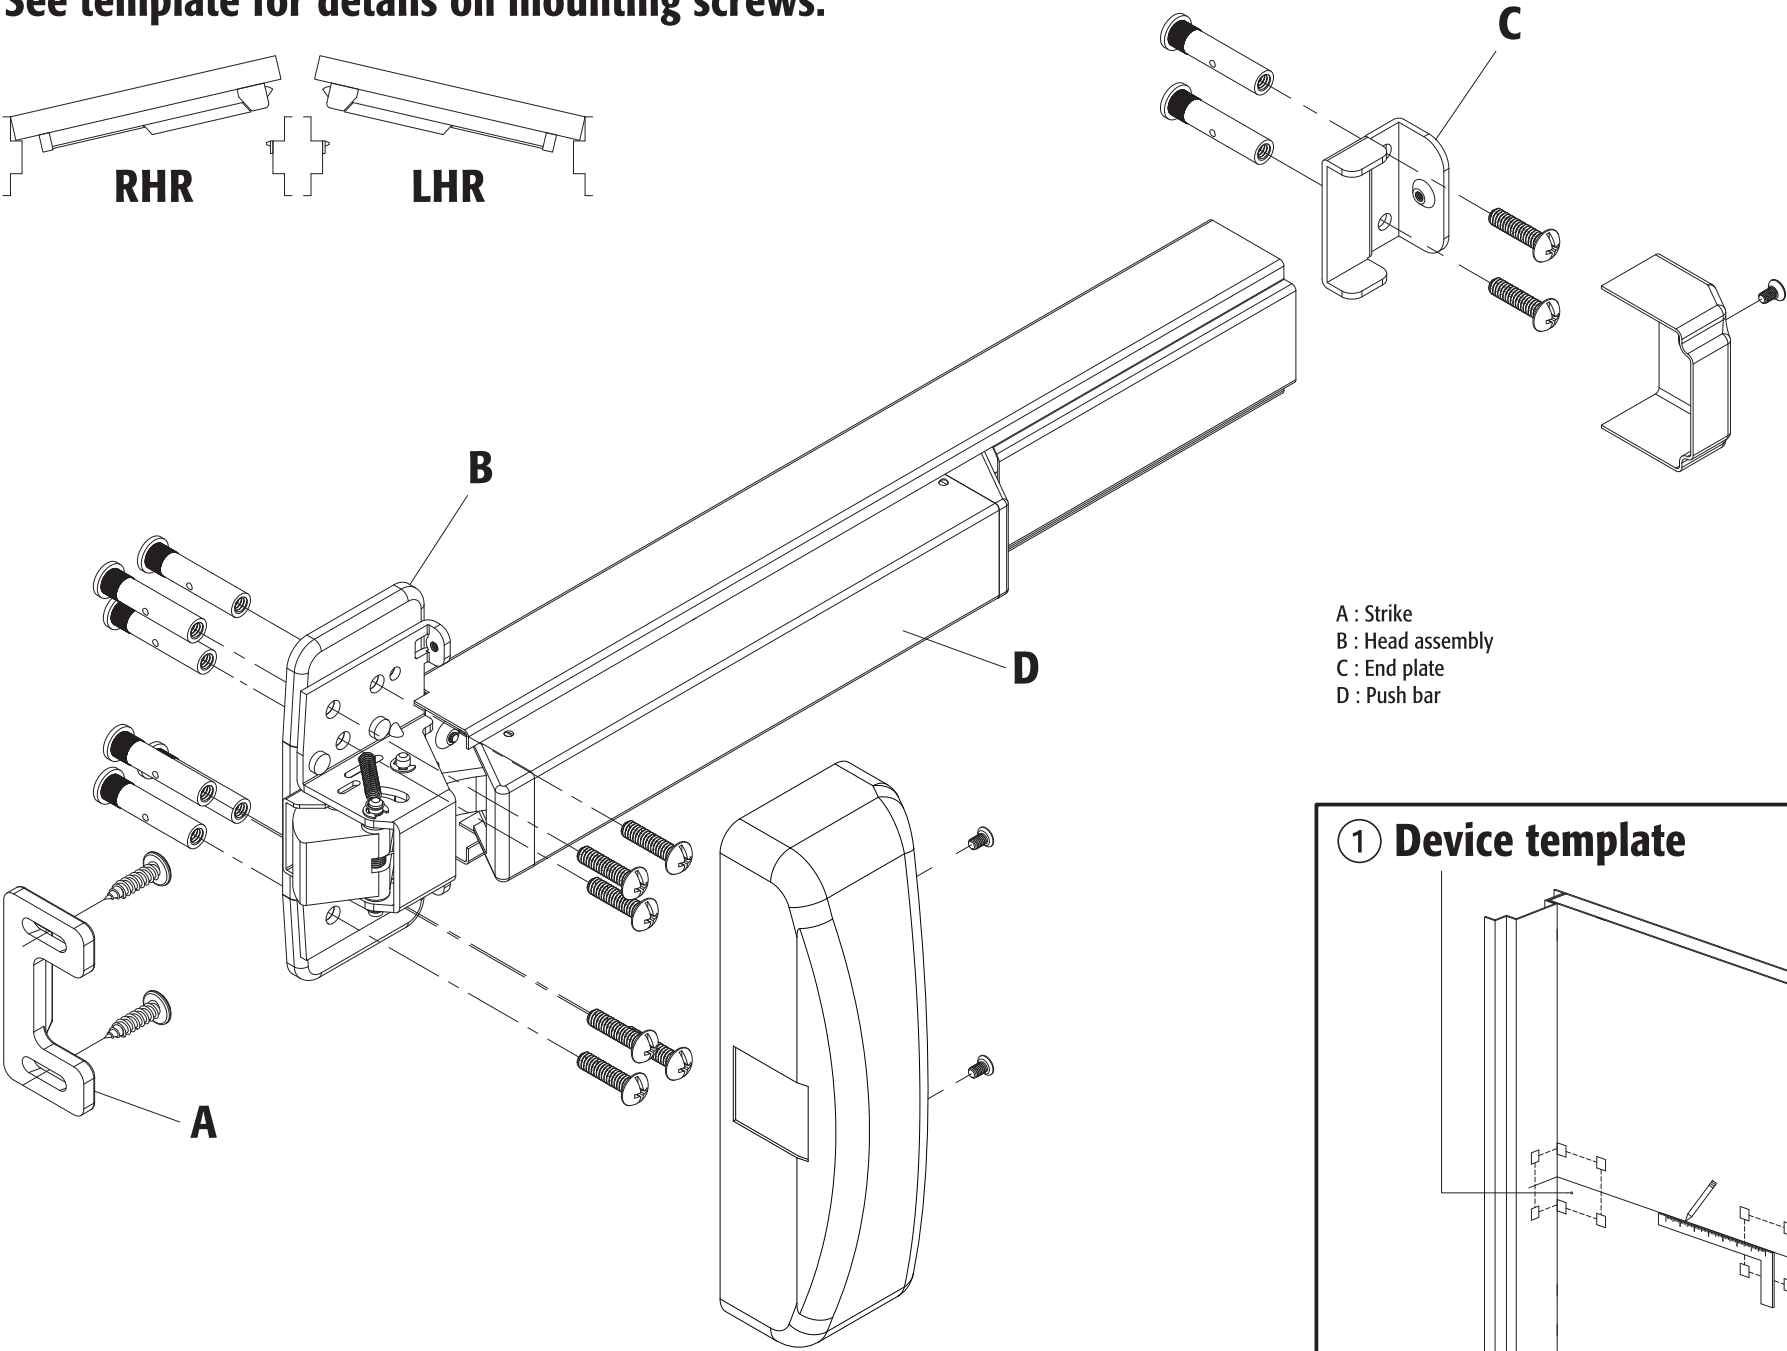

① Device template

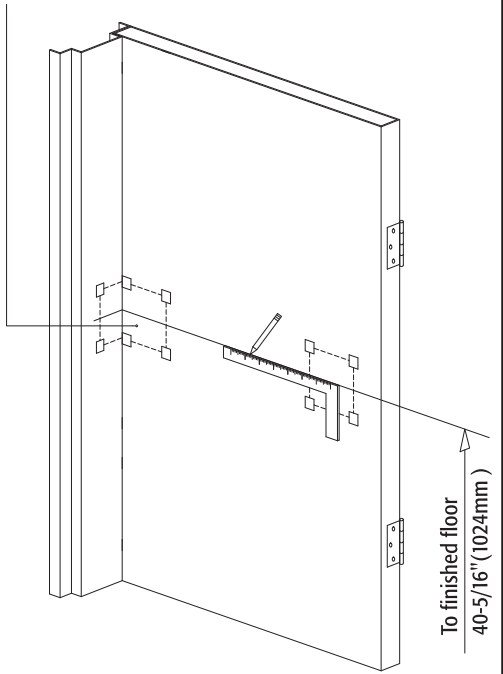


② Strike Install

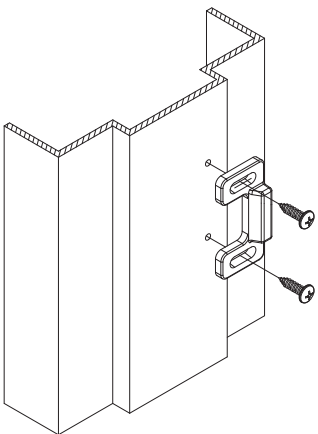


Install the strike to the frame
with 2 screws as shown

③ Head assembly and end plate Install

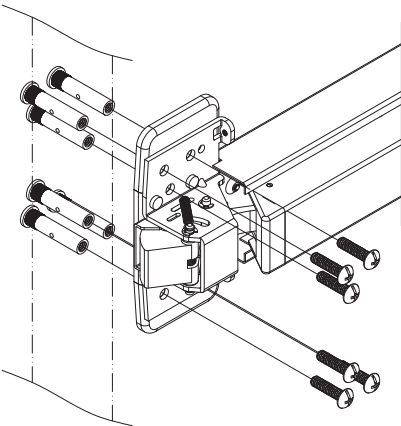

Step 1:
Install the head assembly to the door with 6 screws as shown

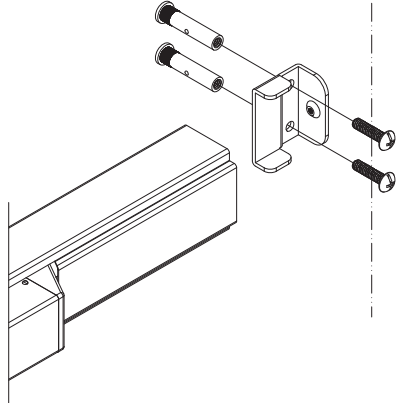

Step 2:
Install the end plate to the door with 2 screws as shown

F7100R Rim Fire Rated Panic Device Template

