

Architectural Door Accessories

ASSA ABLOY

Pemko Door Bottoms


The global leader in
door opening solutions

Applies to the following door bottom:


347, 68_R

Installation Instructions:

1. Trim 68_R to door width.
2. 347 overhead raindrip should be 2" wider than door at each side.
3. Position raindrip (347) even with bottom of head and fasten with screws provided.
4. Fasten door top (68) at top edge of door with screws provided.
5. Adjust to provide best seal and door closing.

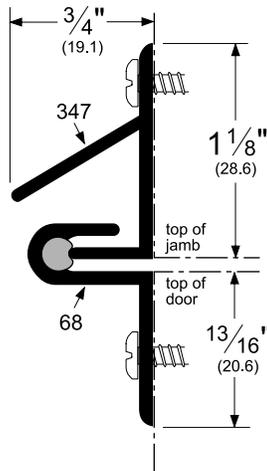

Tools Required:



www.pemko.com

MEMPHIS, TN USA VENTURA, CA USA VANCOUVER, BC CA TORONTO, ON CA
P: 800 824-3018 P: 800 283-9988 P: 877 535-7888 P: 877 535-7888
F: 800 243-3656 F: 800 283-4050 F: 877 535-7444 F: 877 535-7444

Copyright © 2017 Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Company is prohibited.

DB23_WEBINS
Rev 2 - 03.07.17
Page 1 of 1