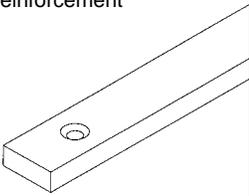
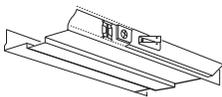
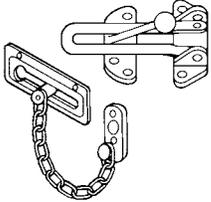
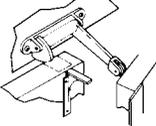
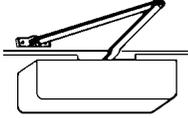
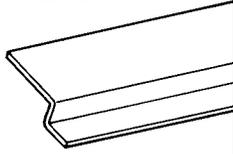
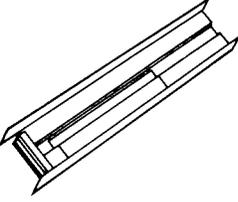
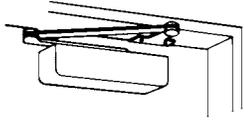
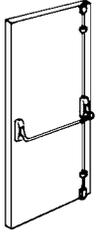
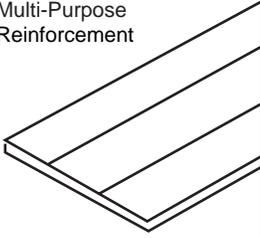
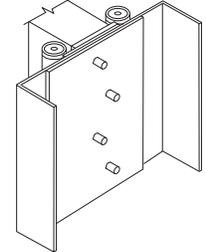


**INSTALLATION OF TIMELY TA-25 MULTI-PURPOSE REINFORCEMENT BRACKET**

1. Verify reinforcement and location required.  
 (multi-purpose reinforcement TA-25 can be easily adapted to meet specific needs)
2. Clean general area where Timely TA-25 reinforcement is to be positioned on the frame.
3. Expose double face tape on reinforcement plate by removing paper backing on the two strips of tape and press into position to secure the reinforcement to frame.
4. Expose double face tape by removing paper backing and press onto reinforcement as required. (I-13, #2)
5. Install frame and door in conventional manner.
6. Drill and tap holes as required.

**REINFORCEMENT APPLICATIONS**

| COMPONENT  | INSTALLATION  | APPLICATION   |  |  |
|--|---|---|--|--|
| <p><b>TA-10</b><br/>           Regular Arm Closer Reinforcement</p>   |  | <p>Steel Chain Guards and Door Guards</p>    | <p>Regular or Concealed Arm Closer, Top Jamb Mounted Closers or Surface Applied Door Coordinators</p>   |  |
| <p><b>TA-12</b><br/>           Parallel Arm Closer Reinforcement</p>  |  | <p>Parallel Arm Closers, Surface, Vertical Rod and Rim Exit Devices</p>    |  |  |
| <p><b>TA-25</b><br/>           Multi-Purpose Reinforcement</p>        |  | <p>FOR AN APPLICATION WHERE A SOLID 14 GAUGE REINFORCEMENT IS REQUIRED</p>  |  |  |