


# TRUDDOOR™

## TD-ASTBR-84-SET


### ASTRAGAL SET

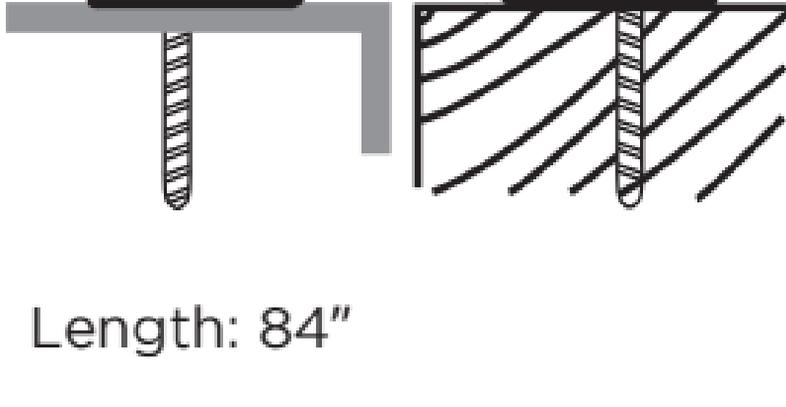

Length: 84"

Nylon Brush Insert

Clear Anodized Aluminum

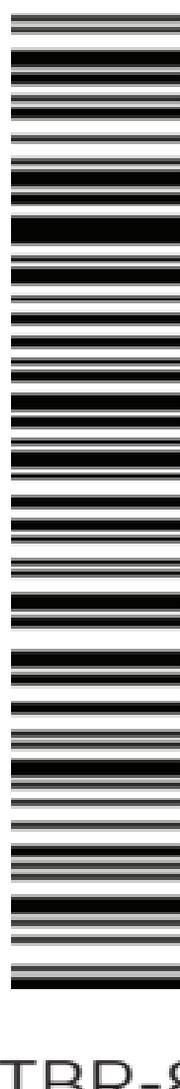


## TD-ASTBR-84-SET



POSITIVE PRESSURE TESTED GASKETING MATERIALS FOR FIRE DOORS FOR APPLICATION TO HOLLOW-METAL-TYPE FIRE DOORS RATED UP TO 3 HOURS AND WOOD-TYPE FIRE DOORS RATED UP TO 1-1/2 HOURS. CATEGORY J

## INSTALLATION INSTRUCTIONS

1. Remove brush from metal retainer.
2. Cut brush to length, using the cutting section of pliers or diagonal cutters. If bristles are not secure, use a drop of adhesive to secure the brush.
3. Cut the metal retainer to length.
4. Replace brush in metal retainer.
5. Position on door as shown above.
6. Mark screw holes.
7. Drill pilot holes with a 7/64" bit.
8. Install with screws provided.
9. Slightly peen the bottom end of each retainer in order to secure the brush from moving.
10. Adjust astragal so it does not impede proper closing and latching of the doors.

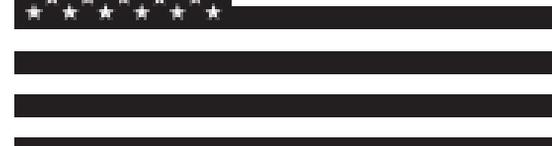

**MADE IN USA**

TRUDDOOR.COM

PHOENIX, AZ