

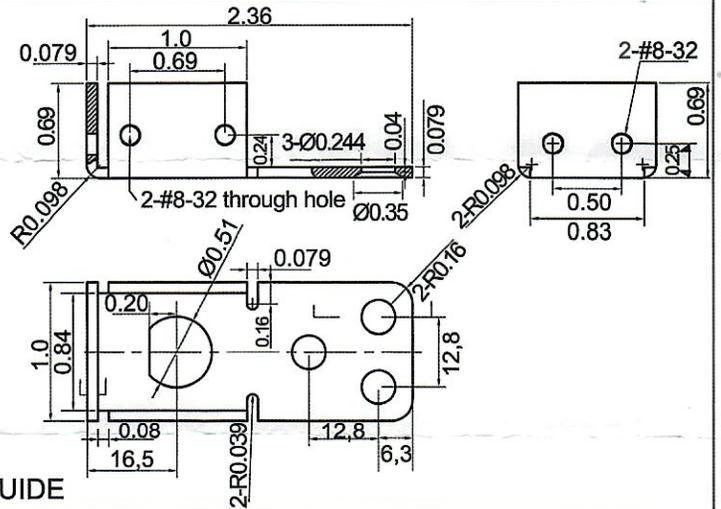


STRIKE

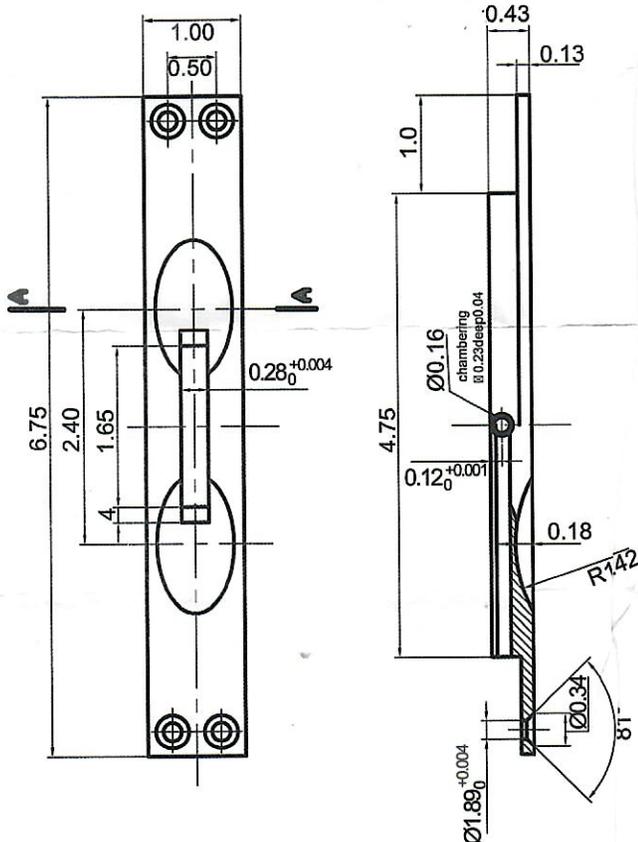

GUIDE

FLUSH BOLT

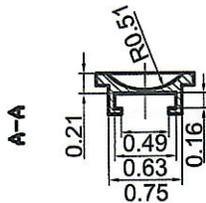

TD-FB-WD INSTALLATION INSTRUCTIONS:

1. MORTISE INACTIVE DOOR FOR TD-FB-WD.
2. HANG INACTIVE DOOR, WITH DOOR OPEN. MEASURE MINIMUM CLEARANCE FROM DOOR TO FINISHED FLOOR.
3. REMOVE DOOR. INSTALL TD-FB-WD FLUSH BOLT. ADJUST TOP BOLT SO IT IS FLUSHED WITH TOP OF DOOR. ADJUST BOTTOM BOLT TO PROJECT 1/8" (3) LESS THAN MINIMUM CLEARANCE.
4. INSTALL STRIKE.
5. HANG DOOR.

FIELD ADJUSTMENTS

VERTICAL ROD ADJUSTMENT


- A. TOP BOLT - REMOVE GUIDE, TURN BOLT AS NECESSARY TO ADJUST.
- B. BOTTOM BOLT - REMOVE DOOR FROM HINGES. REMOVE GUIDE. TURN BOLT AS NECESSARY TO ADJUST.

NOTES:

1. THE DOOR MUST HAVE AT LEAST 1/4" (6) UNDERCUT.
2. FOR ADDITIONAL INFORMATION ON OPTIONAL DUST PROOF STRIKES, SEE TD-DPS TEMPLATES

	QTY	SCREW DETAILS
HOUSING	2	#8 X 1" FPHSMS
GUIDE	2	#8 X 1" FPHSMS
STRIKE	2	#8 X 3/4" FPHSMS

TD-FB-WD MANUAL FLUSH BOLT  
FOR WOOD DOORS INSTALLATION TEMPLATE



TRUDOOR.COM | PHOENIX, AZ

DATE:  
03-03-25