


TRUDOOR™

TD-SWV-48

DOOR SWEEP

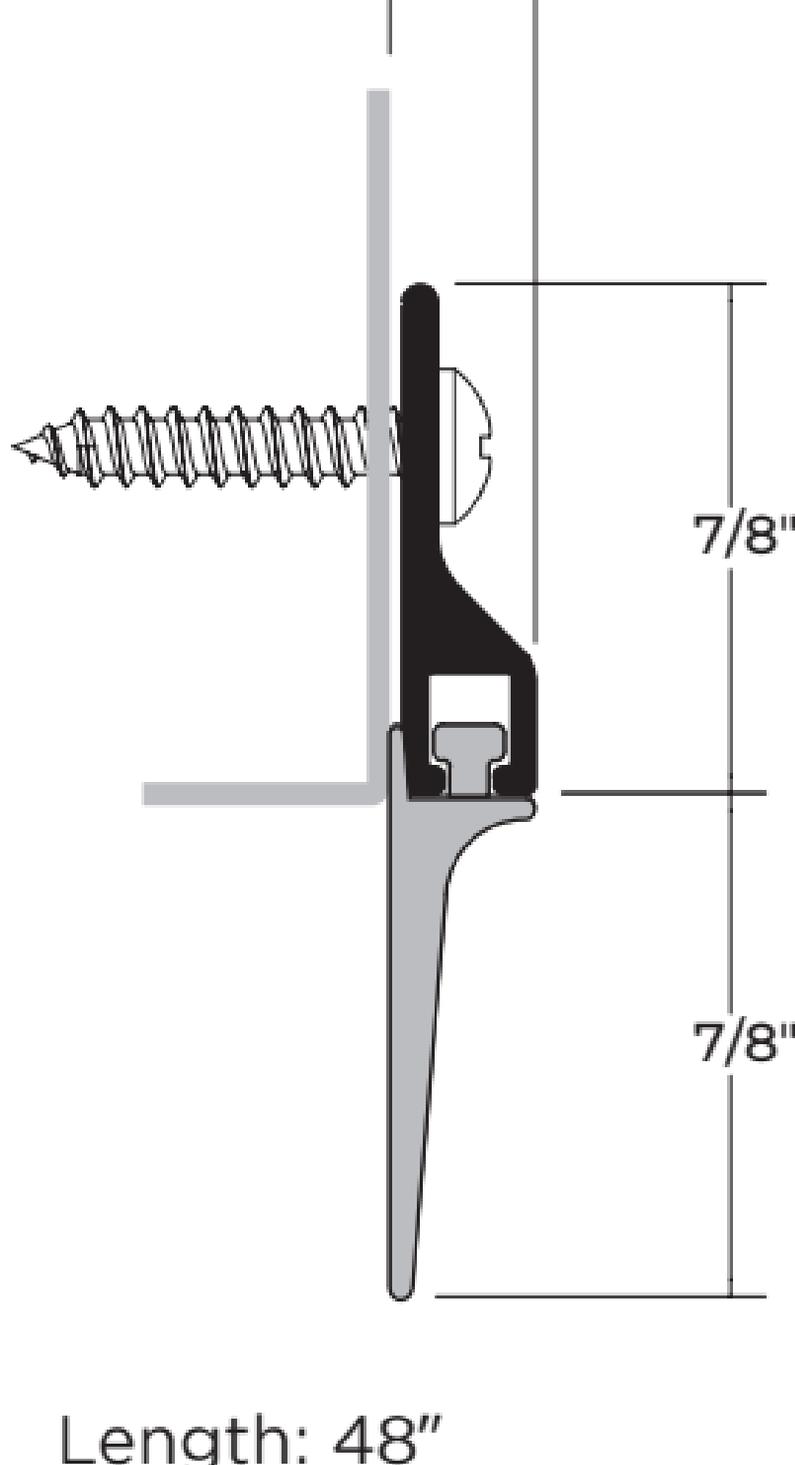

Length: 48"

Vinyl Insert

Mill Finish Aluminum



TD-SWV-48



POSITIVE PRESSURE
GASKETING
MATERIALS FOR FIRE
DOORS.
HOLLOW-METAL-TYPE
FIRE DOORS RATED UP
TO 3 HOURS AND
WOOD-TYPE FIRE
DOORS RATED UP TO
1-1/2 HOURS.

SMOKE AND DRAFT
CONTROL GASKETING
(CATEGORY H)
MEETS REQUIREMENTS
OF NFPA 105, IBC -
FOR USE ON "S" LABEL
DOORS.

INSTALLATION INSTRUCTIONS

1. Cut sweep to fit.
2. Close door. Hold sweep at bottom of door. Tap down until contact is made between the sweep and threshold.
3. Mark screw holes.
4. Drill pilot holes
5. Install with screws provided.
6. Adjust position so sweep does not impede proper closing and latching of door.



MADE IN USA

TRU**DOOR**.COM
PHOENIX, AZ