



STEP 3:INSTALL FIRE RATED BOLT

- 1.Insert bolt and use the provided screws to secure bolt.
- 2.3/16" x 1/2" flat head machine screws and 3/16" x 5/8" flat head, self-tapping machine screws for metal door use.
- 3.5/32" x 3/4" flat head wood screws for wood door use.

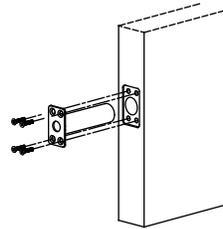

STEP 4:INSTALL STRIKE HOLE PLUG

- 1.Insert hole plug into the 1" hole in strike door leaf.
- 2.Self adjusting tabs on the hole plug will lock in place to secure the plug.

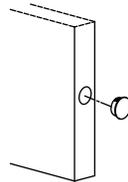


STEP 5:REVIEW INSTALLATION

- 1.Close both doors and verify fire rated bolt and strike hole are lined up.
- 2.Be sure the door gap directly in front of the fire rated bolt is not covered with a door edge guard or any other similar type of device.


REMARKS:

- 1.Refer to F1000V devices Installation Instructions for further details.
- 2.Before installing head cover,insert head cover plug into bottom side of head cover first.

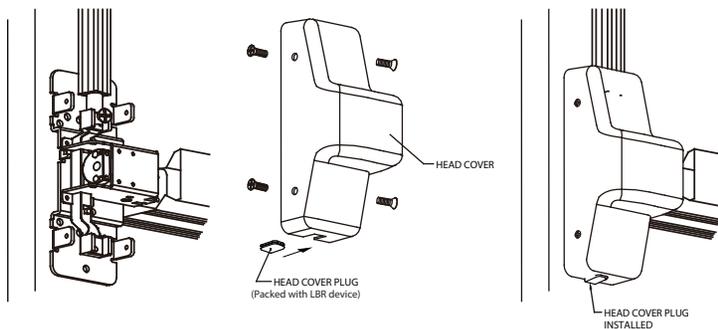

TDE-F1000V LBR Fire Rated Bolt Installation Instructions

A IDENTIFICATION OF PARTS

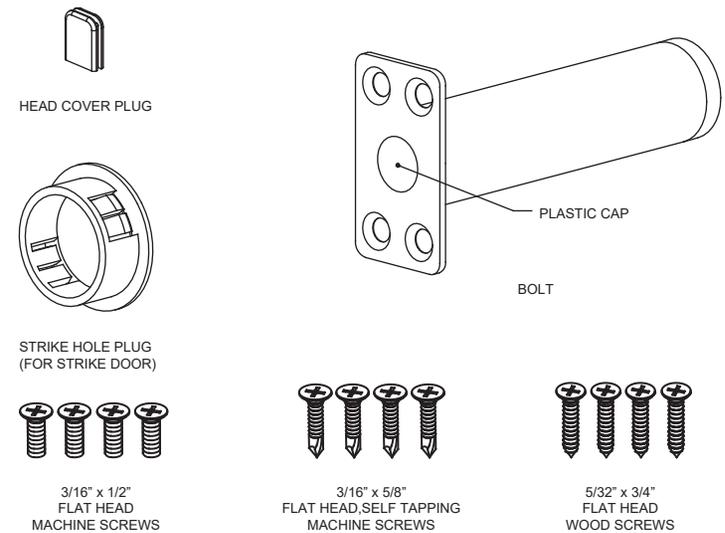

B TOOLS REQUIRED

