

Trudoor TDE-TP Pull Trim Installation Instructions


Not to scale 1:1. Measurements are for reference only. Not a drilling template.

NOTE:
Backset of 2 7/16" from jamb to center or 2 3/4" from door edge to center is acceptable. Strike shim can be used or not used to make adjustments to the roller strikes projection to compensate for doors with different backsets.

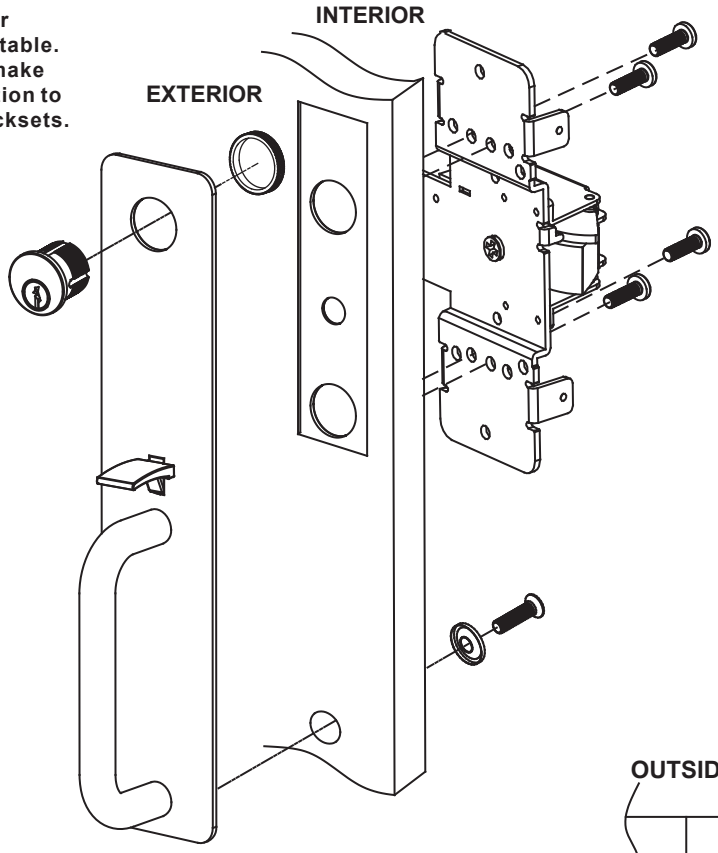

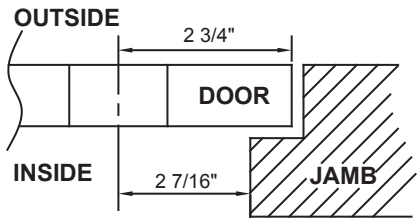

Exterior Side of Door

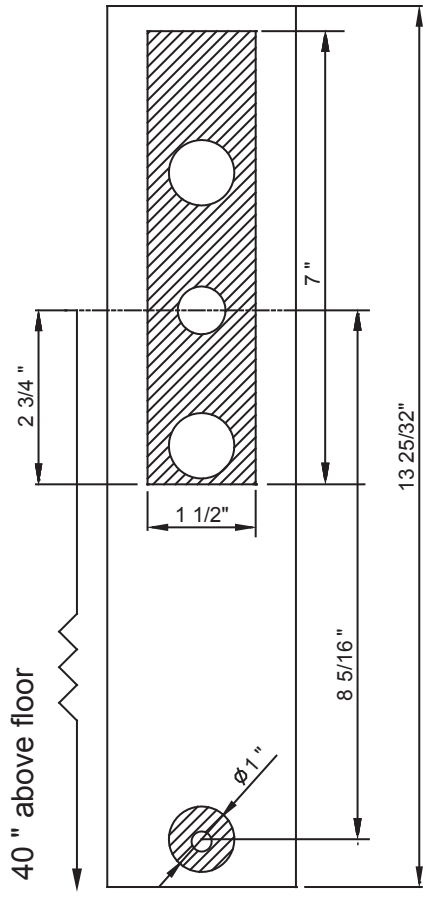

Interior Side of Door

