


DOOR PREPARATION CHART						
Model	OUTSIDE			INSIDE		
	CYLINDER HOLE (A)	THUMBTURN HOLE (B)	LEVER HOLE (C)	CYLINDER HOLE (A)	THUMBTURN HOLE (B)	LEVER HOLE (C)
<b>ML119</b>		●	●		●	●
● Indicates positions that needs to be drilled.						

not to scale - dimensions are in inches

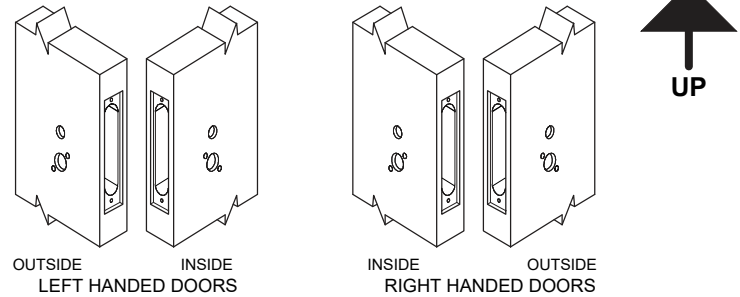

# Trudoor ML119 Privacy Mortise Lock Template