



COMMON SURFACE MOUNTED COMMERCIAL DOOR CLOSER TEMPLATING (HOLE PATTERN) CHART

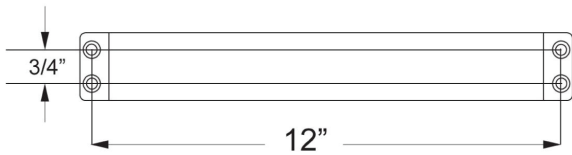


3/4" Vertical Holes x 12" Horizontal Holes

- Trudoor TDC-300
- LCN 1450
- Falcon SC81
- Norton 8301, 8501
- Yale 2701, 3301, 3501
- Dorma 8616
- Design Hardware 316
- Hager 5200
- Stanley QDC211
- Cal-Royal CR801

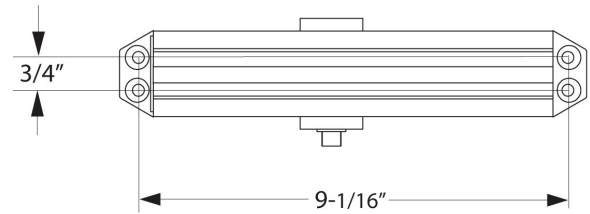


3/4" Vertical Holes x 9-1/16" Horizontal Holes

- Trudoor TDC-100
- LCN 1250, 1260
- Falcon SC61
- Norton 1601
- Yale 1101
- Dorma 7300
- Stanley QDC311
- Hager 5300
- Cal-Royal 300, 500PBF

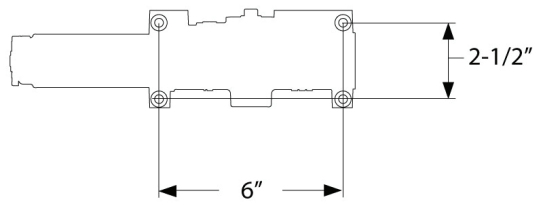


2-1/2" Vertical Holes x 6" Horizontal Holes

- LCN 4011, 4021, 4111

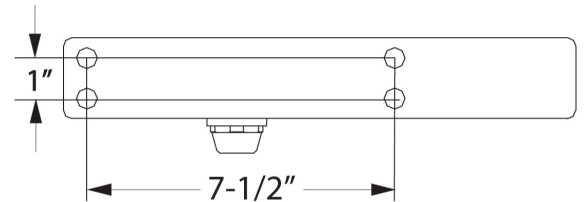


1" Vertical Holes x 7-1/2" Horizontal Holes

- LCN 1461

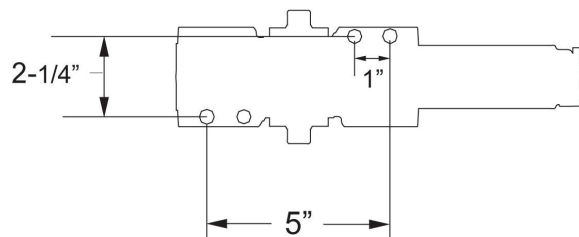

2-1/4" Vertical Holes x 5" Horizontal Holes

- Trudoor TDC-400
- LCN 4040XP
- Yale 5800
- Hager 5100
- Cal-Royal CR441
- Design Hardware 416
- Stanley QDC-111

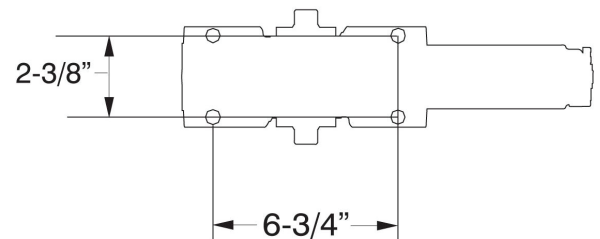

2-3/8" Vertical Holes x 6-3/4" Horizontal Holes

- LCN 4050
- Falcon SC71
- Norton 7500
- Yale 4400