


**VON DUPRIN** 


941033-00

Removable Mullion Installation Instructions

## Note: Use lock washers on top and bottom mullion fittings except for counter sunk screws.

- Line up bottom mullion fitting with center of door opening and flush with closed doors (Figure 1 or 2) and install.
- 2 Line up top mullion fitting with center of door opening and flush with closed doors as shown in Figure 3 and install. See Figures 5, 6, and 7 (reverse side) for optional frame conditions.
- 3 Cut mullion body to length as shown in Figure 4.
- Insert mullion in top fitting and slide bottom of mullion into place. See Figure 8 (reverse side).
- 5 Nest mullion into bottom fitting and secure set screw.
- 6 Install top mullion clamp over mullion and fitting with mounting screws. See Figure 8 (reverse side).
- Adjust strikes for 1/32 clearance between latch bolt and strike. See Figure 8 (reverse side).

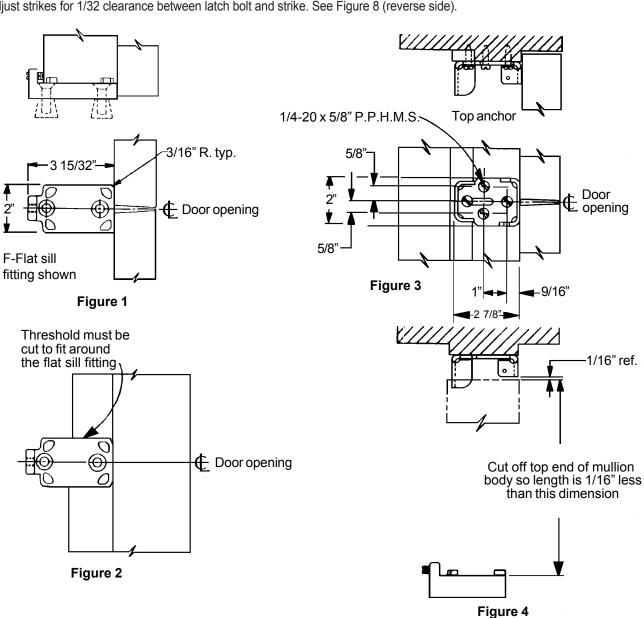

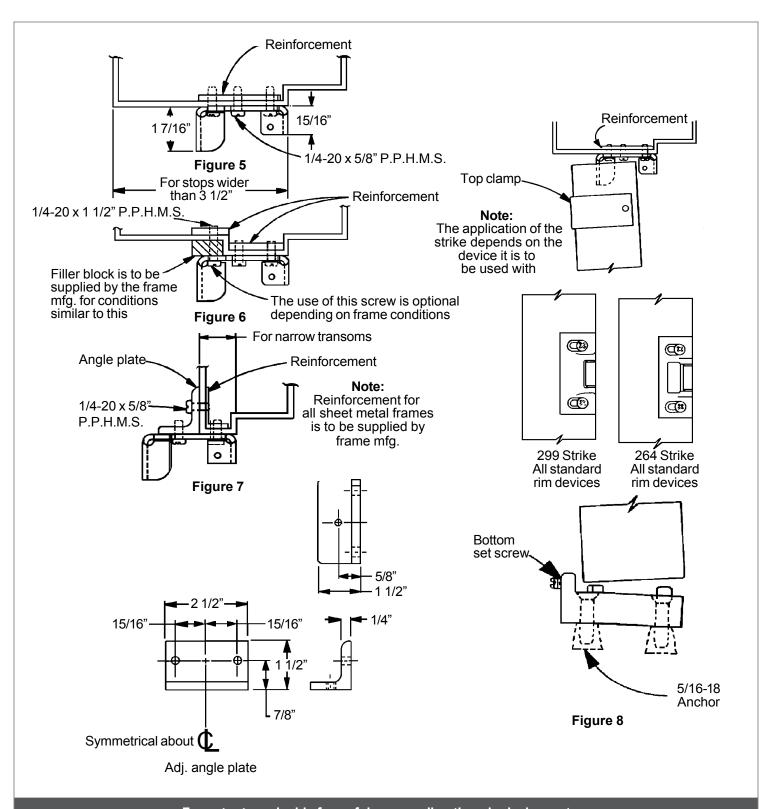

For cutouts on inside face of door, see directions in device carton.

